

# Cisco TelePresence Management Suite Extension Booking API

Programming Reference Guide

API version 14 (Cisco TMS 14.5)

D13566 17

September 2014

# **Contents**

Introduction	5
Changes between API versions	6
API overview	7
Functional overview	8
Main features	
Booking ownership	
Conference routing	
Replication	
Booking modes	
Cisco TMS entities	
System	
Conference	
User	
API versioning	
Version history	
Versioning examples	11
Using the APIs for remote setup and booking	13
Usage requirements	
API licensing	
Booking rights	
NTLM authentication	
Cisco Collaboration Meeting Rooms Hybrid requirements	
Setting up your environment	
API locations	
Security	
Optional elements	
Boolean values	
The SOAP header	
External APIVersion Soap Header	19
ClientSession	
ContextHeader	19
GUI pattern	21
System information	21
Free/busy information	21
Booking management	21
Replication pattern	23
Import	23
Replication	23
Booking	23
Availability	24
Limitations	
WebEx booking limitations	
Other booking limitations	
Unused values	26
Remote setup API reference	27
TMSSystem object	28

28
28
29
29
. 29
31
31
31
32
. 32
. 32
. 32
33
33
. 33
. 33
. 34
34
34
. 34
. 34
35
. 35
.36
37
37 37
46
48
50
. 50
. 53
. 53
53
53
. 53
. 54
54
. 54
55
55
56
56
57
57
58
. 58
59
: ):~
59 59

GetTransactionsSince	60
GetTransactionsSinceWithExternalId	60
SaveConferenceWithMode	60
SaveConference	61
SaveConferenceRecInstanceWithMode	61
SaveConferenceRecInstance	61
SaveConferences	62
Error codes and error handling	63
Error codes	64
Error handling	66
Exceptions	66
HTTP error 401	66
Code examples	67
•	
Code examples  Remote setup API examples  Booking API setup	68
Remote setup API examples	
Remote setup API examples Booking API setup	
Remote setup API examples  Booking API setup  Using different participant types	
Remote setup API examples Booking API setup Using different participant types Booking API example with a recording participant	
Remote setup API examples Booking API setup Using different participant types Booking API example with a recording participant Saving and updating recurrent conferences	
Remote setup API examples Booking API setup Using different participant types Booking API example with a recording participant Saving and updating recurrent conferences Time zone handling	
Remote setup API examples Booking API setup Using different participant types Booking API example with a recording participant Saving and updating recurrent conferences Time zone handling Regular time zone	
Remote setup API examples Booking API setup Using different participant types Booking API example with a recording participant Saving and updating recurrent conferences Time zone handling Regular time zone Custom time zone	

# Introduction

Cisco TelePresence Management Suite Extension Booking API (Cisco TMSBA) gives developers access to Cisco TelePresence Management Suite (Cisco TMS) booking functionality. The API is also used by the Cisco TMS extensions for Microsoft Exchange and IBM Lotus Notes, and the Cisco TMSPE Smart Scheduler.

This document details the objects and entities used by Cisco TMSBA, includes references of the functions and objects available in the booking and remote setup APIs, explains the versioning logic, and provides usage patterns suggesting how an external user interface, booking database, or booking system may interact with Cisco TMS using the APIs.

The target audience for this document is developers seeking to implement a data/audio/video conferencing booking solution that is not supported by Cisco TMS directly, or where existing Cisco TMS features do not provide the necessary interoperability. Such booking systems will be referred to as external booking systems in this document.

# **Changes between API versions**

Changes to Cisco TMSBA are not tracked in this document, but can be found in the release notes for the corresponding version of Cisco TMS. This includes unversioned changes that will apply to every version of Cisco TMSBA called with that version of Cisco TMS.

### **Related documents**

The following table lists documents and websites referenced in this document, and other supporting documentation. All documentation for the latest version of Cisco TelePresence Management Suite Booking API can be found at: <a href="http://www.cisco.com/en/US/products/ps11338/tsd\_products\_support\_series\_home.html">http://www.cisco.com/en/US/products/ps11338/tsd\_products\_support\_series\_home.html</a>

Title	Link
Cisco TelePresence Management Suite Release Notes	http://cisco.com
SOAP Version 1.2	http://www.w3.org/TR/soap12/
Web Services Description Language (WSDL) 1.1	http://www.w3.org/TR/wsdI
WSDL 1.1 Binding Extension for SOAP 1.2	http://www.w3.org/Submission/wsdl11soap12

# **API** overview

This chapter provides an overview of the basic principles of Cisco TMSBA.

Functional overview	8
Cisco TMS entities	10
API versioning	11

### **Functional overview**

Cisco TMSBA makes it possible to let users book resources from custom booking applications (in this document referred to as "clients"), integrating the custom booking application with the Cisco TMS reservation database.

Using Cisco TMSBA to interact with Cisco TMS is the only safe and supported way of integrating third party or custom booking applications with Cisco TMS. The Cisco TMSBA is a versioned and stable interface into Cisco TMS, where backward compatibility is guaranteed in new releases.

### **Main features**

Cisco TMSBA has three main features:

- Importing and/or displaying Cisco TMS-managed resources in an external client or booking system.
- Reading and displaying system availability information and bookings from the reservation database of Cisco TMS. This information can be used for replicating bookings from Cisco TMS to the external booking system.
- Forwarding booking requests made by an external booking system to Cisco TMS. Forwarding a booking request to Cisco TMS lets the client utilize the routing logic of Cisco TMS, which determines whether network resources like an Multipoint Control Unit (MCU) are required, and automatically reserves these resources. The client therefore does not need to worry about infrastructure resources such as gateways and MCU port availability.

# **Booking ownership**

The client can choose whether to authenticate with Cisco TMS as a service account or as the user actually making the booking. If authenticating as a service account, the client must explicitly specify the actual owner of the booking when performing the **SaveConference** function. If choosing this option, it is important that the service account is a member of a group having *Book on behalf of* permissions in Cisco TMS.

IsTMSBookOnBehalfUser and IsBookonBehalfOfUser in the remote setup API can be used to assess whether a service account or other user has Book on behalf of permissions. The GenerateConferenceAPIUser function can be used for creating a service account. See Remote setup API reference [p.27].

### **Conference routing**

When booking through the Cisco TMSBA, clients book endpoints only. Network infrastructure products, such as gateways and Multipoint Control Units (MCUs) are automatically added by Cisco TMS if needed. The settings under **Administrative Tools > Conference Settings > Advanced Conference Options** in Cisco TMS are used when routing conferences created through Cisco TMSBA.

### Replication

Cisco TMSBA supports two-way replication between the client and Cisco TMS. If the client maintains its own copy of the reservation database, it must periodically ask Cisco TMS for changes.

In Cisco TMS, all changes to bookings are tracked in the Cisco TMS (tmsng) database. The data in this table is available in Cisco TMSBA through the GetTransactionsSince function. This function gives the client a list of recent changes on the Cisco TMS side. This function should be run fairly often (such as every five minutes) so that the client and Cisco TMS reservation databases are in a consistent state.

### **Booking modes**

The client can request one of two booking modes from Cisco TMS:

- Strict—all conferences that cannot be scheduled exactly as requested will cause Cisco TMS to throw an
  exception, and the conferences will not be saved.
- BestEffortForced—conferences that have a resource conflict or routing issue will be saved in Cisco TMS as
   Defective, which is shown to the client as a conferencestate on the returned conference object.
   This mode works as described below.

### **Defective conferences**

A *Defective* conference in Cisco TMS has been booked by an external client that encountered a resource conflict or routing problem.

A defective conference retains all properties of the booking request without setting up routing or consuming telepresence resources. Until all issues are resolved, Cisco TMS will not initiate a defective conference or send it to endpoints.

- In the case of a routing issue, all endpoints in the booking will be set to *Busy* for the scheduled time, keeping the reservation while the administrator or user resolves the issue.
- In the rare case of an endpoint reservation conflict, the endpoints will not be set to *Busy* for the defective booking.

Defective conferences can be corrected by the organizer or the administrator:

- Users who book conferences that are saved as defective will be notified by email and can resolve most issues by changing their request and rescheduling from their client.
- Administrators can locate and resolve defective conferences in Cisco TMS by going to Administrative
   Tools > Diagnostics > Conference Diagnostics or Booking > List Conferences.
   Conferences that are defective because of configuration errors or a permanent lack of routing resources
   must be resolved by an administrator.

When scheduling a series where only some occurrences have a resource conflict or routing issue, Cisco TMS will only store the problematic occurrences as defective, leaving the remaining occurrences unaffected.

If you apply the *BestEffortForced* booking mode, Cisco TMS will apply the same logic to bookings from your client, and return *defective* on conferences that have a resource conflict or routing problem.

### **Cisco TMS entities**

# **System**

A system entity in Cisco TMS is any item that can be booked. Note that systems provisioned using Cisco TelePresence Management Suite Provisioning Extension cannot be booked and are therefore not considered systems in this context.

There are two types of system entities:

- systems that are controlled by Cisco TMS (and thus receive phonebooks, generate CDRs and so on)
- systems added to Cisco TMS as "Room" and "Equipment".

Other types of entries, such as phonebook entries or provision directory users, are not system entities in Cisco TMS.

Each system entity has its own **TMS System Id**, which is used to uniquely identify the system in the Cisco TMS database, tied to system settings such as SIP URIs, gatekeeper addresses, and software versions. A subset of this system data is available in Cisco TMSBA through the **GetSystemById** function.

### Conference

Each booking in Cisco TMS is a conference entity in the **tmsng** database.

Each conference has a unique combination of **ExternalSourceld** and **ExternalPrimaryKey** used to identify the conference. Each occurrence of a recurrent series is also identified by an **Instanceld**.

Using ConferenceId as sole identifier is considered a legacy feature, but still supported by Cisco TMSBA.

### User

The Cisco TMS user entity holds information about Cisco TMS users, such as their first name, last name, username, and email address. All users have a unique user ID.

# **API** versioning

Cisco TMSBA versioning is designed to provide a backwards compatible API to clients. This means that applications written for an older version of the API will keep working when upgrading to Cisco TMS with a newer version of the API.

Each SOAP message sent to the API by the client must announce which version it complies with in a header. The API will filter what is returned to the client based on this announced version. See <a href="https://example.com/header">The SOAP</a> header [p.19].

# **Version history**

Version 0 of the API corresponds to version 9 of Cisco TMS. Not all versions of Cisco TMS include changes to the API.

Below is an overview of the last Cisco TMS versions that have included a new version of Cisco TMSBA.

API version	Cisco TMS version
14	14.5
13	14.4
12	14.3
11	14.2
10	14.1.1
9	13.2
8	13.1.2
7	13.1
6	13.0.1
5	12.6

### **Versioning examples**

When a change to the API is needed, the WSDL must be updated. The WSDL is the contract between the API and the clients and provides information covering all methods and data types, including values, that the API supports.

### Time zone versioning

Cisco TMSBA allows each conference object to include a **ConferenceTimeZoneRules** element that contains an array of rules for the time zone (UTC offset) and daylight savings time. (For detail about this element, see ConferenceTimeZoneRules [p.44].)

This element was introduced in Cisco TMSBA version 11 with Cisco TMS 14.2. If a client is using version 10 or earlier of the API, regardless of Cisco TMS version:

- Booking dates must be in UTC.
- DayOfWeek values in recurrence patterns must be given in UTC if the API version used is 8 or later.

- Dates are provided in UTC when retrieving conference information.
- Cisco TMS uses the time zone rules of the server.

Note that these conferences will be prone to DST change errors when the time zone of the client is not the same as the configured time zone on the Cisco TMS server.

### Introducing a new bandwith value

When, for example, support for an additional bandwidth value is added to the API, the WSDL changes, and the version number is increased. If this new bandwidth value is added in version 9 of the API, every client declaring that they are using version 9 or later will get this new value returned from Cisco TMSBA.

Clients that announce compliance to versions earlier than 9 will *not* get the new value returned. Instead, the API returns the special value *default*. The API allows all incoming values, but filters values going out. A client declaring a version lower than 9, that then enumerates a conference with the new bandwidth value, will get the special value *default* returned.

If the client uses this conference and updates the conference with bandwidth set to default, no change to the bandwidth value is made, as the API knows this special value means no changes should be made.

This filtering of values that older clients do not understand makes the API backwards compatible; older clients built on older WSDLs can still use an API with a higher version.

# Using the APIs for remote setup and booking

This chapter presents the prerequisites and limitations for using the APIs for booking and remote setup, and outlines some suggestions for usage.

Usage requirements	
Setting up your environment	
The SOAP header	
GUI pattem	21
Replication pattern	23
Limitations	25

# **Usage requirements**

This section describes the licensing, permission, and authentication requirements for using the APIs.

# **API licensing**

The API functions that require a license key are the following:

- GetRecordingAliases
- GetTransactionsSince
- SaveConference
- SaveConferenceRecInstance
- SaveConferences

The remaining API features do not require special licensing for use. Contact your Cisco reseller/partner for more licensing information.

### **Licensing requirements**

Each telepresence endpoint to be booked through Cisco TMSBA must already have been added to Cisco TMS and licensed for general Cisco TMS usage.

Additionally, in order to use Cisco TMSBA for booking these endpoints, you must have one of the following:

- One Cisco TMSXE Extension for Microsoft Exchange option key per 25 telepresence endpoints integrated with Cisco TMS, usually recommended for smaller deployments. See below for detail on how system licenses are activated.
- One Cisco TelePresence Management Suite Booking API license per 25 registered endpoints per 25 telepresence endpoints integrated with Cisco TMS, usually recommended for smaller deployments. See below for detail on how system licenses are activated.
- One Cisco TelePresence Management Suite Extension for IBM Lotus Notes option key per 25 telepresence endpoints integrated with Cisco TMS, usually recommended for smaller deployments. See below for detail on how system licenses are activated.
- One Application Integration Package option key per Cisco TMSBA installation. This option is recommended for deployments with a large number of endpoints.

If both license keys are present, Cisco TMS will only use the Application Integration Package key.

### **Enabling option keys**

To enable an option key in Cisco TMS:

- 1. Go to Administrative Tools > Configuration > General Settings.
- 2. In the Licenses and Option Keys pane, click Add Option Key.
- 3. Input the option key string.
- 4. Click Save.

### Per system licensing

Once the per system option key has been activated in Cisco TMS, the **Allow Remote Bookings** setting determines whether each system is using a license.

This setting is void and hidden if the Application Integration Package option is used. If both option keys are added, only the Application Integration Package option will be used by Cisco TMS.

The first time a system is booked through Cisco TelePresence Management Suite Extension Booking API, **Allow Remote Bookings** will be toggled to *Yes* for that system in Cisco TMS, provided a license is available. If no more licenses are available, **Allow Remote Bookings** will be left as *No* for that system, and the requested booking will be denied. A Cisco TMS ticket will be generated to notify the administrator that no more licenses are available.

Note that Cisco TMSXE performs a test bookings as each endpoint is added through the configuration tool, thus also enabling **Allow Remote Bookings**.

To view and/or modify the setting:

- 1. In Cisco TMS, go to Systems > Navigator.
- 2. Select the system you want.
- Click the Settings tab.
- In the TMS Scheduling Settings pane, you will find Allow Remote Bookings.
   If the setting is Yes, the system is currently using an Exchange Integration Option license.
- 5. To disable the setting:
  - a. Click Edit Settings.
  - b. Uncheck Allow Remote Bookings.
  - c. Click Save.

# **Booking rights**

Importing from Cisco TMS and booking meetings through the API requires authentication with Cisco TMS.

There are two possible models for user authentication.

### Service user books on behalf of users

The simplest approach is configuring one service user in Cisco TMS for your client, and granting this user *Book on behalf of* permissions as described below.

This model is only appropriate if all users with access to the client can be granted the same permissions in Cisco TMS, as booking on behalf of someone will create a new Cisco TMS user in the default group if the user does not already exist.

### All users book for themselves

If you need to set up different booking rights per user, or block some users from booking altogether, each user must authenticate with Cisco TMS individually through the API.

### Setting up permissions

All users who will book meetings using the API must be members of a group whose permissions include *Booking*. Users who book on behalf of others also require *Book on behalf of* permissions.

Permissions in Cisco TMS are set on a group level. To modify the permissions set for a group:


- 1. Go to Administrative Tools > User Administration > Groups.
- 2. Hover over the desired group, click the drop-down button and select **Set permissions**.
- 3. In the **Booking** section, under **Misc**, check:
  - Booking
  - · Book on behalf of
  - Update
  - Approve Meeting, unless bookings are to require manual approval
- 4. Click Save.

### **NTLM** authentication

On a default Cisco TMS installation, any API requires the use of Windows Challenge Response or NTLM authentication.

Not all environments support this authentication mechanism (non-Windows based environments), and you therefore may need to allow for Basic Authentication:

- 1. Open Internet Information Services manager on the Cisco TMS server.
- Expand Sites > Default Web Site and browse to the /TMS/external/booking virtual directory.

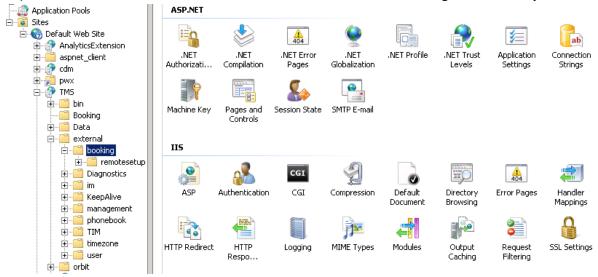

- 3. In the IIS section, double-click on Authentication.
- 4. Right-click on **Basic Authentication** and select **Enable**.

Anonymous Authentication is not supported with Cisco TMSBA.

# **Cisco Collaboration Meeting Rooms Hybrid requirements**

In order to use Cisco TMSBA to book meetings that include WebEx, Cisco TMS must be set up with:

- one or more WebEx sites
- WebEx credentials for each user (not service user), either manually added or using WebEx/Cisco TMS single sign-on

For guidance on setting up Cisco Collaboration Meeting Rooms Hybrid with or without single sign-on, see *Cisco Collaboration Meeting Rooms Hybrid Configuration Guide*.

# Setting up your environment

Cisco TMSBA provides a Web Services API that interfaces with the Cisco TMS booking engine. Web Services allows for simple integration into most common language and programming environments.

See your development tool reference for information on how to build implementation stubs to help speed the development of applications that use Web Services.

### **API locations**

- The WSDL file for the Cisco TMS remote setup API is located at: http://[Cisco TMS server] /tms/external/booking/remotesetup/remotesetupservice.asmx
- The WDSL file for Cisco TMSBA is located at: http://[Cisco TMS server] /tms/external/booking/bookingservice.asmx

Microsoft Visual Studio .NET users can reference the APIs by selecting **Project > Add Web Reference**, or entering the URLs above. You will be required to authenticate through web services to create the reference.

In a network load balancing scenario, use the virtual IP address or DNS name of the cluster for this task to allow failover for the API.

# **Security**

We strongly recommend using SOAP for all requests. For security reasons, HTTP GET and POST are only accessible from localhost. To change this, modify the Cisco TMS **web.config** file.

### **Optional elements**

Optional elements are indicated in different ways in the WSDL:

- minOccurs = 0 means the element can be omitted from the request XML altogether.
- nillable="true" means the element can hold an empty value.

The combination of these two is an element that can be skipped and be set to null (not a value).

### **Boolean values**

The boolean lexical forms "1" and "true" are interchangeable in SOAP.

# The SOAP header

# ExternalAPIVersionSoapHeader

Each call made to the Cisco TMSBA must include the following header specifying the version of the API. The value specified in ClientVersionIn is used by the API to determine the output from the function. The XML below describes the ExternalAPIVersionSoapHeader object that is common for all calls to the API.

Do not set a number greater than the latest version of the API, as this may break compatibility when using later revisions.

If no version number is set, version 0 is the default.

### ClientSession

On calls that require an API integration license, Cisco TMS will return a ClientSession ID that Cisco TMS will use to recognize the client.

You must include this ID in the header of subsequent API calls, until the ClientSession ID is automatically renewed after 45 minutes.

If you fail to include a session ID or provide the wrong ID, the session will expire, and the client will not be able to connect to Cisco TMS. You can enable logging for the client session ID by setting the log level for log-web-external to DEBUG. The log will then flag:

- Incoming session IDs
- Number of active session IDs
- Whether the incoming session ID is consuming a license key
- When the number of available licenses is exceeded and the incoming session ID associated with this request

### ContextHeader

The context header contains multiple flags related to the conference and the client.

Two flags control whether an email confirmation of the request will be sent out, and whether the confirmation will include conference information such as routing, list of participating systems, and so on. These flags are not mandatory, and all are *false* by default.

The client language flag will request localized API error messages for the specified language. Cisco TMS will return localized messages if available. If no language is specified, English will be returned.

<ClientLanguage>string</ClientLanguage>
</ContextHeader>

# **GUI** pattern

Cisco TMSBA can supply data to the front-end GUI of an external booking application. There are three information types.

# **System information**

Information on Cisco TMS resources can be exported to an external application. By using the remote setup API, data on systems in Cisco TMS can be exported to a front-end GUI and used to display system entities available in Cisco TMS.

Get a list of available systems in Cisco TMS by using either:

- GetSystems
- GetSystemsForUser

These functions return lists of TMSSystem objects, that include information such as the ID of the system, to show in the front-end GUI. GetSystems will return all systems in Cisco TMS, while GetSystemsForUser will only return the systems the user has booking privileges for. If the external GUI application controls system access, use GetSystems and filter the systems in the application.

# Free/busy information

Free/busy information on systems in Cisco TMS can be exported to an external application using Cisco TMSBA.

- Get all Cisco TMS bookings for a specific user by using GetConferencesForUser.
- Get free/busy information for systems by using GetConferencesForSystems.
- Get a specific conference, including any exceptions if it is a series, by using GetRecurrentConferenceById.
- The Remote Setup API function GetUsers returns all users registered in Cisco TMS. The output of this function can be used to display a drop-down list of all users in Cisco TMS, or show conferences booked by a specific person.

### **Booking management**

The API allows you to forward booking requests from an external booking system to Cisco TMS, and reserve resources in Cisco TMS. (Information exchange: **External Booking System > TMS**).

- Get Conference objects with default values for Conference properties defined in Cisco TMS by using the GetDefaultConference function.
- Retrieve existing conferences by using GetConferenceById, GetConferenceIdByExternalId or GetRecurrentConferenceById.
- Save changes to a conference by editing the conference properties and using the function
   SaveConference. This will save the conference to Cisco TMS if the properties validate. If not, an exception will be raised.
- Delete a conference or series by using DeleteConferenceById. Beware that conference participants will be disconnected if the conference is deleted while it is active or connected.

- Delete an occurrence of a series by using DeleteConferenceRecInstanceById.
- Add recording to a conference by using GetRecordingAliases to get information about a user's recording aliases and use this information to add recording participant(s) to the conference.

# Replication pattern

The APIs can be used in conjunction with external booking applications that have their own reservation database. There are three main components.

### **Import**

The API can automate importing systems from Cisco TMS into a third-party application, or this can be initiated by the user via a GUI.

Get a list of available systems in Cisco TMS by using either of the following from the remote setup API:

- GetSystems
- GetSystemsForUser

These functions return lists of TMSSystem objects, and information such as the ID of the system, for use by a third party application. GetSystems will return all systems in Cisco TMS, while GetSystemsForUser will return only the systems the user has booking privileges for. If the external application controls system access, use GetSystems and filter the systems in the application.

### Replication

External booking systems can keep track of booking transactions on the Cisco TMS server, and replicate bookings made using Cisco TMS. This part does not apply to external GUI front ends that do not have their own reservation database.

Get a list of transactions listed by transaction ID by using the GetTransactionsSince function. All conferences have a transaction ID property

The list of transactions contains:

- The transaction type (New, Update, and Delete)
- An associated conference ID.

Use GetConferenceById to get an updated Conference object and update the conference with the external source. The current transaction ID should then be updated to the last conference's TransactionId.

### **Booking**

The API allows you to forward booking requests from an external booking system to Cisco TMS, and reserve the resources there.

- Get Conference objects with default values for Conference properties defined in Cisco TMS by using GetDefaultConference.
- Retrieve saved conferences by using one of the following functions:
  - GetConferenceById
  - GetConferenceIdByExternalId
  - GetRecurrentConferenceById
  - GetConferencesForUser
  - GetConferencesForSystems

Save changes to a conference, by editing the conference properties and use function SaveConference. This will save the conference to Cisco TMS if the validation of the properties is OK. If not, an exception will be raised.

# **Availability**

The API allows you to display reservations from the Cisco TMS internal reservation database.

# Limitations

# WebEx booking limitations

WebEx booking does not support all recurrence patterns and options supported by Cisco TMS:

- Exceptions from a recurrence pattern (moving or updating one or more meetings) are not supported.
- Some advanced recurrence patterns are not supported.

When WebEx is not supported for a particular booking, the booking will fall back to telepresence only.

### WebEx-only meetings not supported

WebEx-only meetings should not be booked using Cisco TMSBA. If using Cisco TMS to create a conference that includes WebEx without including any telepresence participants, telepresence resources will still be taken up, as an MCU will connect to the conference. The API will book the conference, but return a warning when such conferences are created.

Also note that WebEx bookings do not support time zone rules.

# Other booking limitations

The following limitations apply when booking through Cisco TelePresence Management Suite Extension Booking API:

The following limitations apply when booking through Cisco TMSBA or any other extension using Cisco TelePresence Management Suite Extension Booking API:

- Cascading to additional MCUs when the number of participants exceeds the capacity of the first MCU is not supported.
  - To support such scenarios, set up Cisco TelePresence Conductor as the preferred MCU in Cisco TMS.
- When a service user is performing all bookings, the booking permissions are the same for all users. Individual permissions and restrictions are ignored.
- Meetings in the past cannot be changed or deleted, and you cannot move a meeting from the past to the future.
- If sufficient system licenses are not available at the time of editing an existing booking, the booking will be deleted.
- Yearly recurrence is not supported.

### **Booking horizon**

Cisco TMS will decline any meeting request that is not within its booking horizon:

- Series with more than 100 occurrences or with no end date.
- Meetings including occurrences of series outside of the Cisco TMS booking window. We strongly recommend configuring identical booking windows for Cisco TMS and all integrated resource mailboxes in Exchange.
- Meetings in the past.

### **Ongoing meetings**

Updating a single meeting that is currently ongoing is possible, but will not always be successful.

- Modifying any meeting:
  - If the meeting is using an MCU that does not support WebEx, WebEx may not be added, as the meeting would have to be disconnected and re-routed for this to work.
  - Extending the meeting will fail if it creates a booking conflict for any of the participants.
- Modifying single meetings, including meetings that are part of a series:
  - Editing the start time will not work and Cisco TMS will throw an exception.
  - Any other aspects of the meeting can be modified, but if the number of participants exceeds the
    available capacity of the MCU or TelePresence Server, Cisco TMS will throw an exception and the
    participants will not be added.
- Deleting a recurrent series while a meeting in the series is ongoing will cause the ongoing meeting to end.
- Modifying a recurrent series while a meeting in the series is ongoing will turn the ongoing occurrence into a single meeting, separate from the series:
  - Any occurrences of the modified series that are in conflict with the ongoing meeting, will not be created.
  - Any past occurrences in the series will not be modified.
  - Pending occurrences are assigned new conference IDs.

### **Unused values**

The following values are present in the API, but not in use:

Function	Attribute	Value
RecurrencePattern	PatternEndType	Never
RecurrencePattern	FrequencyType	■ Secondly
		<ul><li>Minutely</li></ul>
		<ul><li>Hourly</li></ul>
		■ Yearly
Participant	ParticipantCallType	User
ISDNBandwith	Bandwidth	Max
ISDNBandwith	IPBandwidth	Max

# Remote setup API reference

The remote setup API accommodates the setup of users and systems prior to using the Booking API.

TMSSystem object	28
TMS user object	
Remote Setup API functions	

# **TMSSystem object**

The TMSSystem object contains information about a system in Cisco TMS. This object is used to read information, as the remote setup API does not support updating system information in Cisco TMS.

Use this object to import the required information into the third party application. The **SystemId** is required to connect the application entity with the system in Cisco TMS. In addition other information can be imported and shown for informative purposes, for example the name of the system.

# **TMSSystem**

SystemId	The ID of the system in Cisco TMS. Use this to refer to the associated system in Cisco TMS from your application. For example, when booking a conference, insert the IDs of the chosen systems into the Conference object.
SystemName	The name of the system in Cisco TMS. Use this to display the name of the system in your application.
Contact	The system contact associated with the system in Cisco TMS.
Manufacturer	The manufacturer of the system. For example, Cisco.
Description	A textual description stored in Cisco TMS. This field can contain information such as the number of chairs in the meeting room where the system is located.
SystemType	The type of system. For example, Cisco TelePresence System EX90.
QNumber	The IP or DNS address of the system.
ISDNNumber	The ISDN number of the system.
Location	The ISDN location where the system is located.
NetworkAddress	The fully qualified ISDN number of the system. A fully qualified ISDN number always includes the country code and area code. This is not implemented.
WebInterfaceURL	The http address of the web server of the system.
SIPUri	The SIP URI of the system.
H323Id	The H.323 ID of the system.
E164Alias	The E.164 alias of the system.
TimeZone	The time zone where the system is located.
SystemCategory	The system category.
SystemStatus	The status of the system.

# **TimeZone**

TimezoneName	The name of the time zone.
StartTimeDTS	The start date of daylight saving time.

EndTimeDTS	The end date of daylight saving time.
GMTOffset	The GMT (UTC) offset.

# **SystemCategory**

### **SystemCategory**

An enumeration value of what category of system this is. The available options are:

- Endpoint
- Equipment
- Room
- Recording

### **SystemStatus**

### **SystemStatus**

An enumeration with the status of the system when this function is call. Note that the status of the system can change frequently. The possible values are:

- Alive
- Idle
- InCall
- NoResponse
- Unknown

# TMSSystem object XML

The XML below describes the TMSSystem object. Following the XML is a description of the elements and what information each element it contains.

Note that as all fields are not required, the output may contain less system information than the object can hold.

### <TMSSystem>

```
<SystemId>long</SystemId>
<SystemName>string</SystemName>
<Contact>string</Contact>
<Manufacturer>string</Manufacturer>
<Description>string/Description>
<SystemType>string</SystemType>
<NetworkAddress>string</NetworkAddress>
<Location>string</Location>
<ISDNNumber>string</ISDNNumber>
<QNumber>string</QNumber>
<WebInterfaceURL>string</WebInterfaceURL>
<SIPUri>string</SIPUri>
<H323Id>string</H323Id>
<E164Alias>string</E164Alias>
<TimeZone>
        <TimezoneName>string</TimezoneName>
        <StartTimeDTS>string</StartTimeDTS>
        <EndTimeDTS>string</EndTimeDTS>
```

# TMS user object

The Cisco TMS user object contains information about Cisco TMS users. Use this object to access information about users in Cisco TMS. The XML document below describes the User object. Following the XML is a description of the elements and what information each element it contains.

### User

Attribute	Description
DisplayName	The display name of the user.
EmailAddress	The e-mail address of the user.
FirstName	The first name of the user.
LastName	The last name of the user.
UserName	The Windows login name of the user.
IsHiddenUser	Boolean value used to represent whether this is a normal user (True), or a service account (False) that normally should not be displayed in a list of users.
TimeZone	The time zone where the user is located. Uses the same TimeZone object as TMSSystem.

# TMS user object XML

# **Remote Setup API functions**

This reference section describes all the available functions of the remote setup API.

### **DisableConferenceAPIUser**

This function is used to disable a ConferenceAPI user. E-mail notifications for the user are disabled, and the user is removed from all groups in Cisco TMS except the Users group. This is done to keep references valid. Executing this function requires Cisco TMS Site Administrator privileges.

This function is typically used during uninstall procedures.

### **Supported parameters:**

userName The full username of the user to delete in NT4 style (domain\username).
--

Returned data: None.

### **GenerateConferenceAPIUser**

This function generates a Cisco TMS Booking API account in the default user container on the Cisco TMS server, including registering the user in Cisco TMS. It is typically used during installation/setup procedures.

The user will be:

- Hidden from normal user lists.
- Added to the Site Administrator Group.
- Configured to receive e-mail event scheduling notifications for all creation/update/deletions of bookings.
   These are typically used for updating the external booking system with changes done on the Cisco TMS server.

In order for the function to complete, the current user must be:

- A Cisco TMS Site Administrator
- A local computer administrator

### Supported parameters:

userNameBase	The base portion of the user name. If a user with the name already exists a numeric postfix is added (for example tms-admin ==> tms-admin1).
encPassword	A base64 encoded password that is to be used for the newly created user.
emailAddress	The email address of the user.
sendNotifications	Whether the user should receive scheduling notifications.

Returned data: The username of the created user (NT4 domain/username style).

# **GetConferenceLanguages**

Returns an array of Language objects.

Supported parameters: None

**Returned data:** An array of supported conference languages in TMS. The CultureInfo field specifies the exact variety of a language and can be used to set the ConferenceLanguage on the Conference object when scheduling conferences.

# **GetSystemByld**

This function returns information about a specific system. If the system is not found, this causes an error.

### Supported parameters:

TMSSystemId

System ID as given in Cisco TMS.

Returned data: A TMSSystem object.

If the provided ID does not exist, this will cause an error. See the section <u>Error codes and error handling</u> [p.63].

# **GetSystems**

This function returns all endpoints and rooms registered in Cisco TMS. Note that network systems, such as a Cisco TelePresence MCU, are not returned since they are normally not booked by the users, but are added to the conference by Cisco TMS if required.

Typically used during setup of resources in the external booking system to connect resources in Cisco TMS with resources in the external booking system.

Supported parameters: None

Returned data: An array of TMSSystem objects.

# **GetSystemsForUser**

This function returns all endpoints and rooms that can be booked by the current user, the account credentials are used to communicate with Cisco TMSBA.

Note that network systems, such as a Cisco TelePresence MCU, are not returned since they are normally not booked by the users, but are added to the conference by Cisco TMS if required.

Typically used in the external booking system to list Cisco TMS resources in external booking system.

Supported parameters: None.

Returned data: An array of TMSSystem objects.

### **GetUsers**

This function returns all users registered in Cisco TMS.

This function is typically used in the front-end GUI to provide a list of Cisco TMS users, and can filter output from the Cisco TMSBA based on users from this output.

Supported parameters: None.

Returned data: An array of User objects.

### **IsAlive**

This function checks the connection to the web services of Cisco TMS.

It is typically used during installation to check the URL to this web service.

Supported parameters: None

Returned data: A boolean value true/false, which is true if the connection works.

### **IsBookOnBehalfOfUser**

Checks whether the specified user (not the current user) is a member of a Cisco TMS group that has permissions to book on behalf of other users.

### Supported parameters:

**user** The Cisco TMS user ID of the user for whom to check permissions.

**Returned data:** A boolean value true/false, which is *true* if the user if the user has permissions to book on behalf of other users in Cisco TMS.

### **IsLocalAdmin**

This function checks whether the current user can create local or Active Directory accounts in the default user container on the Cisco TMS server.

This is typically used during installation to check whether the user installing the integration has sufficient access to Active Directory and the Windows server hosting Cisco TMS.

This function must return True in order for the GenerateConferenceAPIUser function to succeed.

Supported parameters: None.

Returned data: A boolean value true/false, which is true if the user is a local administrator.

### **IsTMSBookOnBehalfUser**

Checks whether the current user is a member of a Cisco TMS group that has permissions to book on behalf of other users.

Supported parameters: None.

**Returned data**: A boolean value true/false, which is *true* if the user has permissions to book on behalf of other users in Cisco TMS.

### **IsTMSServiceUser**

This function is used to check whether the current user is flagged as an Exchange Integration user and has access to book on behalf of other users. The service user setting has been deprecated, and this function will be removed in a future version of Cisco TMS.

This is typically used during installation to check whether the user installing the integration has sufficient access permissions for the Cisco TMS server.

Supported parameters: None.

Returned data: A boolean value true/false, which is true if the user is a Cisco TMS service user.

### **IsTMSSiteAdmin**

This function checks whether the current user is a member of the Cisco TMS Site Administrators group.

This is typically used during installation to check whether the user installing the integration has sufficient permissions towards the Cisco TMS server. This function should return *True* for the GenerateConferenceAPIUser function to succeed.

Supported parameters: None.

Returned data: A boolean value true/false, which is true if the user is a Cisco TMS Site Administrator.

# **SetPrimarySystem**

Used to set a specific endpoint as a primary system for the logged-in user.

### Supported parameters:

primSys A Cisco TMS system ID.

**Returned data:** A boolean value true/false, which is *true* if the primary system was successfully set for the current user.

# **Booking API reference**

The booking API lets you schedule conferences in Cisco TMS using a third-party client, and replicate existing bookings between the two. This chapter is a reference to the conference object and to all available functions and parameters.

Conference object	37
Booking API functions	53

# **Conference object**

This object can be used to read and write

- Conference properties such as Start Time, End Time, Conference Title, and Conference Password.
- Conference call-related values such as **Bandwidth**, **Picture mode**, and **Encryption mode**.

All conference resources, including video participants, audio participants, phone book participants, external participants and so on, are held in this object, together with routing information for connecting the resources. You also use the Conference object to define the conference type, that is, how the conference should be connected.

Conference data can be saved/updated, and handled by Cisco TMS using the **SaveConference** function described below.

### **Conference**

Attribute	Read/Write	Description
ConferenceId	r/w,	When using SaveConference:
	optional	<ul> <li>Set to -1 to create a new conference using</li> <li>GetDefaultConference.</li> </ul>
		Set to a value greater than 0 to update the existing conference that has the given ID in the Cisco TMS database.
Title	r/w, optional	If no title is specified, the Cisco TMS default will be used.
StartTimeUTC	r/w,	The start and end times of the conference in UTC format.
		Only UTC date-time groups ending with Z are supported.
EndTimeUTC	r/w, required	Example: 1975-06-01 23:32:11Z.
RecurrenceInstanceIdUTC	r, only used when getting conference from Cisco TMS	Gives the start time of the instance of the meeting according to the recurrence pattern. If this is different from <b>StartTimeUTC</b> , the meeting is an exception to the recurrence pattern.
		Only UTC date-time groups ending with Z are supported. Example: 1975-06-01 23:32:11Z.
RecurrenceInstanceType	r, only used when getting conference from Cisco TMS	If this string contains the value 'modify' it means that the particular meeting is an exception to a recurrence pattern. It the string contains "deleted", it is a meeting that has been deleted from a series of recurring meetings.
FirstOccurrenceRec InstanceIdUTC	r, only used when	Gives the start time of first instance of the meeting according to the recurrence pattern.
	getting conference from Cisco TMS	Only UTC date-time groups ending with Z are supported. Example: 1975-06-01 23:32:11Z.

Attribute	Read/Write	Description
RecurrencePattern	r/w, optional	Sets the recurrence patterns for recurrent meetings. This is not valid if you call the SaveConferenceRecInstance function. See RecurrencePattern [p.48].
Ownerld	r/w, optional	Elements used to look up the owner of the conference:  If OwnerUserId is specified, it will be looked up in the Cisco TMS database.  If no OwnerUserId is specified, but the OwnerUserName
OwnerUserName	w, optional	is set, it will be looked up in the Cisco TMS database. If not found and Active Directory Lookup is enabled, a lookup will be performed.
OwnerEmailAddress	w, optional	If neither OwnerUserId nor OwnerUserName are specified, the OwnerEmailAddress will be looked up in Cisco TMS. If not found and Active Directory Lookup is enabled, a lookup will be performed.
OwnerFirstName	w, optional	These elements are not used for lookup, but can be stored - for the new user if it does not exist in Cisco TMS and Active
OwnerLastName	w, optional	Directory Lookup is not enabled.
ConferenceType	r/w, optional	Setting determining how the conference will be launched. The valid values are: <ul> <li>Automatic Call Launch, connect all participants at conference start time and disconnect them again at conference end time.</li> <li>One Button to Push, allows for OBTP call setup on supported systems.</li> </ul>
		<ul> <li>Manual Call Launch, the conference master participant will be asked to connect the call at conference start time.</li> </ul>
		<ul> <li>Reservation Only, reserve the participants for the conference duration, but do not create a route.</li> </ul>
		<ul> <li>Default, do not change the conference type currently specified for the conference in Cisco TMS.</li> </ul>
		If unspecified, the default conference type configured in Cisco TMS will be used.
Bandwidth (Discontinued)	_	This item has been deprecated and is included for backwards compatibility only. Use <b>ISDNBandwidth</b> and <b>IPBandwidth</b> to control the conference bandwidth. See ISDNBandwidth [p.50].
PictureMode	r/w, optional If not specified, Default is assumed	The picture mode/conference layout to use for a conference using Cisco TelePresence MPS. The valid values are:  Continuous Presence  Enhanced CP  Voice Switched  Default, do not change the picture mode currently specified for the conference in Cisco TMS.  If unspecified, the default conference type configured in Cisco TMS will be used.

Attribute	Read/Write	Description
Encrypted	r/w, optional If not specified, Default is assumed	The encryption mode for the conference. The valid values are:  Yes No If Possible
		<ul> <li>Default, do not change the picture mode currently specified for the conference in Cisco TMS.</li> <li>If unspecified, the default encryption setting configured in Cisco TMS will be used.</li> </ul>
DataConference	r/w, optional	Legacy method of adding WebEx to a conference. See ExternalConference below for the preferred method.  The valid values are:  Yes  No (default)  If Possible  Default, do not change the data conference setting currently specified for the conference in Cisco TMS.
ExternalConference	r/w, optional	Used to include a web conference with the telepresence meeting. The supported conference type is <b>WebEx</b> . See ExternalConference [p.42].
ShowExtendOption	r/w, optional If not specified, Default is assumed	Set this value to specify extend option behavior when the scheduled conference is close to ending.  Yes—prompt the VC Master (the first endpoint in the participant list) to extend the conference  No—do not offer to extend conference  Automatic Best Effort—automatically extend conference  Default—do not change the Show Extend Option setting currently specified for the conference in Cisco TMS  If unspecified, the default Show Extend Option defined in
Password	r/w, optional	the Administrator Tools Page in Cisco TMS is used.  The numeric PIN that conference participants must enter to join the call.  If Auto Generate PIN on New Conferences is enabled in Cisco TMS, a random PIN will be added to any conference that does not have a PIN specified.
BillingCode	r/w, optional	The billing code to use for the conference. If Cisco TMS requires billing codes, this field must be specified and will be validated against the list of billing codes in Cisco TMS. If no match is found, the conference will not be created and the API will throw an "Invalid billing code" exception.  This setting is blank by default.

Attribute	Read/Write	Description
ISDNRestrict	r/w, optional	Whether the ISDN channels should be restricted to use 54k and not 64k.
		The default is No.
ConferenceInfoText	r, only used when getting conference from Cisco TMS.	Information on how the conference will connect, including routing information. Based on Cisco TMS templates.
ConferenceInfoHTML	r, only used when getting conference from Cisco TMS.	Information in HTML markup on how the conference will connect, including routing information. Based on Cisco TMS templates.
UserMessageText	r/w, optional	A user definable text/description of the conference. The default is blank.
ExternalSourceld	r/w, optional	An external source and ID definable by the client, this is used to synchronize the Cisco TMS database with the external sources database. If Cisco TMS is given a value for those fields. Cisco TMS will set up the value for all instances.
ExternalPrimaryKey		these fields, Cisco TMS will return the value for all instances of the same conference.
		The default for these two is blank.
<b>DetachedFromExternalSourceId</b>	r/w,optional	When an instance of a series has been detached, these fields will contain the <b>ExternalSourceld</b> and
${\bf Detached From External Primary Key}$		ExternalPrimaryKey of the original series.
Participants	r/w, required	A list of conference participants. When calling GetDefaultConference, the participant list will be empty.
		Note that when updating an occurrence of a series:
		• Setting this to <i>null</i> will leave the participants unchanged.
		<ul> <li>Setting Participants to an empty list will clear all participants.</li> </ul>
RecordedConferenceUri	r, only used when getting conference from Cisco TMS	If the conference is recorded, this is the URI of the conference recording.

Attribute	Read/Write	Description
WebConferencePresenterUri	r, only used when getting conference from Cisco TMS	The URIs that the presenter and attendees respectively will use to join WebEx when the legacy DataConference attribute has been used. See ExternalConference for the recommended way to add WebEx.
WebConferenceAttendeeUri	r, only used when getting conference from Cisco TMS	
ISDNBandwidth	•	■ 1b/64kbps ■ 2b/128kbps ■ 3b/192kbps ■ 4b/256kbps ■ 5b/320kbps ■ 6b/384kbps ■ 8b/512kbps ■ 12b/768kbps ■ 18b/1152kbps
<b>IPBandwidth</b>	r/w, optional	<ul> <li>23b/1472kbps</li> <li>30b/1920kbps</li> <li>32b/2048kbps</li> <li>48b/3072kbps</li> <li>64b/4096kbps</li> <li>7b/448kbps</li> <li>40b/2560kbps</li> <li>96b/6144kbps</li> <li>Max, use as much bandwidth as available and necessary.</li> <li>Default: Use Cisco TMS default for a new conference. If updating an existing conference, Default will not change the bandwidth currently specified for the conference in Cisco TMS.</li> </ul>
ConferenceLanguage	r/w, optional If not specified, default is assumed	The language used for email invitations and other notifications regarding the meeting. A list of supported languages is available from the Remote Setup API, see GetConferenceLanguages [p.32].
ConferenceTimeZoneRules	r/w, optional	An array of time zone rules for the conference.  See ConferenceTimeZoneRules [p.44].

Attribute	Read/Write	Description
ConferenceState	r/w,	Contains the <b>Status</b> element, for which the valid values are:
	optional	■ All
		■ AllExceptDeleted
		■ Pending
		■ Ongoing
		■ Finished
		■ PendingAndOngoing
		<ul> <li>MeetingRequest (Conference has been requested by a user without booking rights, needs approval.)</li> </ul>
		■ Rejected
		■ NotSaved
		■ Defective
		■ Deleted
Version	r/w, optional	Conference revision number set, incremented, and returned by Cisco TMS with each save. Defaults to 0 if not included by the client. If the client tries to update a version that is not the latest in the database, Cisco TMS will throw an exception.

#### **ExternalConference**

The only supported type of external conference is currently WebEx.

#### WebEx

There are two ways to add WebEx to a telepresence booking:

- Setting ExternalConference with a WebEx element inside of it initiates the addition of WebEx to a booking, or an update to existing WebEx information for a conference. This is the recommended way to add WebEx.
- The legacy way: Set **DataConference** to *Yes* or *If possible* and externalconference is not set.

To remove WebEx from a booking:

- Set an empty ExternalConference (no WebEx element).
- The legacy way: Set dataconfmode to Off, do not include ExternalConference.

WebEx does not support exceptions, that is, meetings in a series that diverge from the series pattern. If attempting to use Cisco TMSBA to create a series with exceptions that includes WebEx, the WebEx calendar may become out of sync with Cisco TMS.

WebEx also cannot be added to a single instance of a recurrent series, or removed from a single instance of a series.

Attribute	Read/Write	Description
MeetingKey	r/w, optional	The WebEx meeting number.

Attribute	Read/Write	Description
SipUrl	r/w, optional	The conference SIP URL.
ElementsToExclude	r/w, optional	Elements to exclude from conference invitation email. The following elements may be excluded:
		■ None
		<ul><li>MeetingPassword</li></ul>
		■ HostKey
		■ LocalCallInTollFreeNumber
		■ GlobalCallInNumberUrl
MeetingPassword	r/w, optional	The password required to join the WebEx conference.
JoinMeetingUrl	r/w, optional	The URL that attendees will use to join the conference.
HostMeetingUrl	r/w, optional	The URL that the host will use to join the conference.
HostKey	r/w, optional	Specifies the host key, which may be used to pass and reclaim the host role during a WebEx conference.
JoinBeforeHostTime	r/w, optional	Whether participants are allowed to join the conference up to 15 minutes before the scheduled start time.
		The required format is HH:MM:SS.
Telephony	r/w, optional	Phone numbers for joining the conference. The type is <b>WebExTelephony</b> , see below.
TmsShouldUpdateMeeting	r/w, optional	Whether a WebEx meeting originally booked by an external client may be updated by Cisco TMS. If updating the meeting is not possible, the request will return a warning.
SiteUrl	r/w, optional	URL of the WebEx site booked for the conference. This site must already be added to Cisco TMS, or the request will return an error.
UsePstn	r/w, optional	Whether the WebEx site for the conference is set up to use PSTN. When the conference is externally owned (see below), this setting will always be read/overwritten from the WebEx site configured in Cisco TMS.
OwnedExternally	r/w, optional	Whether the WebEx meeting was originally booked by an external client.
Errors	r, optional	Errors from WebEx.
Warnings	r, optional	Warnings from WebEx.

### WebexTelephony

Attribute	Read/Write	Description
LocalCallInTollNumber	r/w, optional	Specifies the backup toll call number.

Attribute	Read/Write	Description
LocalCallInTollFreeNumber	r/w, optional	Specifies the toll-free call in number.
GlobalCallInNumberUrl	r/w, optional	Specifies a call-in number for out-of-country participants.
PstnDiallnNumber	r/w, optional	Number to dial in if using PSTN. This element is required if <b>UsePstn</b> is <i>true</i> .
DtmfSequence	r/w, optional	PSTN only. This is a WebEx format, do not convert. This element is required if <b>UsePstn</b> is <i>true</i> .
ParticipantAccessCode	r/w, optional	The access code used by attendees when dialling in for an audio- only conference.

For further detail on WebEx configuration and options, see your WebEx Site Administrator's User Guide or online help, linked from your WebEx site.

#### ConferenceTimeZoneRules

See <u>Time zone versioning [p.11]</u> for information on how time zones are handled with versions of the API that do not support the model described below.

#### **Booking**

When booking a new conference using API version 11 or later, Cisco TMS will:

- Use the time zone rules supplied with the booking, if available and valid.
- Use the time zone of the conference owner in Cisco TMS if no time zone rules are supplied with the booking.

Note that each booking, be it for a single meeting or a series, may only have one set of time zone rules. If different rules are specified for start time and end time, the time zone rules for end time will be ignored.

#### **Updating**

When updating a conference:

- Setting the time zone to null, once set, is not a valid option. Cisco TMS will keep the original time zone of the conference, even if the conference is being modified by a client or API version that does not support time zone rules.
- Supplying the new time zone rule as part of the Conference object will change the actual time zone of this
  conference.

Note that modifying the time zone of an existing meeting is only supported through the API, not in the Cisco TMS user interface.

#### **TimeZoneRule**

**ConferenceTimeZoneRules** contains an array of **TimeZoneRule** elements. If a change to DST rules is scheduled for a time zone, the new rule set should be included as early as possible to ensure that conferences scheduled to happen after the rule change will happen at the intended time.

Note that no rules can overlap in time, and no start day can be the same day as the end day of the previous rule.

Each TimeZoneRule element may contain the attributes below.

Attribute	Read/Write	Description
ValidFrom		Use SOAP dateTime to specify the exact time from which the rule is valid.
		Here, you must use the given time zone's standard time and provide it as a datetime of the unspecified kind, or an exception will be thrown.
		Do not use UTC or UTC formatting.
ld	optional	Time zone rule set name.
		The <b>Id</b> must be the same for each TimeZoneRule in the ConferenceTimeZoneRules array. If they are not the same, the last <b>Id</b> will be used.
DisplayName		Time zone rule set description that will be displayed in Cisco TMS for any booking using this rule. Note that there is no mechanism for localizing this, the textual description will be used as-is.
BaseOffsetInMinutes		UTC offset outside of daylight savings time (DST), in minutes. The offset must not exceed 14 hours/-14 hours.
DaylightOffsetInMinutes		Offset from the base offset during DST, in minutes. The sum of this offset and the base offset must not exceed 14 hours/-14 hours If set to 0, Cisco TMS will not parse the defined Daylight or Standard rules, but create a rule without DST changes
Daylight	optional	Set for any time zone that has rules for entering (Daylight) and leaving (Standard) DST. The type is <b>TimeChange</b> , see below.
Standard	-	If either of these fields is undefined/null, and BaseOffsetInMinutes is set as more than 0, Cisco TMS will throw an exception.

#### TimeChange

Attribute	Read/Write	Description
ChangeSecondAtDay		The exact number of seconds from midnight that the change will occur. Must be between 0 and 86399.
TimeChangeAbsoluteRule	r/w, defining one of these two is mandatory	Used if DST changes happen at fixed dates. Specify the month and the day of the month.
		Valid month values are between 1 and 12.
		■ Valid day of the month values are between 1 and 31.
TimeChangeRelativeRule	-	Used if the DST change date is relative, such as the third sunday of a particular month. Specify the month, the week of the month, and the day of the week.
		<ul> <li>Valid month values are between 1 and 12</li> </ul>
		<ul> <li>Day of the week must be between 0 (Sunday) and 6 (Saturday). Default is 0</li> </ul>
		■ Week of the month must be between 1 and 5. Default is 5, last week of the month.

If time zone validity rules are violated, the API will throw an exception, see  $\underline{\text{Error codes and error handling}}$  [p.63].

# **Participant**

Attribute	Read/Write	Description
ParticipantId	r/w – optional	For Cisco TMS System Entities, this value must be the SystemId of the system. For external participants this value may be set, but is not required. If not set for external participants, Cisco TMS will create an ID with an integer greater than 0.
NameOrNumber	r/w – optional	For external participants, the participant name for dial-ins, or the fully qualified number to dial for dial-outs.
		For example:
		■ A dial-in can be given the value Placeholder for John Doe.
		■ An ISDN dial-out would be given the value +1 (555) 1231234. This value is required for external dial-out participants, and must be the fully qualified number to dial.
		Fully qualified numbers are of the format +CC (AC) BN where:
		■ CC=Country Code
		■ AC=Area Code
		■ BN=Base Number
		If the country does not use Area Codes, that element can be omitted completely, and the format would be +CC BN.

#### Attribute Read/Write Description ParticipantCallType r/w -The participant type. Valid values are: ■ TMS, a TMS System Entity. When this is specified, the ParticipantId must required be the Cisco TMS System Entity ID as given in Cisco TMS. ■ IP Video <- or ISDN Video <-, an IP/ISDN video dial-in. If this is specified, you may give the participant a name using the NameOrNumber field. Cisco TMS will automatically give the participant an ID (less than 0). ■ IP Tel <- or Telephone <-, an IP/ISDN audio dial-in. If this is specified, you may give the participant a name using the NameOrNumber field. Cisco TMS will automatically give the participant an ID (less than 0). ■ IP Video -> or ISDN Video ->, an IP/ISDN video dial-out site. Specifying this value requires providing Cisco TMS with the number to use in the NameOrNumber field. (Formats: ISDN: +1 (555) 1231234, H.323 IP E.164: 12312321, H323 IP Address: 10.0.0.10). ■ IP Tel -> or Telephone ->, an IP/ISDN audio dial-out site. If this is specified, you must give Cisco TMS the number to use in the NameOrNumber field (Formats: ISDN: +1 (555) 1231234, H.323 IP E.164: 12312321, H.323 IP Address: 10.0.0.10). Call will be placed using 64kbps/54kbps depending on restrictions. Directory, a Cisco TMS phone book entry. ■ SIP -> or SIP <-, a SIP video participant. The value can be a number or a ■ SIP Tel -> or SIP Tel <-, a SIP audio participant. The value can be a number or a URI. ■ TMS Master Participant, the conference master. When this entity is specified, the ParticipantId must be the Cisco TMS System Entity ID as given in Cisco TMS. It is only possible to specify a single Master Participant per conference, which must be a Cisco TMS System. The *User* participant type is not currently supported by the API.

## RecurrencePattern

Attribute	Read/Write	Description
FrequencyType		The frequency of the recurrence rule.
	required	Legal values are:
		■ Daily
		■ DailyWeekday
		■ Weekly
		■ Monthly
		■ Default
		Default is used by Cisco TMSXE to identify single telepresence meetings that are part of a non-telepresence series on the client side.
		Available, but unsupported values are:
		■ Secondly
		■ Minutely
		■ Hourly
		■ Yearly
Interval	r/w, required	Every X day/week/month as selected by <b>FrequencyType</b>
DaysOfWeek	r/w, optional	SOAP array of days of week in UTC equivalent. For example, a meeting that occurs after 5PM on Monday in UTC -7 will be on Tuesday in UTC. Include if relevant for your <b>FrequencyType</b> .
		Valid values are full names of days, capitalized. Include the name of each weekday that the meeting will occur.
FirstDayOfWeek	r/w, optional	First day of week. Used to split <b>DaysOfWeek</b> into "every X weeks" weekly patterns. The default value is <i>Sunday</i> .
BySetPosition	r/w, optional	Relative position of the instance in a pattern. The specific days must be defined in <b>DaysOfWeek</b> .
		For example, in a monthly pattern:
		<ul> <li>a value of 2 where <b>DaysOfWeek</b> is MONDAY, means the second Monday of every month.</li> </ul>
		<ul> <li>-1 where DaysOfWeek is TUESDAY means the last Tuesday of every month.</li> </ul>
		If set to 0 for monthly recurrence, <b>ByMonthDay</b> must be populated. If both are populated, an exception will be thrown.

Attribute	Read/Write	Description
ByMonthDay	r/w, optional	Absolute position of the instance in a pattern. For example, in a monthly pattern, a value of 2 means the second of the month. The valid range is 1-31. For months that have fewer days than the value specified, the last day of the month will be booked.
		If set to 0 for monthly recurrence, BySetPosition must be populated. If both are populated, an exception will be thrown.
PatternEndType	r/w, optional	End type:  by number of occurrences  by date (default)  never (not currently supported)
PatternEndDateUTC	r/w, optional	In the case where <b>PatternEndType</b> is by date, this gives the end date of the recurrence pattern.  Only UTC date-time groups ending with Z are supported.  Example: 1975-06-01 23:32:11Z.
FirstOccurrenceRecInstanceIdUTC	r, optional	Gives the original start time of the first occurrence of this meeting. If the meeting is not an exception to the recurrence pattern, this time will be the same as the start time of the meeting. If the meeting time for the occurrence has been modified, this string gives the original start time according to the recurrence pattern.
		Only UTC date-time groups ending with Z are supported. Example: 1975-06-01 23:32:11Z.
PatternInstances	r/w, optional	In the case where <b>PatternEndType</b> is by number of occurrences, defines the number of occurrences to generate from the pattern.
Exceptions	r/w, optional	Exceptions to the pattern are supported using the GetRecurrentConferenceByld and SaveConference functions. To get a conference with all its exceptions, use GetRecurrentConferenceByld.
		To update a conference with exceptions, use the SaveConference function providing the exceptions in the RecurrencePattern.Exceptions array before saving the conference.
		As an alternative:
		<ol> <li>Use GetConferenceIdByExternalId with RecInstanceIdUTC (UTC string that points to the UTC day of the instance) to get conference id for the instance.</li> </ol>
		<ol><li>Use SaveConferenceRecInstance to save this exception.</li></ol>

#### **ISDNB**andwidth

Attribute	Read/Write	Description
Bandwidth	r/w, optional	The ISDN bandwidth that will be used when dialing the conference participants and when creating the conference. Note that <i>Max</i> is not currently supported. Example value 3b/192kbps. If <i>Default</i> is selected, the value is set to the default conference ISDN bandwidth as defined in the <b>Administrator Tools</b> page in Cisco TMS.
IPBandwidth	r/w, optional	The IP bandwidth that will be used when dialing the conference participants and when creating the conference. Note that <i>Max</i> is not currently supported. Example value 3b/193kbps. If <i>Default</i> is selected, the value is set to the default conference IP bandwidth as defined in the <b>Administrator Tools</b> page in Cisco TMS.

### **Conference object XML**

The XML document below describes the Conference object.

```
<Conference>
      <ConferenceId>int</ConferenceId>
      <Title>string</Title>
      <StartTimeUTC>string</StartTimeUTC>
      <EndTimeUTC>string</EndTimeUTC>
      <RecurrenceInstanceIdUTC>string</RecurrenceInstanceIdUTC>
      <RecurrenceInstanceType>string</RecurrenceInstanceType>
      <FirstOccurrenceRecInstanceIdUTC>string/FirstOccurrenceRecInstanceIdUTC>
              <FrequencyType>Daily or DailyWeekday or Weekly or Monthly or Yearly or
              Secondly or Minutely or Hourly or Default</FrequencyType>
              <Interval>int</Interval>
              <DaysOfWeek>
              <DayOfWeek>Sunday or Monday or Tuesday or Wednesday or Thursday or Friday
              or Saturday</DayOfWeek>
              <DayOfWeek>Sunday or Monday or Tuesday or Wednesday or Thursday or Friday
              or Saturday</DayOfWeek>
              </DaysOfWeek>
              <FirstDayOfWeek>Sunday or Monday or Tuesday or Wednesday or Thursday or Friday
              or Saturday</FirstDayOfWeek>
              <BySetPosition>int/BySetPosition>
              <PatternEndType>EndByDate or EndByInstances or EndNever or Default</PatternEndType>
              <PatternEndDateUTC>string</PatternEndDateUTC>
              <FirstOccurrenceRecInstanceIdUTC>string/FirstOccurrenceRecInstanceIdUTC>
              <PatternInstances>int</PatternInstances>
              <Exceptions>
                      <RecurrenceException xsi:nil="true" />
                      <RecurrenceException xsi:nil="true" />
              </Exceptions>
      </RecurrencePattern>
      <OwnerId>long</OwnerId>
      <OwnerUserName>string
      <OwnerFirstName>string
      <OwnerLastName>string
      <OwnerEmailAddress>string</OwnerEmailAddress>
      <ConferenceType>Reservation Only or Automatic Call Launch or Manual Call Launch
```

```
or Default or One Button To Push</ConferenceType>
<Bandwidth>1b/64kbps or 2b/128kbps or 3b/192kbps or 4b/256kbps or 5b/320kbps
or 6b/384kbps or 8b/512kbps or 12b/768kbps or 18b/1152kbps or 23b/1472kbps
or 30b/1920kbps or 32b/2048kbps or 48b/3072kbps or 64b/4096kbps or Max or
Default</Bandwidth>
<PictureMode>Continuous Presence or Enhanced CP or Voice Switched
or Default</PictureMode>
<Encrypted>Yes or No or If Possible or Default</Encrypted>
<DataConference>Yes or No or If Possible or Default/DataConference>
<ShowExtendOption>Yes or No or Default or AutomaticBestEffort</ShowExtendOption>
<Password>string</Password>
<BillingCode>string</BillingCode>
<ISDNRestrict>boolean</ISDNRestrict>
<ConferenceInfoText>string</ConferenceInfoText>
<UserMessageText>string</UserMessageText>
<ExternalSourceId>string</ExternalSourceId>
<ExternalPrimaryKey>string</ExternalPrimaryKey>
<DetachedFromExternalSourceId>string/DetachedFromExternalSourceId>
<DetachedFromExternalPrimaryKey>string<DetachedFromExternalPrimaryKey>
<Participants>
        <Participant>
                <ParticipantId>int</ParticipantId>
                <NameOrNumber>string</NameOrNumber>
                <ParticipantCallType>TMS or IP Video <- or IP Tel <- or ISDN Video <-
                or Telephone <- or IP Video -> or IP Tel -> or ISDN Video ->
                or Telephone -> or Directory or User or SIP <- or SIP -> or SIP Tel <-
                or SIP Tel-> or 3G <- or 3G -> or TMS Master Participant
                </ParticipantCallType>
        </Participant>
        <Participant>
                <ParticipantId>int/ParticipantId>
                <NameOrNumber>string</NameOrNumber>
                <ParticipantCallType>TMS or IP Video <- or IP Tel <- or ISDN Video <-</pre>
                or Telephone <- or IP Video -> or IP Tel -> or ISDN Video ->
                or Telephone -> or Directory or User or SIP <- or SIP -> or SIP Tel <-
                or SIP Tel-> or 3G <- or 3G -> or TMS Master Participant
                </ParticipantCallType>
        </Participant>
</Participants>
<RecordedConferenceUri>string</RecordedConferenceUri>
<ExternalConference>
        <WebEx>
                <MeetingKey>string</MeetingKey>
                <SipUrl>string</SipUrl>
                <MeetingPassword>string</MeetingPassword>
                <JoinMeetingUrl>string</JoinMeetingUrl>
                <HostMeetingUrl>string</HostMeetingUrl>
                <HostKey>string</HostKey>
                <JoinBeforeHostTime>string</JoinBeforeHostTime>
                <Telephony xsi:nil="true" />
                <Errors xsi:nil="true" />
        </WebEx>
</ExternalConference>
<WebConferencePresenterUri>string</WebConferencePresenterUri>
<WebConferenceAttendeeUri>string</WebConferenceAttendeeUri>
<ISDNBandwidth>
        <Bandwidth>1b/64kbps or 2b/128kbps or 3b/192kbps or 4b/256kbps or
        5b/320kbps or 6b/384kbps or 8b/512kbps or 12b/768kbps or 18b/1152kbps
```

```
or 23b/1472kbps or 30b/1920kbps or 32b/2048kbps or 48b/3072kbps
               or 64b/4096kbps or Max or Default</Bandwidth>
       </ISDNBandwidth>
       <IPBandwidth>
               <Bandwidth>1b/64kbps or 2b/128kbps or 3b/192kbps or 4b/256kbps or
               5b/320kbps or 6b/384kbps or 8b/512kbps or 12b/768kbps or 18b/1152kbps
               or 23b/1472kbps or 30b/1920kbps or 32b/2048kbps or 48b/3072kbps
               or 64b/4096kbps or Max or Default</Bandwidth>
       </IPBandwidth>
       <ConferenceLanguage>string</ConferenceLanguage>
       <ConferenceTimeZoneRules>
               <TimeZoneRule>
                       <ValidFromdateTime</ValidFrom
                       <Id>string</Id>
                       <BaseOffsetInMinutes>int/BaseOffsetInMinutes
                       <Daylight xsi:nil="true" />
                       <DaylightOffsetInMinutes>int/DaylightOffsetInMinutes>
                       <Standard xsi:nil="true" />
               </TimeZoneRule>
       </ConferenceTimeZoneRules>
       <ConferenceState>
               <Status>All or AllExceptDeleted or Pending or Ongoing or Finished or
               PendingAndOngoing or MeetingRequest or Rejected or NotSaved or Defective
               or Deleted</Status>
       </ConferenceState>
       <Version>int</Version>
</Conference>
```

# **Booking API functions**

This reference section describes all the available functions of the booking API.

### DeleteConferenceByExternalId

Delete a conference using a conference ID from an external source, usually Exchange.

This function is primarily intended for use by Cisco TMSXE.

#### **Supported parameters:**

ExternalSourceId	Unique identifier of the external source.
ExternalConferenceId	Unique identifier of the conference within the external source (primary key in database).

### **DeleteConferenceById**

Deletes a conference with the given ConferenceId (as defined in Cisco TMS). If the conference is part of a recurring series, the whole series will be deleted.

#### Supported parameters:

ConferenceId	The ConferenceId of the conference to delete.

Returned data: Nothing.

### DeleteConferenceInstanceByExternald

Delete an occurrence of a series using a conference ID from an external source, usually Exchange.

This function is primarily intended for use by Cisco TMSXE.

#### Supported parameters:

ExternalSourceId	Unique identifier of the external source.
ExternalConferenceId	Unique identifier of the conference within the external source (primary key in database).
RecurrenceIdUTC	Identifies an instance in a series of conferences. A UTC-formatted datetime string. Only UTC date-time groups ending with Z are supported. Example: 1975-06-01 23:32:11Z.

### **DeleteConferenceRecInstanceByld**

Deletes an occurrence of a recurring conference with the given ConferenceId (as defined in Cisco TMS). This function is typically used when deleting a single meeting in a recurring series.

#### **Supported parameters:**

|--|

#### Returned data: Nothing.

If the provided ID does not exist, this will cause an error. See the section <u>Error codes and error handling</u> [p.63].

### **EndConferenceByExternalId**

End an ongoing conference using an ID from an external source.

This function is primarily intended for use by Cisco TMSXE.

#### **Supported parameters:**

ExternalSourceId	Unique identifier of the external source.
ExternalConferenceId	Unique identifier of the conference within the external source (primary key in database).
RecurrenceIdUTC	Identifies an instance in a series of conferences. A UTC-formatted datetime string. Only UTC date-time groups ending with Z are supported. Example: 1975-06-01 23:32:11Z.

### **EndConferenceById**

Ends an ongoing conference with the given **ConferenceId** (as defined in Cisco TMS). The conference will be set to *Finished*, and the end time will be set to the time of execution of the function. This function is typically used to end a running conference from a third party front-end GUI. The function will fail with an error if the conference has not yet started.

#### Supported parameters:

The Comerciac of the conference to defete.	ConferenceId T	he Conferenceld of the conference to delete.
--	----------------	--

#### Returned data: Nothing.

If the provided ID does not exist, this will cause an error. See the section <u>Error codes and error handling</u> [p.63].

### GetConferenceByld

Get the available information about a particular conference.

#### **Supported parameters:**

ConferenceId	The ID of the conference (Based on Cisco TMS IDs)	
--------------	---	--

Returned data: A Conference object based on the ConferenceId.

If the provided ID does not exist, this will cause an error. See the section <u>Error codes and error handling</u> [p.63].

### **GetConferencesForUser**

This function returns all conferences that were created by or that are owned by a particular user, for a specified period of time.

#### Supported parameters:

UserName	The Cisco TMS user to get bookings for. If no user name is provided (empty string), the logged in user is used.
StartTime	The start date and end date and time of bookings. The time is given in UTC format.
EndTime	
ConferenceStatus	An enumeration of what type of conferences will be fetched from Cisco TMS. The available types are: <ul> <li>All</li> <li>AllExceptDeleted</li> <li>Pending</li> <li>Ongoing</li> <li>Finished</li> <li>PendingAndOngoing</li> </ul> <li>MeetingRequest (Conference has been requested by a user without booking rights, needs approval.)</li> <li>Rejected</li> <li>NotSaved</li> <li>Defective</li> <li>Deleted</li>

Returned data: An array with Conference objects.

The conference objects will not include:

- the list of participants
- WebEx conference information
- recording URIs
- ConferenceInfoHtml or ConferenceInfoText

### **GetConferenceBookingEventMail**

Used to retrieve content for email notifications on booking events; not invites, typically errors or warnings.

#### Supported parameters:

Conference The conference object on which to base the email message.
--

Message	A message from the client to inject into the email notification.  Contains:  A MessageType which determines the color and prefix of the message box at the top of the email message. Supported values are <i>Information</i> (green), <i>Warning</i> (yellow), and <i>Error</i> (red).  One or more lines of text strings containing the actual message.
ContentTypes	Determines whether the email notification will be sent as PlainText or Html.
Language	A list of supported languages can be gotten from the Remote Setup API. See GetConferenceLanguages [p.32].

**Returned data:** A list of conference booking event e-mail content. Setting Language to blank will return the conference language.

### GetConferenceByExternalId

Get the conference with the given ExternalSourceld and ExternalConferenceld.

This function is primarily intended for use by Cisco TMSXE.

#### **Supported parameters:**

ExternalSourceId	Unique identifier of the external source.
ExternalConferenceId	Unique identifier of the conference within the external source (primary key in database).

**Returned data:** A Conference object. If the conference is part of a recurrent series, existing exceptions to the series are returned in the RecurrencePattern Exceptions array.

### GetConferenceIdByExternalId

This function is used to look up a conference that has been updated in the external source, and that must be updated in Cisco TMS. The ExternalSourceId and ExternalPrimaryKey fields must have been provided with the initial performance of the SaveConference function.

This function is typically used when information about a conference reserved in the external application is needed. The GetConferenceById function is used to get information about the conference from Cisco TMS.

#### Supported parameters:

ExternalSourceId	Unique identifier of the external source.
ExternalConferenceId	Unique identifier of the conference within the external source (primary key in database).
RecurrenceIdUTC	Identifies an instance in a series of conferences. A UTC-formatted datetime string. Only UTC date-time groups ending with Z are supported. Example: 1975-06-01 23:32:11Z.

Returned data: A ConferenceId, as defined in Cisco TMS.

### GetConferenceInstanceByExternalId

Get an occurrence from a series with the given ExternalSourceld, ExternalConferenceld, and RecurrenceldUTC.

This function is primarily intended for use by Cisco TMSXE.

#### Supported parameters:

ExternalSourceId	Unique identifier of the external source.
ExternalConferenceId	Unique identifier of the conference within the external source (primary key in database).
RecurrenceIdUTC	Identifies an instance in a series of conferences. A UTC-formatted datetime string. Only UTC date-time groups ending with Z are supported. Example: 1975-06-01 23:32:11Z.

Returned data: A Conference object.

### **GetConferenceInviteMail**

Used to retrieve content for conference invite email notifications.

#### Supported parameters:

ExternalSourceId	Unique identifier of the external source.
ExternalConferenceId	Unique identifier of the conference within the external source (primary key in database).
RecurrenceIdUTC	Identifies an instance in a series of conferences. A UTC-formatted datetime string. Only UTC date-time groups ending with Z are supported. Example: 1975-06-01 23:32:11Z.
Messages	A list of messages from the client to inject into the email notification.
	Contains:
	<ul> <li>A MessageType which determines the color and prefix of the message box at the top of the email message. Supported values are <i>Information</i> (green), <i>Warning</i> (yellow), and <i>Error</i> (red).</li> </ul>
	<ul> <li>One or more lines of text strings containing the actual message.</li> </ul>
ContentTypes	An array of content types. If multiple types are included, both <i>PlainText</i> and <i>Html</i> will be used (sent as Multipart).
Language	A list of supported languages can be retrieved from the Remote Setup API. See GetConferenceLanguages [p.32].

**Returned data:** A list of conference invite e-mail content. Setting Language to blank will return the conference language.

### **GetConferencesForSystems**

This function returns all conferences for a list of systems between two dates. It is typically used to build a display of resource availability information in external application for a specific system when the external application does not store its own resource availability information.

The function should be used with caution. If a large number of conferences are booked between the two dates in Cisco TMS, it will take a long time to process the result of this function.

#### Supported parameters:

SystemIds	An array of IDs of the systems, based on Cisco TMS IDs.
StartDate	The start date and end date and time of bookings. The time is given in UTC format.
EndDate	
ConferenceStatus	An enumeration of the type of conferences that will be fetched from Cisco TMS. The available types are:
	■ All
	■ AllExceptDeleted
	■ Pending
	■ Ongoing
	■ Finished
	■ PendingAndOngoing
	<ul> <li>MeetingRequest (Conference has been requested by a user without booking rights, needs approval.)</li> </ul>
	■ Rejected
	■ NotSaved
	■ Defective
	■ Deleted

**Returned data:** An array with Conference objects. As of API version 11, this includes scheduled conferences only, no ad hoc conferences.

The conference objects will not include:

- the list of participants
- WebEx conference information
- recording URIs
- ConferenceInfoHtml or ConferenceInfoText

If the provided ID does not exist, this will cause an error. See the section <u>Error codes and error handling</u> [p.63].

### **GetDefaultConference**

Creates a default conference object with ID equals -1 based on the conference settings specified in Cisco TMS.

This function is typically used as a basis for new meetings, where all that is needed is to define the start and end time, along with the participants in the conference.

Supported parameters: None

Returned data: A Conference object using the default values defined in Cisco TMS.

- The start time of the conference is set to the current time.
- The end time is set to the start time + **Default Scheduled Call Duration (in minutes)** as configured in **Administrative Tools > Configuration > Conference Settings**.
- If, in Administrative Tools > Configuration > WebEx Settings, the setting for Add WebEx To All Conferences is Yes, the default conference will always include WebEx, whether or not this is exposed to the user by the client. For more information about including WebEx, see <a href="ExternalConference">ExternalConference</a> [p.42].

### **GetRecordingAliases**

#### Supported parameters:

UserName The user to retrieve recording alias for. If no UserName is provided (empty string), the logged in user will be used.

**Returned data**: An array of RecordingDevice, where the key is the string representation of a recording device name, or a recording cluster name.

The value is an array of AliasInfo for that particular recording device/cluster, holding an AliasId (string) and a SystemId (int). The AliasId and SystemId can be used to add a recording participant to a conference.

## GetRecurrentConferenceByld

Returns a Conference object with the given ConferenceId. If the conference is a recurrent conference, existing exceptions to the recurrent series are returned in the RecurrencePattern Exceptions array of the returned Conference object.

#### Supported parameters:

ConferenceId

The ID of the conference, based on TMS IDs.

Returned data: A Conference object based on the Conferenceld.

If the recurrent series has been deleted, the returned object will include a negative conference ID.

If the provided ID does not exist, this will cause an error. See the section <u>Error codes and error handling</u> [p.63].

# GetRecurrentConferenceByIdWithFirstOngoingOrPendingStartTime

This function is primarily intended for use by Cisco TMSPE Smart Scheduler.

#### Supported parameters:

ConferenceId

The ID of the conference, based on TMS IDs.

**Returned data:** A Conference object containing, ff the conference is a recurrent series with exceptions, aRecurrencePattern Exceptions array.

The start time of the conference will be mapped to the first ongoing or pending conference occurrence.

If the provided ID does not exist, this will cause an error. See the section <u>Error codes and error handling</u> [p.63].

### **GetTimeZoneRulesById**

Get the available time zone rules for the given time zone.

#### Supported parameters:

idString

A string containing the ID of the time zone on the Cisco TMS server.

Returned data: An array of TimeZoneRule elements

If the provided ID does not exist, this will cause an error. See the section <u>Error codes and error handling</u> [p.63].

### **GetTransactionsSince**

This function is used to get a list of conference creations, updated and deletions that must be performed in order to keep a mirrored conference database synchronized. Note that:

- If the number of matching conferences exceeds the internal limit, the array's TransType element will be Incomplete. To get all transactions, the client must send the last returned ID of the array as the CurrentTransactionId to receive the next set, until the TransType is no longer returned as Incomplete.
- The transaction identified as CurrentTransactionId will not be included in the returned array.

#### Supported parameters:

CurrentTransactionId

The transaction ID of the last committed transaction of the last synchronization.

**Returned data:** An array of transactions since the **CurrentTransactionId**. This array will also contain the **TransType** element, which may be *New* or *Updated* or *Deleted* or *ListIncomplete*.

If the provided ID does not exist, this will cause an error. See the section <u>Error codes and error handling</u> [p.63].

### **GetTransactionsSinceWithExternalId**

Get a list of conference create, update and delete operations that must be performed in order to keep a mirrored conference database synchronized.

This function is primarily intended for use by Cisco TMSXE.

See GetTransactionsSince [p.60].

### SaveConferenceWithMode

This function saves a conference in Cisco TMS.

- If an ExternalPrimaryKey is provided, Cisco TMS will try to load an existing conference using the ExternalSourceId and ExternalPrimaryKey.
- If ExternalPrimaryKey is not provided or the conference is not found, Cisco TMS will check the ConferenceId.
  - If ConferenceId is < 0, Cisco TMS creates and saves a new conference, provided that the conference
    can be booked.</li>
  - If **ConferenceId** is > 0, Cisco TMS looks for an existing conference and updates it, or throws a "meeting not found" error. See the section Error codes and error handling [p.63].

Depending on the selected booking mode, the function will fail or cause a defective conference in the following scenarios:

- One or more of the participants are already booked in the same time period.
- A call route is needed, but no call route could be found.

If this function is performed on a recurrent series, the entire series is affected.

See Booking modes [p.9] for more detail on modes and defective conferences.

#### Supported parameters:

Conference	The Conference object to be created/updated.
BookingMode	BestEffortForced or Strict.

Returned data: A Conference object updated with actual values saved in Cisco TMS.

### **SaveConference**

This legacy function works identically to <u>SaveConferenceWithMode [p.60]</u>, but automatically uses the *Strict* booking mode.

### **SaveConferenceRecInstanceWithMode**

Used to update a single occurrence of a recurrent conference series in Cisco TMS. Similar to SaveConferenceWithMode [p.60].

#### Supported parameters:

Conference	The Conference object to be created/updated
BookingMode	BestEffortForced or Strict.

**Returned data:** A Conference object updated with actual values saved in Cisco TMS.

### **SaveConferenceRecInstance**

This legacy function works identically to <u>SaveConferenceRecInstanceWithMode [p.61]</u>, but automatically uses the *Strict* booking mode.

### **SaveConferences**

Saves a list of conferences to Cisco TMS, with the option to save either all or none depending on availability information.

Use this function if the recurrence pattern of the Conference object does not support the recurrence model in the external application.

#### Supported parameters:

Conference	An array of conference objects.
oneTransaction	<i>True</i> if the objects should be booked as one transaction, meaning that either all or none of the meetings will be booked depending on the free/busy information. Currently only <i>true</i> is supported for this function.

Returned data: An array of Conference objects updated with actual values saved in Cisco TMS.

# **Error codes and error handling**

This chapter provides an overview of the available error codes as well as an $\mathfrak c$	error handling	g example
--	----------------	-----------

Error codes	64
Error handling	66

## **Error codes**

Note that the description for each error code describes the typical scenario, but not necessarily the exact error message. Messages will vary based on the specific error situation.

Error	Code	Description
LICENSE	-2147219503	Client attempts to book more systems than there are licenses for.
DATABASE_DOWN	-2147219500	There is a problem with the Cisco TMS database.
MEETINGNOTFOUND	-2147218302	Client tries to access (get or update) a conference that does not exist.
SYSTEMNOTFOUND	-2147218301	Client tries to access (get or update) a system/participant that does not exist in Cisco TMS.
SYSTEM_ALREADY_BOOKED	-2147218300	Client tries to schedule a participant that has already been scheduled.
SYSTEM_NOT_ALLOWED_ IN_BOOKING	-2147218262	Client tries to book a system that the user does not have booking rights for, or the system has <b>Allow Bookings</b> set to <i>False</i> .
MEETINGNOTACTIVE	-2147218272	Client tries to end a conference that is not active.
MEETINGISDELETED	-2147218271	Client tries to end a conference that has been deleted.
MEETINGACTIVE	-2147218270	Client tries to modify the start time of a conference that is already active.
CANNOTBOOKINTHEPAST	-2147218269	Client tries to book a conference with an end time that is in the past.
NO_ACCESS_TO_ CONFERENCE	-2147218266	Client tries to get a conference, but the user does not have the permissions in Cisco TMS to read all conferences.
START_TIME_AFTER_MAX_ NUMBER_OF_DAYS_IN_ FUTURE	-2147218265	Client tries to save a outside of the booking window set in Cisco TMS.
NEVER_ENDING_ RECURRENCE_NOT_ SUPPORTED	-2147218264	Client tries to save a conference with a "NeverEnding" recurrence end type, which is not supported.
START_TIME_AFTER_END_ TIME	-2147218263	Client tries to save a conference where the start time is later than the end time.
INVALID_TIMEZONE_INFO	-2147218268	The specified time zone information is not valid.
WEBEX_SITE_NOT_FOUND	-2147218267	WebEx site not found. (The invoked WebEx site URL does not exist.)
WEBEX_ERROR	-2147218260	Any other error regarding WebEx will use this code.
SECURITY	-2147218259	Client tries to modify or delete a conference, but the user does not have the required permissions in Cisco TMS.
SERVER_BUSY	-2147218258	Cisco TMS is currently unable to handle the client's request.
UNKNOWN	-2147218261	Any exception not covered by other error codes.
CANNOT_ADD_PARTICIPANT	-2147218256	Client attempted to add dial-in participants to a Reservation Only conference.

Error	Code	Description
UNSUPPORTED_ RECURRENCE	-2147218255	The client tried to book an unsupported recurrence pattern. Scenarios include:
		<ul> <li>Invalid number of occurrences</li> </ul>
		<ul><li>More than one occurrence on the same day</li></ul>
		<ul> <li>Attempt to move an occurrence to start later than the subsequent occurrence.</li> </ul>
INVALID_DATETIME_FORMAT	-2147218254	The date was provided in the wrong (non-UTC) format.
DIAL_OUT_NUMBER_NOT_ SET	-2147218251	One or more dial-out participants do not have a dial out number configured
CONCURRENT_ MODIFICATION	-2147218248	The client tried to modify a booking, but the booking changed before the modification was submitted.
NOT_ENOUGH_MCU_ RESOURCES	-2147218250	Client attempted to book a meeting for which the necessary bridge resources are not available.
PARTICIPANT_ERROR	-2147218249	There is a problem with one or more participants that the client tried to book. Scenarios include:
		<ul><li>Missing participants</li></ul>
		<ul> <li>Necessary protocols not enabled for participants</li> </ul>
		<ul><li>Configuration error on participant (system)</li></ul>
INSTANCE_NOT_FOUND_ WITHIN_PATTERN	-2147218252	The client tried to users save or get a conference occurrence that is not part of the recurrence pattern of the series. Error message "No such occurrence".

If an exception is thrown, the exception message will contain the reason. If you get "Unspecified Exception"/"Unspecified Error", this usually means that there is a syntax flaw in the conference sent to the SaveConference function. In such a case, an error description would be given in the Cisco TMS log files, which you can download from the Cisco TMS website, or locate in the folder (/tms/data/logs/tmsdebug/log-web.txt) on the Cisco TMS server.

# **Error handling**

If the Cisco TMS server is operational with the proper licenses, errors are caused by sending the wrong parameters to the API, such as trying to create a booking in the past, or trying to get systems, users, or conferences from Cisco TMS using the wrong ID. When an exception is caught, it is generally an indication that the client call must be changed before it is sent again.

### **Exceptions**

All errors generated from the API are SoapExceptions, hence each time a save operation is performed against the API, the code should handle exceptions of type SoapException.

The message field of the exception will contain a string with a description of what went wrong. In many cases, displaying this information to the user will be helpful.

### HTTP error 401

The server will normally return the HTTP error code 500 Internal Server Error for the SoapExceptions.

If the HTTP error code 401 Unauthorized is received, the user credentials supplied were not authorized to access the server.

# **Code examples**

This chapter provides examples of how to apply the remote setup API and the booking API in your development.

Code examples are provided in C#.

Remote setup API examples	68
Booking API setup	69
Using different participant types	
Booking API example with a recording participant	
Saving and updating recurrent conferences	
Time zone handling	
Error handling examples	

# Remote setup API examples

The code snippet below demonstrates how to authenticate with the remote setup API.

```
public void InitRemoteSetupService()
{
    // Specify username and password to authenticate to service.
    // (Can also be done in web.config)
    NetworkCredential credentials = new NetworkCredential("username", "password", "domain");

    remoteSetupService = new RemoteSetupService { Credentials = credentials };
    if (remoteSetupService.ExternalAPIVersionSoapHeaderValue == null)
    {
        remoteSetupService.ExternalAPIVersionSoapHeaderValue = new

RemoteSetupServiceWS.ExternalAPIVersionSoapHeader();
    }
    remoteSetupService.ExternalAPIVersionSoapHeaderValue.ClientVersionIn = 11;
}
```

The code snippet below demonstrates how to loop through all systems in Cisco TMS, and display information about each system.

# **Booking API setup**

The code snippet below demonstrates how to authenticate with Cisco TMSBA and specify the version.

```
public void InitBookingService()
{
    // Specify username and password to authenticate to service.
    // (Can also be done in web.config)
    NetworkCredential credentials = new NetworkCredential("username", "password", "domain");

    bookingService = new BookingService {Credentials = credentials};
    if (bookingService.ExternalAPIVersionSoapHeaderValue == null)
    {
        bookingService.ExternalAPIVersionSoapHeaderValue = new ExternalAPIVersionSoapHeader();
    }
    bookingService.ExternalAPIVersionSoapHeaderValue.ClientVersionIn = 11;
}
```

# Using different participant types

When using the API as a web reference, the participant types, such as "IP Video", "ISDN Video", and so on are created as enumerations called, for example, IPTe1, IPTe11. Values ending in 1 are dial-out, values not ending in 1 are dial-ins.

The code snippet below shows how to create a conference with three different participant types. An MCU is required for this call to be saved.

```
public void SaveConferenceWithVariousParticipantTypes()
    InitBookingService();
    // Get a default conference object from TMS, where most common values are set
    // (using default values specified in TMS)
   Conference conference = bookingService.GetDefaultConference();
    // Create and initialize an array of conference participants, and add it to the conference
    conference.Participants = new[]
        {
           new Participant
                    // Adds a SIP Dial-in participant
                   NameOrNumber = "SIP Dial-in 1", ParticipantCallType = ParticipantType.SIP
                },
           new Participant
                    // Adds a SIP Dial-out participant
                    NameOrNumber = "manager1@example.com", ParticipantCallType = ParticipantType.SIP1
                },
            new Participant
                    // Adds a TMS participant (endpoint)
                    ParticipantCallType = ParticipantType.TMS, ParticipantId = 4
        };
    // Save the conference, saving the returned conference (where all values are now specified)
    conference = bookingService.SaveConference(conference);
    PrintConferenceInformation(conference);
```

# Booking API example with a recording participant

The code snippet below demonstrates how to create a conference with two participants. One of the participants is a recording participant, the other a video system registered in TMS.

```
public void SaveConferenceWithRecordingParticipant()
    InitBookingService();
   Conference conference = bookingService.GetDefaultConference();
    // Create the elements of the array (the actual participants)
    // Create one dial-out participant
   Participant dialOutParticipant = new Participant {ParticipantCallType = ParticipantType.IPVideo1,
NameOrNumber = "10.0.1.2"};
   // Get the recording aliases for the logged in user
   RecordingDevice[] recordingDevicesWithAliases = bookingService.GetRecordingAliases("");
   Participant recordingParticipant = new Participant();
   bool foundAliasInformation = false;
    if (recordingDevicesWithAliases != null && recordingDevicesWithAliases.Any())
        // use the first recording device in the arrayvar recordingAlias =
recordingDevicesWithAliases.First();
        if (recordingAlias.Aliases != null && recordingAlias.Aliases.Any())
           foundAliasInformation = true;
           // use the first alias found on the first recording device
           AliasInfo aliasInfo = recordingAlias.Aliases.First();
           recordingParticipant.ParticipantCallType = ParticipantType.TMS;
           recordingParticipant.ParticipantId = aliasInfo.SystemId;
           recordingParticipant.NameOrNumber = aliasInfo.AliasId;
    }
    if (foundAliasInformation)
        conference.Participants = new []
                dialOutParticipant,
                recordingParticipant
            };
    else
        // no alias information found in TMS
        conference.Participants = new[]
                dialOutParticipant
           };
    // Save the conference, saving the returned conference (where all values are now specified)
    conference = bookingService.SaveConference(conference);
    PrintConferenceInformation(conference);
```

# Saving and updating recurrent conferences

The code snippet below demonstrates how to save/update a conference series.

```
public void SaveAndUpdateRecurrentConference()
    InitBookingService();
   Conference conference = bookingService.GetDefaultConference();
    // Set the conference to start in the future (default is now)
    var start = DateTime.Now.AddHours(1);
    var end = start.AddMinutes(10);
    conference.StartTimeUTC = start.ToString("u");
    conference.EndTimeUTC = end.ToString("u");
    conference.Participants = new []
           new Participant{ParticipantCallType = ParticipantType.SIP, NameOrNumber = "Sip dial-in 1"},
            new Participant{ParticipantCallType = ParticipantType.SIP, NameOrNumber = "Sip dial-in 2"}
        };
    // setup the recurrence pattern
    conference.RecurrencePattern = new RecurrencePattern
            FrequencyType = RecurringFrequency.Daily,
            PatternEndType = RecurrenceEndType.EndByInstances,
            PatternInstances = 10,
        };
    // Save the conference, saving the returned conference (where all values are now specified)
    conference = bookingService.SaveConference(conference);
    // update the conference, change the pattern from Daily to Weekly and change from 10 instances to 5
    conference.RecurrencePattern = new RecurrencePattern
        FrequencyType = RecurringFrequency.Weekly,
        PatternEndType = RecurrenceEndType.EndByInstances,
        PatternInstances = 5,
    };
    conference = bookingService.SaveConference(conference);
    PrintConferenceInformation(conference);
```

# Time zone handling

The code snippets in this section demonstrate how to save a regular and a custom set of time zone rules.

### Regular time zone

```
public void SaveConferenceWithRegularTimeZone()
    InitBookingService();
   Conference conference = bookingService.GetDefaultConference();
   var start = DateTime.Now.AddHours(1);
    var end = start.AddMinutes(10);
    conference.StartTimeUTC = start.ToString("u");
    conference.EndTimeUTC = end.ToString("u");
    conference.RecurrencePattern = new RecurrencePattern
        FrequencyType = RecurringFrequency.Daily,
       Interval = 1,
       PatternEndType = RecurrenceEndType.EndByInstances,
       PatternInstances = 3,
    };
    try
    {
       TimeZoneRule[] timeZoneRules = bookingService.GetTimeZoneRulesById("Central Standard Time");
       if (timeZoneRules != null && timeZoneRules.Length > 0)
            conference.ConferenceTimeZoneRules = timeZoneRules;
            conference = bookingService.SaveConference(conference);
            PrintConferenceInformation(conference);
    }
    catch (Exception)
        Console.WriteLine ("TMS did not return any time zone information for given time zone id");
```

### **Custom time zone**

```
public void SaveConferenceWithCustomTimeZone()
{
    Conference conference = bookingService.GetDefaultConference();
    var start = DateTime.Now.AddHours(1);
    var end = start.AddMinutes(10);

    conference.StartTimeUTC = start.ToString("u");
    conference.EndTimeUTC = end.ToString("u");

    conference.RecurrencePattern = new RecurrencePattern
    {
        FrequencyType = RecurringFrequency.Daily,
        Interval = 1,
        PatternEndType = RecurrenceEndType.EndByInstances,
```

```
PatternInstances = 10,
};
conference.ConferenceTimeZoneRules = new[]
    new TimeZoneRule
      {
           Id = "My custom rule",
           BaseOffsetInMinutes = 60,
           DaylightOffsetInMinutes = 60,
           ValidFrom = DateTime.MinValue,
           Daylight = new TimeChange
                ChangeSecondAtDay = 2*60*60, // Daylight changes at 02:00 am
                AbsoluteRule = new TimeChangeAbsoluteRule
                {
                   Month = 3,
                    DayOfMonth = 3,
           },
           Standard = new TimeChange
                ChangeSecondAtDay = 10*60*60, //// Daylight changes at 10:00 am
                RelativeRule = new TimeChangeRelativeRule
                   Month = 10,
                    DayOfTheWeek = 0, // Sunday
                    WeekOfTheMonthIndex = 5, // Last
           }
        }
conference = bookingService.SaveConference(conference);
PrintConferenceInformation(conference);
```

# **Error handling examples**

The following code examples demonstrate how to handle errors generated from API calls.

### Conference in the past

Running this code will output the message: "You cannot book a conference in the past".

### System unavailable

Running the code below will output a "system unavailable" message.

```
public void HandleError_SystemNotAvailable()
{
    InitBookingService();
    Conference conference = bookingService.GetDefaultConference();
    var start = DateTime.Now.AddHours(1);
    var end = start.AddMinutes(10);

    conference.StartTimeUTC = start.ToString("u");
    conference.EndTimeUTC = end.ToString("u");

    Participant participant = new Participant {ParticipantCallType = ParticipantType.TMS, ParticipantId = 4};

    conference.Participants = new []
    {
        participant
      };
    bookingService.SaveConference(conference);

    try
    {
        // By setting the Id to -1, we try to book a new conference, with the same time and participant conference.ConferenceId = -1;
```

```
conference = bookingService.SaveConference(conference);
}
catch (SoapException e)
{
    Console.WriteLine("Got error with error code {0}, and message {1}, from Booking API",
e.Detail.InnerXml, e.Message);
}

PrintConferenceInformation(conference);
}

private static void PrintConferenceInformation(Conference conference)
{
    // Output information about the conference.
    Console.Out.WriteLine(conference.UserMessageText);
    Console.Out.WriteLine(conference.ConferenceId);
}
```

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVENAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2014 Cisco Systems, Inc. All rights reserved.