

Konfigurieren der WPS-Einstellungen auf der RV110W

Ziel

Wi-Fi Protected Setup (WPS) ist eine schnelle Methode zum Aufbau eines sicheren Wireless-Netzwerks. In diesem Artikel wird erläutert, wie Sie die WPS-Einstellungen auf dem RV110W konfigurieren.

Anwendbare Geräte

·RV110W

Verfahrensschritte

Schritt 1: Wählen Sie mit dem Router-Konfigurationsprogramm **Wireless > WPS** aus.

WPS

Wi-Fi Protected Setup™

SSID: ciscosb1 ▼
ciscosb1

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.

OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status:	Unconfigured
Network Name (SSID):	ciscosb1
Security:	Disabled
Session Status:	N/A

Schritt 2: Wählen Sie im Dropdown-Menü *SSID* ein Wireless-Netzwerk aus, auf das WPS

angewendet werden soll.


WPS

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.


OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status:	Unconfigured
Network Name (SSID):	ciscosb1
Security:	Disabled
Session Status:	N/A

Schritt 3: Aktivieren Sie rechts neben WPS das Kontrollkästchen **Aktivieren**, um die WPS-Einstellungen zu aktivieren.

Schritt 4: Führen Sie eine der drei Optionen aus, um dem Netzwerk ein Client-Gerät hinzuzufügen.

WPS



Configuration settings have been saved successfully

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

·Option 1. Wenn der Client über eine WPS-Taste verfügt, drücken Sie die Taste. Klicken Sie auf das WPS-Symbol.

WPS



Configuration settings have been saved successfully

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

·Option 2. Wenn das Client-Gerät über eine WPS-PIN-Nummer verfügt, geben Sie die PIN-Nummer in das Feld in das Feld Option 2 ein. Klicken Sie auf **Registrieren**.

·Option 3. Der Client fordert die PIN-Nummer des Routers an. Der Client gibt die Nummer 61443143 im Client-Gerät ein.