

# Configure Telepresence Endpoint SIP Registration to Expressway

## Contents

---

### [Introduction](#)

### [Prerequisites](#)

[Requirements](#)

[Components Used](#)

### [Background Information](#)

[Enable the registrar service on Expressway](#)

[Licensing requirements](#)

### [Procedure](#)

[1. Configure the Expressway](#)

[2. Configure the Telepresence Endpoint](#)

### [Verify](#)

### [Related Information](#)

---

## Introduction

This document describes the basic configuration steps to register telepresence devices to the Expressway.

## Prerequisites

### Requirements

Cisco recommends that you have knowledge of these topics:

- Expressway series.
- Telepresence endpoints.
- SIP protocol.

### Components Used

The information in this document is based on these software and hardware versions:

- Telepresence endpoints running software version RoomOS 11.9.
- Expressway series server running software version X14.

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, ensure that you understand the potential impact of any command.

## Background Information

Expressway can act as the registrar and call control server for telepresence endpoints over the SIP and H.323

protocols. Both Expressway-C and Expressway-E can be configured as a registrar, however the most common approach is to register telepresence endpoints to Expressway-C, since this is the server that sits on the internal corporate network.

## Enable the registrar service on Expressway


The registrar service can be enabled from the Expressway GUI, by running the **Service setup** from the link available at **General > Overview > Run service setup**:



This setup can be executed during the initial configuration of the server, or at any other time if services need to be enabled in the future. If the **Service setup** has been executed before, the **Overview** page displays a **Return to service setup** link instead:



To enable the service, from the **Select Services** check list, choose **Registrar**.

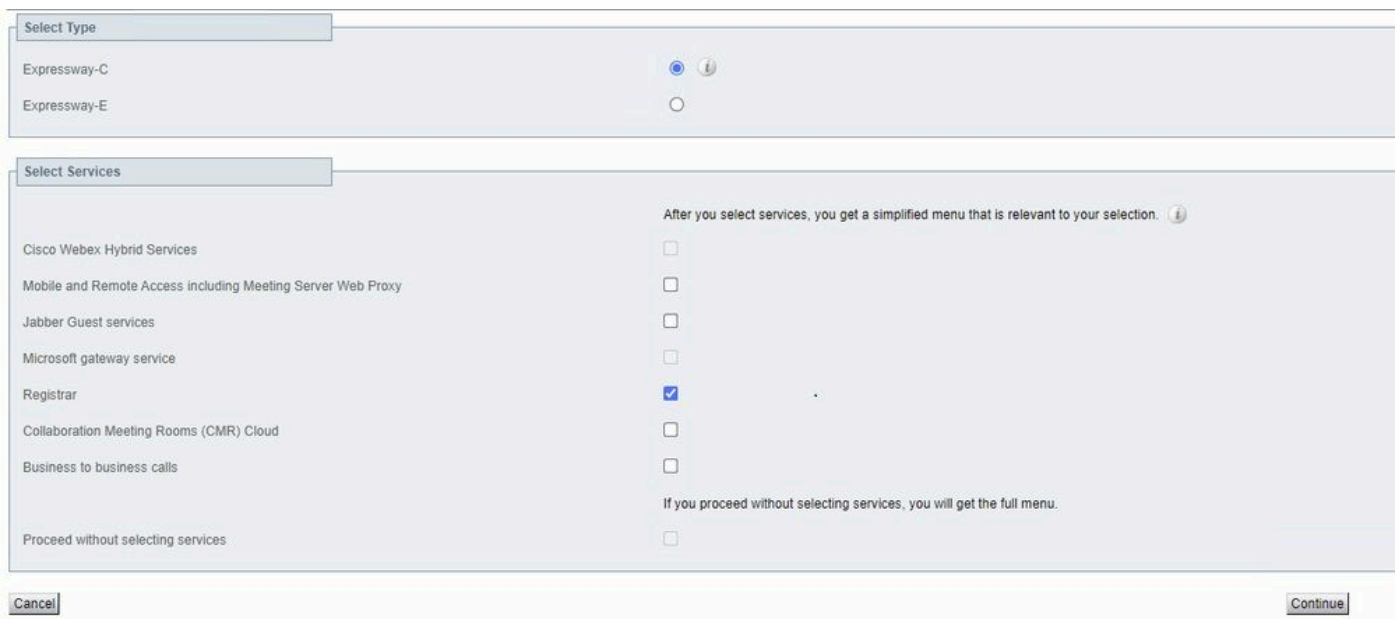



**Note:** The **Service setup** always starts up with all options unchecked, regardless of whether the services have been previously activated or not.

---

Click **Continue** and complete the remaining steps of the **Service setup** for the changes to take effect.

## Licensing requirements


The correct license types must be available in order for Expressway to accept registrations. The amount of licenses available determines the amount of telepresence endpoints that are able to register to the Expressway. There are two types of registration licenses available:

- TelePresence Room System License
- Desktop System License

The SIP devices in this list register as desktop systems; all other devices are considered room systems:

- Cisco TelePresence EX60
- Cisco TelePresence EX90

- Cisco Webex DX70
  - Cisco Webex DX80
- 

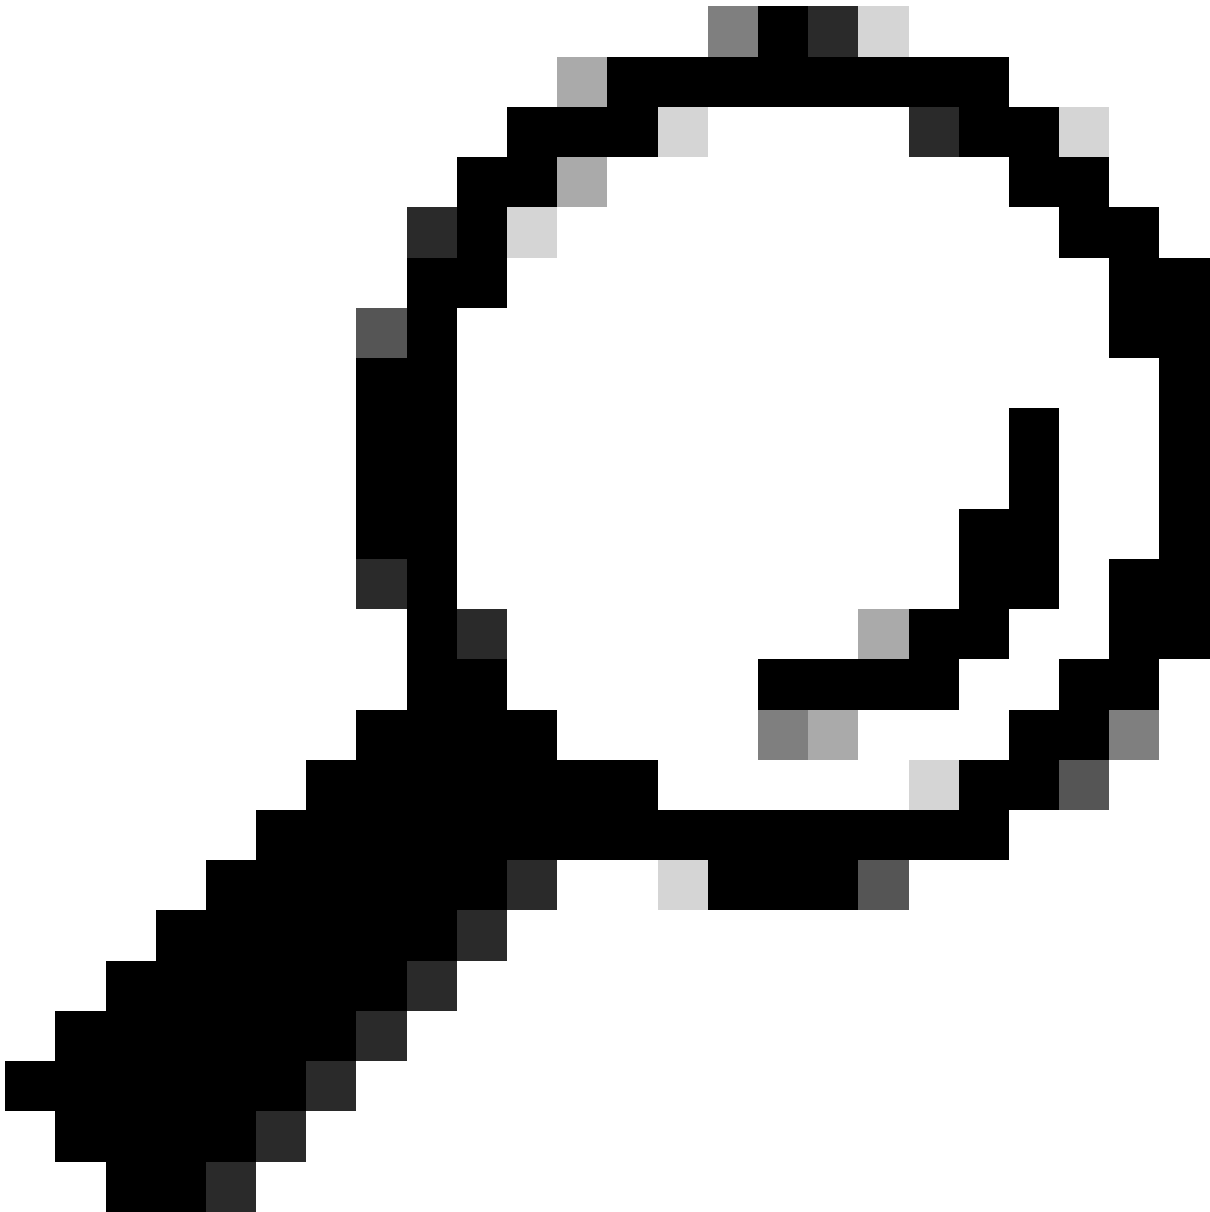


**Tip:** The Webex Desk and Webex Desk Pro series are not in this list, and do not register as a desktop system. They consume a TelePresence Room System License.

---

More detailed information about licensing can be found in the [Cisco Expressway Administrator Guide](#).

## Procedure

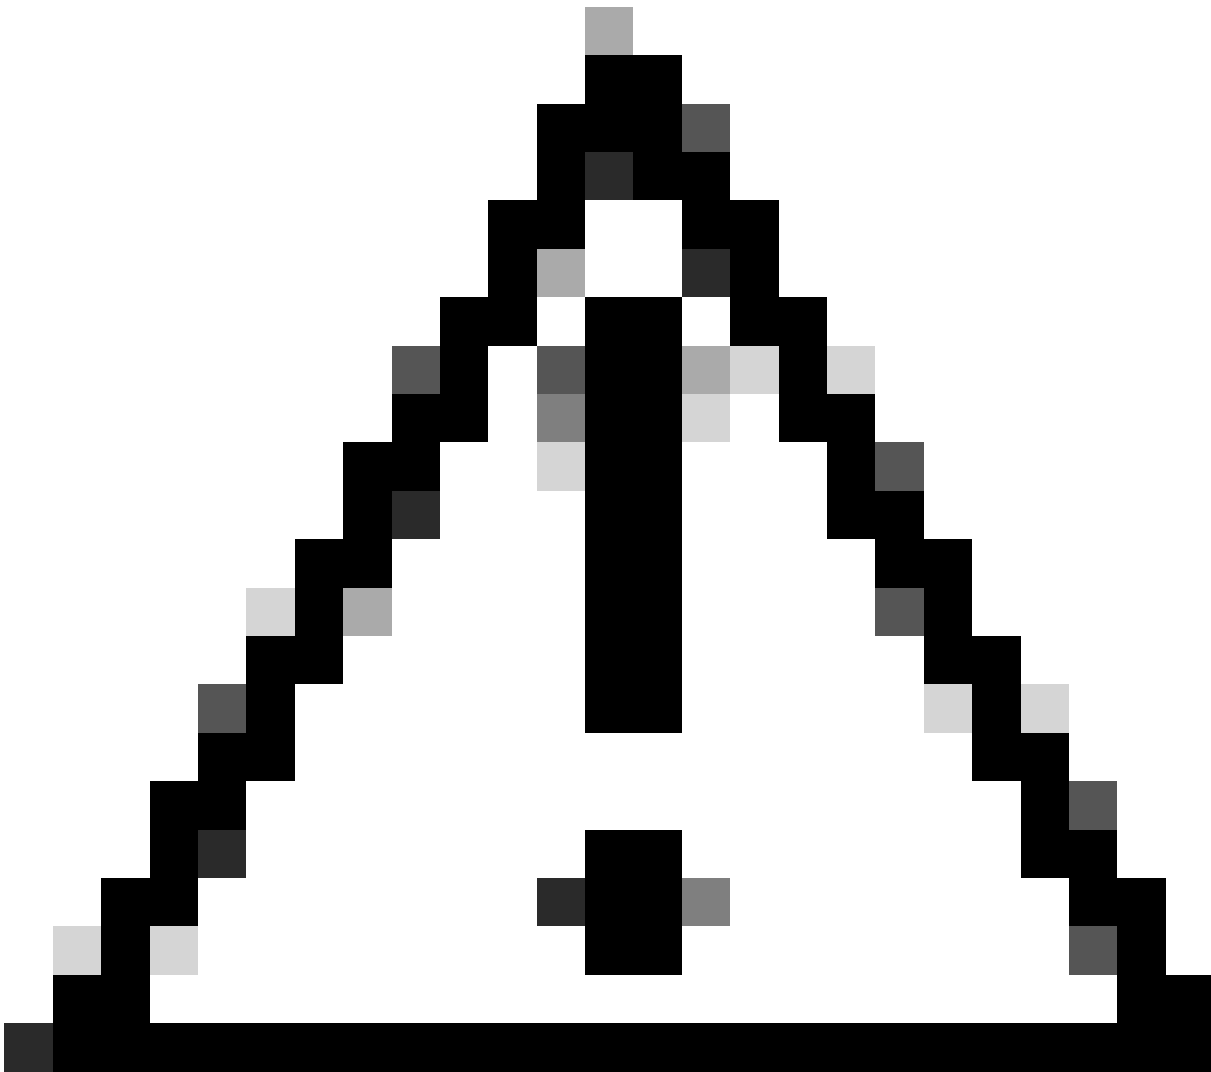

**Caution:** This document uses the basic registration settings, resulting in a non-secure registration. With this setup, the SIP signaling can be inspected in clear text in a packet capture. Refer to the telepresence endpoint and Expressway administrator guides for more information about configuring TLS to set up secure registrations with encrypted SIP signaling.

---

## 1. Configure the Expressway

1. Log in to the web GUI of Expressway. If a cluster is in place, log in to the primary server.
2. Navigate to **Configuration > Domains > New**.
3. Enter the name of your registration domain under **Domain name**.
4. Ensure that **SIP registrations and provisioning on Expressway** is set to **On**.
5. Leave all other settings with their default value. Click **Create domain**.

**Configuration**

Domain name  ⓘ

---

**Supported services for this domain**

SIP registrations and provisioning on Expressway	On ▼ ⓘ
SIP registrations and provisioning on Unified CM	Off ▼ ⓘ
IM and Presence Service	Off ▼ ⓘ
XMPP federation	Off ▼ ⓘ
Identity provider for this domain	<a href="#">This domain does not use an identity provider</a>
Deployment	Default deployment ▼ ⓘ

6. Navigate to **Configuration > Registration > Configuration**, set **Restriction policy** to **Allow List**. Click **Save**.


**Configuration**

Restriction policy  ⓘ

---

**Related tasks**

[Configure the registration Allow List](#)

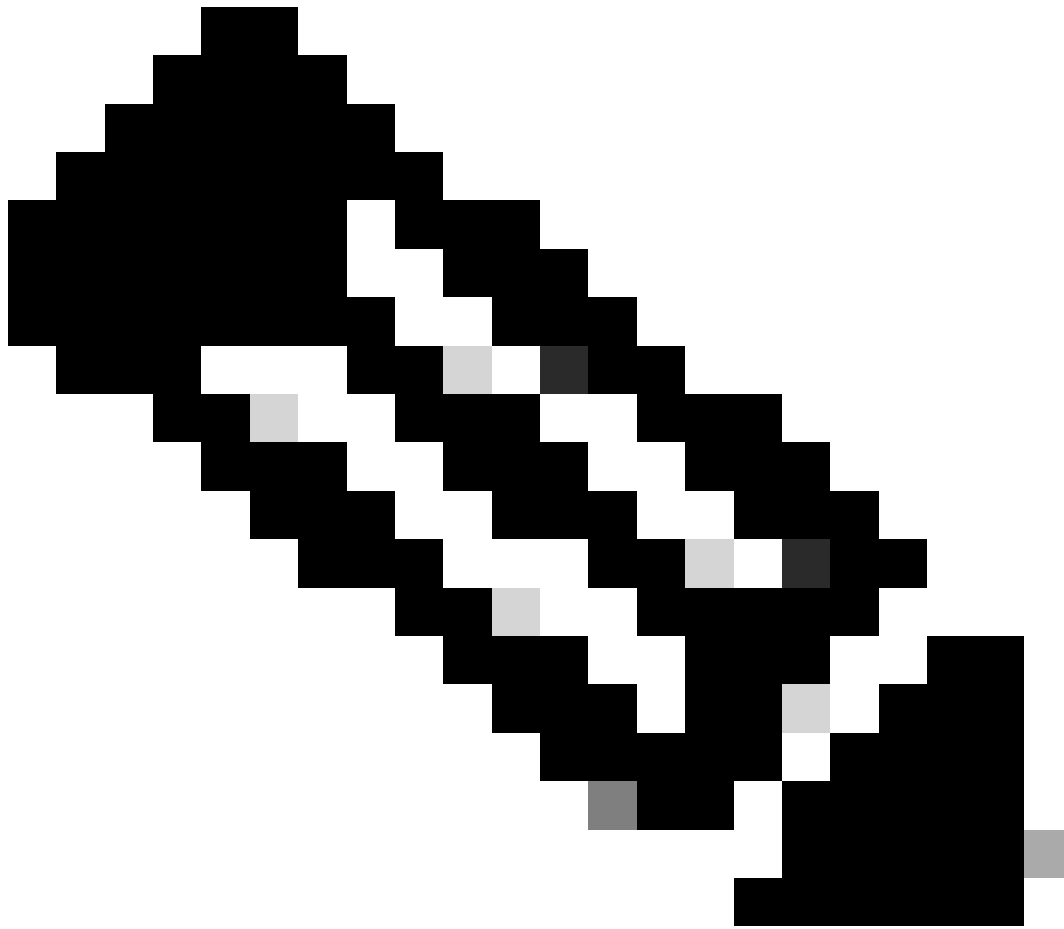

**Note:** If the **Registration** menu is not available under **Configuration**, ensure that the registrar service has been enabled as described in the Background Information section.

- 
7. At the bottom of the page, click **Configure the registration Allow List**, and click **New**.
  8. Enter a description for your rule (optional).
  9. From the **Pattern type** drop-down menu, select **Regex**.
  10. In the **Pattern string** field, enter the expression `.*@` and append the domain name you entered in step 3.
  11. Click **Add Allow List pattern**.

Configuration

Description	Allow registrations to registrationtest.local <span style="float: right;">?</span>
Pattern type	Regex <span style="float: right;">?</span>
Pattern string	.*@registrationtest.local <span style="float: right;">?</span>

Add Allow List pattern
Cancel

## 2. Configure the Telepresence Endpoint

1. Log in to the web GUI of your telepresence endpoint.
2. Navigate to **Settings > Configurations > NetworkServices** and ensure that the SIP protocol is enabled by setting **SIP Mode** to **On**.
3. Navigate to **Settings > Configurations > SIP**.
4. Set **ANAT** to **Off**. This feature is not supported by Expressway.
5. Enter the FQDN or IP address of your Expressway(s) in the **Proxy [n] Address** fields. You can enter the addresses of up to 4 Expressway cluster peers, to provide redundancy.
6. Set **TlsVerify** to **Off** and **DefaultTransport** to **TCP**.
7. Set **Type** to **Standard**.
8. In the **URI** field, enter the URI that your device uses to identify itself. This is the URI that must be dialed in order to call the device. This must be in the host@domain format, where the host part is an alphanumeric string, and the domain part is the domain previously configured on Expressway.
9. Click **Save**.

This image provides example settings used in a lab environment:

Configuration / SIP


↶ Revert
Save
Collapse All
Expand All

ANAT	<span style="border: 1px solid #ccc; padding: 2px 5px;">Off</span> <span style="float: right;">?</span>	
DefaultTransport	<span style="border: 1px solid #ccc; padding: 2px 5px;">TCP</span> <span style="float: right;">?</span>	
DisplayName	<span style="border: 1px solid #ccc; padding: 2px 5px;"></span> <span style="float: right;">?</span>	(0 to 550 characters)
Line	<span style="border: 1px solid #ccc; padding: 2px 5px;">Private</span> <span style="float: right;">?</span>	
ListenPort	<span style="border: 1px solid #ccc; padding: 2px 5px;">Off</span> <span style="float: right;">?</span>	
Mailbox	<span style="border: 1px solid #ccc; padding: 2px 5px;"></span> <span style="float: right;">?</span>	(0 to 255 characters)
MinimumTLSVersion	<span style="border: 1px solid #ccc; padding: 2px 5px;">TLSv1.0</span> <span style="float: right;">?</span>	
PreferredIPSignaling	<span style="border: 1px solid #ccc; padding: 2px 5px;">IPv4</span> <span style="float: right;">?</span>	
Proxy 1 Address	<span style="border: 1px solid #ccc; padding: 2px 5px;">10.15.1.8</span> <span style="float: right;">?</span>	(0 to 255 characters)
Proxy 2 Address	<span style="border: 1px solid #ccc; padding: 2px 5px;">10.15.1.22</span> <span style="float: right;">?</span>	(0 to 255 characters)
Proxy 3 Address	<span style="border: 1px solid #ccc; padding: 2px 5px;"></span> <span style="float: right;">?</span>	(0 to 255 characters)
Proxy 4 Address	<span style="border: 1px solid #ccc; padding: 2px 5px;"></span> <span style="float: right;">?</span>	(0 to 255 characters)
TlsVerify	<span style="border: 1px solid #ccc; padding: 2px 5px;">Off</span> <span style="float: right;">?</span>	
Type	<span style="border: 1px solid #ccc; padding: 2px 5px;">Standard</span> <span style="float: right;">?</span>	
URI	<span style="border: 1px solid #ccc; padding: 2px 5px;">room101@registrationtest.local</span> <span style="float: right;">?</span>	(0 to 255 characters)

## Verify



After saving the configuration, the registration status can be verified from **Settings > Statuses > SIP > Registration**. As shown in this image, the registration is successful in this example:

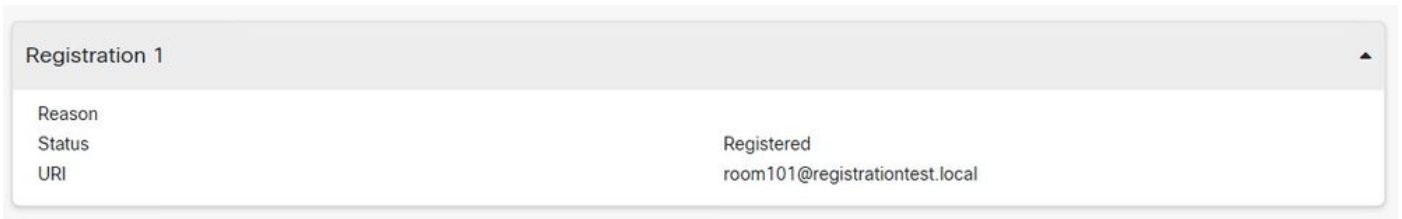

Registration 1

Reason	
Status	Registered
URI	room101@registrationtest.local

In case of a failure to register, this section displays a reason for the failure. In this example, the reason field shows that a 403 Forbidden was returned by Expressway in response to the SIP REGISTER request, suggesting that the registration policy rules need to be reviewed.



Registration 1

Reason	403 Forbidden
Status	Failed
URI	room101@registrationtest.local

Registrations can also be verified on the Expressway by navigating to **Status > Registrations**. A list of registrations can be displayed by device, by URI or as a historical report. This image displays an example of a registration report by device name:



Records: 1 Page 1 of 1

Name	Number	Type	Protocol	Creation time	Address	Device type	Peer	Actions
<input type="checkbox"/> room101@registrationtest.local		SIP UA	SIP	2024-01-31 12:41:24	sip:room101@10.15.1.20:5060;transport=tcp	Room Systems	This system	<a href="#">View</a>

[Unregister](#) [Select all](#) [Download all](#)

## Related Information

[SIP settings configuration from the RoomOS Administrator Guide.](#)

[Registration Control chapter from the Expressway Administrator Guide version X14.](#)