

Configure WPS Settings on the RV110W

Objective

Wi-Fi Protected Setup (WPS) is a quick way to establish a secure wireless network. The objective of this article is to explain how to configure WPS Settings on the RV110W.

Applicable Devices

- RV110W

Steps of Procedure

Step 1. Use the Router configuration utility to choose **Wireless > WPS**.

WPS

Wi-Fi Protected Setup™

SSID: ciscosb1 ▼
ciscosb1

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.

OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

| | |
|-------------------------------|--------------|
| Wi-Fi Protected Setup Status: | Unconfigured |
| Network Name (SSID): | ciscosb1 |
| Security: | Disabled |
| Session Status: | N/A |

Step 2. From the *SSID* drop-down menu, choose a wireless network to apply WPS to.

WPS

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

| | |
|-------------------------------|--------------|
| Wi-Fi Protected Setup Status: | Unconfigured |
| Network Name (SSID): | ciscosb1 |
| Security: | Disabled |
| Session Status: | N/A |

Step 3. To the right of WPS, check the **Enable** checkbox to enable WPS settings.

Step 4. Perform one of the three options to add a client device to the network.

WPS



Configuration settings have been saved successfully

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

- Option 1. If the client has a WPS button, press the button. Click the WPS icon.

WPS



Configuration settings have been saved successfully

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

- Option 2. If the client device has a WPS PIN number, enter the PIN number in the field in option 2 field. Click **Register**.
- Option 3. The client requests for the Router's PIN number. The client enters the number 61443143 in the client device.