

Configure Session Timeout on the RV110W

Objectives

A session timeout can be configured so a guest or administrator will automatically be timed out if they are inactive for a specified length of time. When a user leaves their computer for an extended period of time, anyone can walk up and have access to the device. A session timeout will log off the user, so after a specified length of time no one can access the device.


The objective of this document is to show you how to configure Session Timeout on the RV110W.

Applicable Devices

- RV110W


Configure Session Timeout

Step 1. In the web configuration utility choose **Administration > Session Timeout**.

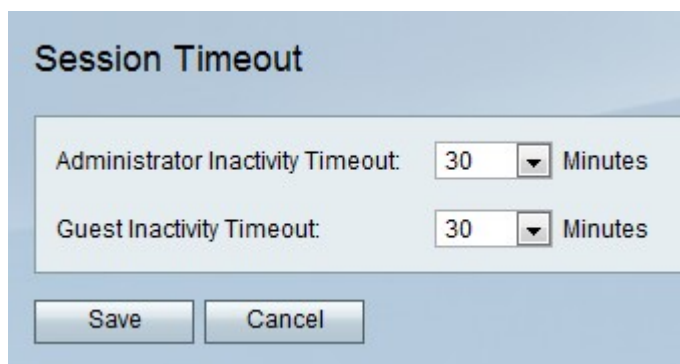

The screenshot shows the 'Session Timeout' configuration page. It has a title bar 'Session Timeout'. Below it, there are two rows of configuration options. The first row is 'Administrator Inactivity Timeout: 30 Minutes', where '30' is in a text box and 'Minutes' is to the right. The second row is 'Guest Inactivity Timeout: 30 Minutes', also with '30' in a text box and 'Minutes' to the right. At the bottom, there are two buttons: 'Save' and 'Cancel'.

Step 2. In the *Administrator Inactivity Timeout* drop-down list, choose the number of minutes before a session times out due to inactivity. This will only affect administrators.

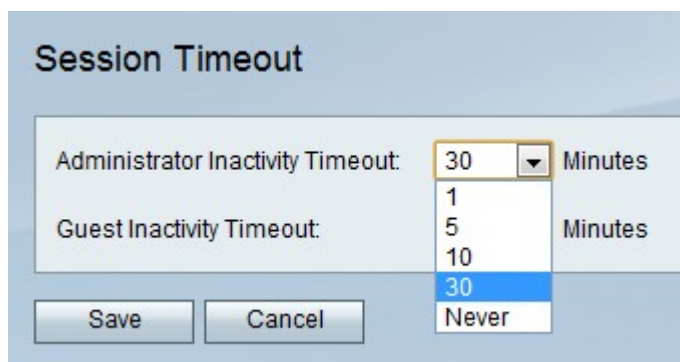

This screenshot is similar to the previous one, but the 'Administrator Inactivity Timeout' drop-down menu is open. The menu shows the following options: '30', '1', '5', '10', '30', and 'Never'. The '30' option is highlighted in blue. The 'Guest Inactivity Timeout' remains at '30 Minutes'. The 'Save' and 'Cancel' buttons are still visible at the bottom.

Step 3. In the *Guest Inactivity Timeout* drop-down list, choose the number of minutes before a session times out due to inactivity. This will only affect guests.

Step 4. Click **Save**.