

Configure IPv4 LAN Settings on the RV110W

Objectives

The IPv4 LAN settings can be configured to help connect devices to the RV110W. The VLAN, IP Address, and Subnet Mask can be configured on the *LAN Configuration* page.


The objective of this document is to show you how to configure the IPv4 LAN Settings on the RV110W.

Applicable Devices

- RV110W

IPv4 LAN Settings

Step 1. In the web configuration utility choose **Networking > LAN > LAN Configuration**.

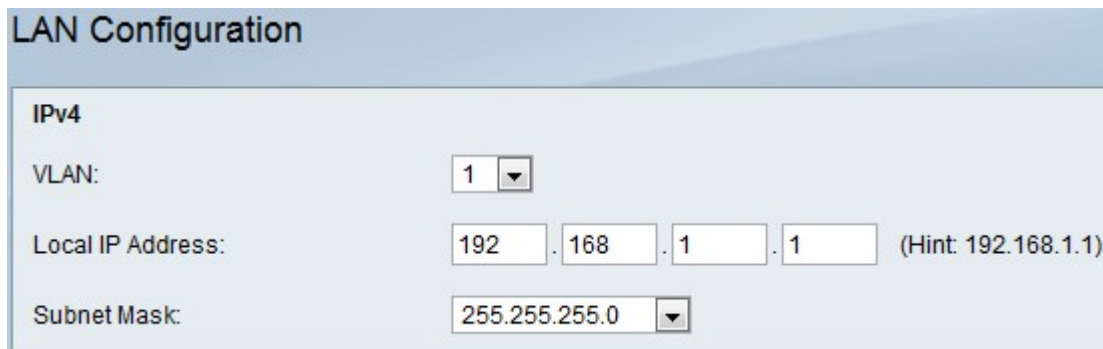

The screenshot shows the 'LAN Configuration' page. Under the 'IPv4' section, the 'VLAN' is set to 1, the 'Local IP Address' is 192.168.1.1, and the 'Subnet Mask' is 255.255.255.0.

Step 2. In the *VLAN* drop-down menu, choose a VLAN for the IPv4 LAN.

Step 3. In the *Local IP Address* field, enter the LAN IP Address of the RV110W.

Step 4. In the *Subnet Mask* drop-down menu, choose a subnet mask for the new IP Address.

Step 5. Click **Save**.