

Session Timeout Configuration on RV215W

Objective

A session timeout can be configured so a guest or administrator will automatically be logged out if they are inactive for a specified length of time. When a user leaves their computer for an extended period of time, anyone can walk up and have access to the device. A session timeout will log off the user so after a specified length of time no one can access the device.

This article explains how to configure Session Timeout on RV215W.

Applicable Devices


- RV215W

Software Version

- 1.1.0.5

Session Timeout Configuration

Step 1. Log in to the web configuration utility and choose **Administration > Session Timeout**. The *Session Timeout* page opens:

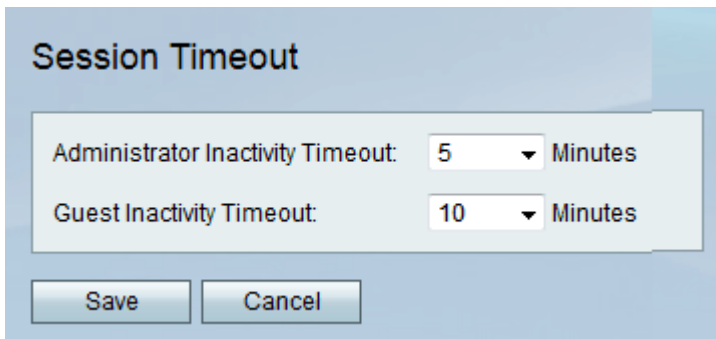

The screenshot shows a web configuration utility window titled "Session Timeout". It contains two rows of configuration options:

Administrator Inactivity Timeout:	5	Minutes
Guest Inactivity Timeout:	10	Minutes

Below the configuration options are two buttons: "Save" and "Cancel".

Step 2. Choose the desired number minutes before a session times out due to inactivity from the Administrator Inactivity drop-down list. This is applicable only for the administrators on the device.

Step 3. Choose the desired number minutes before a session times out due to inactivity from the Guest Inactivity drop-down list. This is applicable only for guests on the device.

Step 4. Click **Save**.