

Check the Wireless Settings on a Cisco Small Business VoIP Router

Contents

[Introduction](#)

[How do I get the wireless settings on my network?](#)

[Related Information](#)

Introduction

This article is one in a series to assist in the setup, troubleshooting, and maintenance of Cisco Small Business products.

Q. How do I get the wireless settings on my network?

A.

The wireless settings that you need to note are:

- a.) SSID
- b.) SSID Broadcast
- c.) Wireless Security

In order to check the wireless settings on the Cisco Small Business router, complete these steps:

Checking the Wireless Settings on the Cisco Small Business Router

Step 1:

Access the router's web-based setup page. For instructions, click [here](#).

Step 2:

When the router's web-based setup page appears, click **Wireless**.

Step 3:

Look for **Wireless Network Name (SSID)**. If it is still set to "linksys", change it to something unique and note if Wireless SSID Broadcast is set to **Enable** or **Disable**.

Step 4:

Click **Wireless Security**, and note the current **Security Mode**.

If Security Mode is set to **WEP**:

If Security Mode is set to **WPA**:

Step 5:

Click .

Related Information

- [Technical Support & Documentation - Cisco Systems](#)