



# Configuring Indoor Deployment

- [Configuring Indoor Deployment, on page 1](#)

## Configuring Indoor Deployment

The Catalyst IW9167E and IW9165 support enabling and disabling of indoor deployment using CLI.



**Note** Before you enable the indoor deployment setting, ensure that the Catalyst IW9167E or IW9165 is set to indoor mode. As you can use the outdoor mode for indoors, but whereas the indoor mode is not suitable for outdoor because 5150–5350 MHz channels are indoor-related countries.

By default, the devices are set to outdoor mode.

To enable indoor deployment, use the following CLI command:

```
Device# configure wireless indoor-deployment enable
```

To disable indoor deployment, use the following CLI command:

```
Device# configure wireless indoor-deployment disable
```

To verify E indoor deployment, use the following show command:

For enabled indoor deployment

```
Device# show Dot11Radio {1|2} config
DFS region : E
DFS radar role : auto
Radar detected : 0
Indoor deployment : enable

Device# show controllers Dot11Radio {1|2}
Radio info summary:
=====
Radio : 5.0 GHz
Carrier set : (-Ei) GB
Base radio MAC : FC:58:9A:15:B7:C0
Supported channels:
36 40 44 48 52 56 60 64 100 104 108 112 116 120 124 128 132 136 140
```

For disabled indoor deployment

```
Device# show Dot11Radio {1|2} config
DFS region : E
```

```
DFS radar role : auto
Radar detected : 0
Indoor deployment : disable

Device# show controllers Dot11Radio {1|2}
Radio info summary:
=====
Radio : 5.0 GHz
Carrier set : (-E) GB
Base radio MAC : FC:58:9A:15:B7:C0
Supported channels:
100 104 108 112 116 120 124 128 132 136 140
```