



Nexus Dashboard Orchestrator Inter-
Fabric L3Out for ACI Fabrics, Release
4.4.1

Table of Contents

Inter-Fabric L3Out Overview	1
Inter-Fabric L3Out Guidelines and Limitations	2
Configuring External TEP Pool	3
Configuring External EPG to Use Inter-Fabric L3Out	5
Creating a Contract for Inter-Fabric L3Out	7
Use Cases	8
Inter-Fabric L3Out for Application EPGs (Intra-VRF)	8
Shared Services with Inter-Fabric L3Out for Application EPGs (Inter-VRF)	11
Inter-Fabric Transit Routing	13

Inter-Fabric L3Out Overview

NDO enables a number of scenarios in which endpoints located in one fabric are able to establish connectivity with entities, such as external network, mainframe, or service nodes, reachable through a remote L3Out.

These include the following:

- L3Out across fabrics—endpoints in an application EPG in one fabric using an L3Out in another fabric (both part of the same VRF).
- Inter-fabric transit routing—establishing communication between entities (such as endpoints, network devices, service nodes) connected behind L3Outs deployed in different fabrics (both L3Outs part of the same VRF).
- Shared services for inter-fabric L3Out—application EPG to remote L3Out or inter-fabric transit routing across VRFs.

The following sections are divided into the generic GUI procedures you can follow to create the objects required to implement inter-fabric L3Out use cases followed by overview and workflows specific to each supported use case scenario.



The term "inter-fabric L3Out" refers to the functionality allowing communication to external resources reachable via the L3Out connection of a remote fabric. However, in this document, the term may also be used to indicate the specific remote L3Out object.

The following sections describe how to configure an inter-fabric L3Out for EPG-to-L3Out use cases without Policy-Based Redirect (PBR). If you want to insert service chaining in the contract between an EPG and a remote L3Out to enable PBR, see [Inter-Fabric L3Out with PBR](#) instead; and if you want to enable PBR between L3Outs in different fabrics (transit routing with PBR), see [Inter-Fabric Transit Routing with PBR](#).

Inter-Fabric L3Out Guidelines and Limitations

When configuring inter-fabric L3Out, you must consider the following:

- The steps described in the following sections assume you have L3Out connectivity already configured for your fabrics.

This includes creating the L3Out template, creating the L3Out object and defining its configuration, and deploying the configuration to the fabric(s). Detailed information on configuring L3Outs is available in the [External Connectivity \(L3Out\)](#) chapter.

- Inter-fabric L3Out is supported for IPv4 and IPv6.
- With inter-fabric L3Out, in addition to the BGP eVPN sessions that are always established between fabrics in Multi-Fabric topology, MP BGP VPNv4 (or VPNv6) sessions are created to support the inter-fabric L3Out feature.
- You can now associate a bridge domain in one fabric with the L3Out in another fabric, however they must both be in the same VRF.

This association is performed at the fabric-local level and is required to advertise the BD subnet out of the remote L3Out and ensure that inbound traffic to the BD can be maintained even if the local L3Out failed.



However, instead of associating a bridge domain, we recommend that you define outbound route-maps for the L3Outs, including the BD prefixes that need to be advertised out.

- The Policy Control Enforcement direction for the VRF associated to the inter-fabric L3Out must be kept configured in the default ingress mode.
- The following scenarios are not supported with inter-fabric L3Out and remote leaf (RL):
 - Transit routing between L3Outs deployed on RL pairs associated to separate fabrics
 - Endpoints connected to a RL pair associated to a fabric communicating with the L3Out deployed on the RL pair associated to a remote fabric
 - Endpoints connected to the local fabric communicating with the L3Out deployed on the RL pair associated to a remote fabric
 - Endpoints connected to a RL pair associated to a fabric communicating with the L3Out deployed on a remote fabric
- The following other features are not supported with inter-fabric L3Out in Multi-Fabric:
 - Multicast receivers in a fabric receiving multicast from an external source via another fabric L3Out. Multicast received in a fabric from an external source is never sent to other fabrics. When a receiver in a fabric receives multicast from an external source it must be received on a local L3Out.
 - An internal multicast source sending multicast to an external receiver with PIM-SM any source multicast (ASM). An internal multicast source must be able to reach an external Rendezvous Point (RP) from a local L3Out
 - GOLF
 - Preferred Groups for External EPG

Configuring External TEP Pool

Inter-fabric L3Out requires an external TEP address for the border leaf switches in each pod. If you already have an external TEP pool that is configured, for example for another feature such as Remote leaf switch, the same pool can be used. The existing TEP pool will be inherited by the Cisco Nexus Dashboard Orchestrator and shown in the GUI as part of the infra configuration. Otherwise, you can add a TEP pool in the GUI, as described in this section.



Every pod must be assigned a unique TEP pool and it must not overlap with any other TEP pool in the fabric.

1. Log in to your Cisco Nexus Dashboard Orchestrator.
2. In the left navigation menu, select **Configure > Fabric To Fabric Connectivity**.
3. In the top right of the main pane, click **Configure**.
4. In the main pane, choose the **Fabrics** tab and then the fabric for which you want to define an external TEP pool.
5. In the main pane, click on the name of the Pod that you want to configure and then click **+Add TEP Pool**.

The screenshot displays the Cisco Nexus Dashboard Orchestrator interface. On the left, the navigation menu shows 'Configure / Site To Site Connectivity / Configure' and 'Configure' is selected. Under 'Configure', 'General Settings' and 'Sites' are visible. 'Sites' is expanded, showing 'Site1' and 'Site2'. A green notification banner at the top left says 'Successfully Deployed'. Below it, 'Site Site1' is shown with a green checkmark and a blue callout 'b' pointing to the '+ Add TEP Pool' button. The main pane shows 'pod-1' configuration. At the top, there are four status indicators: 'major' (orange), 'critical' (red), 'minor' (yellow), and 'warning' (green). Below these, 'Overlay Unicast TEP' is set to '172.16.100.101'. Under 'External TEP Pools', a 'TEP' pool is listed with the address '192.168.111.0/24' and a 'Reserved Address Count: 4'. A blue callout 'a' points to the 'Pod pod-1' section, which shows 'Spines connected to the' and 'POD1-SPINE' with 'BGP peering or'. Below that, 'SR-MPLS Infra L3Outs' and 'SR-MPLS-L' are visible. An 'Ok' button is at the bottom right.

6. In the **Add TEP Pool** window, specify the **External TEP Pool** that you want to configure for that fabric and the **Reserved Address Count**.

For the TEP pool, provide the subnet and the subnet mask, for example **192.168.111.0/24**.



You must ensure that the TEP pool you are adding does not overlap with any other TEP pools or fabric addresses.

Multiple disjointed TEP pools can be configured , so you are not required to specify a large TEP pool from the beginning.

7. Repeat the process for each fabric and pod where you plan to use inter-fabric L3Outs.

Configuring External EPG to Use Inter-Fabric L3Out

Before you begin:

- Ensure that you have read and completed the requirements described in [Inter-Fabric L3Out Guidelines and Limitations](#).
- You must have created and deployed the L3Outs in each fabric as part of configuring the fabric's external connectivity.

Detailed information on configuring L3Outs is available in the [External Connectivity \(L3Out\)](#) chapter.

This section describes how to create an external EPG that will be associated to the inter-fabric L3Out. You can then use this external EPG and contracts to configure specific use cases for endpoints in one fabric to use an L3Out in another fabric or to configure L3Out-to-L3Out transit routing.

1. Select the schema and template where you want to create the external EPG.

If you create the external EPG in a template that is associated to multiple fabrics, the external EPG will be stretched across all of those fabrics. This is recommended when the L3Outs defined in those fabrics provide access to a set of common external resources, for example the WAN.

If you create the external EPG in a template that is associated with a single fabric, the external EPG will be created in that fabric only. This is recommended when the L3Out defined in that fabric provides access to external resources accessible only from that fabric.

2. Create an external EPG.

- a. In the main pane, select **+Create Object > External EPG**.
- b. Provide the **Display Name** for the external EPG.

For example, `eepg-inter-fabric-l3out`

- c. From the **Virtual Routing & Forwarding** dropdown, select the same VRF you associated with the L3Out.

3. Map the external EPG to the L3Out.

- a. In the template view, select the tab for the fabric where the external EPG is deployed.
- b. Select the external EPG you created in the previous step.
- c. In the **<external-epg-name> on <fabric-name>** properties sidebar, choose the L3Out you created from the **L3Out** dropdown.

Note that both the APIC-managed and the Orchestrator-managed L3Outs are available for selection. You can select either the L3Out you have created and deployed from NDO or pick an L3Out that exists in the fabric's APIC.

4. Configure one or more subnets for the external EPG.

- a. Select the external EPG.
- b. In the right sidebar, click **+Add Subnet**.

- c. In the **Add Subnet** window's **Subnet** field, provide the subnet's network prefix.
- d. (Optional) Provide a descriptive **Name** for the subnet.
- e. Provide any required options for this subnet.

The prefixes and options you configure depend on the specific use cases:

- To classify the inbound traffic as belonging to the external EPG, select the **External Subnets for External EPG** flag for the specified prefix. Depending on the specific use case, this allows you to apply a contract with an internal EPG or with the external network domain reachable via a different L3Out.
- To advertise the external prefixes learned from another L3Out (in the same fabric or in a remote fabric) out of this L3Out, select the **Export Route Control** flag for the specified prefix. When specifying the **0.0.0.0/0** prefix, the **Aggregate Export** flag can be selected to advertise all prefixes out of the L3Out; if the **Aggregate Export** flag is not enabled, only the default route **0.0.0.0/0** would be advertised, if present in the routing table of the border leaf nodes.



However, we recommend that you use the Outbound Route-Map associated to the L3Out to match the external prefixes (in addition to the BDs' subnets) to be advertised out instead.

- To filter out specific routes received from the external network, select the **Import Route Control** flag for the specified prefix. If specifying the **0.0.0.0/0**, you can also choose the **Aggregate Import** option.

Note that this is possible only when peering BGP with the external routers.



However, similar to the previous bullet point, we recommend that you use the Outbound Route-Map associated to the L3Out to match the external prefixes (in addition to the BDs' subnets) to be advertised out instead.

- To leak routes to different VRFs, select the **Shared Route Control** and the associated **Aggregate Shared Routes** flags, as well as the **Shared Security Import** flag. These options are required for the specific use case of inter-VRF shared L3Out and inter-VRF inter-fabric transit routing.
5. (Optional) Enable **Include in Preferred Group** if you want the external EPG to be part of the EPG preferred group.
 6. (Optional) From the **QoS Level** dropdown, select the QoS level for this external EPG.

For additional information about QoS in ACI fabrics, see [Cisco APIC and QoS](#).

For additional information about configuring QoS Levels in your Nexus Dashboard Orchestrator, see [QoS Preservation Across IPN](#).

Creating a Contract for Inter-Fabric L3Out

This section describes how to create a filter and a contract you will use to enable communication between an application EPG deployed in a fabric and the external EPG associated to an L3Out in a different fabric (inter-fabric L3Out functionality).

1. Select the template where you want to create contract and filter.

You can use the same schema and template where you created the VRF and the external EPG or you can choose a different schema and template.



In earlier NDO releases, even if the contract and filters were defined only as local objects in one fabric (**Fabric1**), NDO created the corresponding shadow objects in a remote fabric (**Fabric2**) when a local EPG or external EPG in **Fabric2** needed to consume or provide that contract.

This is no longer the case and you must define the contracts and the filters explicitly on all fabrics where they will be used.

2. Create a filter.

- a. In the main pane, select **+Create Object > Filter**.
- b. Provide the **Display Name** for the filter.
- c. Click **+ Entry** and provide the filter entry information specific to the kind of traffic you want to allow.
- d. Click **Ok** to save the filter.

3. Create a contract

- a. In the main pane, select **+Create Object > Contract**.
- b. In the right pane, provide the **Display Name** for the contract
- c. Select the appropriate **Scope** for the contract.
 - If both inter-fabric L3Out and application EPG are in the same VRF, set the scope to **vrf**.
 - If the inter-fabric L3Out and application EPG are in different VRFs but the VRFs are in the same tenant, set the scope to **tenant**.
 - If the inter-fabric L3Out and application EPG are in different VRFs and the VRFs are in different tenants, set the scope to **global**.
- d. Ensure that the **Apply both directions** option is enabled if you want the same filter to apply for both consumer-to-provider and provider-to-consumer directions.

With this option enabled, you need to provide the filters only once and they will apply for traffic in both directions.

- e. In the **Filter Chain** area, click **Create Filter** and choose the filter you created in the previous step.
- f. Click **Ok** to save the contract.

Use Cases

Inter-Fabric L3Out for Application EPGs (Intra-VRF)

Before you begin:

You need to have the following already configured:

- External connectivity (L3Out) in each fabric, as described in the [External Connectivity \(L3Out\)](#) section.

In this use case, a separate L3Out will be imported or created in each fabric-specific template.

- A schema with four templates.

Create a template for each fabric (for example, `template-fabric1` and `template-fabric2`) where you configure the objects unique to those fabrics, such as the application EPG and the L3Outs.

In addition, create two more stretched templates: one for the stretched EPGs, External EPGs, and BDs and the second one for the VRFs, contracts, and filters.

- The external EPG for the inter-fabric L3Out, as described in [Configuring External EPG to Use Inter-Fabric L3Out](#).

In this use case, the external EPG is configured as a stretched object that is defined in one of the stretched template (for example, `template-stretched-ext-epg`). Assuming that the external EPG provides access to the entire external address space, we recommend configuring a `0.0.0.0/0` prefix for classification to avoid specifying a long list of more specific prefixes.

- The contract that you will use between the application EPG and the L3Out external EPG, as described in [Creating a Contract for Inter-Fabric L3Out](#).

We recommend creating the contract and the filter in the second stretched template (for example, `template-stretched-vrf-contract`), which also contains the VRF.

This section describes the configuration that is required to allow endpoints that are part of an application EPG to communicate with the external network domain reachable through an L3Out deployed in another fabric but within the same VRF (intra-VRF).

The first figure below shows a stretched external EPG and the associated L3Outs which will be created in both fabrics. An application EPG (`EPG1`) is created in Fabric 1 and has a contract with the external EPG. This use case is recommended when the L3Outs in the separate fabrics provide access to a common set of external resources. It simplifies the policy definition and external traffic classification, while still allowing you to apply route-map policies separately on each L3Out for the independent APIC domains.

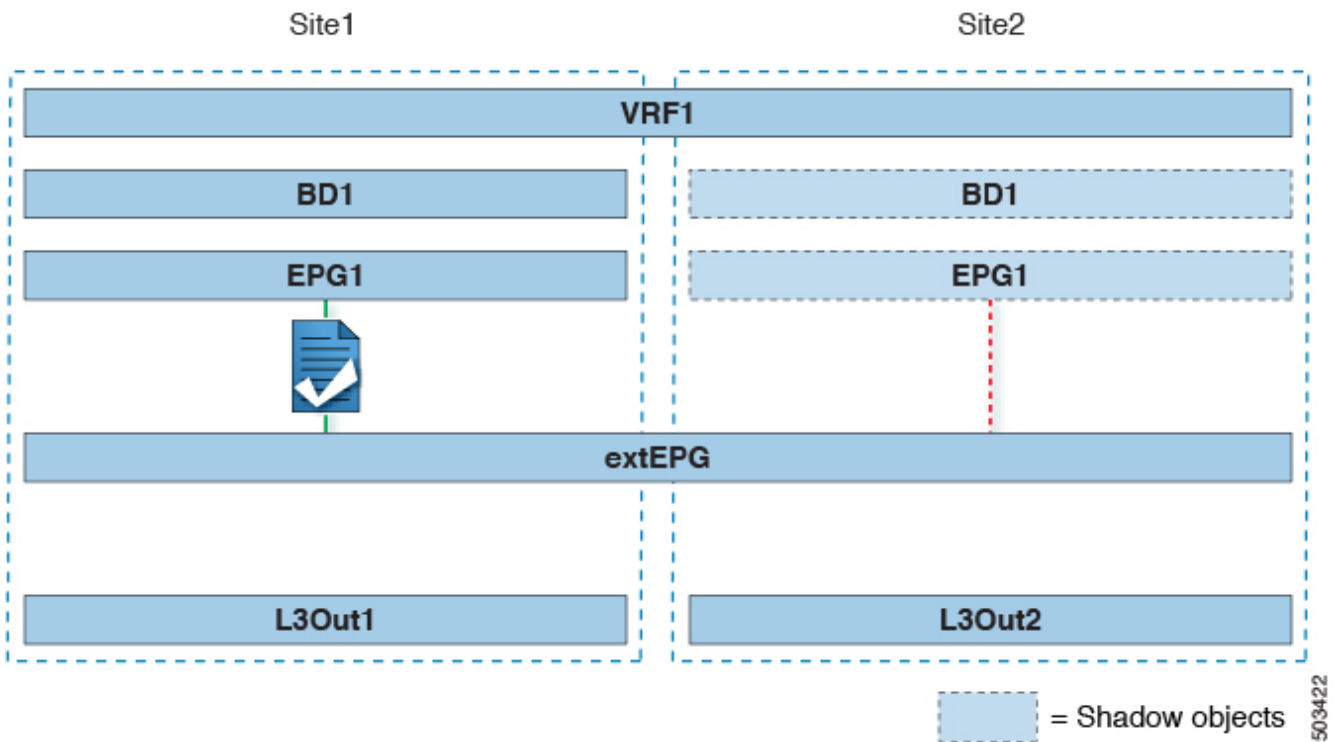


Figure 1. Stretched External EPG

The second figure below shows a similar use case but with the external EPG being deployed to only the fabric where the physical L3Out is located. The application EPG and the contract are configured in the same exact way to allow the traffic flow between the EPG in one fabric and the physical L3Out in the other.

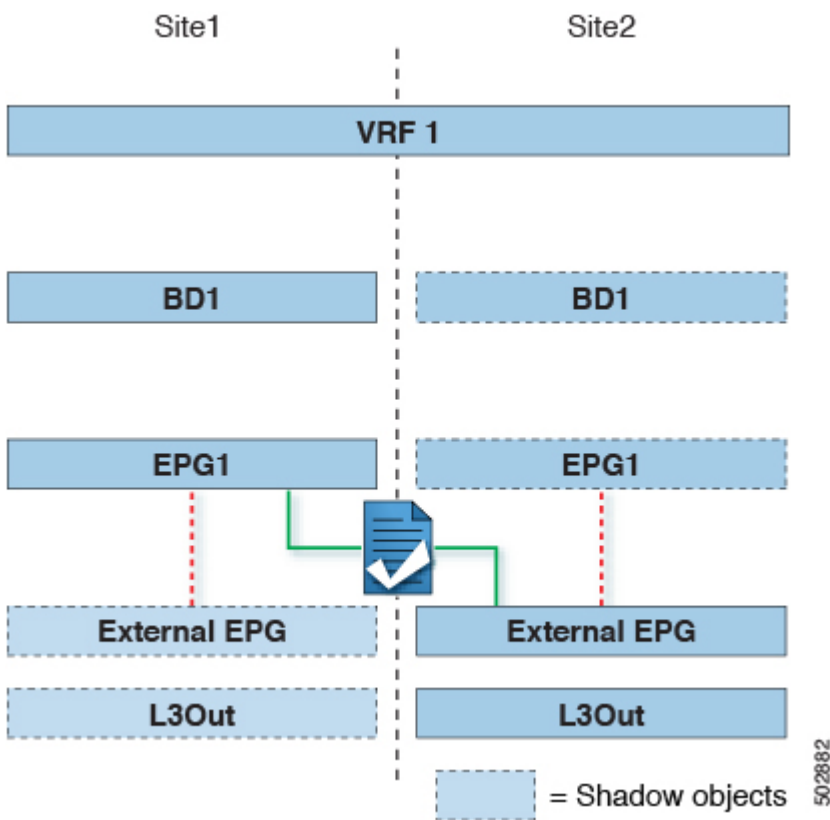


Figure 2. Non-Stretched (Fabric-Local) External EPG

The following steps describe the configuration that is required to implement the use case shown in Figure 1, which represents the most common scenario. If you want to deploy the use case shown in Figure 2, you can adapt the procedure with minor changes.

1. Log in to your Cisco Nexus Dashboard Orchestrator.
2. Select the schema and template for the application EPG and bridge domain.

In this use case, you associate the template to **Fabric1**.

3. Configure an application EPG and its bridge domain belonging to the same VRF as the L3Out.

If you already have an EPG that will use the inter-fabric L3Out, you can skip this step.

You can create a new or import an existing EPG and bridge domain as you typically would.

4. Assign the contract to the application EPG.
 - a. Select the EPG.
 - b. In the right sidebar, click **+Contract**.
 - c. Select the contract that you created in previous section and its type.

You can choose whether the application EPG is the **consumer** or the **provider**.

5. Assign the contract to the external EPG mapped to the remote L3Out.
 - a. Select the **template-stretched** where the external EPG is located.
 - b. Select the external EPG.
 - c. In the right sidebar, click **+Contract**.
 - d. Select the contract that you created in previous section and its type.

If you chose the application EPG to be the **consumer**, choose **provider** for the external EPG. Otherwise, choose **consumer** for the external EPG.

6. Associate the application EPG's bridge domain with the L3Out.

This enables the BD subnet to be advertised out of the L3Out toward the external network domain. Note that one or more subnets associated to the BD must be configured with the **Advertised Externally** option to be advertised out of the L3Out

- a. In the left sidebar, under **Fabrics**, select the application EPG's template.
- b. Select the bridge domain associated with the application EPG.
- c. In the right sidebar, click **+L3Out**.
- d. Select the inter-fabric L3Out you created.

For the use case shown in Figure 1, associate the BD to both the L3Outs defined in Fabric 1 and Fabric 2 to ensure that the external network can have access to the EPG from both paths. Specific policies can be associated to the L3Out or to the external routers to ensure that a specific L3Out path is normally preferred for inbound traffic. We recommend this when the EPG and BD are local to a fabric (as in the specific example) to avoid suboptimal inbound traffic path through the remote fabric's L3Out.

7. Deploy the schema.

Shared Services with Inter-Fabric L3Out for Application EPGs (Inter-VRF)

Before you begin:

You must have the following already configured:

- External connectivity (L3Out) in each fabric, as described in the [External Connectivity \(L3Out\)](#) section.

In this use case, a separate L3Out will be imported or created in each fabric-specific template.

- A schema with four templates.

Create a template for each fabric (for example, `template-fabric1` and `template-fabric2`) where you configure the objects unique to those fabrics, such as the application EPG and the L3Outs.

In addition, create two more stretched templates: one for the stretched External EPG and the second one for the contracts, and filters.

- The external EPG for the inter-fabric L3Out, as described in [Configuring External EPG to Use Inter-Fabric L3Out](#).

In this use case, the external EPG is configured as a stretched object that is defined in the stretched template (`template-stretched`). Assuming that the external EPG provides access to the entire external address space, we recommend configuring a `0.0.0.0/0` prefix for classification to avoid specifying a long list of more specific prefixes.

For this specific shared service, use case, you are also required to enable the **Shared Route Control** and the **Shared Security Import** flags for one or more subnets that are associated to one or more external EPGs of the remote L3Out. If you are using the `0.0.0.0/0` prefix for classification on the external EPG, in addition to the **Shared Route Control** flag, also enable the **Aggregate Shared Routes** flag.

- The contract that you will use between the application EPG and the L3Out external EPG, as described in [Creating a Contract for Inter-Fabric L3Out](#).

We recommend creating the contract and the filter in the stretched template (`template-stretched`).

This section describes the configuration that is required to allow endpoints that are part of an application EPG in one VRF to communicate with the external network domain reachable through an L3Out deployed in another fabric and different VRF, this is also known as "Shared Services".

This scenario is recommended when the L3Outs in separate fabrics provide access to a common set of external resources. It simplifies the policy definition and external traffic classification, while still allowing you to apply route-map policies separately on each L3Out for the independent APIC domains.

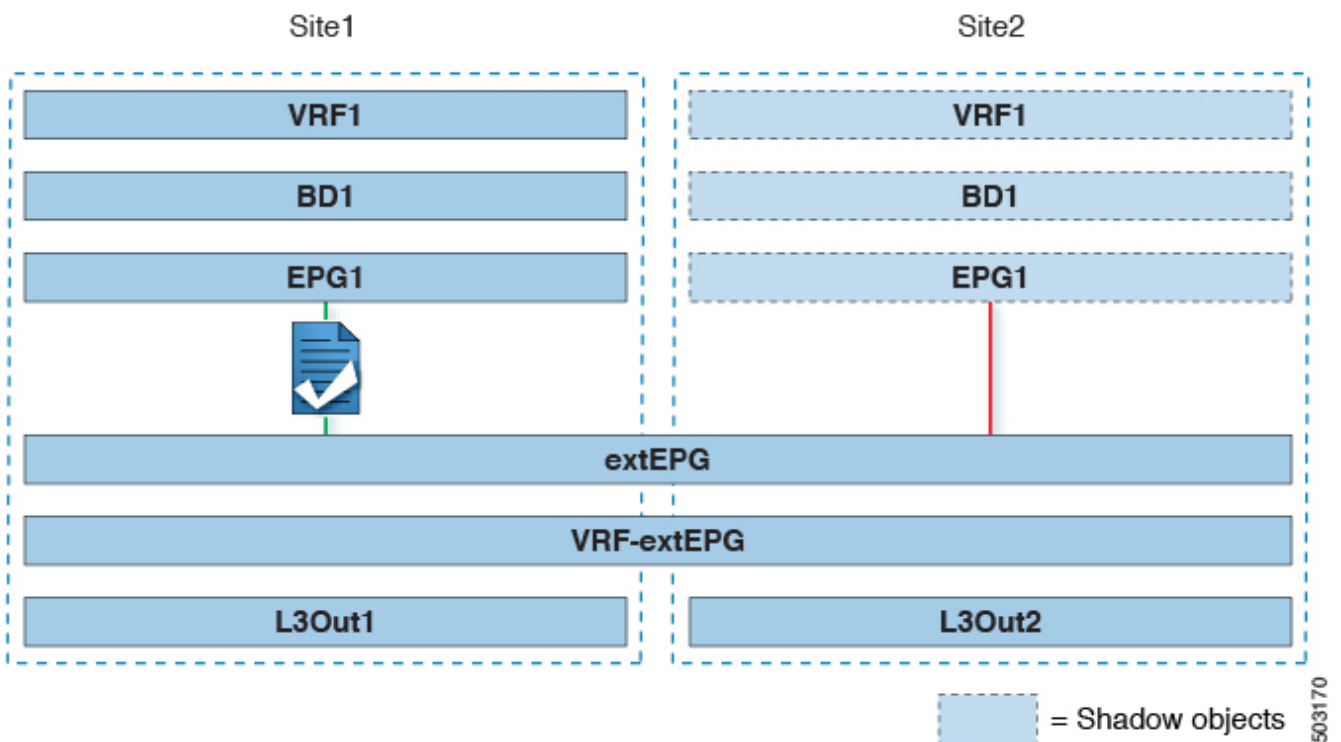


Figure 3. Stretched External EPG, Fabric-Local L3Outs and Application EPGs

The following steps describe the configuration that is required to implement the use case shown in Figure 3.

1. Log in to your Cisco Nexus Dashboard Orchestrator.
2. Select the schema and template for the application EPG and bridge domain.

In this use case, you associate the template to **Fabric1**.

3. Configure an application EPG and its bridge domain belonging to a separate VRF from the L3Out's.

If you already have an EPG that will use the inter-fabric L3Out, you can skip this step.

You can create a new or import an existing EPG and bridge domain as you typically would.

4. Assign the contract to the application EPG.
 - a. Select the EPG.
 - b. In the right sidebar, click **+Contract**.
 - c. Select the contract that you created in previous section and its type.

You can choose whether the application EPG is the **consumer** or the **provider**.



If the application EPG is configured as **provider**, you must configure the subnet that is already defined under the BD also under the EPG to leak that route into the L3Out VRF. The same flags that are used under the BD for the subnet should also be set under the EPG. In addition to that, for the subnet under the EPG the flag **No default SVI Gateway** should also be enabled, since the default gateway function is enabled at the BD level.

5. Assign the contract to the external EPG mapped to the L3Outs.
 - a. Select the **template-stretched** where the external EPG is located.
 - b. Select the external EPG.
 - c. In the right sidebar, click **+Contract**.
 - d. Select the contract that you created in previous section and its type.

If you chose the application EPG to be the **consumer**, choose **provider** for the external EPG. Otherwise, choose **consumer** for the external EPG.

6. Associate the application EPG's bridge domain with the L3Out.

This enables the BD subnet to be advertised out of the L3Out toward the external network domain. The subnet(s) associated to the BD must be configured with the **Advertised Externally** option to be advertised out of the L3Out

- a. In the left sidebar, under **Fabrics**, select the application EPG's template.
- b. Select the bridge domain associated with the application EPG.
- c. In the right sidebar, click **+L3Out**.
- d. Select the inter-fabric L3Out you created.

For the use case shown in Figure 1, associate the BD to both the L3Outs defined in Fabric 1 and Fabric 2 to ensure that the external network can have access to the EPG from both paths. Specific policies can be associated to the L3Out or to the external routers to ensure that a specific L3Out path is normally preferred for inbound traffic. We recommend this when the EPG and BD are local to a fabric (as in the specific example) to avoid suboptimal inbound traffic path through the remote fabric's L3Out.

7. Deploy the schema.

Inter-Fabric Transit Routing

Before you begin:

You must have the following already configured:

- External connectivity (L3Out) in each fabric, as described in the [External Connectivity \(L3Out\)](#) section.

In this use case, a separate L3Out will be imported or created in each fabric-specific template.

- A schema with three templates.

Create a template for each fabric (for example, **template-fabric1** and **template-fabric2**) where you configure the objects unique to that fabric, such as the application EPGs and the L3Outs. In addition, create a separate template (for example, `template-stretched``) that you use for the stretched objects, which in this case will be the external EPG.

- Two different external EPGs for two different L3Outs in different fabrics. You can use the same procedure to create both external EPGs, as described in [Configuring External EPG to Use Inter-Fabric L3Out](#).

- The contract that you use between the L3Out external EPGs defined in each fabric, as described in [Creating a Contract for Inter-Fabric L3Out](#).

We recommend creating the contract and the filter in the stretched template (**template-stretched**).

This section describes the use cases where the Multi-Fabric domain acts as a distributed router allowing communication between entities (endpoints, network devices, service nodes, and so forth) connected behind L3Outs deployed in different fabrics, a functionality normally saw as inter-fabric transit routing. The inter-fabric transit routing is supported for intra-VRF and inter-VRF use cases.

The figure below shows two L3Outs (**L3Out1** and **L3Out2**) configured in different fabrics. Each L3Out is associated with a respective external EPG (**External EPG1** and **External EPG2**). A contract between the two external EPGs allows communication between entities that are connected behind two different L3Outs in two different fabrics.

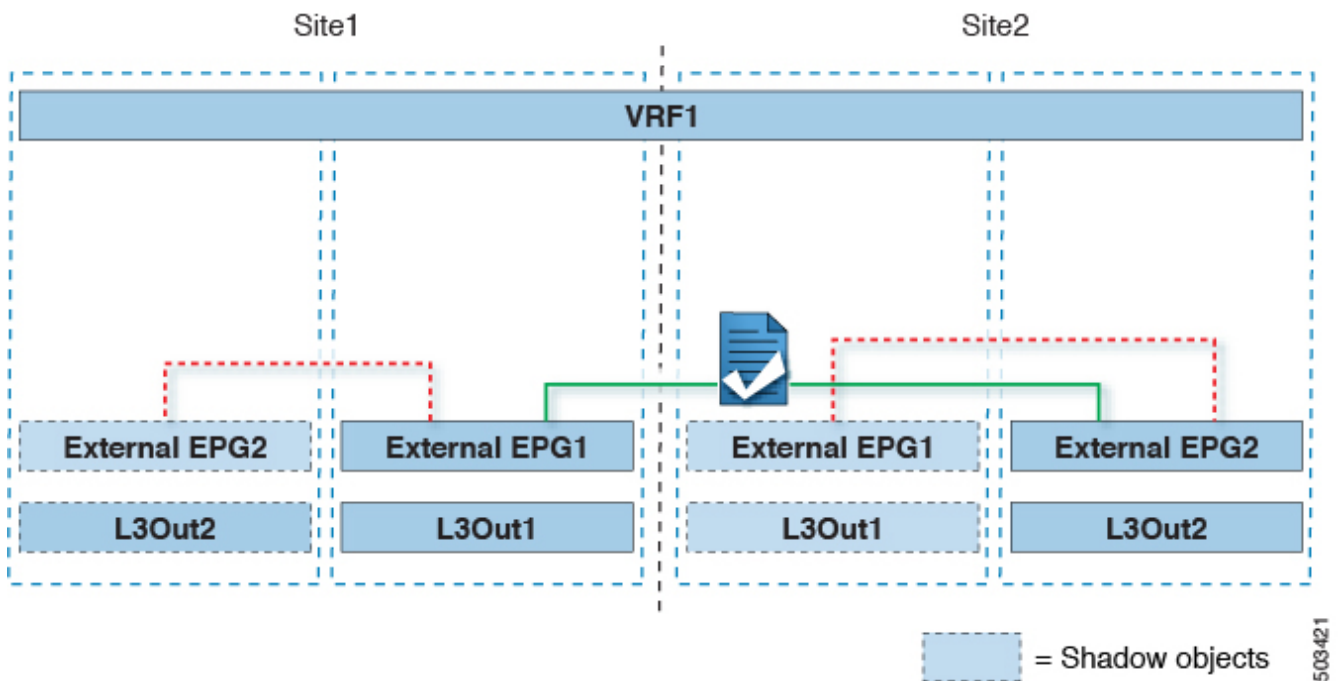


Figure 4. Intra-VRF Inter-Fabric Transit Routing

A similar configuration can be used when each fabric's L3Outs are in different VRFs.

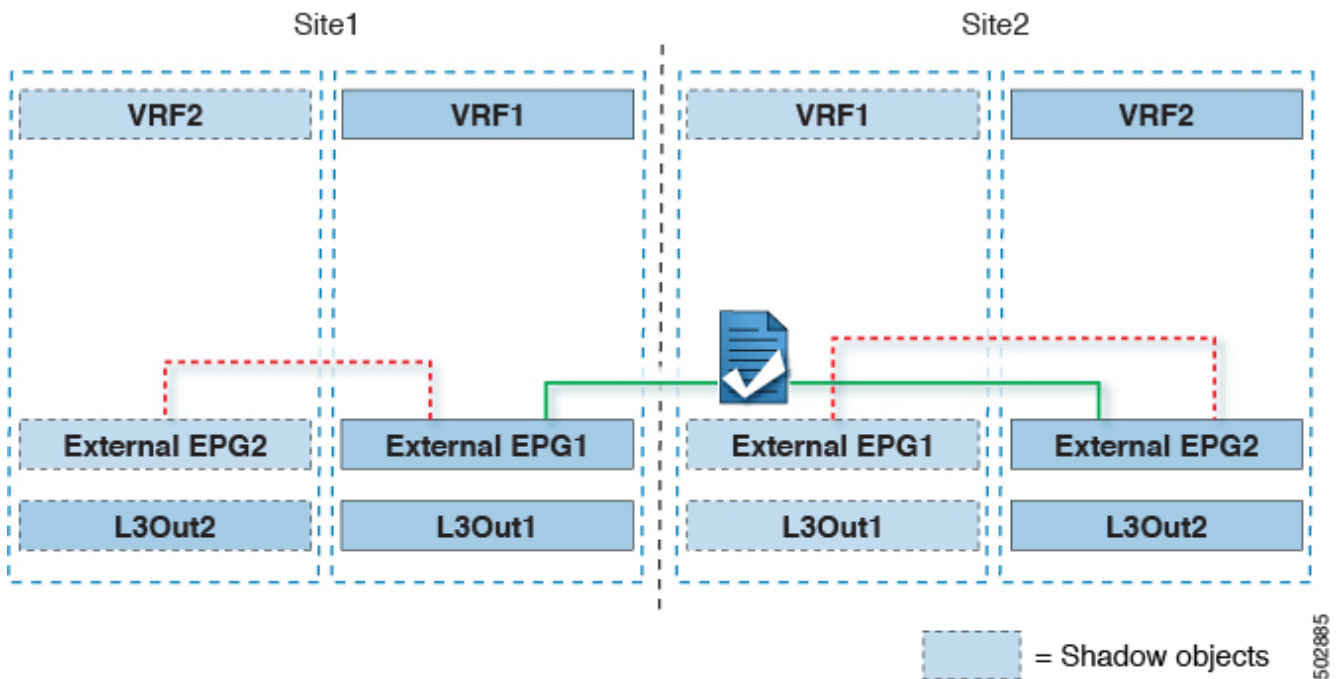


Figure 5. Inter-VRF Inter-Fabric Transit Routing

The figures above show the two scenarios where the external EPGs and associated L3Outs are deployed as fabric-local objects; inter-fabric transit routing can support all the combinations where neither external EPG is stretched, one of them is stretched, or both are stretched between fabrics.

When deploying inter-fabric transit routing, the assumption is that the different external EPGs defined across fabrics are providing access to different external address spaces (not overlapping). A couple of options are hence possible for the configuration of the prefix that is used for classification:

- Define the **0.0.0.0/0** prefix for one of the external EPGs and specific prefixes on the other.

The external prefixes that are received on **L3Out1** must be advertised out of **L3Out2** and conversely.

- Define specific prefixes for each external EPG. In this case, you must ensure that the prefixes are not overlapping to avoid a fault from being raised by the fabric's APIC when the shadow external EPG is created in that fabric for a contract between the local and remote external EPGs.

When using specific prefixes, the same prefixes that are configured for classification on **External EPG1** must be configured with the **Export Route Control** flag set on **External EPG2** and conversely.



No matter which of the two classifications approaches you deploy, for the inter-VRF scenario you must also set the **Shared Route Control** (in addition to **Aggregate Shared Routes** if using **0.0.0.0/0**) and the **Shared Security Import** flags.

1. Log in to your Cisco Nexus Dashboard Orchestrator.
2. From the left navigation pane, select **Configure > Tenant Template > ApplicationsSchemas**.
3. Assign the contract to one of the external EPGs.
 - a. Select the schema and template where the external EPG is located.
 - b. Select the external EPG.

- c. In the right sidebar, click **+Contract**.
- d. Select the contract that you created in previous section and its type.

Choose **consumer** or **provider**.

- 4. Assign the contract to the other external EPG.
 - a. Select the schema and template where the external EPG is located.
 - b. Browse to the template where the external EPG is located.
 - c. Select the external EPG.
 - d. In the right sidebar, click **+Contract**.
 - e. Select the contract that you created in previous section and its type.

Choose **provider** or **consumer**.

- 5. Deploy the templates to appropriate fabrics.
-

First Published: 2024-03-01

Last Modified: 2024-07-26

Americas Headquarters

Cisco Systems, Inc.

170 West Tasman Drive

San Jose, CA 95134-1706

USA

<http://www.cisco.com>

Tel: 408 526-4000

800 553-NETS (6387)

Fax: 408 527-0883