



LISP Router Configuration Commands

- [database-mapping \(LISP EID-table\)](#), on page 2
- [decapsulation filter rloc source](#), on page 8
- [eid-notify authentication-key](#), on page 10
- [eid-notify key](#), on page 12
- [eid-table](#), on page 14
- [locator-down](#), on page 18
- [locator-scope](#), on page 20
- [locator-table](#), on page 21
- [loc-reach-algorithm](#), on page 24
- [map-cache](#), on page 26
- [map-server rloc members distribute](#), on page 29
- [map-server rloc members modify-discovered](#), on page 30
- [other-xtr-probe](#), on page 32
- [rloc-prefix](#), on page 34
- [rtr-locator-set](#), on page 36
- [xtr instance-id](#), on page 38

database-mapping (LISP EID-table)

To configure an IPv4 or IPv6 endpoint identifier-to-routing locator (EID-to-RLOC) mapping relationship and an associated traffic policy for Locator/ID Separation Protocol (LISP), use the **database-mapping** command in LISP EID-table or LISP EID-table dynamic-EID configuration mode. To remove the configured database mapping, use the **no** form of this command.

```
database-mapping eid-prefix/prefix-length {{locator-address | ipv4-interface interface-name | ipv6-interface interface-name} priority priority weight weight [down]} | auto-discover-rlocs | locator-set locator-set-name}
no database-mapping eid-prefix/prefix-length [ipv4-interface interface-name | ipv6-interface interface-name | auto-discover-rlocs | locator-set]
```

Syntax Description

<i>eid-prefix/prefix-length</i>	IPv4 or IPv6 EID prefix and length to be advertised by the router.
<i>locator-address</i>	IPv4 or IPv6 routing locator (RLOC) associated with the value specified for the <i>eid-prefix/prefix-length</i> argument.
ipv4-interface <i>interface-name</i>	Specifies the IPv4 address and name of the interface to be used as the RLOC for the EID prefix.
ipv6-interface <i>interface-name</i>	Specifies the IPv6 address and name of the interface to be used as the RLOC for the EID prefix.
priority <i>priority</i>	Specifies the priority assigned to the RLOC. Range is from 0 to 255.
weight <i>weight</i>	Specifies the weight assigned to the locator. Range is from 0 to 100.
down	(Optional) Configures the database mapping down.
auto-discover-rlocs	Configures the Egress Tunnel Router (ETR) to discover the locators of all other routers configured to function as both an ETR and an Ingress Tunnel Router (ITR) - such routers are referred to as xTRs - in the LISP site when the site uses multiple xTRs and each xTR can only be configured to refer indirectly to its own local locator, such as in the case where all xTRs obtain their locator address dynamically (e.g. via DHCP).
locator-set <i>locator-set-name</i>	Uses locators defined by the specified locator-set.

Command Default

No LISP database entries are defined.

Command Modes

LISP EID-table configuration (config-router-lisp-eid-table)

LISP EID-table dynamic-EID (config-router-lisp-eid-table-dynamic-eid)



Note The EID-table dynamic-EID command mode only supports the locator-set option for configuring RLOCs and its associated policies.

Command History

Release	Modification
Cisco IOS 15.1(1)XB	This command was introduced.
Cisco IOS 15.1(4)M	This command was modified. Support for this command was removed at the global configuration level and added for LISP configuration mode. Also, the ip , ipv6 , and lisp keywords were removed from the command syntax.
Cisco IOS XE 3.3S	This command was modified. Support for this command was removed at the global configuration level and added for LISP configuration mode. Also, the ip , ipv6 , and lisp keywords were removed from the command syntax.
Cisco IOS 15.2(3)T	This command was modified to permit up to 100 database-mapping entries per site.
Cisco IOS XE 3.6S	This command was modified to permit up to 100 database-mapping entries per site.
Cisco IOS 15.3(1)T	This command was modified and support was added for the LISP EID-table dynamic-EID configuration mode.
Cisco IOS XE 3.8S	This command was modified and support was added for the LISP EID-table dynamic-EID configuration mode.
Cisco IOS 15.3(1)S	This command was modified. The down keyword was added.

Usage Guidelines

This command configures the LISP database parameters for a specified IPv4 or IPv6 EID-prefix block. Parameters for each IPv4 or IPv6 EID-prefix block include the associated locator, priority, and weight. The IPv4 or IPv6 address specified in the *eid-prefix/prefix-length* argument of the command syntax is the LISP IPv4 or IPv6 EID-prefix block associated with the site.

Typically, the device registers as being authoritative with a map server. The locator is typically the IPv4 or IPv6 address of any interface used as the RLOC address for the EID prefix assigned to the site but can also be the IPv4 or IPv6 address of a loopback interface. Priority and weight values are associated with the locator address to define traffic policies when multiple RLOCs are defined for the same EID-prefix block.

When a device is configured as an ETR, the LISP **database-mapping** parameters are advertised within a map-reply message to indicate the EID-prefix block and ingress traffic preferences of the site. An ITR then selects a destination locator (outer header) address for encapsulating packets destined to the EID prefix based on these advertised parameters.



Note When LISP is configured for virtualization, multitenancy can be achieved by associating a LISP instance ID with a virtual routing and forwarding (VRF) table. The **database-mapping** command is configured after entering the **eid-table** command in LISP configuration mode so that the subsequent **database-mapping** entries are associated with the appropriate LISP instance ID specified in the **eid-table** command. Additional details on this usage of the **database-mapping** command with instance IDs can be found on the **eid-table** command page.

When a LISP site has multiple locators associated with the same EID-prefix block, multiple **database-mapping** commands are used to configure all of the locators for a given EID-prefix block. Each locator may be assigned the same or a different priority value from 0 to 255. When multiple locators are assigned different priority values, the priority value alone is used to determine which locator to prefer. A lower value indicates a more

preferable path. A value of 255 indicates that the locator must not be used for unicast traffic forwarding. When multiple locators have the same priority, they can be used in a load-sharing manner.

In this case, for a given priority, the weight given to each locator is used to determine how to load-balance unicast packets between them. Weight is a value between 0 and 100 and represents the percentage of traffic to be load-shared to that locator. If a nonzero weight value is assigned to any locator for a given EID-prefix block, then all locators with the same priority for that same EID-prefix block must also be assigned a nonzero weight value. If a weight value of zero is assigned to any locator for a given EID-prefix block, then all locators with the same priority for that same EID-prefix block must also be assigned a weight value of zero. A weight value of zero indicates to an ITR receiving the map reply that it may decide how to load-share traffic destined to that EID-prefix block.

When a LISP site is assigned multiple IPv4 or IPv6 EID-prefix blocks, database mapping is configured for each IPv4 or IPv6 EID-prefix block assigned to the site and for each locator by which the IPv4 or IPv6 EID-prefix block is reachable.



Note Prior to Cisco IOS Release 15.2(3)T and Cisco IOS XE Release 3.6S, a maximum of 10 database-mapping entries were permitted per site. Beginning with Cisco IOS Release 15.2(3)T and Cisco IOS XE Release 3.6S, this limit has been raised to 100 database-mapping entries.

When multiple ETRs are used at a LISP site, the **database-mapping** command must be configured on all ETRs for all locators by which an IPv4 or IPv6 EID-prefix block is reachable, even when the locator is not local to the specific ETR being configured. For example, if a site uses two ETRs and each has a single locator, both ETRs must be configured with the **database-mapping** command for the assigned IPv4 or IPv6 EID-prefix block for its own locator as well as the locator of the other ETR. That is, all ETRs will have identical **database-mapping** command configurations.

When the IPv4 or IPv6 address of an interface to be used as a routing locator is determined dynamically, such as by DHCP, you must specify the name of the interface that will be used as the locator rather than directly configuring the IP address. In this case, use the **ipv4-interface** *interface-name* or **ipv6-interface** *interface-name* keyword-argument pair of the **database-mapping** command to configure the appropriate RLOC.

When multiple ETRs are used at a LISP site, you must configure consistent **database-mapping** commands on all ETRs for all locators—including those local and not local to each ETR. To accomplish this when the **database-mapping** *eid-prefix/prefix-length* **ipv4-interface** *interface-name* or **ipv6-interface** *interface-name* form of the **database-mapping** command is configured for local locators, the **database-mapping** *eid-prefix/prefix-length* **auto-discover-rlocs** form of the command must be used to indicate that other ETRs within the same LISP site also have dynamic locators. Configuring the **auto-discover-rlocs** keyword signals to the map server that it should merge all locators for the associated EID prefixes within map-register messages it receives from all of the ETRs within a LISP site and send the merged locator set back to all registering ETRs via a map-notify message.



Note To reduce the configuration length and complexity when a LISP site contains multiple xTRs, configure the **auto-discover-rlocs** form of the **database-mapping** command (even when static addresses are used for local locators).

When the optional **down** keyword is used with the **database-mapping** command, the priority value of the specified locator is set to 255 in registrations to the mapping system as well as in advertised mapping records

to indicate to remote sites that the locator is down. Using the "down" option eliminates the need to change the priority configuration (to 255) of the same database-mapping command.

Examples

The following example shows how to enter LISP EID table configuration mode and configure the **database-mapping** command with the EID prefix 172.16.91.0/24, using the IPV4 address from interface gigabitEthernet 0/0 as its locator, and with priority 1 weight 100 as a policy:

```
Device> enable
Device# configure terminal
Device(config)# router lisp
Device(config-router-lisp)# eid-table default instance-id 0
Device(config-router-lisp-eid-table)# database-mapping 172.16.91.0/24 ipv4-interface
gigabitEthernet 0/0 priority 1 weight 100
```

The following example shows how to enter LISP EID-table dynamic-EID configuration mode and configure the **database-mapping** command with the EID prefix 192.168.5.0/24, using the locator(s) defined by the locator-set 'LOCS':

```
Device> enable
Device# configure terminal
Device(config)# router lisp
Device(config-router-lisp)# locator-set LOCS
Device(config-router-lisp-locator-set)# ipv4-interface Ethernet 0/0 priority 1 weight 100
Device(config-router-lisp-locator-set)# exit
Device(config-router-lisp)# eid-table default instance-id 0
Device(config-router-lisp-eid-table)# dynamic-eid MOVER
Device(config-router-lisp-eid-table-dynamic-eid)# database-mapping 192.168.5.0/24 locator-set
LOCS
```

The following example shows how to configure LISP database-mapping entries for a single IPv4 EID-prefix block with two IPv4 locators. It also shows how to configure a single IPv6 EID-prefix block and the same two IPv4 locators. Each locator is assigned the same priority (1) and weight (50), indicating that ingress traffic is expected to be load-shared equally across both paths. In this example, both IPv4 and IPv6 EIDs are reachable via IPv4 locators.

```
Device(config)# router lisp
Device(config-router-lisp)# eid-table default instance-id 0
Device(config-router-lisp-eid-table)# database-mapping 172.16.91.0/24 10.1.1.1 priority 1
weight 50
Device(config-router-lisp-eid-table)# database-mapping 172.16.91.0/24 10.2.1.1 priority 1
weight 50
Device(config-router-lisp-eid-table)# database-mapping 2001:DB8:BB::/48 10.1.1.1 priority
1 weight 50
Device(config-router-lisp-eid-table)# database-mapping 2001:DB8:BB::/48 10.2.1.1 priority
1 weight 50
```

The following example shows how to configure LISP database-mapping entries for a single IPv4 EID-prefix block with the IPv4 addresses from Gigabit Ethernet interface 0/0/0 referenced as the RLOC:

```
Device(config)# router lisp
Device(config-router-lisp)# eid-table default instance-id 0
Device(config-router-lisp-eid-table)# database-mapping 172.16.91.0/24 ipv4-interface
GigabitEthernet0/0/0 priority 1 weight 100
```

The following example shows how to configure database-mapping entries for two xTRs (xTR-1 and xTR-2) at a LISP site. Both xTRs have a single database-mapping entry for a single IPv6 EID-prefix block with the IPv4 addresses from Gigabit Ethernet interface 0/0/0 referenced as the RLOC. In this case, because both xTRs use dynamically determined locator addresses, the **auto-discover-rlocs** form of the command is also added to indicate to the map server that it should merge the locators and send the merged locator set back to the xTRs via map-notify messages.

Configuration on xTR-1

```
Device(config)# router lisp
Device(config-router-lisp)# eid-table default instance-id 0
Device(config-router-lisp-eid-table)# database-mapping 2001:db8:a::/48 ipv4-interface
GigabitEthernet0/0/0 priority 1 weight 50
Device(config-router-lisp-eid-table)# database-mapping 2001:db8:a::/48 auto-discover-rlocs
```

Configuration on xTR-2

```
Device(config)# router lisp
Device(config-router-lisp)# eid-table default instance-id 0
Device(config-router-lisp-eid-table)# database-mapping 2001:db8:a::/48 ipv4-interface
GigabitEthernet0/0/0 priority 1 weight 50
Device(config-router-lisp-eid-table)# database-mapping 2001:db8:a::/48 auto-discover-rlocs
```

Verification on xTR-2

```
Device# show ipv6 lisp database
LISP ETR IPv6 Mapping Database for EID-table default (IID 0), LSBs: 0x3, 1 entries
```

```
Device# 2001:db8:a::/48, auto-discover-rlocs
Locator  Pri/Wgt  Source      State
10.7.6.6    1/1  cfg-addr   site-self, reachable
10.7.7.7    1/1  auto-disc  site-other, report-reachable
xTR-2#
```

Related Commands

Command	Description
database-mapping (LISP dynamic-EID)	Configures an IPv4 mapping relationship and an associated traffic policy for LISP VM (dynamic-EID) policy.
eid-table	Configures a LISP instance ID for association with a VRF table or default table through which the EID address space is reachable.
ipv4 etr map-server	Configures the IPv4 or IPv6 locator address of the LISP map server to be used by the ETR when registering for IPv4 EIDs.

Command	Description
ipv6 etr map-server	Configures the IPv4 or IPv6 locator address of the LISP map server to be used by the ETR when registering for IPv6 EIDs.
locator-down	Configures a locator from a locator set, associated with an IPv4 or IPv6 EID-prefix database-mapping, to be unreachable (down).
map-cache	Configures a static IPv4 or IPv6 EID-to-RLOC mapping relationship and its associated traffic policy or statically configures the packet handling behavior associated with a specified destination IPv4 or IPv6 EID prefix.
other-xtr-probe	Configures the interval, in seconds, that an xTR probes site-local RLOCs.

decapsulation filter rloc source

To enable source Routing Locator (RLOC) address validation of Locator/ID Separation Protocol (LISP)-encapsulated packets, use the **decapsulation filter rloc source** command in LISP configuration mode. To disable source RLOC address validation of LISP packets, use the **no** form of the command.

decapsulation filter rloc source { [**locator-set** *locator-set-name*] [**member**] }
no decapsulation filter rloc source

Syntax Description	locator-set <i>locator-set-name</i>	Specifies the RLOCs associated with the proxy ingress tunnel routers (PITRs) or other LISP encapsulation sources that should be included within a decapsulation filter list.
	member	Specifies that the registered RLOC membership list be automatically obtained from the Map-Server.
	Note	You can use both the options (locator-set <i>locator-set-name</i> and member) together or individually.

Command Default Source RLOC address validation of LISP packets is disabled.

Command Modes LISP configuration (config-router-lisp)

Command History	Release	Modification
	15.5(1)T	This command was introduced.
	Cisco IOS XE Release 3.14S	This command was integrated into Cisco IOS XE Release 3.14S.

Usage Guidelines Configure this command on an xTR or a PxTR to enable LISP decapsulation filtering. When enabled, the source RLOC addresses of incoming LISP packets are validated against the 'member' filter list. RLOCs that match the filter list are decapsulated while those that do not are dropped. When the **member** keyword is used, the registered RLOC membership list will be automatically obtained from the Map-Server. When the **locator-set** *locator-set-name* keyword-argument pair is used, the prefixes named in the locator-set are used, if included alone, or added to the (downloaded) dynamic list when used in conjunction with the **member** keyword. Typically, this option is used to add PITRs which do not register with a Map-Server and are thus not automatically included in the registered RLOC membership list.

Example

The following example shows how to enable source RLOC address validation of LISP packets on an xTR or PxTR:

```
Device> enable
Device# configure terminal
Device(config)# router lisp
Device(config-router-lisp)# decapsulation filter rloc source member
Device(config-router-lisp)# exit
```


Related Commands

Command	Description
router lisp	Enters LISP configuration mode and configures LISP commands on a device.

eid-notify authentication-key

To specify an authentication key to validate the endpoint identifier (EID)-notify messages received from a device, use the **eid-notify authentication-key** command in Locator/ID Separation Protocol (LISP) EID-table dynamic-EID configuration mode. To remove the specified authentication key, use the **no** form of the command.

eid-notify authentication-key {**0** *unencrypted-password* | **6** *encrypted-password* | *password*}
no **eid-notify authentication-key**

Syntax Description	authentication-key	Specifies the authentication key used to validate EID-notify messages received from a device.
	0 <i>unencrypted-password</i>	Specifies that the password is in unencrypted form.
	6 <i>encrypted-password</i>	Specifies that the password is in encrypted form.
	<i>password</i>	Specifies that the password is unencrypted and in a cleartext format.

Command Default No authentication key is specified to validate the EID-notify messages received from a device.

Command Modes LISP EID-table dynamic-EID (config-router-lisp-eid-table-dynamic-eid)

Command History	Release	Modification
	15.4(1)T	This command was introduced.
	Cisco IOS XE Release 3.11S	This command was integrated into Cisco IOS XE Release 3.11S.

Usage Guidelines Use the **eid-notify authentication-key** command to specify an authentication key that the site gateway uses to authenticate endpoint identifier (EID)-notify messages that are received from a device. This command is configured on a site gateway device. A device that functions both as an ingress tunnel router (ITR) and egress tunnel router (ETR) is known as an xTR .

After the site gateway xTR authenticates an EID-notify message for a particular host discovery and if a different LISP device registers the same host later, as in the case of a virtual machine (VM) move, the site gateway xTR sends a unicast map-notify control plane message to the original first-hop router (FHR) to signal the change in host location.

Example

The following example shows how to specify an unencrypted authentication key k:

```
Device> enable
Device# configure terminal
Device(config)# router lisp
Device(config-router-lisp)# eid-table default instance-id 0
Device(config-router-lisp-eid-table)# dynamic-eid VMs
Device(config-router-lisp-eid-table-dynamic-eid)# eid-notify authentication-key 0 k
```

Related Commands

Command	Description
dynamic-eid	Configures a LISP VM-mobility (dynamic-EID roaming) policy.
eid-table	Configures a LISP instance ID for association with a VRF table or default table through which the EID address space is reachable.
router lisp	Enters LISP configuration mode and configures LISP commands on a device.

eid-notify key

To enable sending of dynamic endpoint identifier (EID) presence notifications to a gateway xTR with the specified IPv4/IPv6 address along with the authentication key used with the gateway xTR, use the **eid-notify key** command in Locator/ID Separation Protocol (LISP) EID-table dynamic-EID configuration mode. To disable the configured options, use the **no** form of the command.

```
eid-notify {ipv4-address | ipv6-address} key {0 unencrypted-password | 6 encrypted-password | password} [hash-function {sha1 | sha2}]
no eid-notify [{ipv4-address | ipv6-address} [key]]
```

Syntax Description		
	<i>ipv4-address</i>	Specifies the IPv4 address of gateway xTR.
	<i>ipv6-address</i>	Specifies the IPv6 address of gateway xTR.
	key	Specifies the authentication-key used with gateway xTR.
	0 <i>unencrypted-password</i>	Specifies that the password is in unencrypted form.
	6 <i>encrypted-password</i>	Specifies that the password is in encrypted form.
	<i>password</i>	Specifies that the password is unencrypted and in a cleartext format.
	hash-function	Specifies the authentication type for the EID-notify message.
	sha1	Specifies the usage of SHA-1-96 hash function.
	sha2	Specifies the usage of SHA-256-128 hash function.

Command Default No dynamic EID presence notifications are sent to the gateway xTR.

Command Modes LISP EID-table dynamic-EID (config-router-lisp-eid-table-dynamic-eid)

Command History	Release	Modification
	15.4(1)T	This command was introduced.
	Cisco IOS XE Release 3.11S	This command was integrated into Cisco IOS XE Release 3.11S.

Usage Guidelines

Use the **eid-notify key** command to configure a site gateway xTR on a first-hop router (FHR). This ensures that an EID-notify message is sent to the site-gateway xTR upon the discovery of a host. A device that functions both as an ingress tunnel router (ITR) and an egress tunnel router (ETR) is known as an xTR. The key is specific to a site gateway xTR.

The EID-notify message is a special map-notify control plane message that uses the ipv4-address or ipv6-address as the destination IP address that is specified using the **eid-notify key** command and any of the specified locator-set entries as the source IP address that is configured using the **database-mapping dynamic-eid-prefix/prefix-length locator-set name** command in LISP EID table dynamic EID configuration mode.

Example

```
Device> enable
Device# configure terminal
Device(config)# router lisp
Device(config-router-lisp)# eid-table default instance-id 0
Device(config-router-lisp-eid-table)# dynamic-eid VMs
Device(config-router-lisp-eid-table-dynamic-eid)# eid-notify 192.0.2.21 key 0 k
Device(config-router-lisp-eid-table-dynamic-eid)# eid-notify 2001:DB8::1 key 0 k
```

Related Commands

Command	Description
database-mapping	Configures an IPv4 or IPv6 EID-to-RLOC mapping relationship and an associated traffic policy for LISP.
dynamic-eid	Configures a LISP VM-mobility (dynamic-EID roaming) policy.
eid-table	Configures a LISP instance ID for association with a VRF table or default table through which the EID address space is reachable.
router lisp	Enters LISP configuration mode and configures LISP commands on a router.

eid-table

To configure a Locator ID Separation Protocol (LISP) instance ID for association with a virtual routing and forwarding (VRF) table or default table through which the endpoint identifier (EID) address space is reachable, use the **eid-table** command in LISP configuration mode. To remove this association, use the **no** form of this command.

```
eid-table{default | vrf vrf-name}instance-id iid
no eid-table{default | vrf vrf-name}instance-id iid
```

Syntax Description

default	Selects the default (global) routing table for association with the configured instance ID.
vrf <i>vrf-name</i>	Selects the specified VRF table for association with the configured instance ID.
instance-id <i>iid</i>	Specifies the instance ID to be associated with this EID table (value between 0 and 16777215).

Command Default

A router configured for LISP associates the default table with instance ID 0.

Command Modes

LISP configuration (config-router-lisp)

Command History

Release	Modification
15.1(1)XB3	The command eid-table was introduced to support LISP virtualization.
2.5.1XC	The command eid-table was introduced to support LISP virtualization.
15.1(4)XB4	The syntax of this command was modified.
15.2(3)T	This command was integrated into Cisco IOS Release 15.2(3)T.
Cisco IOS XE Release 3.6S	This command was integrated into Cisco IOS XE Release 3.6S.

Usage Guidelines

The **eid-table** command is used to associate a LISP instance ID with either the default routing table, or a VRF table through which its EID address space is reachable. When a LISP instance ID is specified, LISP Map Registration (control plane) messages include this instance ID along with the associated EID prefixes upon registering and LISP data plane packets include this instance ID in the LISP header.

LISP virtualization can be used to support multiple organizations within a LISP site, also known as multitenancy. For example, this may be useful when multiple organizations use private addresses [RFC1918] as EID-prefixes and where these addresses might be duplicated between organizations, or when segmentation of a customer traffic virtual private network (VPN) in general is required. Adding a LISP instance ID in the address encoding makes the entire address unique, thus preventing duplication and providing segmentation. Multiple segments can be created inside a LISP site by associating a LISP instance ID with the specific VRF tables used for these VPNs.



Note When LISP is configured without virtualization, the **eid-table** command is not required and all LISP commands are simply entered directly under the **router lisp** command. The **eid-table** command is only required for configuring LISP virtualization. However, the **eid-table** command may be used even when LISP is configured without virtualization by using the **eid-table default instance-id 0** command form. When this form of the **eid-table** command is used, the **default** keyword can be used only with the **instance-id 0** keywords when other instance IDs are specified.

When an instance ID is configured on any LISP device, the same instance ID must be configured on all other LISP devices participating in the same virtualized LISP environment. For example, when an instance ID is configured on an xTR, this instance ID is included with the EID prefixes during registration with the map server. The map server must therefore also be configured to use the same instance ID within the EID prefix configurations for this LISP site in order for the registration to succeed. (A LISP instance ID is configured on the map server using the **eid-prefix** command within LISP site configuration mode.)

When considering LISP deployments, especially with virtualization, the following guidelines may be helpful in understanding the configuration:

- When LISP is first configured by entering the **router lisp** command to begin the configuration process, all LISP subcommands (for example, **database-mapping**, **map-cache**, **ipv4 map-resolver**, and **ipv4 map-server**) are available for entry and are applied directly in LISP router configuration mode and without considering virtualization. You will notice in the output of the **show ip lisp** command that **instance-id 0** is indicated even though the **eid-table** command was not configured and that the **show running-config** output does not indicate that the command **eid-table** has been configured. That is, all LISP commands appear directly below **router lisp**.
- Upon entering the **eid-table** command for the first time, any existing **database-mapping**, **map-cache**, or **alt-vrf** configurations previously configured directly under **router lisp** will automatically be moved underneath and associated with **eid-table default instance-id 0**. All subsequent entries of **database-mapping** or **map-cache** configurations can only then be made from within a specific **eid-table** command. LISP commands that can be associated on a global or virtual basis (for example, **ipv4 map-resolver** and **ipv4 map-server** commands) can be entered either directly under the **router lisp** command, in which case they are inherited by all configured **eid-tables**, or within a specific **eid-table**, in which case their scope extends only to that specific instance.



Note When the **eid-table vrf vrf-name** command is used, the referenced VRF must already be created using the **vrf definition** command and at least one address family must be enabled within that VRF.

Examples

In the example below, an xTR is configured to segment traffic using two VRFs named **green** and **blue**. In addition, the loopback interface is configured for management purposes using the default table. Thus the management loopback is carried in the default table in instance ID 0, the EID prefix associated with the VRF named green is connected to instance ID **123**, and the EID prefixes associated with the VRF named blue is connected to instance ID **456**.

```
Router(config)# vrf definition blue
Router(config-vrf)# address-family ipv4
Router(config-vrf-af)# exit
Router(config-vrf)# vrf definition green
```

```

Router(config-vrf)# address-family ipv4
Router(config-vrf-af)# exit
Router(config-vrf)# exit
Router(config)# router lisp
Router(config-router-lisp)# eid-table default instance-id 0
Router(config-router-lisp-eid-table)# database-mapping 10.1.1.1/32 172.1.0.2 priority 1
weight 100
Router(config-router-lisp-eid-table)# exit
Router(config-router-lisp)# eid-table vrf green instance-id 123
Router(config-router-lisp-eid-table)# database-mapping 192.168.1.0/24 172.1.0.2 priority 1
weight 100
Router(config-router-lisp-eid-table)# exit
Router(config-router-lisp)# eid-table vrf blue instance-id 456
Router(config-router-lisp-eid-table)# database-mapping 192.168.2.0/24 172.1.0.2 priority 1
weight 100

```

In this example, the map resolver/map server (MR/MS) site functionality is configured to match the example above.

```

Router(config)# router lisp
Router(config-router-lisp)# site Site-1
Router(config-router-lisp-site)# authentication-key secret
Router(config-router-lisp-site)# eid-prefix 10.1.1.1/32
Router(config-router-lisp-site)# eid-prefix instance-id 123 192.168.1.0/24
Router(config-router-lisp-site)# eid-prefix instance-id 456 192.168.2.0/24
Router(config-router-lisp-site)# exit

```

Related Commands

Command	Description
database-mapping	Configures an IPv4 or IPv6 EID-to-RLOC mapping relationship and an associated traffic policy for LISP.
eid-prefix	Configures a list of EID prefixes that are allowed in a Map Register message sent by an ETR when registering to the map server.
ipv4 map-resolver	Configures a router to act as an IPv4 LISP map resolver.
ipv4 map-server	Configures a router to act as an IPv4 LISP map server.
map-cache	Configures a static IPv4 or IPv6 EID-to-RLOC mapping relationship and its associated traffic policy or statically configures the packet handling behavior associated with a specified destination IPv4 or IPv6 EID prefix.

Command	Description
router lisp	Enters LISP configuration mode and configures LISP commands on a router.
show ip lisp	Displays the IPv4 LISP configuration status.
vrf definition	Configures a VRF routing table instance and enters VRF configuration mode.

locator-down

To configure a locator from a locator set, associated with an IPv4 or IPv6 EID-prefix database-mapping, to be unreachable (down), use the **locator-down** command in Locator ID Separation Protocol (LISP) configuration mode. To return the locator to reachable (up) status, use the **no** form of this command.

locator-down {*locator-address* | **ipv4-interface** *interface-name* | **ipv6-interface** *interface-name*}
no locator-down {*locator-address* | **ipv4-interface** *interface-name* | **ipv6-interface** *interface-name*}

Syntax Description

<i>locator-address</i>	The IPv4 or IPv6 locator address to be set down.
ipv4-interface <i>interface-name</i>	Specifies the IPv4 address and name of the interface to be used as the RLOC for the EID prefix.
ipv6-interface <i>interface-name</i>	Specifies the IPv6 address and name of the interface to be used as the RLOC for the EID prefix.

Command Default

This command is not configured by default.

Command Modes

LISP configuration (config-router-lisp)

Command History

Release	Modification
Cisco IOS 15.1(1)XB	This command was introduced.
Cisco IOS XE 2.5.1XA	This command was integrated into Cisco IOS XE Release 2.5.1XA.
Cisco IOS XE 3.3.0S	This command was modified. Support for this command was removed at the global configuration level and added for LISP configuration mode. Also, the ip , ipv6 , and lisp keywords were removed from the command syntax.
Cisco IOS 15.1(4)M	This command was modified. Support for this command was removed at the global configuration level and added for LISP configuration mode. Also, the ip , ipv6 , and lisp keywords were removed from the command syntax.

Usage Guidelines

When LISP database parameters are configured on an Egress Tunnel Router (ETR) for specified IPv4 or IPv6 EID-prefix blocks using the **database-mapping** command, the locator (or locators) associated with these IPv4 or IPv6 EID-prefix blocks is considered as reachable (up) by default, assuming that: (1) it corresponds to a local interface on the box that is not shut, or (2) it corresponds to a locator addresses on another xTR of the same site that and that locator is up and reachable via local site routing. The locator-down command can be used to configure a locator associated with the EID-prefix database mapping, to be administratively down.

When this command is configured, the locator status bits (LSBs) for the configured locator are cleared when packets are encapsulated and sent to remote sites. The egress tunnel routers (ETRs) at remote sites look for changes in the LSBs when decapsulating LISP packets. When the LSBs indicate that a specific locator is down, the ETR does not encapsulate packets using this locator to reach the local site.



Note If this command is configured on an ETR to indicate that a locator is unreachable (down) and the LISP site includes multiple ETRs, this command must be configured on all ETRs at the site to ensure that the site consistently tells remote sites that the configured locator is not reachable.

Examples

The following example shows how to configure the IPv4 locator address 172.16.1.1 to a down state:

```
Device> enable
Device# configure terminal
Device(config)# router lisp
Device(config-router-lisp)# locator-down 172.16.1.1
Device(config-router-lisp)# end
```

The following example shows how to configure the IPv6 locator address 2001:DB8:BB::1 to a down state:

```
Device> enable
Device# configure terminal
Device(config)# router lisp
Device(config-router-lisp)# locator-down 2001:DB8:BB::1
Device(config-router-lisp)# end
```

The following example shows how to configure the gigabitEthernet 0/0 interface of the IPv4-interface to a down state:

```
Device> enable
Device# configure terminal
Device(config)# router lisp
Device(config-router-lisp)# locator-down ipv4-interface gigabitEthernet 0/0
Device(config-router-lisp)# end
```

Related Commands

Command	Description
database-mapping	Configures an IPv6 EID-to-RLOC mapping relationship and its associated traffic policy.
ipv4 itr	Configures the router to act as an IPv4 LISP ITR.
map-cache	Configures a static IPv4 or IPv6 EID prefix to a locator map-cache entry.

locator-scope

To specify a locator scope and enter Locator/ID Separation Protocol (LISP) locator scope configuration mode, use the **locator-scope** command in LISP configuration mode. To remove the specified locator scope, use the **no** form of the command.

locator-scope *locator-scope-name*
no locator-scope *locator-scope-name*

Syntax Description	<i>locator-scope-name</i> Specifies the name of the locator-scope.
---------------------------	--

Command Default	No locator-scope is specified.
------------------------	--------------------------------

Command Modes	LISP configuration (config-router-lisp)
----------------------	---

Command History	Release	Modification
	15.4(1)T	This command was introduced.
	Cisco IOS XE Release 3.11S	This command was integrated into Cisco IOS XE Release 3.11S.

Usage Guidelines	Use the locator-scope command to specify the locator scope name and to define the disjointed routing locator (RLOC) scopes. The map server will consider disjointed RLOCs in its map-request message only if the locator scopes are configured.
-------------------------	--

Example

The following example shows how to configure a locator scope:

```
Device> enable
Device# configure terminal
Device(config)# router lisp
Device(config-router-lisp)# locator-scope s2
```

Related Commands	Command	Description
	rloc-prefix	Specifies an RLOC prefix to check against the ITR RLOC and the ETR RLOC.
	router lisp	Enters LISP configuration mode and configures LISP commands on a router.
	rtr-locator-set	Specifies a locator-set of RTR RLOCs.

locator-table

To associate a virtual routing and forwarding (VRF) table through which the routing locator address space is reachable to a router Locator ID Separation Protocol (LISP) instantiation, use the **locator-table** command in LISP configuration mode. To remove this association, use the **no** form of this command.

locator-table {**default** | **vrf** *vrf-name*}
no locator-table

Syntax Description	default	Selects the default (global) routing table for association with the routing locator address space.
	vrf <i>vrf-name</i>	Selects the routing table for the specified VRF name for association with the routing locator address space.

Command Default A router LISP instantiation is associated with the default (global) routing table.

Command Modes LISP configuration (config-router-lisp)

Command History	Release	Modification
	15.1(4)XB6	This command was introduced.
	15.2(3)T	This command was integrated into Cisco IOS Release 15.2(3)T.
	XE 3.6S	This command was integrated into Cisco IOS XE Release 3.6S.

Usage Guidelines

When a LISP device is deployed in a multitenant (virtualized) network environment with segmented routing locator (RLOC) address space, separate router LISP instantiations are required for each locator address space. Separate instantiations are created by including the optional *id* entry with the **router lisp** command. Each router LISP instantiation is considered to be standalone and must be associated with an RLOC address space. The **locator-table** command is used to associate a VRF table through which the routing locator address space is reachable to a router LISP instantiation. All necessary LISP components used in the operation of that particular router LISP instantiation, (for example, map server, map resolver, proxy ingress tunnel router (PITR), proxy egress tunnel router (PETR), and other routers that function as both egress and ingress tunnel routers, also known as xTRs) must be reachable via the routing locator address space referred to by the **locator-table** command.



Note Most multitenant deployments will not require separate locator forwarding tables. As with most current virtualization schemes, LISP endpoint ID (EID) virtualization (configured using the **eid-table instance-id** keywords) does not require locators and map-resolver/map-server (MR/MS) devices to exist in a VRF.

The following guidelines may be helpful in understanding the use of the **locator-table** command when RLOC address space virtualization is configured.

Router LISP instantiations are configured:

- When a router LISP instantiation is created without using the optional ID entry or when using the optional ID entry with a value of 0 (that is, **router lisp 0**), and no locator table is specified using the **locator-table**

command. That particular router LISP instantiation then automatically uses the default (global) routing table as its RLOC or locator table. All locators, map resolvers, map servers, PETRs, PITRs, and other LISP devices must be reachable via the default routing table.

- When a router LISP instantiation is created using an optional ID entry other than 0, a locator table must be specified using the **locator-table** command. That particular router LISP instantiation then uses the routing table (default or VRF) referenced by the **locator-table** command and all locators, map resolvers, map servers, PETRs, PITRs, and other LISP devices must be reachable via a specified routing table.
- Only a single **locator-table** command can be configured per router LISP instantiation. Within each router LISP instantiation, multiple EID table instances may be configured, as necessary, to associate all EID address space with that routing locator addresses space.
- When a router LISP instantiation is created, it can only use a routing locator address space that has not already previously been assigned to another router LISP instantiation. That is, the default (global) routing table or any single VRF table referenced by a **locator-table** command can only be assigned within a single router LISP instantiation. Likewise, endpoint identifier (EID) address space referenced by the **eid-table** command can only be associated with a single router LISP instantiation.



Note When the **locator-table vrf vrf-name** command is used, the referenced VRF must already have been created using the **vrf definition** command, and at least one address family must be enabled within that VRF.

Examples

The following example shows a LISP device deployed as a MR/MS to support multiple customers configured in a virtualized network. In this case, the MR/MS can be configured using the **router lisp** command (in conjunction with the **locator-table** command) to segment and associate the MR/MS with multiple customer VRFs to support LISP site entries and Map Registration and Map Request (control plane) messages received within specific routing locator address space. In the example below, the VRF named Cust1-loc defines the routing locator space VRF to be used by one router LISP instantiation deployed in this scenario.

```
Router(config)# vrf definition Cust1-loc
Router(config-vrf)# address-family ipv4
Router(config-vrf-af)# exit
Router(config-vrf)# exit
Router(config)# router lisp 1
Router(config-router-lisp)# locator-table vrf Cust1-loc
Router(config-router-lisp)#
---<more>---
```

The following example shows a LISP device deployed as an xTR in a multitenant environment where multiple customers share the resources of a single LISP xTR. In this case, both the EID address space and the routing locator address space are segmented. The xTR can be configured with multiple router LISP instantiations that bind each customers EID address space and the routing locator address space. In the example below, the VRF named Cust1-loc defines the routing locator space VRF, and the VRF named Cust1-eid defines the EID address space VRF (tied to instance ID 123) to be used by one router LISP instantiation deployed in this scenario.

```
Router(config)# vrf definition Cust1-loc
Router(config-vrf)# address-family ipv4
Router(config-vrf-af)# exit
Router(config-vrf)# exit
```

```

Router(config)# vrf definition Cust1-eid
Router(config-vrf)# address-family ipv4
Router(config-vrf-af)# exit
Router(config-vrf)# exit
Router(config)# router lisp 1
Router(config-router-lisp)# locator-table vrf Cust1-loc
Router(config-router-lisp)# eid-table vrf Cust1-eid instance-id 123
Router(config-router-lisp-eid-table)#
---<more>---
```

Related Commands

Command	Description
eid-table	Configures a LISP instance ID for association with a VRF table or default table through which the EID address space is reachable.
router lisp	Enters LISP configuration mode and configures LISP commands on a router.

loc-reach-algorithm

To configure a Locator/ID Separation Protocol (LISP) locator reachability algorithm, use the **loc-reach-algorithm** command in LISP configuration mode. To disable this functionality, use the **no** form of this command.

loc-reach-algorithm rloc-probing
no loc-reach-algorithm rloc-probing

Syntax Description

rloc-probing	Enables the RLOC-probing locator reachability algorithm.
---------------------	--

Command Default

The locator reachability algorithm rloc-probing is disabled by LISP.

Command Modes

LISP configuration (config-router-lisp) or LISP EID table configuration (config-router-lisp-eid-table)

Command History

Release	Modification
15.1(1)XB	This command was introduced.
Cisco IOS XE Release 2.5.1XA	This command was integrated into Cisco IOS XE Release 2.5.1XA
Cisco IOS XE Release 3.3.0S	This command was modified. Support for this command was removed at the global configuration level and added for LISP configuration mode. Also, the lisp keyword was removed from the command syntax.
15.1(4)M	This command was modified. Support for this command was removed at the global configuration level and added for LISP configuration mode. Also, the lisp keyword was removed from the command syntax.

Usage Guidelines

Use the **loc-reach-algorithm** command to enable LISP locator reachability algorithms. RLOC-probing is the only locator reachability algorithm available in Cisco IOS and Cisco IOS XE versions of LISP and it is disabled by default. To disable RLOC probing, use the **no** form of this command.

The RLOC-probing algorithm is a method used by a LISP to determine the reachability status of locators cached in its map cache. It involves the periodic exchange of special map-request and map-reply messages between an Ingress Tunnel Router (ITR) and Egress Tunnel Router (ETR) to validate locator reachability. The advantage of using RLOC probing is that it can handle a variety of failure scenarios, allowing the ITR to determine when the path to a specific locator is reachable or has become unreachable. This provides a robust mechanism for switching to using another locator from the cached locator.

Configuration Inheritance:

At the router lisp level,

- **loc-reach-algorithm** enables the configuration for all the eid-tables defined under router lisp.
- **no loc-reach-algorithm** disables the configuration for all the eid-tables under router lisp.

At the eid-table level,

- **no loc-reach-algorithm** negates the inherited configuration.

- **default loc-reach-algorithm** reinherits the configuration from the router lisp level.

Examples

The following example shows how to configure the locator reachability algorithm RLOC probing functionality on the router.

```
Router(config)# router lisp  
Router(config-router-lisp)# loc-reach-algorithm rloc-probing
```

Related Commands

Command	Description
ipv4 etr	Configures the router to act as an IPv4 LISP ETR.
ipv4 itr	Configures the router to act as an IPv4 LISP ITR.
ipv6 etr	Configures the router to act as an IPv6 LISP ETR.
ipv6 itr	Configures the router to act as an IPv6 LISP ITR.

map-cache

To configure a static IPv4 or IPv6 endpoint identifier-to-routing locator (EID-to-RLOC) mapping relationship and its associated traffic policy, or to statically configure the packet handling behavior associated with a specified destination IPv4 or IPv6 EID prefix, use the **map-cache** command in Locator/ID Separation Protocol (LISP) configuration mode. To remove the configuration, use the **no** form of this command.

map-cache *destination-EID-prefix/prefix-length locator priority priority weight percentage*

map-cache *destination-EID-prefix/prefix-length {drop | map-request | native-forward}*

no map-cache *destination-EID-prefix/prefix-length*

Syntax Description

<i>destination-EID-prefix/prefix-length</i>	Destination IPv4 or IPv6 EID-prefix/prefix-length. The slash is required in the syntax.
<i>locator</i>	The IPv4 or IPv6 RLOC associated with the value specified for the <i>EID-prefix/prefix-length</i> argument.
priority <i>priority</i>	The priority (value from 0 to 255) assigned to the RLOC. When multiple locators have the same priority they may be used in load-shared fashion. A lower value indicates a higher priority.
weight <i>percentage</i>	The weight (value from 0 and 100) assigned to the locator. Used in order to determine how to load-share traffic between multiple locators when the priorities assigned to multiple locators are the same. The value represents the percentage of traffic to be load-shared.
drop	(Optional) Drop packets that match this map-cache entry
map-request	(Optional) Send a map request for packets that match this map-cache entry
native-forward	(Optional) Natively forward packets that match this map-cache entry

Command Default

No static destination EID-to-RLOC mapping relationships are configured by default.

Command Modes

LISP configuration (config-router-lisp)

Command History

Release	Modification
15.1(1)XB1	This command was introduced.
Cisco IOS XE Release 2.5.1XA	This command was integrated into Cisco IOS XE Release 2.5.1XA.
Cisco IOS XE Release 3.3.0S	This command was integrated into Cisco IOS XE Release 2.5.1XA. This command was modified. Support for this command was removed at the global configuration level and added for LISP configuration mode. Also, the ip , ipv6 , and lisp keywords were removed from the command syntax.

Release	Modification
15.1(4)M	This command was integrated into Cisco IOS XE Release 2.5.1XA. This command was modified. Support for this command was removed at the global configuration level and added for LISP configuration mode. Also, the ip , ipv6 , and lisp keywords were removed from the command syntax.

Usage Guidelines

The first use of this command is to configure an Ingress Tunnel Router (ITR) with a static IPv4 or IPv6 EID-to-RLOC mapping relationship and its associated traffic policy. For each entry, a destination EID-prefix block and its associated locator, priority, and weight are entered. The value in the EID-prefix/prefix-length argument is the LISP EID-prefix block at the destination site. The locator is an IPv4 or IPv6 address of the remote site where the IPv4 or IPv6 EID-prefix can be reached. Associated with the locator address is a priority and weight that are used to define traffic policies when multiple RLOCs are defined for the same EID-prefix block. This command can be entered up to eight times for a given EID-prefix. Static IPv4 or IPv6 EID-to-RLOC mapping entries configured using this command take precedence over dynamic mappings learned through map-request and map-reply exchanges.

The second, optional use of this command is to statically configure the packet handling behavior associated with a specified destination IPv4 or IPv6 EID prefix. For each entry, a destination IPv4 or IPv6 EID-prefix block is associated with a configured forwarding behavior. When a packet's destination address matches the EID prefix, one of the following packet handling options can be configured:

- **drop** - Packets matching the destination IPv4 or IPv6 EID prefix are dropped. For example, this action may be useful when administrative policies define that packets should be prevented from reaching a site.
- **map-request** - Packets matching the destination IPv4 or IPv6 EID prefix cause a map request to be sent. It is implied that the map reply returned by this request will allow subsequent packets matching this EID prefix to be LISP-encapsulated. This action may be useful for troubleshooting map-request activities and other diagnostic actions.
- **native-forward** - Packets matching the destination IPv4 or IPv6 EID prefix are natively forwarded without LISP encapsulation. This action may be useful when the destination site is known to always be reachable natively and LISP encapsulation should never be used.

Examples

The following example shows how to configure a destination EID-to-RLOC mapping and associated traffic policy for the IPv4 EID-prefix block 172.16.1.0/24. In this example, the locator for this IPv4 EID-prefix block is 10.1.1.1 and the traffic policy for this locator has a priority of 1 and a weight of 100.

```
Router(config)# router lisp
Router(config)# map-cache 172.16.1.0/24 10.1.1.1 priority 1 weight 100
```

The following example shows how to configure a destination EID-to-RLOC mapping and associated traffic policy for the IPv6 EID-prefix block 2001:DB8:BB::/48. In this example, the locator for this IPv6 EID-prefix block is 2001:DB8:0A::1, and the traffic policy for this locator has a priority of 1 and a weight of 100:

```
Router(config)# router lisp
Router(config)# map-cache 2001:DB8:BB::/48 2001:DB8:0A::1 priority 1 weight 100
```

Related Commands

Command	Description
database-mapping	Configures an IPv6 EID-to-RLOC mapping relationship and its associated traffic policy.
ipv4 itr	Configures the router to act as an IPv4 LISP ITR.
ipv4 map-cache-limit	Configures the maximum number of IPv4 LISP map-cache entries allowed to be stored by the router.

map-server rloc members distribute

To enable Map-Servers to distribute a membership list of Routing Locators (RLOCs) to participating xTRs, use the **map-server rloc members distribute** command in LISP configuration mode. To disable Map-Servers from distributing a membership list of RLOCs to participating xTRs, use the **no** form of the command.

map-server rloc members distribute
no map-server rloc members distribute

Syntax Description

This command has no arguments or keywords.

Command Default

Map-Servers are not enabled to distribute a membership list of RLOCs to xTRs.

Command Modes

LISP configuration (config-router-lisp)

Command History

Release	Modification
15.5(1)T	This command was introduced.
Cisco IOS XE Release 3.14S	This command was integrated into Cisco IOS XE Release 3.14S.

Usage Guidelines

Example

The following example shows how to enable Map-Servers to distribute an updated list of EID prefixes to xTRs:

```
Device> enable
Device# configure terminal
Device(config)# router lisp
Device(config-router-lisp)# map-server rloc members distribute
Device(config-router-lisp)# exit
```

Related Commands

Command	Description
router lisp	Enters LISP configuration mode and configures LISP commands on a device.

map-server rloc members modify-discovered

To enable a Map-Server to add to, or replace, the list of discovered Routing Locator (RLOC) addresses through a specified locator set, use the **map-server rloc members modify-discovered** command in LISP EID-table configuration mode. To disable the option to modify the list of discovered RLOC addresses, use the **no** form of the command.

map-server rloc members modify-discovered {**add** | **override**} **locator-set** *locator-set-name*
no map-server rloc members modify-discovered

Syntax Description		
add	Adds RLOC addresses in the specified locator set to the list of discovered RLOC addresses.	
override	Replaces automatically discovered list of RLOC addresses with the RLOC addresses in the specified locator-set.	<p>Remember When you use this option, the list of RLOC addresses discovered by the Map-Server is completely removed.</p>
locator-set <i>locator-set-name</i>	Specifies a locator set. The locator set typically contains RLOC addresses that are previously configured.	

Command Default The option to modify the automatically discovered list of RLOC addresses is disabled.

Command Modes LISP EID-table configuration (config-router-lisp-eid-table)

Command History	Release	Modification
	15.5(1)T	This command was introduced.
	Cisco IOS XE Release 3.14S	This command was integrated into Cisco IOS XE Release 3.14S.

Example

The following example shows how to enable a map server to add RLOC addresses (to the list of discovered RLOC addresses) through a specified locator set:

```
Device> enable
Device# configure terminal
Device(config)# router lisp
Device(config-router-lisp)# eid-table vrf cust-A instance-id 1
Device(config-router-lisp-eid-table)# map-server rloc members modify-discovered add
locator-set PTR_set
Device(config-router-lisp-eid-table)# exit
```

Related Commands

Command	Description
map-server rloc members distribute	Enables the map server to distribute the list of EID prefixes to xTRs at the customer end.
router lisp	Enters LISP configuration mode and configures LISP commands on a device.

other-xtr-probe

To configure the interval, in seconds, that an xTR probes site-local routing locators (RLOCs), use the **other-xtr-probe** command in Locator/ID Separation Protocol (LISP) configuration mode. To return to the default setting, use the **no** form of this command.

other-xtr-probe period *seconds*
default other-xtr-probe period
no other-xtr-probe period

Syntax Description

period <i>seconds</i>	Configures the site-local RLOC probing period, in seconds. The range is 5 to 900.
------------------------------	---

Command Default

Probing of site-local RLOCs is enabled by default and cannot be disabled. The default interval is 30 seconds.

Command Modes

LISP configuration (config-router-lisp) or LISP EID table configuration (config-router-lisp-eid-table)

Command History

Release	Modification
15.1(1)XB3	This command was introduced.
Cisco IOS XE Release 2.5.1XC	This command was integrated into Cisco IOS XE Release 2.5.1XC.
Cisco IOS XE Release 3.3.0S	This command was modified. Support for this command was removed at the global configuration level and added for LISP configuration mode. Also, the ip and lisp keywords were removed from the command syntax.
15.1(4)M	This command was modified. Support for this command was removed at the global configuration level and added for LISP configuration mode. Also, the ip and lisp keywords were removed from the command syntax.

Usage Guidelines

When a LISP site contains more than one xTR, all xTRs that are part of the same LISP site must be configured with consistent EID-to-RLOC mapping information using the **database-mapping** command. From the perspective of any xTR within the LISP site, one or more RLOCs will be local to that xTR (referred to as site-self in **show** command outputs), and one or more RLOCs will be local the other xTRs that are part of the same LISP site (and referred to as site-other in **show** command outputs). For a LISP site to maintain an accurate status of all locators within the site, each xTR sends RLOC probes to all site-other RLOCs.

Use the **other-xtr-probe** command to change the probe interval for sending RLOC probes to all site-other RLOCs.



Note This functionality is enabled by default and cannot be disabled. The default interval is 30 seconds. Use the **show run | include other-xtr-probe** command to display the configured interval. When an output value is displayed, the value is configured for something other than the default value. When no output is displayed, it is configured for the default.

Configuration Inheritance:

At the router lisp level,

- **other-xtr-probe period** enables the configuration for all the eid-tables defined under router lisp.
- **no other-xtr-probe period** resets the configuration to the system default value and the system default value is inherited by all the eid-tables defined under router lisp.

At the eid-table level,

- **other-xtr-probe period** overrides the configuration inherited from the router lisp level.
- **no other-xtr-probe period** resets the configuration to the system default value.
- **default other-xtr-probe period** reinherits the configuration from the router lisp level.

Examples

The following example shows how to configure the **other-xtr-probe** command interval to 20 seconds.

```
Router(config)# router lisp
Router(config-router-lisp)# other-xtr-probe 20
```

Related Commands

Command	Description
database-mapping	Configures an IPv4 or IPv6 EID-to-RLOC mapping relationship and its associated traffic policy.

rloc-prefix

To specify a routing locator (RLOC) prefix to check against the ingress tunnel router (ITR) RLOC and the egress tunnel router (ETR) RLOC, use the **rloc-prefix** command in Locator/ID Separation Protocol (LISP) locator scope configuration mode. To remove the RLOC prefix, use the **no** form of the command.

rloc-prefix {*ipv4-rloc-prefix* | *ipv6-rloc-prefix*}
no rloc-prefix {*ipv4-rloc-prefix* | *ipv6-rloc-prefix*}

Syntax Description	
<i>ipv4-rloc-prefix</i>	Specifies the IPv4 RLOC prefix that belongs to a locator scope.
<i>ipv6-rloc-prefix</i>	Specifies the IPv6 RLOC prefix that belongs to a locator scope.

Command Default No RLOC prefixes are defined.

Command Modes LISP locator scope (config-router-lisp-locator-scope)

Command History	Release	Modification
	15.4(1)T	This command was introduced.
	Cisco IOS XE Release 3.11S	This command was integrated into Cisco IOS XE Release 3.11S.

Usage Guidelines Use the **rloc-prefix** command to specify a RLOC prefix to define locator scopes on a LISP map server. The map server uses these defined locator scopes to determine how to process the LISP map-request message that it receives.

In a LISP environment, it is possible for some LISP sites to have RLOC connectivity in one locator-scope, such as IPv4 Internet, and other LISP sites to have RLOC connectivity in a different locator-scope, such as IPv6 Internet. The deployment of a LISP device called a Re-encapsulating tunnel router (RTR) solves this disjointed RLOC scope connectivity problem by defining locator-scopes covering the disjointed RLOC scopes on the map server. When locator scopes are defined on a map server and the map server receives a LISP map request message, it compares the locator scope associated with the ingress tunnel router (ITR) RLOC that the map request contains against the locator scope associated with the egress tunnel router (ETR) RLOC reported in the map server site registration for the EID prefix referred to in the Map-Request message. Based on this comparison, the following results can occur:

- If the ITR and ETR share at least one RLOC of the same address-family in the same locator scope, the map server forwards the map-request message to the ETR as it normally would.
- If the ITR and ETR do not share RLOCs of the same address-family in the same locator-scope, the map server sends a proxy map-reply message containing an RTR RLOC list to the ITR. The RTR RLOC list is extracted from the RTR locator set configured in the locator scope matching the ITR RLOC. If no RTR RLOC set is defined within the locator scope matching the ITR RLOC, the map server returns a negative map-reply as normal.
- If the ITR and ETR RLOCs match no locator scopes, the map server forwards the map-request message to the ETR as it normally would. This default action makes the assumption that the RLOCs are reachable via routing even though they are not defined in any locator scope configuration.

Example

The following example shows how to specify locator sets containing the RLOCs of an RTR that are associated with particular locator scopes. In this example, two locator sets are created, one to define the RTR RLOC associated with the IPv4 locator scope, and a second to define the RTR RLOC associated with the IPv6 locator scope:

```
Device> enable
Device# configure terminal
Device(config)# router lisp
Device(config-router-lisp)# locator-set rtr-set1
Device(config-router-lisp-locator-set)# 10.0.3.1 priority 1 weight 1
Device(config-router-lisp-locator-set)# exit
Device(config-router-lisp)# locator-set rtr-set2
Device(config-router-lisp-locator-set)# 2001:db8:3::1 priority 1 weight 1
Device(config-router-lisp-locator-set)# exit
Device(config-router-lisp)# locator-scope ipv4-Internet
Device(config-router-lisp-locator-scope)# rloc-prefix 0.0.0.0/0
Device(config-router-lisp-locator-scope)# rtr-locator-set rtr-set1
Device(config-router-lisp-locator-scope)# exit
Device(config-router-lisp)# locator-scope ipv6-Internet
Device(config-router-lisp-locator-scope)# rloc-prefix ::/0
Device(config-router-lisp-locator-scope)# rtr-locator-set rtr-set2
Device(config-router-lisp-locator-scope)# exit
```

Related Commands

Command	Description
locator-scope	Specifies a locator-scope and enters LISP locator-scope configuration mode.
router lisp	Enters LISP configuration mode and configures LISP commands on a device.
rtr-locator-set	Specifies a locator-set of RTR RLOCs.

rtr-locator-set

To specify a locator set of the re-encapsulating tunnel router (RTR) routing locators (RLOCs), use the **rtr-locator-set** command in Locator/ID Separation Protocol (LISP) locator scope configuration mode. To remove the specified locator set, use the **no** form of the command.

rtr-locator-set *locator-set-name*

no rtr-locator-set

Syntax Description	<i>locator-set-name</i> Specifies the locator-set of the RTR.
---------------------------	---

Command Default	No RTR locator sets are defined.
------------------------	----------------------------------

Command Modes	LISP locator scope (config-router-lisp-locator-scope)
----------------------	---

Command History	Release	Modification
	15.4(1)T	
	Cisco IOS XE Release 3.11S	This command was integrated into Cisco IOS XE Release 3.11S.

Usage Guidelines	Use the rtr-locator-set command on a LISP map server to specify a locator set that includes the RLOCs of an RTR that are associated with a particular locator scope.
-------------------------	---

In a LISP environment, it is possible for some LISP sites to have RLOC connectivity in one locator-scope, such as IPv4 Internet, and other LISP sites to have RLOC connectivity in a different locator-scope, such as IPv6 Internet. The deployment of a LISP device called as the RTR solves the disjointed RLOC scope connectivity problem by defining locator scopes covering the disjointed RLOC scopes on the map server. When locator scopes are defined on a map server and the map server receives a LISP map-request message, it compares the locator scope associated with the ingress tunnel router (ITR) RLOC that the map-request message contains against the locator scope associated with the egress tunnel router (ETR) RLOC reported in the map server site registration for the EID prefix referred to in the map-request message. Based on this comparison, the following results can occur:

- If the ITR and ETR share at least one RLOC of the same address-family in the same locator scope, the map server forwards the map-request message to the ETR as it normally would.
- If the ITR and ETR do not share RLOCs of the same address family in the same locator scope, the map server sends a proxy map-reply message containing an RTR RLOC list to the ITR. The RTR RLOC list is extracted from the RTR locator set configured in the locator scope matching the ITR RLOC. If no RTR RLOC set is defined within the locator scope matching the ITR RLOC, the map server returns a negative map-reply as normal.
- If the ITR and ETR RLOCs match no locator scopes, the map server forwards the map-request message to the ETR as it normally would. This default action makes the assumption that the RLOCs are reachable via routing even though they are not defined in any locator scope configuration.

You must define a locator set before referring to it by using the **locator-set** command.

Example

The following example shows how to specify a locator set of an RTR to use in the proxy reply for disjoint/cross address family RLOC:

```
Device> enable
Device# configure terminal
Device(config)# router lisp
Device(config-router-lisp)# locator-set rtr-set1
Device(config-router-lisp-locator-set)# 10.0.3.1 priority 1 weight 1
Device(config-router-lisp-locator-set)# exit
Device(config-router-lisp)# locator-set rtr-set2
Device(config-router-lisp-locator-set)# 2001:db8:3::1 priority 1 weight 1
Device(config-router-lisp-locator-set)# exit
Device(config-router-lisp)# locator-scope ipv4-Internet
Device(config-router-lisp-locator-scope)# rloc-prefix 0.0.0.0/0
Device(config-router-lisp-locator-scope)# rtr-locator-set rtr-set1
Device(config-router-lisp-locator-scope)# exit
Device(config-router-lisp)# locator-scope IPv6-Internet
Device(config-router-lisp-locator-scope)# rloc-prefix ::/0
Device(config-router-lisp-locator-scope)# rtr-locator-set rtr-set2
Device(config-router-lisp-locator-scope)# exit
```

Related Commands

Command	Description
locator-scope	Specifies a locator-scope and enters LISP locator-scope configuration mode.
router lisp	Enters LISP configuration mode and configures LISP commands on a device.

xtr instance-id

To configure an instance-id to be associated with EID-prefixes for a LISP xTR, use the **xtr instance-id** command in LISP configuration mode. To disable this functionality, use the **no** form of this command.

```
xtr instance-id iid
no xtr instance-id iid
```

Syntax Description

<i>iid</i>	Configures the instance-id for this xTR (value between 1 and 16777215).
------------	---

Command Default

By default, an xTR is not configured to use an instance-id.

Command Modes

LISP configuration

Command History

Release	Modification
15.1(1)XB3	This command was introduced.
2.5.1XC	This command was integrated into Cisco IOS XE Release 2.5.1XC.
15.1(4)M	This command was modified. The command name was changed from ip lisp xtr instance-id to xtr instance-id .
3.3.0S	This command was modified. The command name was changed from ip lisp xtr instance-id to xtr instance-id .

Usage Guidelines

Virtualization support is currently available in LISP xTRs and MS/MRs. The instance-id has been added to LISP to support virtualization.

Use the **xtr instance-id** command to configure the instance-id associated with this xTR. Only one instance-id can be configured on an xTR. When an instance-id is configured, this instance-id will be included with the EID-prefixes when they are registered with the Map-Server. The Map-Server must also include the same instance-id within the EID-prefix configurations for this LISP site. Instance-id's are configured on the Map-Server using the **eid-prefix** command in LISP Site configuration mode.



Note Virtualization support is not currently available for the LISP ALT, which means that it is also not supported on LISP PITRs. To configure an xTR that is configured with an instance-id to communicate with non-LISP sites, you must use NAT techniques instead of a Pitr for this functionality.

Examples

The following example configures an instance-ID of 123 on this xTR.

```
Router(config-router-lisp)# xtr instance-id 123
Router(config-router-lisp)#
```

Related Commands

Command	Description
eid-prefix (LISP site)	Configures the EID-prefix associated with a LISP site on a Map-Server as part of the LISP Site configuration process.

■ xtr instance-id