

# **OSPF Nonstop Routing**

The OSPF Nonstop Routing feature allows a device with redundant Route Processors (RPs) to maintain its Open Shortest Path First (OSPF) state and adjacencies across planned and unplanned RP switchovers. The OSPF state is maintained by checkpointing the state information from OSPF on the active RP to the standby RP. After a switchover to the standby RP, OSPF uses the checkpointed information to continue operations without interruption.

- Finding Feature Information, page 1
- Prerequisites for OSPF NSR, page 1
- Restrictions for OSPF NSR, page 2
- Information About OSPFv3 Authentication Trailer, page 2
- How to Configure OSPF Nonstop Routing, page 2
- Configuration Examples for OSPF Nonstop Routing, page 4
- Additional References, page 5
- Feature Information for OSPF NSR, page 6

## **Finding Feature Information**

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see Bug Search Tool and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to <a href="https://www.cisco.com/go/cfn">www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

## **Prerequisites for OSPF NSR**

• OSPF NSR is available for platforms with redundant RPs or Cisco IOS software redundancy running Cisco IOS Release XE 3.3S or later releases.

### **Restrictions for OSPF NSR**

- OSPF nonstop routing (NSR) can significantly increase the memory used by OSPF during certain phases
  of its operation. CPU usage also can be increased. You should be aware of router memory capacity and
  estimate the likely memory requirements of OSPF NSR. For more information see Configuring OSPF
  NSR. For routers where memory and CPU are constrained you might want to consider using OSPF NSF
  instead. For more information, see OSPF RFC 3623 Graceful Restart Helper Mode.
- A switchover from the active to the standby RP can take several seconds, depending on the hardware platform, and during this time OSPF is unable to send Hello packets. As a result, configurations that use small OSPF dead intervals might not be able to maintain adjacencies across a switchover.

### **Information About OSPFv3 Authentication Trailer**

### **OSPF NSR Functionality**

Although OSPF Nonstop Routing (NSR) serves a similar function to OSPF Nonstop Forwarding (NSF), it works differently. With NSF, OSPF on the newly active standby RP initially has no state information. OSPF uses extensions to the OSPF protocol to recover its state from neighboring OSPF devices. For the recovery to work, the neighbors must support the NSF protocol extensions and be willing to act as "helpers" to the device that is restarting. The neighbors must also continue forwarding data traffic to the device that is restarting while protocol state recovery takes place.

With NSR, by contrast, the device that performs the switchover preserves its state internally, and in most cases the neighbors are unaware of the switchover. Because assistance is not needed from neighboring devices, NSR can be used in situations where NSF cannot be used; for example, in networks where not all neighbors implement the NSF protocol extensions, or where network topology changes during the recovery making NSF unreliable, use NSR instead of NSF.

## **How to Configure OSPF Nonstop Routing**

### **Configuring OSPF NSR**

Perform this task to configure OSPF NSR.

NSR adds a single new line, "nsr," to the OSPF router mode configuration. Routers that do not support NSR, for whatever reason, will not accept this command.

#### **SUMMARY STEPS**

- 1. enable
- 2. configure terminal
- 3. router ospf process-id
- 4. nsr
- **5**. end
- 6. show ip ospf [ process-id ] nsr [[ objects ]|[ statistics ]]

#### **DETAILED STEPS**

Command or Action	Purpose
enable	Enables privileged EXEC mode.
Example:	• Enter your password if prompted.
Router> enable	
configure terminal	Enters global configuration mode.
Example:	
Router# configure terminal	
router ospf process-id	Places the router in router configuration mode and configures an OSPF routing process.
Example:	
Router(config)# router ospf 109	
nsr	Configures NSR.
Example:	
Router(config-router)# nsr	
end	Exits router configuration mode and returns to privileged EXEC mode.
Example:	
Router(config-router)# end	
show ip ospf [ process-id ] nsr [[ objects ] [ statistics ]]	Displays OSPF NSR status information.
Example:	
Router# show ip ospf 109 nsr	
	enable  Example: Router> enable  configure terminal  Example: Router# configure terminal  router ospf process-id  Example: Router(config)# router ospf 109  nsr  Example: Router(config-router)# nsr  end  Example: Router(config-router)# end  show ip ospf [ process-id ] nsr [[ objects ] [ statistics ] ]  Example:

#### **Troubleshooting Tips**

OSPF NSR can increase the amount of memory used by the OSPF device process. To determine how much memory OSPF is currently using without NSR, you can use the **show processes** and **show processes memory** commands:

```
Device# show processes|include OSPF

276 Mwe 133BE14 1900 1792 1060 8904/12000 0 OSPF-1 Router
296 Mwe 133A824 10 971 10 8640/12000 0 OSPF-1 Hello
```

Process 276 is the OSPF device process that is to be checked. Use the **show processes memory** command to display its current memory use:

```
Device# show processes memory 276

Process ID: 276

Process Name: OSPF-1 Router
Total Memory Held: 4454800 bytes
```

In the above example, OSPF is using 4,454,800 bytes, or approximately 4.5 megabytes (MB). Because OSPF NSR can consume double this memory for brief periods, ensure that the device has at least 5 MB of free memory before enabling OSPF NSR.

## **Configuration Examples for OSPF Nonstop Routing**

### **Example: Configuring OSPF NSR**

The following example shows how to configure OSPF NSR:

```
Device> enable
Device# configure terminal
Device(config) # router ospf 1
Device(config-router) # nsr
Device (config-router) # end
Device# show ip ospf 1 nsr
Standby RP
 Operating in duplex mode
Redundancy state: STANDBY HOT
Peer redundancy state: ACTIVE
 ISSU negotation complete
ISSU versions compatible
Routing Process "ospf 1" with ID 10.1.1.100
 NSR configured
Checkpoint message sequence number: 3290
 Standby synchronization state: synchronized
Bulk sync operations: 1
Last sync start time: 15:22:48.971 UTC Fri Jan 14 2011
 Last sync finish time: 15:22:48.971 UTC Fri Jan 14 2011
Last sync lost time:
Last sync reset time:
 LSA Count: 2, Checksum Sum 0x00008AB4
```

The output shows that OSPF NSR is configured and that OSPF on the standby RP is fully synchronized and ready to continue operation should the active RP fail or if a manual switchover is performed.

# **Additional References**

#### **Related Documents**

Related Topic	Document Title
Cisco IOS commands	Cisco IOS Master Commands List, All Releases
OSPF commands: complete command syntax, command mode, defaults, command history, usage guidelines, and examples	Cisco IOS IP Routing: OSPF Command Reference
Configuring OSPF	"Configuring OSPF" in the <i>IP</i> Routing: OSPF Configuration Guide.
OSPFv2 loop-free alternate fast reroute	"OSPFv2 Loop-Free Alternate Fast Reroute" in the <i>IP Routing: OSPF</i> Configuration Guide

#### **Standards and RFCs**

Standard/RFC	Title
RFC 5286	Basic Specification for IP Fast Reroute: Loop-Free Alternates

#### **Technical Assistance**

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

## **Feature Information for OSPF NSR**

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to <a href="https://www.cisco.com/go/cfn">www.cisco.com/go/cfn</a>. An account on Cisco.com is not required.

Table 1: Feature Information for OSPF NSR

Feature Name	Releases	Feature Information
OSPF NSR	XE 3.38 Cisco IOS Release 15.1(1)SY	The OSPF NSR feature allows a router with redundant route processors to maintain its OSPF state and adjacencies across planned and unplanned RP switchovers.  In Cisco IOS Release XE 3.3S, this feature was introduced.  The following commands were introduced or modified: nsr, show ip ospf nsr.