



# Hardware Module Commands

---

This module lists the Cisco IOS XR hardware module commands for MPLS on the Cisco 8000 Series Routers.

For detailed information about the hardware module configuration tasks and examples, refer to the *MPLS Configuration Guide for Cisco 8000 Series Routers*.

- [Hardware Module Commands, on page 2](#)

# Hardware Module Commands

## MPLS Label Distribution Protocol Commands

- [hw-module label-allocation bvi-routes disable](#)
- [hw-module profile cef te-tunnel highscale-ldp-over-te-no-sr-over-srte](#)
- [hw-module profile cef te-tunnel highscale-no-ldp-over-te](#)

## MPLS Forwarding Commands

- [hw-module profile cef cbf forward-class-list](#)
- [hw-module profile cef stats label app-default dynamic](#)