



# Hardware Module Commands

---

This module lists the hardware module commands for the Netflow and sFlow configuration on the Cisco 8000 Series Routers.

For detailed information about the hardware module configuration tasks and examples, refer to the *NetFlow Configuration Guide for Cisco 8000 Series Routers*.

- [Hardware Module Commands, on page 2](#)

# Hardware Module Commands

## NetFlow Commands

- [hw-module profile netflow fpc-enable](#)
- [hw-module profile netflow ipfix315](#)

## sFlow Commands

- [hw-module profile netflow sflow-enable](#)