



Segment Routing Command Reference for Cisco 8000 Series Routers

First Published: 2020-03-13

Last Modified: 2024-01-31

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883



CONTENTS

PREFACE

Preface vii

Changes to This Document vii

Communications, Services, and Additional Information vii

CHAPTER 1

Segment Routing Commands 1

adjacency-sid 3

bgp best-path sr-policy 4

clear segment-routing local-block discrepancy all 5

distribute link-state (IS-IS) 6

encapsulation-type srv6 relax-sid 7

fast-reroute 8

generic-metric flex-algo 10

hw-module profile segment-routing srv6 mode 11

isis prefix-attributes n-flag-clear 13

l2-adjacency sid 14

metric-type generic 15

microloop avoidance rib-update-delay 16

microloop avoidance segment-routing 18

performance-measurement delay-profile name 19

performance-measurement endpoint 21

performance-measurement interface 23

performance-measurement liveness-detection 24

performance-measurement liveness-profile 26

performance-measurement delay-profile 28

performance-measurement protocol twamp-light measurement delay 31

ping mpls nil-fec labels 33

ping sr-mpls	35
prefix-sid	38
prefix-unreachable	40
partition-detect	42
summary-prefix	43
segment-routing bundle-member-adj-sid	45
segment-routing global-block	46
segment-routing local-block	48
segment-routing mapping-server	50
segment-routing mpls	52
segment-routing prefix-sid-map advertise-local	53
segment-routing prefix-sid-map receive disable	55
segment-routing traffic-eng explicit	57
show isis segment-routing prefix-sid-map	59
show mrrib nsf private	61
show ospf route flex-algo	63
show ospf segment-routing prefix-sid-map	69
show performance-measurement history	71
show segment-routing srv6 sid	74
show segment-routing local-block inconsistencies	75
show segment-routing mapping-server prefix-sid-map	76
traceroute mpls nil-fec labels	78
traceroute sr-mpls	80

CHAPTER 2**Segment Routing Traffic Engineering Commands 85**

affinity-map	86
autoroute include ipv6 all	87
bgp prefix-path-label ignore	88
binding-sid	89
distribute link-state (SRTE)	90
distribute link-state	91
hw-module profile cef sropt enable	92
kshortest-paths	94
neighbor sr-policy name targeted	95

on-demand constraints	96
on-demand dynamic affinity sid-algorithm	97
on-demand dynamic affinity disjoint-path	98
on-demand maximum-sid-depth	100
on-demand source-address	101
on-demand steering	102
policy binding-sid	103
policy candidate-paths	104
policy candidate-paths constraints disjoint-path	105
policy candidate-paths constraints resources	107
policy color	108
policy source-address	109
policy steering	110
resource-list	111
segment-list	112
separate-next-hop	113
steering labeled-services	114
te-latency	115

CHAPTER 3

SRv6 Traffic Engineering	117
accounting prefixes ipv6 mode	118
policy srv6 locator	119
segment-routing traffic-eng srv6	120
srv6 locator	121
srv6 maximum-sid-depth	122
segment-lists segment-list	123
segment-lists srv6	124



Preface

This guide consists of information regarding the commands for Segment Routing in Cisco IOS XR Software. The *Cisco 8000 Series Router Segment Routing Command Reference Guide* preface contains these sections:

- [Changes to This Document, on page vii](#)
- [Communications, Services, and Additional Information, on page vii](#)

Changes to This Document

This table lists the changes made to this document since it was first printed.

Date	Change Summary
July 2024	Republished for Cisco IOS XR Release 24.2.11.
January 2024	Republished for Cisco IOS XR Release 7.3.6.
August 2023	Republished for Cisco IOS XR Release 7.3.5.
October 2020	Republished for Cisco IOS XR Release 7.2.12.
August 2020	Republished with documentation updates for Cisco IOS XR Release 7.0.14.
March 2020	Initial release of this document

Communications, Services, and Additional Information

- To receive timely, relevant information from Cisco, sign up at [Cisco Profile Manager](#).
- To get the business impact you're looking for with the technologies that matter, visit [Cisco Services](#).
- To submit a service request, visit [Cisco Support](#).
- To discover and browse secure, validated enterprise-class apps, products, solutions and services, visit [Cisco DevNet](#).
- To obtain general networking, training, and certification titles, visit [Cisco Press](#).

- To find warranty information for a specific product or product family, access [Cisco Warranty Finder](#).

Cisco Bug Search Tool

[Cisco Bug Search Tool](#) (BST) is a web-based tool that acts as a gateway to the Cisco bug tracking system that maintains a comprehensive list of defects and vulnerabilities in Cisco products and software. BST provides you with detailed defect information about your products and software.



Segment Routing Commands

This chapter describes the commands used to configure and use Segment Routing.

To use commands of this module, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using any command, contact your AAA administrator for assistance.

- [adjacency-sid, on page 3](#)
- [bgp best-path sr-policy, on page 4](#)
- [clear segment-routing local-block discrepancy all, on page 5](#)
- [distribute link-state \(IS-IS\), on page 6](#)
- [encapsulation-type srv6 relax-sid, on page 7](#)
- [fast-reroute, on page 8](#)
- [generic-metric flex-algo, on page 10](#)
- [hw-module profile segment-routing srv6 mode, on page 11](#)
- [isis prefix-attributes n-flag-clear, on page 13](#)
- [l2-adjacency sid, on page 14](#)
- [metric-type generic, on page 15](#)
- [microloop avoidance rib-update-delay, on page 16](#)
- [microloop avoidance segment-routing, on page 18](#)
- [performance-measurement delay-profile name, on page 19](#)
- [performance-measurement endpoint, on page 21](#)
- [performance-measurement interface, on page 23](#)
- [performance-measurement liveness-detection , on page 24](#)
- [performance-measurement liveness-profile, on page 26](#)
- [performance-measurement delay-profile, on page 28](#)
- [performance-measurement protocol twamp-light measurement delay, on page 31](#)
- [ping mpls nil-fec labels, on page 33](#)
- [ping sr-mpls, on page 35](#)
- [prefix-sid, on page 38](#)
- [prefix-unreachable, on page 40](#)
- [partition-detect, on page 42](#)
- [summary-prefix, on page 43](#)
- [segment-routing bundle-member-adj-sid, on page 45](#)
- [segment-routing global-block, on page 46](#)
- [segment-routing local-block, on page 48](#)

- [segment-routing mapping-server](#), on page 50
- [segment-routing mpls](#), on page 52
- [segment-routing prefix-sid-map advertise-local](#), on page 53
- [segment-routing prefix-sid-map receive disable](#), on page 55
- [segment-routing traffic-eng explicit](#), on page 57
- [show isis segment-routing prefix-sid-map](#), on page 59
- [show mrrib nsf private](#), on page 61
- [show ospf route flex-algo](#), on page 63
- [show ospf segment-routing prefix-sid-map](#), on page 69
- [show performance-measurement history](#), on page 71
- [show segment-routing srv6 sid](#), on page 74
- [show segment-routing local-block inconsistencies](#), on page 75
- [show segment-routing mapping-server prefix-sid-map](#), on page 76
- [traceroute mpls nil-fec labels](#), on page 78
- [traceroute sr-mpls](#), on page 80

adjacency-sid

To manually allocate an adjacency segment ID (Adj-SID) on an interface, use the **adjacency-sid** command in IS-IS interface address family configuration mode. To remove the Adj-SID, use the **no** form of the command.

adjacency-sid {**index** *adj-sid-index* | **absolute** *adj-sid-value*} [**protected**]

Syntax Description	
index <i>adj-sid-index</i>	Specifies the Adj-SID for each link based on the lower boundary of the SRLB + the index.
absolute <i>adj-sid-value</i>	Specifies the specific Adj-SID for each link within the SRLB.
protected	Specify if the Adj-SID is protected. For each primary path, if the Adj-SID is protected on the primary interface and a backup path is available, a backup path is installed. By default, manual Adj-SIDs are not protected.

Command Default Adjacency SID is not protected.

Command Modes IS-IS interface address-family configuration

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines Segment routing must be configured on the IS-IS instance before configuring adjacency SID value. Manually allocated Adj-SIDs are supported on point-to-point (P2P) interfaces.

Task ID	Task ID	Operations
	isis	read, write

Examples

This example shows how to configure an Adj-SID.

```
RP/0/RSP0/CPU0:router # configure
RP/0/RSP0/CPU0:router(config)# router isis 100
RP/0/RSP0/CPU0:router(config-isis)# interface GigabitEthernet0/0/0/7
RP/0/RSP0/CPU0:router(config-isis-if)# point-to-point
RP/0/RSP0/CPU0:router(config-isis-if)# address-family ipv4 unicast
RP/0/RSP0/CPU0:router(config-isis-if-af)# adjacency-sid index 10
```

Related Commands	Command	Description
	segment-routing local-block, on page 48	Configures the segment routing local block (SRLB).

bgp best-path sr-policy

To select the best path, backup, or multipath resolving over nexthop using SR policies, use the **bgp best-path sr-policy** command in BGP configuration mode. To remove the configuration, use the **no** form of the command.

```
bgp best-path sr-policy { force | prefer }
```

Syntax Description	<p>force When force mode is enabled, only SR policy paths are considered for best path calculation.</p> <p>prefer When prefer mode is enabled, SR policy paths and eBGP non-color paths are eligible for best path calculation.</p>				
Command Default	None.				
Command Modes	BGP configuration mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 7.5.2</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 7.5.2	This command was introduced.
Release	Modification				
Release 7.5.2	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				

Example

The following example shows how to enable the force mode:

```
Router(config)#router bgp 100
Router(config-bgp)#bgp router-id 10.1.1.2
Router(config-bgp)#bgp best-path sr-policy force
```

clear segment-routing local-block discrepancy all

Clears segment routing local block (SRLB) label conflicts.

clear segment-routing local-block discrepancy all

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines When you define a new SRLB range, there might be a label conflict (for example, if labels are already allocated, statically or dynamically, in the new SRLB range). In this case, the new SRLB range will be accepted, but not applied (pending). The previous SRLB range (active) will continue to be in use until one of the following occurs:

- Reload the router to release the currently allocated labels and allocate the new SRLB
- Use the **clear segment-routing local-block discrepancy all** command to clear the label conflicts

Task ID	Task	Operation
		ID

This example shows how to clear SRLB label conflicts.

```
RP/0/RSP0/CPU0:router(config)# clear segment-routing local-block discrepancy all
```

Related Commands	Command	Description
		show segment-routing local-block inconsistencies, on page 75
	segment-routing local-block, on page 48	Configures the SRLB

distribute link-state (IS-IS)

To configure filters for IS-IS advertisements to BGP-LS, use the **distribute link-state** command in the IS-IS configuration mode.

distribute link-state [**exclude-external** **exclude-interarea** **route-policy** *name*]

Table 1: Syntax Description:

Syntax	Description
exclude-external	Set filter to exclude information for external prefixes and specify a route-policy name to filter based on a set of destination prefixes.
exclude-interarea	Set filter to exclude information for interarea prefixes and specify a route-policy name to filter based on a set of destination prefixes.
route-policy <i>name</i>	Distribute prefixes based on the route policy name set.

Command Modes IS-IS Configuration

Command History

Release	Modification
Release 7.10.1	New keywords were introduced under distribute link-state .

Example

This example shows how to configure different filters for IS-IS advertisements to BGP-LS:

```
Router#config
Router(config)#router isis 1
Router(config-isis)#distribute link-state exclude-external
Router(config-isis)#commit
```

```
Router#config
Router(config)#router isis 1
Router(config-isis)#distribute link-state exclude-interarea
Router(config-isis)#commit
```

```
Router# config
Router(config)# router isis 1
Router(config-isis)#distribute link-state route-policy isis-rp-1
Router(config-isis)#commit
```

encapsulation-type srv6 relax-sid

To configure the BGP signaling for coexistence of IP routes with or without SRv6 SID over an SRv6-enabled core network use **encapsulation-type srv6 relax-sid** command in XR Config mode.

encapsulation-type srv6 relax-sid

Syntax Description	encapsulation-type srv6 relax-sid Enables coexistence of IP routes with or without SRv6 SID.				
Syntax Description	This command has no keywords or arguments.				
Command Default	The BGP signaling for coexistence of IP routes with or without SRv6 SID over an SRv6-enabled core network is enabled.				
Command Modes	Multicast routing VRF address family configuration				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 24.3.1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 24.3.1	This command was introduced.
Release	Modification				
Release 24.3.1	This command was introduced.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>system</td> <td>read and write</td> </tr> </tbody> </table>	Task ID	Operation	system	read and write
Task ID	Operation				
system	read and write				

Example

The following example shows how to enable BGP signaling for coexistence of IP routes with or without SRv6 SID over an SRv6-enabled core network:

```
Router(config)# router bgp 2
Router(config-bgp)# neighbor-group srv6-core-relax
Router(config-bgp-nbr)# address-family ipv4 unicast
Router(config-bgp-nbr-af)# encapsulation-type srv6 relax-sid
Router(config-bgp-nbr-af)# exit
```

fast-reroute

To enable Topology Independent Loop Free Alternate (TI-LFA) path using the IP Fast Reroute (FRR) mechanism, use the **fast-reroute** command in interface configuration mode. To return to the default behavior, use the **no** form of this command.

fast-reroute per-prefix ti-lfa

Syntax Description	per-prefix	ti-lfa
	Specifies an alternate path for every prefix on the specified interface.	
		Enables link-protecting TI-LFA.

Command Default	FRR is disabled. Link protection is disabled.
-----------------	--

Command Modes	Interface configuration
---------------	-------------------------

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines When a protected link used by the fast-reroutable label switched path (LSP) fails, the traffic is rerouted to a previously assigned backup tunnel. Configuring FRR on the tunnel informs all the nodes that the LSP is traversing that this LSP desires link/bandwidth protection.

You must verify the redundancy is ready after an RP switchover before triggering FRR on standby RP to synchronize with the active RP (verified using the **show redundancy** command). All TE tunnels must be in the recovered state and the database must be in the ready state for all ingress and egress line cards. To verify this information, use the **show mpls traffic-eng tunnels** and **show mpls traffic-eng fast-reroute database** commands.



Note We recommend that you wait approximately 60 seconds before triggering FRR after verifying the database state.

If the priority associated with the specified tiebreaker is higher than any other tiebreakers, then the specified post-convergence backup path will be selected, if it is available.

Task ID	Task ID	Operations
	isis	read,
	ospf	write

Examples The following example shows how to enable FRR on an interface:


```
RP/0/RSP0/CPU0:R1 (config)# router isis 1  
RP/0/RSP0/CPU0:R1 (config-isis)# interface TenGigE0/0/0/2/1  
RP/0/RSP0/CPU0:R1 (config-isis-if)# point-to-point  
RP/0/RSP0/CPU0:R1 (config-isis-if)# address-family ipv4 unicast  
RP/0/RSP0/CPU0:R1 (config-isis-if)# fast-reroute per-prefix  
RP/0/RSP0/CPU0:R1 (config-isis-if)# fast-reroute per-prefix ti-lfa  
RP/0/RSP0/CPU0:R1 (config-isis-if)# exit
```

generic-metric flex-algo

To configure an application-specific user-defined generic metric for IS-IS interfaces, use the **generic-metric flex-algo** command in the IS-IS interface address-family submode.

```
generic-metric flex-algo type type value
```

Syntax Description	
type <type>	Specify the generic metric type. The range is 128–255.
<value>	Specify the flex-algo generic metric value. The range is 1–16777214.

Command Default By default, the generic metric is not used.

Command Modes IS-IS interface address-family submode.

Command History	Release	Modification
	Release 24.2.11	This command was introduced.

Usage Guidelines None.

Task ID	Task ID	Operations
	isis	read, write

Example

The following example shows how to configure a user-defined application-specific generic metric for an interface:

```
Router(config)#router isis 1
Router(config-isis)#interface GigabitEthernet 0/2/0/7
Router(config-isis-if)#address-family ipv4 unicast
Router(config-isis-if-af)#generic-metric flex-algo type 128 100
Router(config-isis-if-af)#commit
```

hw-module profile segment-routing srv6 mode

To enable Segment Routing over IPv6, use the **hw-module profile segment-routing srv6** command in XR Config mode.



Note Use the mandatory keyword **mode** from release 7.7.1 onwards.

```
hw-module profile segment-routing srv6 mode [ { base f1 } | { micro-segment format f3216 } ] [ path-mtu ] ]
```

Syntax Description	<p>Mode Defines the SRV6 format that are supported:</p> <ul style="list-style-type: none"> • Base: f1 (represents the base format 1). • Micro-segment format: f3216 (represents the format 3216, which is 32-bit block and 16-bit IDs). <p>path-mtu Enables Path MTU Discovery over Ingress, Egress, and P or Transit nodes (with IPv6 role).</p>
---------------------------	---

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes XR Config

Command History	Release	Modification
	Release 24.1.1	The path-mtu keyword was introduced.
	Release 7.7.1	Mode keyword is mandatory from release 7.7.1 onwards.
	Release 6.6.1	This command was introduced.

Usage Guidelines Use the mandatory keyword **mode** from release 7.7.1 onwards.
Do not use the keyword **mode** prior to release 7.7.1.
The router must be reloaded for the **hw-module profile segment-routing srv6** feature to be functional.

Task ID	Task ID	Operation
	system	read, write

Example

The following example shows how to enable Segment Routing over IPv6 for micro-segment format, from release 7.7.1 onwards:

```
Router(config)# hw-module profile segment-routing srv6 mode base f1
Router(config-srv6)# encapsulation
Router(config-srv6-encap)# l2-traffic
Router(config-srv6-encap-l2)# traffic-class propagate
In order to activate/deactivate this srv6 profile, you must manually reload the chassis/all
line cards
```

The following example shows how to enable Segment Routing over IPv6 for base, from release 7.7.1 onwards:

```
Router(config)# hw-module profile segment-routing srv6 mode micro-segment format f3216
Router(config-srv6)# encapsulation
Router(config-srv6-encap)# l3-traffic
Router(config-srv6-encap-l3)# traffic-class policy-map
In order to activate/deactivate this srv6 profile, you must manually reload the chassis/all
line cards
```

The following example shows how to enable Segment Routing over IPv6, prior to release 7.7.1:

```
Router# configure
Router(config)# hw-module profile segment-routing srv6
```

isis prefix-attributes n-flag-clear

To set the N-flag in the Prefix Attribute Flags sub-TLV to 0, use the **isis prefix-attributes n-flag-clear** command.

isis prefix-attributes n-flag-clear [level-1 | level-2]

Syntax Description

level-1 Clears the N-flag for level-1.

level-2 Clears the N-flag for level-2.

Command Default

The N-flag is set to 1 for host prefixes (/32 for IPv4 and /128 for IPv6).

Command Modes

Interface configuration

Command History

Release	Modification
Release 7.0.12	This command was introduced.

Usage Guidelines

The Prefix Attributes Flag sub Type Length Value (TLV) supports the advertisement of attribute flags associated with prefix advertisements. By default, the N-flag is set by IS-IS when advertising a SID that is associated with a loopback address. The advertising router may choose to not set this flag. When the N-flag is cleared, the N-flag is set to 0 in the Prefix Attribute Flags sub-TLV.

Prefix attributes are only added when wide metric is used.

Task ID

Task ID	Operation

This example shows how to clear the N-flag:

```
RP/0/RSP0/CPU0:router # configure
RP/0/RSP0/CPU0:router(config)# interface loopback0
RP/0/RSP0/CPU0:router(config-if)# isis prefix-attributes n-flag-clear
```

I2-adjacency sid

To manually configure a Layer 2 adjacency segment ID (Adj-SID) on an interface, use the **I2-adjacency sid** in adjacency SID interface address-family configuration mode. To remove the Layer 2 Adj-SID, use the **no** form of this command.

I2-adjacency sid {**index** *adj-SID-index* | **absolute** *adj-SID-value*} [**next-hop** *ipv4_address*]

Syntax Description	
index <i>adj-SID-index</i>	Specifies the Adj-SID for each link based on the lower boundary of the SRLB + the index.
absolute <i>adj-SID-value</i>	Specifies the specific Adj-SID for each link within the SRLB.
next-hop <i>ipv4_address</i>	(Optional) Specifies the next-hop neighbor IPv4 address.

Command Default None

Command Modes Adjacency SID interface address-family

Command History	Release	Modification
	Release 7.0.14	This command was introduced.

Usage Guidelines

For point-to-point interfaces, you are not required to specify a next-hop. However, if you do specify the next-hop, the Layer 2 Adj-SID will be used only if the specified next-hop matches the neighbor address.

For LAN interfaces, you must configure the next-hop IPv4 address. If you do not configure the next-hop, the Layer 2 Adj-SID will not be used for LAN interface.

Task ID	Task ID	Operation

Example

This example shows how to configure a Layer 2 Adj-SID on an interface:

```
RP/0/RP0/CPU0:ios(config)# segment-routing
RP/0/RP0/CPU0:ios(config-sr)# adjacency-sid
RP/0/RP0/CPU0:ios(config-sr-adj)# interface gigabitEthernet 0/0/0/3
RP/0/RP0/CPU0:ios(config-sr-adj-intf)# address-family ipv4 unicast
RP/0/RP0/CPU0:ios(config-sr-adj-intf-af)# I2-adjacency-sid index 300 next-hop 1.1.1.4
```

metric-type generic

To use the user-defined generic metrics as a metric for Flexible Algorithm Definition (FAD), use the **metric-type generic** command in the IS-IS flexible algorithm configuration mode.

```
metric-type generic type
```

Syntax Description	<type> Specify the generic metric type. The range is 128–255.	
Command Default	By default, the generic metric is not used.	
Command Modes	IS-IS Flex Algo.	
Command History	Release	Modification
	Release 24.2.11	This command was introduced.
Usage Guidelines	If a user-defined generic metric is enabled, the router advertises and uses the metrics for flexible algorithm computation.	
Task ID	Task ID	Operations
	isis	read, write

Example

The following example shows how to associate or advertise the configured user-defined generic metric to a Flexible Algorithm Definition. The user-defined application-specific generic metric is configured for an interface using the **generic-metric flex-algo** command.

```
Router(config)#router isis 1
Router(config-isis)#flex-algo 128
Router(config-isis-flex-algo)#priority 254
Router(config-isis-flex-algo)#metric-type generic 177
Router(config-isis-flex-algo)#advertise-definition
```

microloop avoidance rib-update-delay

To set the Routing Information Base (RIB) update delay value to avoid microloops in the network, use the **microloop avoidance rib-update-delay** command. To disable the RIB update delay, use the **no** form of this command.

microloop avoidance rib-update-delay *delay-time*

Syntax Description	<i>delay-time</i> Specifies the amount of time the node uses the microloop avoidance policy before updating its forwarding table. The <i>delay-time</i> is in milliseconds. The range is from 1-60000.
---------------------------	--

Command Default	The default value is 5000 milliseconds.
------------------------	---

Command Modes	IPv4 address family configuration Router configuration
----------------------	---

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines	Use this command with the microloop avoidance segment-routing command to specify how long the path to the destination is used. After the RIB update delay timer expires, the path is replaced with regular forwarding paths.
-------------------------	---

Task ID	Task ID	Operation
	ospf	read,
	isis	write

Example

This example shows how to set the Routing Information Base (RIB) update delay value for OSPF:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# router ospf 1
RP/0/RSP0/CPU0:router(config-ospf)# microloop avoidance segment-routing
RP/0/RSP0/CPU0:router(config-ospf)# microloop avoidance rib-update-delay 3000
```

This example shows how to set the Routing Information Base (RIB) update delay value for IS-IS:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# router isis 1
RP/0/RSP0/CPU0:router(config-isis)# address-family ipv4 unicast
RP/0/RSP0/CPU0:router(config-isis-af)# microloop avoidance segment-routing
```



```
RP/0/RSP0/CPU0:router(config-isis-af)# microloop avoidance rib-update-delay 3000
```

microloop avoidance segment-routing

To enable the segment routing microloop avoidance and set the Routing Information Base (RIB) update delay value, use the **microloop avoidance** command. To disable segment routing microloop avoidance, use the **no** form of this command.

microloop avoidance segment-routing

Command Default

Disabled.

Command Modes

IPv4 address family configuration

Router configuration

Command History

Release	Modification
Release 7.0.12	This command was introduced.

Usage Guidelines

The Segment Routing Microloop Avoidance feature detects if microloops are possible following a topology change. If a node computes that a microloop could occur on the new topology, the node creates a loop-free path to the destination using a list of segments. After the RIB update delay timer expires, the path is replaced with regular forwarding paths.

Task ID

Task ID	Operation
ospf	read,
isis	write

Example

This example shows how to enable Segment Routing Microloop Avoidance for OSPF:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# router ospf 1
RP/0/RSP0/CPU0:router(config-ospf)# microloop avoidance segment-routing
RP/0/RSP0/CPU0:router(config-ospf)# microloop avoidance rib-update-delay 3000
```

This example shows how to enable Segment Routing Microloop Avoidance for IS-IS:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# router isis 1
RP/0/RSP0/CPU0:router(config-isis)# address-family ipv4 unicast
RP/0/RSP0/CPU0:router(config-isis-af)# microloop avoidance segment-routing
RP/0/RSP0/CPU0:router(config-isis-af)# microloop avoidance rib-update-delay 3000
```

performance-measurement delay-profile name

To detect the delay of an name, use the **performance-measurement delay-profile name** command in global configuration. To disable the delay-profile, use the **no** form of the command.

```
performance-measurement delay-profile name value probe [ flow-label { explicit value
|from value to value increment value } | measurement-mode { one-way | two-way |
loopback } | sweep destination ipv4 ip-address range range-value | tos { dscp value | traffic-class
value } | tx-interval value ]
```

Syntax Description

flow-label { explicit <i>value</i> from <i>value</i> to <i>value</i> increment }	Specify explicit list of flow labels or specify the range. The range is from 1 to 28 flow labels.
measurement-mode { one-way two-way loopback }	Specify the delay measurement mode. There are three options: one-way: Measures the one way delay with timestamp 1 and 2. two-way: Measures the one way delay with timestamp 1, 2, 3 and 4 without clock synchronization. loopback: Measures the delay in loopback mode.
sweep destination ipv4 <i>ip-address</i> range <i>value</i>	Specify the sweep IP destination addresses to perform ECMP hashing. The IPv4 address range is 0 to 128.
tos { dscp <i>value</i> tos traffic-class <i>value</i> }	Specify the delay probe type of service. The allowed range for DSCP is 0 to 63. specify the traffic class value to indicate the TOS level used by protocol PM MPLS. The range is from 0 to 7.
tx-interval <i>value</i>	Specify the transmission interval. The allowed range is from 30000 to 15000000 micro seconds.
probe	Enter probe configuration submenu.

Command Default

The default measurement-mode is **one-way**.
The default ToS DSCP value is 48 for IP/UDP.

Command Modes

XR Config

Command History

Release	Modification
Release 7.4.1	This command was introduced.
Release 7.6.1	The name <i>name</i> keyword was deprecated. Use the performance-measurement delay-profile name command to create a named profile.
Release 24.2.11	The command is modified to include the flow-label keyword.

Example

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

```
Router(config)# performance-measurement
Router(config-perf-meas)# delay-profile endpoint default
Router(config-pm-dm-ep)# probe
Router(config-pm-dm-ep-probe)# measurement-mode one-way
```

The following example shows how to configure flow label for delay profile.

performance-measurement endpoint

To enable endpoint for the performance measurement, use the **performance-measurement endpoint** command in global configuration mode. To disable the endpoint, use the **no** form of the command.

```
performance-measurement endpoint ipv4 | ipv6 endpoint_ip_addr [vrf name] [delay-measurement [delay-profile name profile_name] | description description] [liveness-detection [liveness-profile name profile_name] | segment-list name sidlist_name] [source-address ipv4 | ipv6 source_ip_addr]
```

Syntax Description		
<i>endpoint_ip_addr</i>		IPv4 and IPv6 address of the endpoint.
<i>vrf name</i>		The name of the VRF instance.
delay-measurement		Enable delay-measurement on the endpoint.
delay-profile <i>name</i> <i>profile_name</i>		Specify an optional delay profile name.
description <i>description</i>		Specify a description for the endpoint.
liveness-detection		Enable liveness-detection on the endpoint.
liveness-profile <i>name</i> <i>profile_name</i>		Specify an optional liveness profile name.
segment-list <i>name</i> <i>sidlist_name</i>		Specify a segment list for the endpoint.
source-address ipv4 <i>source_ip_addr</i>		IPv4 address of the sender.
source-address ipv6 <i>source_ip_addr</i>		IPv6 address of the sender.

Command Default None

Command Modes XR Config

Command History	Release	Modification
	Release 24.2.11	The command was modified to include IPv6 endpoint.
	Release 7.4.1	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The following example show how to enable IPv4 endpoint for the delay measurement.

```
Router(config)# performance-measurement
Router(config-perf-meas)# endpoint ipv4 10.10.1.5
Router(config-pm-ep)# source-address ipv4 10.10.1.1
Router(config-pm-ep)# delay-measurement
```

The following example show how to configure IPv6 endpoint for liveness.

```
Router(config)#performance-measurement  
Router(config-perf-meas)#source-address ipv6 FCBB:0:1::  
Router(config-perf-meas)#endpoint ipv6 FCBB:0:5::  
Router(config-pm-ep)#exit  
Router(config-perf-meas)#liveness-profile endpoint default
```

performance-measurement interface

This command helps you configure the target interface with probe packets that transit Interface ID and timestamp templates within a network.

```
performance-measurement interface GigE 0/1/0/1
{ path-tracing { { interface-id {1-4095} | timestamp template {st0 / st1 / st2 / st3} } } }
```

Syntax Description	path-tracing	Enables path-tracing for the interface for tracing short timestamp, interface-id and interface load on source, midpoint and sink nodes in PT probes.
	interface-id	Enter interface ID that is between 1-4095. Default value is none. Interface ID value 0 is used internally to indicate PT is disabled on the interface.
	Timestamp template {st0 / st1 / st2 / st3}	Enter the Timestamp template you want to configure. You can apply global template type for short timestamp to st1 to overwrite the default value.

Command Default

Path tracing is disabled by default.

The default value for Interface ID is set to None.

The default value for timestamp template is set to st2.

Command Modes

XR Config

Command History	Release	Modification
	Release 7.8.1	This command was introduced.

Usage Guidelines

Enable path-tracing for the interface for tracing short timestamp, interface-id and interface load on source, midpoint and sink nodes in PT probes.

Examples

This example shows how to configure Path Tracing midpoint with InterfaceID and time-stamp:

```
Router(config)# performance-measurement
Router(config-pm)# interface FourHundredGigE0/0/0/1
Router(config-pm-interf)# path-tracing
Router(config-pm-interf-interf-id)# interface-id 200
Router(config-pm-interf-time)# timestamp template st3
Router(config-pm-interf-time)# exit
```

performance-measurement liveness-detection

To apply an SR performance measurement liveness profile to an SR-TE or an SRv6-TE policy, use the **performance-measurement liveness-detection** command in the SR-TE policy configuration mode. To disassociate the profile from the SR-TE policy, use the **no** form of the command.

```
performance-measurement liveness-detection [ liveness-profile [backup] name profile |
validation-cp minimum-active segment-lists [ 1-128 | all ] probe { burst-interval value |
tx-interval interval } ]
```

Syntax Description

liveness-profile [backup] name <i>profile</i>	(Optional) Specifies the liveness profile that is to be associated with the SR-TE policy. The name <i>profile</i> command form specifies the liveness profile, and the backup name <i>profile</i> command form specifies the backup liveness profile.
validation-cp minimum-active	(Optional) Validates the activeness of the candidate-path based on minimum number of active segment-lists.
segment-lists	Indicates the number of active segment-lists.
<i>1-128</i> all	<ul style="list-style-type: none"> 1-128: Indicates the minimum number of segment-lists to have the PM liveness session up. all: Indicates that all the segment-lists should be active to have the PM liveness session up.
probe	Enter endpoint liveness detection probe submode.
burst-interval <i>interval</i>	Specify the interval for sending probe packet. The range is from 30 to 15000 milliseconds.
tx-interval <i>value</i>	Specify the transmission interval. The allowed range is from 30000 to 15000000 micro seconds.
tos dscp <i>value</i>	Type of Service DSCP. The range is from 0 to 63.

Command Default

The Default performance measurement liveness profile is associated with an SR-TE policy.

Command Modes

SR-TE policy configuration (config-sr-te-policy)
On-Demand SR-TE policy configuration (config-sr-te-color)

Command History

Release	Modification
Release 7.11.1	The validation-cp minimum-active segment-lists option was introduced.
Release 7.10.1	The burst-interval <i>interval</i> keyword was deprecated.
Release 7.4.2	The backup keyword was added to the command.

Release	Modification
---------	--------------

Release 7.3.1	This command was introduced.
---------------	------------------------------

Usage Guidelines

Path protection policies do not fully support PCE reporting of the standby LSP.

Example

This example shows how to associate a liveness profile to an SR-TE policy:

```
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#policy TRST2
Router(config-sr-te-policy)#color 40 end-point ipv4 20.20.20.20
Router(config-sr-te-policy)#performance-measurement liveness-detection liveness-profile
name profile3
```

```
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#on-demand color 30
Router(config-sr-te-color)#performance-measurement liveness-detection liveness-profile name
profile3
Router(config-sr-te-color)#commit
```

This example shows how to associate a backup liveness profile to an SR-TE policy:

```
RP/0/RSP0/CPU0:ios# configure
RP/0/RSP0/CPU0:ios(config)#segment-routing traffic-eng
RP/0/RSP0/CPU0:ios(config-sr-te)#policy foo
RP/0/RSP0/CPU0:ios(config-sr-te-policy)# color 10 end-point ipv4 192.168.0.3
RP/0/RSP0/CPU0:ios(config-sr-te-policy)# performance-measurement
RP/0/RSP0/CPU0:ios(config-sr-te-policy-perf-meas)# liveness-detection
RP/0/RSP0/CPU0:ios(config-sr-te-policy-live-detect)# liveness-profile name profile-WORKING

RP/0/RSP0/CPU0:ios(config-sr-te-policy-live-detect)# liveness-profile backup name
profile-PROTECT
RP/0/RSP0/CPU0:ios(config-sr-te-policy-live-detect)# commit
```

This example shows how to activate two segment-lists to have the PM liveness session up:

```
Router(config)#segment-routing
Router(config-sr)#traffic-eng
Router(config-sr-te)#policy po-103
Router(config-sr-te-policy)#performance-measurement
Router(config-sr-te-policy-perf-meas)#liveness-detection
Router(config-sr-te-policy-live-detect)#validation-cp minimum-active segment-lists 2
```

performance-measurement liveness-profile

To create a unique Segment Routing performance measurement liveness profile, use the **performance-measurement liveness-profile** command in global configuration mode. To remove the profile, use the **no** form of the command.

```
performance-measurement liveness-profile [ name [ name npu-offload enable ] | probe
flow-label [ explicit | from ] ]
```

Table 2: Syntax Description

Syntax	Description
name <i>name</i>	Specifies the Segment Routing performance measurement liveness profile name.
npu-offload	Enables performance measurement liveness hardware (NPU) offload feature in the SR
probe	Enter the liveness detection probe sub mode.
flow-label	Indicates the flow labels associated with SRv6 header.
explicit from	Specify explicit flow label values or enter a range of flow labels that you want to configure. You can configure flow labels in the 0 to 1048575 range.

Command Default No user created performance measurement liveness profile exists.

Command Modes Global configuration (config)

Command History	Release	Modification
	Release 7.11.1	This command was introduced on Cisco 8011-2X2XP4L PLE Service Endpoint Router.
	Release 7.11.1	The flow-label keyword was introduced.

Usage Guidelines The **performance-measurement** command is also available in SR-TE specific configuration.

Example

This example shows how to create a unique Segment Routing performance measurement liveness profile:

```
Router(config)# performance-measurement liveness-profile name profile1
Router(config)# commit
```

This example shows how to configure flow labels in the SRv6 header:

```
Router#configure
Router(config)#performance-measurement
```

```
Router(config-perf-meas)#liveness-profile name profile-sweeping
Router(config-pm-ld-profile)# flow-label from 0 to 1000000 increment 12345
Routerconfig-pm-ld-profile)#commit
```

This example shows how to configure a range of flow labels in the SRv6 header:

```
Router#configure
Router(config)#performance-measurement
Router(config-perf-meas)#liveness-profile name name1
Router(config-pm-ld-profile)# probe flow-label from 0 to 1000000 increment 10
Routerconfig-pm-ld-profile)#commit
```

This example shows how to explicitly configure flow labels in the SRv6 header:

```
Router#configure
Router(config)#performance-measurement
Router(config-perf-meas)#liveness-profile name name1
Router(config-pm-ld-profile)# probe flow-label explicit 100 200 300 400 500
Routerconfig-pm-ld-profile)#commit
```

performance-measurement delay-profile

To create a unique Segment Routing performance measurement delay profile, use the **performance-measurement delay-profile** command in global configuration mode.

```
performance-measurement delay-profile { sr-policy default } { endpoint default } { interface default
} { name string name } advertisement { anomaly-loss } { anomaly-check } upper-bound <1-99>
lower-bound <number lower than the upper bound (0-98)>
```



Note Synthetic Loss Measurement is an inbuilt feature of delay measurement. To get the packet loss information for delay-measurement sessions, you only need to configure the delay sessions. No additional configuration is required for Synthetic Loss Measurement.

Syntax Description

name <i>string name</i>	(Optional) Specifies the Segment Routing performance measurement delay profile name.
sr-policy default	(Optional) Specifies the Segment Routing performance measurement default sr-policy name.
endpoint default	(Optional) Specifies the Segment Routing performance measurement default endpoint name.
interface default	(Optional) Specifies the Segment Routing performance measurement default interface.
advertisement	Specifies the Segment Routing performance measurement advertisement you want to configure.
anomaly-check	(optional) It checks the delay metrics, for example if the min delay changes exceed the configured threshold, it advertises ANOM-MIN-DYN; if you configured the anomaly-check and the static delay, and the configured static delay exceed the threshold, it advertises ANOM-MIN-STA.

You can configure the anomaly loss with **upper-bound** and **lower-bound** values.

- **upper-bound** specifies the upper limit for the anomaly check. It must be between 2-200000
- **lower-bound** specifies the lower limit for the anomaly check. It must be between 1-199999 and lower than the **upper-bound** value.

anomaly-loss (optional) Once the packet loss exceed the configured threshold, it advertises ANOM-PKT-LOSS.

You can configure the anomaly loss with **upper-bound** and **lower-bound** values.

- **upper-bound** specifies the upper limit for the anomaly loss. It must be between 1-99
- **lower-bound** specifies the lower limit for the anomaly loss. It must be between 0-98 and lower than the **upper-bound** value.

If both **anomaly-check** and **anomaly-loss** are triggered, then it advertises for anomaly-check, because it has a higher priority than anomaly-loss

- min delay changes = current min delay - previous min delay
- packet loss = (expected packet number - received packet number) / expect packet number * 100%

Command Default No user created performance measurement delay profile exists.

Command Modes Global configuration (config)

Command History	Release	Modification
	Release 24.1.1	This command was introduced.

Task ID	Task ID	Operation
	performance-measurement	write/read

Usage Guidelines The **performance-measurement** command is also available in SR-TE specific configuration.

Example

This example shows how to create a unique Segment Routing performance measurement delay profile:

```
Router(config)# performance-measurement delay-profile sr-policy name profile1
Router(config)# commit
```

This example shows the example of anomaly-loss:

```
Router(config)#performance-measurement
Router(config-perf-meas)#delay-profile sr-policy default
Router(config-pm-dm-srpolicy)#advertisement
Router(config-pm-dm-srpolicy-adv)#anomaly-loss
Router(config-pm-dm-srpolicy-adv-anom-loss)#upper-bound 30 lower-bound 20
Router(config-pm-dm-srpolicy-adv-anom-loss)#commit
```

This example shows the example of anomaly-check:

```
Router(config)#performance-measurement
```

```
Router(config-perf-meas)#delay-profile sr-policy default
Router(config-pm-dm-srpolicy)#advertisement
Router(config-pm-dm-srpolicy-adv)#anomaly-check
Router(config-pm-dm-srpolicy-adv-anom-loss)#upper-bound 2000 lower-bound 20
Router(config-pm-dm-srpolicy-adv-anom-loss)#commit
```

performance-measurement protocol twamp-light measurement delay

To configure the querier or responder nodes to accept packets from specific IP addresses on the network, use the **performance-measurement protocol twamp-light measurement delay** command in the global configuration mode. To remove the IP addresses, use the **no** form of the command.

```
performance-measurement protocol twamp-light measurement delay { querier allow
responder address { ipv4 | ipv6 } | responder allow querier address { ipv4 | ipv6 } |
unauthenticated { ipv4 | ipv6 | querier-dst-port | querier-src-port } }
```

Syntax Description		
querier	Enter the querier submode to configure the IP addresses on a querier node.	
responder	Enter the responder submode to configure the IP address on a responder node.	
allow responder	Specifies the allowed responder address on the querier node. The configuration is applicable to delay measurement sessions.	
allow querier	Specifies the allowed querier addresses on the responder node. The configuration is applicable to delay measurement sessions.	
address	Specifies the querier or responder IP addresses that are configured.	
{ ipv4 ipv6 }	Configure the allowed querier or responder ipv4 or ipv6 addresses. You can specify the prefix for the IP addresses.	
unauthenticated	Enter the unauthenticated submode to configure the IP address timestamp or the source and destination UDP ports.	
ipv4 ipv6	Configure the timestamp for ipv4 or ipv6 addresses.	
querier-dst-port	Configure the UDP port to process queries. By default, the TWAMP reserved UDP destination port is 862.	
querier-src-port	UDP port on Route Processor used as source port in queries.	
Command Default	None.	
Command Modes	Global Configuration	
Command History	Release	Modification
	Release 7.11.1	The querier and responder keywords were introduced.
	Release 7.0.1	This command was introduced.

Usage Guidelines None.

This example shows how to configure the IP address of a querier on a responder node for delay measurement.

```
Router#configure
Router (config) #performance-measurement
Router (config-perf-meas) #protocol twamp-light
Router (config-pm-protocol) #measurement delay
Router (config-pm-proto-meas) #responder
Router (config-pm-proto-responder) #allow-querier
Router (config-pm-allowed-querier) #address ipv4 10.10.10.1
Router (config-sr-te-color) #commit
```


ping mpls nil-fec labels

To check network connectivity and identify LSP breakages, use the **ping mpls nil-fec labels** command.

```
ping mpls nil-fec labels {label[,label...]} [output {interface tx-interface} [nexthop
next-hop-ip-address]]
```

Syntax Description	Labels	Description
	labels <i>label,label...</i>	Specifies the label stack. Use commas to separate the each <i>label</i> .
	output interface <i>tx-interface</i>	Specifies the output interface.
	nexthop <i>next-hop-ip-address</i>	(Optional) Causes packets to go through the specified next-hop address.

Command Default None

Command Modes XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operation
	mpls-te	read, write

Example

This example shows how to check connectivity for a known label stack using a specific output interface and next-hop address:

```
RP/0/RSP0/CPU0:router# ping mpls nil-fec labels 16005,16007 output interface GigabitEthernet
0/2/0/1 nexthop 10.1.1.4 repeat 1
Sending 1, 72-byte MPLS Echos with Nil FEC labels 16005,16007,
timeout is 2 seconds, send interval is 0 msec:
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no label entry,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'd' - see DDMAP for return code,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
!  
Success rate is 100 percent (1/1), round-trip min/avg/max = 1/1/1 ms  
Total Time Elapsed 0 ms
```

Related Commands

Command	Description
traceroute mpls nil-fec labels, on page 78	Checks network connectivity and identifying LSP breakages.

ping sr-mpls

To check the connectivity of the segment routing control plane, use the **ping sr-mpls** command in XR EXEC mode mode.

```
ping sr-mpls { ipv4-address/mask | ipv6-address/mask [ fec-type { bgp | generic | igp {
ospf | isis } } ] | nil-fec | dataplane-only { labels { label1 [ , label2... ] ipv4-address/mask
| ipv6-address/mask | policy } } { output { interface interface-path-id } } | { nexthop
next-hop-ip-address } }
```

Syntax Description		
ipv4-address/mask or ipv6-address/mask		Address prefix of the target and number of bits in the target address network mask.
fec-type		(Optional) Specifies the FEC type to be used. The default FEC type is generic. bgp Use FEC type as BGP. generic Use FEC type as generic igp Use FEC type as OSPF or IS-IS.
labels <i>label1, label2...</i>		Specifies the label stack. Use commas to separate each label.
dataplane-only		Specifies data plane validation without running actual traffic over LSPs.
output interface <i>interface-path-id</i>		Specifies the output interface where echo request packets are sent.
nexthop <i>next-hop-ip-address</i>		Causes packets to go through the specified IPv4 or IPv6 next-hop address.

Command Default **fec-type** : generic

Command Modes XR EXEC mode

Command History	Release	Modification
	Release 24.2.11	The dataplane-only keyword was introduced. Support for IPv6 next-hop address was added.
	Release 7.0.12	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	mpls-te	read, write

Example

These examples show how to use segment routing ping to test the connectivity of the segment routing control plane. In the first example, the FEC type is not specified. You can also specify the FEC type as shown in the second example.

```
RP/0/RP0/CPU0:router# ping sr-mpls 10.1.1.2/32
```

```
Sending 5, 100-byte MPLS Echos to 10.1.1.2/32,
timeout is 2 seconds, send interval is 0 msec:
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/2/5 ms
```

```
RP/0/RP0/CPU0:router# ping sr-mpls 10.1.1.2/32 fec-type igp ospf
```

```
Sending 5, 100-byte MPLS Echos to 10.1.1.2/32,
timeout is 2 seconds, send interval is 0 msec:
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/1/2 ms
```

The following example shows how to use segment routing ping to validate SR-MPLS over IPv6-based LSPs:

```
Router#ping sr-mpls dataplane-only 2001:DB8::1/32
Tue Jan 16 15:05:19.120 EST
```

```
Sending 5, 100-byte MPLS Echos with Nil FEC to 2001:DB8::1/32,
timeout is 2 seconds, send interval is 0 msec:
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
```

```
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
!!!!
```

```
Success rate is 100 percent (5/5), round-trip min/avg/max = 1/2/8 ms
```

The following example shows how to use segment routing ping for SR-TE policies with IPv6-based LSPs:

```
Router#ping sr-mps nil-fec policy name srte_c_40_ep_2001:DB8::1
Tue Feb  6 12:08:28.277 EST
```

```
Sending 5, 100-byte MPLS Echos with Nil FEC for SR-TE Policy srte_c_40_ep_2001:DB8::1,
timeout is 2 seconds, send interval is 0 msec:
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
!!!!
```

```
Success rate is 100 percent (5/5), round-trip min/avg/max = 2/2/3 ms
```

The following example shows how to use segment routing ping with labels using IPv6 LSPs:

```
Router#ping sr-mps labels 18004 lsp-end-point 2001:DB8::1
Tue Feb  6 12:11:05.349 EST
```

```
Sending 5, 100-byte MPLS Echos with NIL FEC with lsp end point 2001:DB8::1, SID Label(s)
[18004],
timeout is 2 seconds, send interval is 0 msec:
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
!!!!
```

```
Success rate is 100 percent (5/5), round-trip min/avg/max = 2/2/4 ms
```

prefix-sid

To specify or advertise prefix (node) segment ID (SID) on all routers, use the **prefix-sid** command in IS-IS interface address family or OSPF interface configuration mode. To stop advertising prefix SID, use the **no** form of this command.

```
prefix-sid [strict-spf] { index sid-index | absolute sid-value } [n-flag-clear] [explicit-null] [php-disable]
```

Syntax Description		
strict-spf		Specifies that the prefix-SID should use the SPF path.
index <i>sid-index</i>		Specifies the prefix SID based on the lower boundary of the SRGB + the index.
absolute <i>sid-value</i>		Specifies the specific prefix SID value within the SRGB.
n-flag-clear		Specifies that the prefix-SID is not a node-SID by setting the N flag in the prefix-SID sub Type Length Value (TLV) to 0.
explicit-null		Adds an explicit-Null label by setting the E flag in the prefix-SID sub TLV to 1. Automatically disables penultimate-hop-popping (PHP) by setting the P flag (IS-IS) or NP flag (OSPF) to 1.
php-disable		Disables penultimate-hop-popping (PHP) by setting the P flag (IS-IS) to 1.

Command Default

Prefix SID is a node SID (N-flag is set to 1).
 Explicit-Null label is not set (E-flag is set to 0).
 Penultimate-hop-popping (PHP) is not set (P-flag is set to 0).

Command Modes

IS-IS interface address-family configuration
 OSPF interface configuration

Command History	Release	Modification
	Release 7.0.12	This command was introduced.
	Release 7.5.4	The php-disable keyword was introduced for IS-IS.

Usage Guidelines

Segment routing must be configured on the ISIS instance or on the OSPF process, area, or interface before configuring prefix SID value.

Strict-SPF SIDs are used to forward traffic strictly along the SPF path. Strict-SPF SIDs are not forwarded to SR-TE policies. IS-IS advertises the SR Algorithm sub Type Length Value (TLV) (in the SR Router Capability SubTLV) to include both algorithm 0 (SPF) and algorithm 1 (Strict-SPF). When the IS-IS area or level is Strict-SPF TE-capable, Strict-SPF SIDs are used to build the SR-TE Strict-SPF tunnels. Strict-SPF SIDs are also used to program the backup paths for prefixes, node SIDs, and adjacency SIDs.



Note The same SRGB is used for both regular SIDs and strict-SPF SIDs.

The **explicit-null** keyword disables penultimate-hop-popping (PHP) and adds an explicit-Null label. Any upstream neighbor of the Prefix-SID originator replaces the Prefix-SID with a Prefix-SID having an Explicit NULL value.

The **php-disable** keyword disables penultimate-hop-popping (PHP) for IS-IS. The penultimate hop will not pop the Prefix-SID before delivering the packet to the node that advertised the Prefix-SID.

Task ID	Task ID	Operations
	isis	read, write
	ospf	

Examples

This example shows how to configure a prefix SID.

```
RP/0/RSP0/CPU0:router # configure
RP/0/RSP0/CPU0:router(config)# router isis 100
RP/0/RSP0/CPU0:router(config-isis)# interface loopback0
RP/0/RSP0/CPU0:router(config-isis-if)# address-family ipv4 unicast
RP/0/RSP0/CPU0:router(config-isis-if-af)# prefix-sid index 1001
```

This example shows how to configure an absolute prefix SID on an OSPF interface.

```
RP/0/RSP0/CPU0:router # configure
RP/0/RSP0/CPU0:router(config)# router ospf 1
RP/0/RSP0/CPU0:router(config-ospf)# area 0
RP/0/RSP0/CPU0:router(config-ospf-ar)# interface loopback0
RP/0/RSP0/CPU0:router(config-ospf-ar-if)# prefix-sid absolute 16041
```

Related Commands

Command	Description
segment-routing global-block, on page 46	Configures the segment routing global block (SRGB).

prefix-unreachable

Use this command for UPA advertisements by enabling individual control parameters.

The new **prefix-unreachable** command under IS-IS address-family submode includes several command-options that control various parameters for UPAs originated by the router.

```
prefix-unreachable { adv-lifetime <value> | adv-metric <value> | adv-maximum <value> | rx-process-enable }
```

Syntax Description	Keyword	Details
	prefix-unreachable	Lists the control options of UPA.
	adv-lifetime	<ul style="list-style-type: none"> This command is optional. Amount of time the UPA will be advertised after the prefix becomes unreachable. Range of values is 30–65535 seconds. Default value is 180 seconds.
	adv-metric	<ul style="list-style-type: none"> This command is optional. Metric used when advertising UPA. Range of values is 4261412865–4294967294 (0xFE000001 to 0xFFFFFFF0). Default value is 4261412865 (0xFE000001).
	adv-maximum	<ul style="list-style-type: none"> This command is optional. UPAs that are leaked or propagated are not counted against this limit. Maximum number of UPAs that the router is allowed to generate to any of its attached areas or domains. UPAs that are leaked, propagate, or redistributed are not counted against this limit. Range of values is 1–65535. Default value is 32.
	rx-process-enable	<ul style="list-style-type: none"> This command is optional. If enabled, the UPA received by the router is sent to RIB and is used to trigger the BGP PIC. It is disabled by default.

Command Default	None.
Command Modes	IS-IS interface address-family configuration

Task ID	Task ID	Operations
	IS-IS	read, write

Examples

This example shows how to configure UPA.

```
Router(config)#router isis 1
Router(config-isis)#address-family ipv6 un
Router(config-isis-af)#prefix-unreachable
Router(config-isis-prefix-unreachable)#adv-lifetime 500
Router(config-isis-prefix-unreachable)#adv-metric 4261412866
Router(config-isis-prefix-unreachable)#adv-maximum 77
Router(config-isis-prefix-unreachable)#rx-process-enable
Router(config-isis-prefix-unreachable)#commit
```

partition-detect

Use **partition-detect** command for an area or domain partition detection. It is a new command under IS-IS address-family sub-mode.

partition-detect { **track** *IPv4 address / IPv6 address [external-id IPv4 -address / IPv6 address]*

Syntax Description	Keyword	Details
	track <i>IPv4 address / IPv6 address [external-id IPv4 -address / IPv6 address]</i>	Tracks the reachability of the specific ABR or ASBR. This command is under the partition-detect sub-mode. <ul style="list-style-type: none"> • Only IPv4 address is allowed under IPv4 address-family sub-mode and only IPv6 address is allowed under IPv6 address-family sub-mode. • external-id is only used for ASBR tracking. External-id is the address of the ASBR, in other domain.

Command Default None.

Command Modes IS-IS interface address-family configuration

Command History	Release	Modification
	Release 7.10.1	This command was introduced.

Task ID	Task ID	Operations
	IS-IS	read, write

Examples This example shows how to configure partition-detect.

```
Router(config)#router isis 1
Router(config-isis)#address-family ipv6 unicast
Router(config-isis-af)#router-id 2001:DB8:4::4
Router(config-isis-af)#partition-detect
Router(config-isis-af)#track 2001:DB8:1::1
Router(config-isis-af)#commit
```

summary-prefix

Use the exiting **summary-prefix** command for UPA advertisement.

```
summary-prefix prefix/mask level 1 or 2 [ tag value ] [ adv-unreachable { unreachable-component-tag value partition-repair } ]
```

Syntax Description	Keyword	Details
	level <i>1 or 2</i>	Enter the border router values 1 or 2. To set the border router level for UPA.
	tag <i>value</i>	Enter the tag value for which you want to enable the UPA.
	adv-unreachable	The new keyword adv-unreachable controls the UPA advertisement for the components of the summary. The new adv-unreachable keyword is optional and disabled by default.
	unreachable-component-tag <i>value</i>	The unreachable-component-tag is used to limit UPAs to those components of the summary that are advertised with a specific tag value. The unreachable-component-tag keyword is disabled by default and UPA is generated for all components of the summary if enabled by the adv-unreachable keyword.
	partition-repair	In case the area (domain) partition is detected, the summary is suppressed, and more specific prefixes are advertised.

Command Default None.

Command Modes IS-IS address-family configuration

Command History	Release	Modification
	Release 7.10.1	The partition-repair keyword was introduced.
	Release 7.8.1	This command was introduced.

Usage Guidelines New commands are added under the exiting IS-IS address-family sub-mode **summary-prefix** command.

Task ID	Task ID	Operations
	IS-IS	read, write

Examples

This example shows how to configure Summary-Prefix for UPA.

```
Router(config)#router isis 1
Router(config)#router isis 1
Router(config-isis)#address-family ipv6 unicast
Router(config-isis-af)#router-id 2001:DB8:4::4
Router(config-isis-af)#summary-prefix 2001:DB8::/32 level 2 partition-repair
Router(config-isis-af)#summary-prefix 2001:DB9::/32 level 2 algorithm 128 partition-repair
```

segment-routing bundle-member-adj-sid

To program the dynamic Layer 2 Adj-SIDs, and advertise either manual and dynamic Layer 2 Adj-SIDs, use the **segment-routing bundle-member-adj-sid** in IS-IS interface address-family configuration mode. To disable this command, use the **no** form of this command.

segment-routing bundle-member-adj-sid

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes IS-IS interface address-family configuration

Command History	Release	Modification
	Release 7.0.14	This command was introduced.

Usage Guidelines This command is not required to program manual L2 Adj-SID, but is required to program the dynamic Layer 2 Adj-SIDs and to advertise either manual and dynamic Layer 2 Adj-SIDs.

If manual Adj-SIDs are configured on the bundle interface members, IS-IS advertises the manual Adj-SID.

If manual Adj-SIDs are not configured for the bundle member interface, IS-IS advertises the dynamic Adj-SID.

Example

This example shows how to program the dynamic Layer 2 Adj-SIDs, and advertise either manual and dynamic Layer 2 Adj-SIDs:

```
RP/0/RP0/CPU0:ios(config)# router isis 1
RP/0/RP0/CPU0:ios(config-isis)# address-family ipv4 unicast
RP/0/RP0/CPU0:ios(config-isis-af)# segment-routing bundle-member-adj-sid
RP/0/RP0/CPU0:ios(config-isis-af)#
```

segment-routing global-block

To configure the segment routing global block (SRGB), use the **segment-routing global-block** command in XR Config mode.

segment-routing global-block *starting_value ending_value*

Syntax Description	<i>starting_value ending_value</i> Specifies the block of segment routing IDs that are allocated for the routers in the network. Ranges from 16000 to 1048574.
---------------------------	--

Command Default	Default SRGB range is 16000 to 23999.
------------------------	---------------------------------------

Command Modes	XR Config mode
----------------------	----------------

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines	<p>To keep the segment routing configuration simple and to make it easier to troubleshoot segment routing issues, we recommend that you use the default SRGB range on each node in the domain. However, there are instances when you might need to define a different range:</p>
-------------------------	--

- The nodes of another vendor support a label range that is different from the default SRGB, and you want to use the same SRGB on all nodes.
- The default range is too small.
- To specify separate SRGBs for IS-IS and OSPF protocols, as long as the ranges do not overlap.

Because the values assigned from the range have domain-wide significance, we recommend that all routers within the domain be configured with the same range of values.

Task ID	Task ID	Operation
	mpls-te	read, write

Example

This example shows how to configure the SRGB range:

```
RP/0/RSP0/CPU0:router(config)# segment-routing global-block 17000 20000
```

Related Commands

Command	Description
prefix-sid, on page 38	Configures the segment ID (SID).

segment-routing local-block

To configure the segment routing local block (SRLB), use the **segment-routing local-block** command in XR Config mode.

segment-routing local-block *starting_value ending_value*

Syntax Description	<i>starting_value ending_value</i> Specifies the block of labels that are reserved for manual allocation of adjacency segment IDs (Adj-SIDs). Ranges from 15000 to 1048574.
---------------------------	---

Command Default	Default SRLB range is 15000 to 15999.
------------------------	---------------------------------------

Command Modes	XR Config mode
----------------------	----------------

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines When you define a new SRLB range, there might be a label conflict (for example, if labels are already allocated, statically or dynamically, in the new SRLB range). In this case, the new SRLB range will be accepted, but not applied (pending). The previous SRLB range (active) will continue to be in use until one of the following occurs:

- Reload the router to release the currently allocated labels and allocate the new SRLB
- Use the **clear segment-routing local-block discrepancy all** command to clear the label conflicts

The SRLB size cannot be more than 262,143.

To keep the segment routing configuration simple and to make it easier to troubleshoot segment routing issues, we recommend that you use the default SRLB range on each node in the domain. However, there are instances when you might need to define a different range:

- The nodes of another vendor support a label range that is different from the default SRLB, and you want to use the same SRLB on all nodes.
- The default range is too small.

Because the values assigned from the range have domain-wide significance, we recommend that all routers within the domain be configured with the same range of values.

Task ID	Task ID	Operation
	mpls-te	read, write

This example shows how to configure the SRLB range:


```
RP/0/RSP0/CPU0:router(config)# segment-routing local-block 18000 19999
```

Related Commands	Command	Description
	clear segment-routing local-block discrepancy all, on page 5	Clears SRLB label conflicts
	show segment-routing local-block inconsistencies, on page 75	Displays SRLB label conflicts

segment-routing mapping-server

To configure the segment routing mapping server (SRMS), use the **segment-routing mapping-server** command in XR Config mode.

```
segment-routing mapping-server prefix-sid-map address-family { ipv4 | ipv6 } ip_address/subnet_mask
SID_start_value range range
```

Syntax Description

address-family { **ipv4** | **ipv6** } Configures the address family for IS-IS.

ip_address/subnet_mask Specifies the prefix and mask.

SID_start_value Specifies the first prefix SID in the range.

range *range* Specifies the size of the range.

Command Default

None

Command Modes

XR Config mode

Command History

Release	Modification
Release 7.0.12	This command was introduced.

Usage Guidelines

The position of the mapping server in the network is not important. However, since the mapping advertisements are distributed in IGP using the regular IGP advertisement mechanism, the mapping server needs an IGP adjacency to the network.

The role of the mapping server is crucial. For redundancy purposes, you should configure multiple mapping servers in the networks.

Task ID

Task ID	Operation
mpls-te	read, write

Example

This example shows how to configure the mapping server and add prefix-SID mapping entries in the active local mapping policy:

```
RP/0/RSP0/CPU0:router(config)# segment-routing mapping-server prefix-sid-map address-family
ipv4 10.1.1.1/32 17000 range 100
```

Related Commands

Command	Description
segment-routing prefix-sid-map advertise-local, on page 53	Enables the router to advertise the SRMS entries that are locally configured.
segment-routing prefix-sid-map receive disable, on page 55	Disables mapping client functionality.
show segment-routing mapping-server prefix-sid-map, on page 76	Displays the active and backup prefix-to-SID mappings for IS-IS.
show ospf segment-routing prefix-sid-map, on page 69	Displays the active and backup prefix-to-SID mappings for OSPF.
show segment-routing mapping-server prefix-sid-map, on page 76	Displays the locally configured prefix-to-SID mappings.

segment-routing mpls

To enable segment routing for IPv4 addresses with MPLS data plane, use the **segment-routing mpls** command in IPv4 address family configuration mode. To disable segment routing, use the **no** form of this command.

segment-routing mpls

Syntax Description	mpls Enables segment routing for IPv4 addresses with MPLS data plane.
---------------------------	--

Command Default	No default behavior or values.
------------------------	--------------------------------

Command Modes	IPv4 address family configuration Router configuration Area configuration
----------------------	---

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

Task ID	Task ID	Operation
	mpls-te	read, write

Example

This example shows how to enable segment routing with MPLS data plane.

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# router isis 100
RP/0/RSP0/CPU0:router(config-isis)# address-family ipv4 unicast
RP/0/RSP0/CPU0:router(config-isis-af)# segment-routing mpls
```

segment-routing prefix-sid-map advertise-local

To enable the router to advertise the segment routing mapping server (SRMS) entries that are locally configured, use the **segment-routing prefix-sid-map advertise-local** command. In addition to advertising these local SRMS entries, these mapping entries are also used to calculate segment ID (SID).

segment-routing prefix-sid-map advertise-local

Syntax Description	advertise-local Advertises the SRMS mapping entries that are locally configured.
---------------------------	---

Command Default	Disabled.
------------------------	-----------

Command Modes	IPv4 address family configuration Router configuration
----------------------	---

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

Task ID	Task ID	Operation
	ospf isis	read, write

Example

This example shows how to enable the router to advertise the locally configured SRMS entries:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# router ospf 1
RP/0/RSP0/CPU0:router(config-ospf)# segment-routing prefix-sid-map advertise-local
```

Related Commands	Command	Description
	segment-routing mapping-server, on page 50	Configures the segment routing mapping server (SRMS).
	segment-routing prefix-sid-map receive disable, on page 55	Disables mapping client functionality.
	show isis segment-routing prefix-sid-map, on page 59	Displays the active and backup prefix-to-SID mappings for IS-IS.

Command	Description
show ospf segment-routing prefix-sid-map , on page 69	Displays the active and backup prefix-to-SID mappings for OSPF.
show segment-routing mapping-server prefix-sid-map , on page 76	Displays the locally configured prefix-to-SID mappings.

segment-routing prefix-sid-map receive disable

To disable mapping client functionality, use the **segment-routing prefix-sid-map receive disable** command. To reenable client functionality, use the **segment-routing prefix-sid-map receive** command.

segment-routing prefix-sid-map receive [**disable**]

Syntax Description	receive	Only remote SRMS mapping entries are used for SID calculation.
	disable	Disable remote SRMS mapping entries received by flooding.

Command Default Enabled.

Command Modes IPv4 address family configuration
Router configuration

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines The mapping client functionality is enabled by default. When you disable client functionality, the SRMS active policy is calculated without remote SRMS entries.

You can use this command with the **segment-routing prefix-sid-map advertise-local** command simultaneously.

Task ID	Task ID	Operation
	ospf isis	read, write

Example

This example shows how to disable the mapping server client functionality:

```
RP/0/RSP0/CPU0:router(config)# router isis 1
RP/0/RSP0/CPU0:router(config-isis)# address-family ipv4 unicast
RP/0/RSP0/CPU0:router(config-isis-af)# segment-routing prefix-sid-map receive disable
```

Related Commands	Command	Description
	segment-routing mapping-server, on page 50	Configures the segment routing mapping server (SRMS).

Command	Description
segment-routing prefix-sid-map advertise-local , on page 53	Enables the router to advertise the SRMS entries that are locally configured.
show isis segment-routing prefix-sid-map , on page 59	Displays the active and backup prefix-to-SID mappings for IS-IS.
show ospf segment-routing prefix-sid-map , on page 69	Displays the active and backup prefix-to-SID mappings for OSPF.
show segment-routing mapping-server prefix-sid-map , on page 76	Displays the locally configured prefix-to-SID mappings.

segment-routing traffic-eng explicit

To detect the liveness of the reverse path of the segment list and the configure the segment list, use the **segment-routing traffic-eng explicit** command in performance measurement configuration mode. To disable the reverse path, use the **no** form of the command.

```
segment-routing traffic-eng explicit { reverse-path segment-list name segment-list-name
| segment-list name segment-list-name reverse-path segment-list name segment-list-name }
```

Syntax Description	reverse-path	Specifies the return path on the endpoint for liveness detection.
	segment-listname <i>segment-list-name</i>	Specifies the segment list on the endpoint for liveness detection and delay.
Command Default	None	
Command Modes	Performance measurement endpoint submode	
Command History	Release	Modification
	Release 24.2.11	This command was introduced.

Usage Guidelines

The default reverse path configured under endpoint submode is only used for sessions with segment list. The endpoint session without a segment list does not support reverse path configuration and will not use this reverse path.

The **reverse-path** under the **performance-measurement endpoint** is used as the default reverse path if there are no reverse paths configured under a segment list.

Use the **reverse-path** under the **performance-measurement endpoint segment-routing traffic-eng explicit segment-list name fwd-path** to configure reverse path under a segment list.

The reverse type must be the same as the forward path. Using different types for forward and reverse paths is not supported. For example, uSID forward path and uSID reverse path; MPLS forward path and MPLS reverse path.

User-configured segment-list can also represent the reverse path (reflector to sender) when probe is configured in liveness detection mode. Up to 128 segment-lists can be configured under a probe. An additional PM session is created for each segment-list. Segment-lists are configured under **segment-routing traffic-eng segment-list** submode. See [SR-TE Policy with Explicit Path](#) for details about configuring segment lists.

The following example shows how to configure liveness of the reverse path of the segment list:

The following example shows how to configure liveness reverse path under segment list and under endpoint:

```
Router(config)#performance-measurement
Router(config-perf-meas)#endpoint ipv6 ff::2

/* Configure reverse path segment-list with forward segment-list*/
Router(config-pm-ep)#segment-routing traffic-eng explicit segment-list name fwd-path
```

```
Router(config-pm-ep-sl)#reverse-path segment-list name rev-path
Router(config-pm-ep-sl)#exit

/* Configure reverse-path segment list on the endpoint*\
Router(config-pm-ep)# segment-routing traffic-eng explicit reverse-path segment-list name
rev-path-name
```

show isis segment-routing prefix-sid-map

To verify the active and backup prefix-to-SID mappings for IS-IS, use the **show isis segment-routing prefix-sid-map** command in XR EXEC mode.

show isis segment-routing prefix-sid-map [**active-policy** | **backup-policy**]

Syntax Description	
	active-policy (Optional) Specifies the active mapping policy.
	backup-policy (Optional) Specifies the backup mapping policy.

Command Default None

Command Modes XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operation
	isis	read

Example

The example shows how to verify the active mapping policy on IS-IS:

```
RP/0/0/CPU0:router# show isis segment-routing prefix-sid-map active-policy
```

```
IS-IS 1 active policy
Prefix          SID Index  Range  Flags
1.1.1.100/32    100       20
1.1.1.150/32    150       10
```

Number of mapping entries: 2

The example shows how to verify the backup mapping policy on IS-IS:

```
RP/0/0/CPU0:router# show isis segment-routing prefix-sid-map backup-policy
```

```
IS-IS 1 backup policy
Prefix          SID Index  Range  Flags
1.1.1.100/32    100       20
1.1.1.150/32    150       10
```

Number of mapping entries: 2

Related Commands

Command	Description
segment-routing mapping-server, on page 50	Configures the segment routing mapping server (SRMS).
segment-routing prefix-sid-map advertise-local, on page 53	Enables the router to advertise the SRMS entries that are locally configured.
segment-routing prefix-sid-map receive disable, on page 55	Disables mapping client functionality.
show ospf segment-routing prefix-sid-map, on page 69	Displays the active and backup prefix-to-SID mappings for OSPF.
show segment-routing mapping-server prefix-sid-map, on page 76	Displays the locally configured prefix-to-SID mappings.

show mrib nsf private

To display the state of nonstop forwarding (NSF) operation in the Multicast Routing Information Base (MRIB), use the **show mrib nsf private** command in the appropriate mode.

show mrib nsf private

Syntax Description	show mrib nsf private Displays the state of NSF operation in the MRIB.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	XR EXEC mode
----------------------	--------------

Table 3: Release History

Release	Modification
Release 7.10.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

The **show mrib nsf private** command displays the current multicast NSF state for the MRIB. The state may be normal or activated for NSF. The activated state indicates that recovery is in progress due to a failure in MRIB or Protocol Independent Multicast (PIM). The total NSF timeout and time remaining are displayed until NSF expiration.

Table 4: Task ID

Release	Modification
multicast	read

Example

The example shows how to verify the Non Stop Forwarding:

```
Router#show mrib nsf private
IP MRIB Non-Stop Forwarding Status:
Multicast routing state: Normal
NSF Lifetime:          00:03:00
Respawn Count: 6
Last NSF On triggered: Tue Jul 25 13:20:49 2023, 6d00h
Last NSF Off triggered: Tue Jul 25 13:22:49 2023, 6d00h
Last NSF ICD Notification sent: Tue Jul 25 13:22:49 2023, 6d00h
Last Remote NSF On triggered: Tue Jul 25 13:10:18 2023, 6d00h
Last Remote NSF Off triggered: Tue Jul 25 13:10:27 2023, 6d00h
Last Label TE NSF On triggered: Tue Jul 25 13:10:18 2023, 6d00h
Last Label TE NSF Off triggered: Tue Jul 25 13:10:27 2023, 6d00h
Last Label mLDP NSF On triggered: Tue Jul 25 13:10:18 2023, 6d00h
Last Label mLDP NSF Off triggered: Tue Jul 25 13:10:27 2023, 6d00h
```

```
Last Label PIM NSF On triggered: Tue Jul 25 13:20:49 2023, 6d00h
Last Label PIM NSF Off triggered: Tue Jul 25 13:22:49 2023, 6d00h
Last Label PIM6 NSF On triggered: Tue Jul 25 13:31:22 2023, 5d23h
Last Label PIM6 NSF Off triggered: Tue Jul 25 13:33:22 2023, 5d23h
Last Label XTC NSF On triggered: Tue Jul 25 13:41:51 2023, 5d23h
Last Label XTC NSF Off triggered: Tue Jul 25 13:41:52 2023, 5d23h

IP NSF :- Active: N, Assume N
MRIB connect timer: Inactive
NSF statistics:
  Enabled Cnt - 4, Disabled Cnt - 4
  Last Enabled: 6d00h, Last Disabled: 6d00h
Multicast COFO routing state: Normal
Current LMRIB clients: LDP RSVP_TE PIM PIM6 XTC
LMRIB NSF clients: LDP RSVP_TE PIM PIM6 XTC
Converged LMRIB clients: LDP RSVP_TE PIM PIM6 XTC
RP/0/RSP0/CPU0:tb8-R2#
```

show ospf route flex-algo

To display the OSPF routing table for flexible algorithm, use the **show ospf routes flex-algo** command in the EXEC mode.

```
show ospf routes flex-algo [number] [ prefix / prefix_len | route-type { external | inter | intra } ] [backup-path] [detail]
```

Syntax Description		
<i>number</i>	Specifies the flexible algorithm number. The range is from 128 to 255.	
<i>IP address/prefix</i>	Specifies IP address along with the subnet mask.	
backup-path	Displays the backup-path information of the OSPF routes.	
detail	Displays the detailed information of the OSPF routes.	
route-typeexternal	Displays OSPF external routes.	
route-typeinter	Display OSPF inter area routes.	
route-typeintra	Displays OSPF intra area routes.	

Command Default None

Command Modes EXEC mode

Command History	Release	Modification
	Release 7.5.1	This command was introduced.

Usage Guidelines Use the **show ospf routes flex-algo** command to display the OSPF private routing table for flexible algorithm (which contains only flexible algorithm routes calculated by OSPF). If there is something wrong with a route in the MPLS forwarding table and RIB, then it is useful to check the OSPF copy of the route to determine if it matches the RIB and MPLS forwarding entries. If it does not match, there is a synchronization problem between OSPF and the MPLS. If the routes match and the route is incorrect, OSPF has made an error in its routing calculation.

Example

This following show output displays the external route type configured:

```
Router#show ospf routes flex-algo 240 route-type external detail
Route Table of ospf-1 with router ID 192.168.0.2 (VRF default)

Algorithm 240

Route entry for 192.168.4.3/32, Metric 220, SID 536, Label 16536
Priority : Medium

Route type : Extern Type 1
```

```

Last updated : Apr 25 14:30:12.718
Flags: Inuse

Prefix Contrib Algo 240 SID 536
From 192.168.0.4 Route-type 5
Total Metric : 220 Base metric 20 FAPM 20
Contrib Flags : Inuse, Reachable
SID Flags : PHP off, Index, Global, Valid

Path: 10.1.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2
Out Label : 16536
Weight : 0
Area : 0

Path: 10.1.2.3, from 192.168.0.4, via GigabitEthernet0/2/0/3
Out Label : 16536
Weight : 0
Area : 0

Path: 10.2.1.5, from 192.168.0.4, via GigabitEthernet0/2/0/4
Out Label : 16536
Weight : 0
Area : 0

Route entry for 192.168.4.5/32, Metric 120, SID 556, Label 16556
Priority : Medium

Route type : Extern Type 1
Last updated : Apr 25 14:30:12.724
Flags: Inuse

Prefix Contrib Algo 240 SID 556
From 192.168.0.3 Route-type 5
Total Metric : 120 Base metric 1 FAPM 20
Contrib Flags : Inuse, Reachable
SID Flags : PHP off, Index, Global, Valid

Path: 10.1.1.3, from 192.168.0.3, via GigabitEthernet0/2/0/2
Out Label : 16556
Weight : 0
Area : 0

Path: 10.1.2.3, from 192.168.0.3, via GigabitEthernet0/2/0/3
Out Label : 16556
Weight : 0
Area : 0

```

The following show output displays label information for flexible algorithm and its corresponding metric as added in RIB:

```

RP/0/RP0/CPU0:ios# show route 192.168.0.2/32 detail
Wed Apr 6 16:24:46.021 IST

Routing entry for 192.168.0.2/32
Known via "ospf 1", distance 110, metric 2, labeled SR, type intra area
Installed Apr 6 15:51:57.973 for 00:32:48
Routing Descriptor Blocks
 10.10.10.2, from 192.168.0.2, via GigabitEthernet0/2/0/0, Protected
  Route metric is 2
  Label: 0x3 (3)
  Tunnel ID: None
  Binding Label: None
  Extended communities count: 0
  Path id:1 Path ref count:0

```



```

    NHID:0x1(Ref:1)
    Backup path id:65
    OSPF area: 1
10.11.11.2, from 192.168.0.2, via GigabitEthernet0/2/0/1, Backup (Local-LFA)
    Route metric is 6
    Label: 0x3 (3)
    Tunnel ID: None
    Binding Label: None
    Extended communities count: 0
    Path id:65          Path ref count:1
    NHID:0x2(Ref:1)
    OSPF area:
Route version is 0x12 (18)
Local Label: 0x3ee6 (16102)
Local Label Algo Set (ID, Label, Metric): (1, 16202, 0), (128, 17282, 2)
IP Precedence: Not Set
QoS Group ID: Not Set
Flow-tag: Not Set
Fwd-class: Not Set
Route Priority: RIB_PRIORITY_NON_RECURSIVE_MEDIUM (7) SVD Type RIB_SVD_TYPE_LOCAL
Download Priority 1, Download Version 38
No advertising protos.

```

The following example shows the backup path for each path:

```
Router#show ospf routes flex-algo 240 route-type external backup-path
```

```
Route Table of ospf-1 with router ID 192.168.0.2 (VRF default)
```

```

Algorithm 240

192.168.4.3/32, Metric 220, SID 536, Label 16536
  10.1.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2
    Backup path:
      10.23.2.3, from 192.168.0.4, via GigabitEthernet0/2/0/3,
      Out Label: 16536
      Attributes: Metric: 220, Primary , Downstream, Interface Disjoint, SRLG
Disjoint
  10.1.2.3, from 192.168.0.4, via GigabitEthernet0/2/0/3
    Backup path:
      10.23.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2,
      Out Label: 16536
      Attributes: Metric: 220, Primary , Downstream, Interface Disjoint, SRLG
Disjoint
  10.1.1.5, from 192.168.0.4, via GigabitEthernet0/2/0/4
    Backup path:
      10.23.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2,
      Out Label: 16536
      Attributes: Metric: 220, Primary , Downstream, Node Protect, Interface Disjoint,
SRLG Disjoint
192.168.4.5/32, Metric 120, SID 556, Label 16556
  10.1.1.3, from 192.168.0.3, via GigabitEthernet0/2/0/2
    Backup path:
      10.23.2.3, from 192.168.0.3, via GigabitEthernet0/2/0/3,
      Out Label: 16556
      Attributes: Metric: 120, Primary , Downstream, Interface Disjoint, SRLG
Disjoint
  10.1.2.3, from 192.168.0.3, via GigabitEthernet0/2/0/3
    Backup path:
      10.1.1.3, from 192.168.0.3, via GigabitEthernet0/2/0/2,
      Out Label: 16556
      Attributes: Metric: 120, Primary , Downstream, Interface Disjoint, SRLG
Disjoint

```

The following example shows details of the route, but not the backup paths:

```
Router#show ospf routes flex-algo 240 route-type external detail

Route Table of ospf-1 with router ID 192.168.0.2 (VRF default)

Algorithm 240

Route entry for 192.168.4.3/32, Metric 220, SID 536, Label 16536
Priority : Medium

Route type : Extern Type 1
Last updated : Apr 25 14:30:12.718
Flags: Inuse

Prefix Contrib Algo 240 SID 536
From 192.168.0.4 Route-type 5
Total Metric : 220 Base metric 20 FAPM 20
Contrib Flags : Inuse, Reachable
SID Flags : PHP off, Index, Global, Valid

Path: 10.1.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2
Out Label : 16536
Weight : 0
Area : 0

Path: 10.1.2.3, from 192.168.0.4, via GigabitEthernet0/2/0/3
Out Label : 16536
Weight : 0
Area : 0

Path: 10.2.1.5, from 192.168.0.4, via GigabitEthernet0/2/0/4
Out Label : 16536
Weight : 0
Area : 0

Route entry for 192.168.4.5/32, Metric 120, SID 556, Label 16556
Priority : Medium

Route type : Extern Type 1
Last updated : Apr 25 14:30:12.724
Flags: Inuse

Prefix Contrib Algo 240 SID 556
From 192.168.0.3 Route-type 5
Total Metric : 120 Base metric 1 FAPM 20
Contrib Flags : Inuse, Reachable
SID Flags : PHP off, Index, Global, Valid

Path: 10.1.1.3, from 192.168.0.3, via GigabitEthernet0/2/0/2
Out Label : 16556
Weight : 0
Area : 0

Path: 10.1.2.3, from 192.168.0.3, via GigabitEthernet0/2/0/3
Out Label : 16556
Weight : 0
Area : 0
```

The following example shows details of the route and backup paths:

```
Router#show ospf routes flex-algo 240 route-type external backup-path detail
```

Route Table of ospf-1 with router ID 192.168.0.2 (VRF default)

Algorithm 240

Route entry for 192.168.4.3/32, Metric 220, SID 536, Label 16536
Priority : Medium

Route type : Extern Type 1
Last updated : Apr 25 14:30:12.718
Flags: Inuse

Prefix Contrib Algo 240 SID 536
From 192.168.0.4 Route-type 5
Total Metric : 220 Base metric 20 FAPM 20
Contrib Flags : Inuse, Reachable
SID Flags : PHP off, Index, Global, Valid

Path: 10.1.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2
Out Label : 16536
Weight : 0
Area : 0

Backup path:
10.1.2.3, from 192.168.0.4, via GigabitEthernet0/2/0/3,
Out Label: 16536
Attributes: Metric: 220, Primary , Downstream, Interface Disjoint, SRLG

Disjoint

Path: 23.23.2.3, from 192.168.0.4, via GigabitEthernet0/2/0/3
Out Label : 16536
Weight : 0
Area : 0

Backup path:
10.1.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2,
Out Label: 16536
Attributes: Metric: 220, Primary , Downstream, Interface Disjoint, SRLG

Disjoint

Path: 25.25.1.5, from 192.168.0.4, via GigabitEthernet0/2/0/4
Out Label : 16536
Weight : 0
Area : 0

Backup path:
10.1.1.3, from 192.168.0.4, via GigabitEthernet0/2/0/2,
Out Label: 16536
Attributes: Metric: 220, Primary , Downstream, Node Protect, Interface Disjoint,
SRLG Disjoint

Route entry for 192.168.4.5/32, Metric 120, SID 556, Label 16556
Priority : Medium

Route type : Extern Type 1
Last updated : Apr 25 14:30:12.724
Flags: Inuse

Prefix Contrib Algo 240 SID 556
From 192.168.0.3 Route-type 5
Total Metric : 120 Base metric 1 FAPM 20
Contrib Flags : Inuse, Reachable
SID Flags : PHP off, Index, Global, Valid

Path: 10.1.1.3, from 192.168.0.3, via GigabitEthernet0/2/0/2

```
show ospf route flex-algo
```

```
Out Label : 16556
Weight    : 0
Area      : 0

Backup path:
  10.1.2.3, from 192.168.0.3, via GigabitEthernet0/2/0/3,
  Out Label: 16556
  Attributes: Metric: 120, Primary , Downstream, Interface Disjoint, SRLG
Disjoint

Path: 10.1.2.3, from 192.168.0.3, via GigabitEthernet0/2/0/3
Out Label : 16556
Weight    : 0
Area      : 0

Backup path:
  10.1.1.3, from 192.168.0.3, via GigabitEthernet0/2/0/2,
  Out Label: 16556
  Attributes: Metric: 120, Primary , Downstream, Interface Disjoint, SRLG
Disjoint
```

show ospf segment-routing prefix-sid-map

To verify the active and backup prefix-to-SID mappings for OSPF, use the **show ospf segment-routing prefix-sid-map** command in XR EXEC mode.

show ospf segment-routing prefix-sid-map [**active-policy** | **backup-policy**]

Syntax Description	
	active-policy (Optional) Specifies the active mapping policy.
	backup-policy (Optional) Specifies the backup mapping policy.

Command Default None

Command Modes XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operation
	ospf	read

Example

The example shows how to verify the active mapping policy on OSPF:

```
RP/0/0/CPU0:router# show ospf segment-routing prefix-sid-map active-policy

      SRMS active policy for Process ID 1

Prefix          SID Index   Range      Flags
1.1.1.100/32    100         20
1.1.1.150/32    150         10

Number of mapping entries: 2
```

The example shows how to verify the backup mapping policy on OSPF:

```
RP/0/0/CPU0:router# show ospf segment-routing prefix-sid-map backup-policy

      SRMS backup policy for Process ID 1

Prefix          SID Index   Range      Flags
1.1.1.100/32    100         20
1.1.1.150/32    150         10
```

Number of mapping entries: 2

Related Commands	Command	Description
	segment-routing mapping-server, on page 50	Configures the segment routing mapping server (SRMS).
	segment-routing prefix-sid-map advertise-local, on page 53	Enables the router to advertise the SRMS entries that are locally configured.
	segment-routing prefix-sid-map receive disable, on page 55	Disables mapping client functionality.
	show isis segment-routing prefix-sid-map, on page 59	Displays the active and backup prefix-to-SID mappings for IS-IS.
	show segment-routing mapping-server prefix-sid-map, on page 76	Displays the locally configured prefix-to-SID mappings.

show performance-measurement history

To display the history for delay-measurement, use the **performance-measurement history** show command in XR EXEC mode.

```
show performance-measurement history { probe-computation | advertisement | aggregation } {
interfaces | endpoint | rsvp-te | sr-policy }
```

Syntax Description	
probe-computation	(Optional) Displays information for the delay metric computation result within each probe interval.
advertisement	(Optional) Displays information for the delay metric computation result within each advertisement interval.
aggregation	(Optional) Displays information for the delay metric computation result within each aggregation interval.
interface	(Optional) Displays information on the specified interface.
endpoint	(Optional) Displays information on the specified endpoint.
rsvp-te	(Optional) Displays information on the specified Resource Reservation Protocol - Traffic Engineering (RSVP-TE).
sr-policy	(Optional) Displays information on the specified sr-policy.

Command Default No default

Command Modes XR EXEC

Command History	Release	Modification
	Release 24.1.1	This command was updated with synthetic and anomaly loss information.
	Release 7.3.1	This command was introduced.

Task ID	Task ID	Operation
	performance-measurement	write/read

```
Router# show performance-measurement history probe-computation interfaces
Interface Name: GigabitEthernet0/2/0/0 (ifh: 0x1000020)
Delay-Measurement history (uSec):
  Probe Start Timestamp      Pkt(TX/RX)  Average      Min      Max
Aug 01 2023 08:04:15.230    10/10       704          651     779
```

```
Router# show performance-measurement history probe-computation endpoint
Endpoint name: IPv4-192.168.0.4-vrf-default
...
```

show performance-measurement history

```

Segment-List          : None
Delay-Measurement history (uSec):
  Probe Start Timestamp   Pkt (TX/RX)   Average   Min   Max
Aug 01 2023 08:26:48.823    10/10       3399     2962  3808

```

Router# show performance-measurement history aggregation rsvp-te

...

```

Delay-Measurement history (uSec):
  Aggregation Timestamp   Pkt (TX/RX)   Average   Min   Max
Aug 01 2023 08:37:23.702    40/40       3372     3172  4109

```

Router# show performance-measurement history advertisement sr-policy

...

```

Delay-Measurement history (uSec):
  Advertisement Timestamp   Pkt (TX/RX)   Average   Min   Max   Reason
Aug 01 2023 10:05:14.072    24/24       3408     3408  3408  ACCEL-MAX

```

Table 5: This table gives show performance-measurement history field descriptions:

Field	Description
TX	Number of packets sent.
RX	Number of packets received.
Average	Average delay of all the delay measures within one probe.
Max	Maximum delay of all the delay measures within one probe.
Min	Minimum delay of all the delay measures within one probe.

Reason	<p>Provides the reason for the delay in packets:"</p> <ul style="list-style-type: none"> • NONE : No advertisements occurred • PER-AVG : Periodic timer, average delay threshold crossed • PER-MIN : Periodic timer, min delay threshold crossed • PER-MAX : Periodic timer, max delay threshold crossed • ACCEL-AVG : Accelerated threshold crossed, average delay threshold crossed • ACCEL-MIN : Accelerated threshold crossed, min delay threshold crossed • ACCEL-MAX : Accelerated threshold crossed, max delay threshold crossed • ACCEL-UP-AVG : Accelerated threshold crossed, average delay upper-bound crossed • ACCEL-UP-MIN : Accelerated threshold crossed, min delay upper-bound crossed • ACCEL-UP-MAX : Accelerated threshold crossed, max delay upper-bound crossed • ANOM-MIN-DYN : Min delay A flag toggled and dynamic delay is in effect • ANOM-MIN-STA : Min delay A flag toggled and static delay is in effect • FIRST : First advertisement • NEW-SESSION : New child session • ENABLE : Advertisement enabled • DISABLE : Advertisement disabled • DELETE : Session deleted • EXEC-CLEAR : Cleared through exec command • ADV-CFG : Advertise delay config • ADV-UNCFG : Advertise delay unconfig • ERROR : Control code error • LINK-DOWN : Link state changed to down • SESSION-ERROR : Performance measurement session error • DYN-DM : Dynamic delay advertisement is in effect • PT-CFG : Path tracing config • PT-UNCFG : Path tracing unconfig • PT-INTF_READY : Path tracing interface ready • PKT-LOSS : Packet loss detected • ANOM-PKT-LOSS : PM session anomaly due to packet loss • N/A : Invalid advertisement reason
--------	---

show segment-routing srv6 sid

You can use the **show segment-routing srv6 sid** command to verify the SRv6 global and locator configuration.

show segment-routing srv6 sid

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes XR EXEC mode

Command History	Release	Modification
	Release 7.8.1	This command output was modified.
	Release 7.0.12	This command was introduced.

Usage Guidelines The command displays SID information across locators. By default, only “active” (i.e. non-stale) SIDs are displayed.

From IOS XR Release 7.8.1, IOS XR nodes with SRv6 Micro-SID F3216 format will accept and allow service SIDs received from non-IOS XR node peers with SRv6 base F128. Non-IOS XR node peers can be without SID Struct TLV (SSTLV), or with an incompatible SSTLV having an SID that is F3216 compatible. This allows for interoperability without any IETF extension or configuration changes on the Non-IOS XR peer node.

The following example shows how to display detailed information on the remote side, with the allocation type:

```
Router# show segment-routing srv6 locator usid sid fccc:cccl:1:e00f::
Mon Dec 13 15:58:53.640 EST
SID                               Behavior      Context      Owner
      State  RW
-----  -
fccc:cccl:1:e00f::                uDT46        '**iid'
rib_lib_test_xtf      InUse  Y
  SID Function: 0xe00f
  SID context: { '**iid' }
  App data: [0000000000000000]
  Locator: 'usid'
  Allocation type: Dynamic | Explicit
```

show segment-routing local-block inconsistencies

Displays any segment routing local block (SRLB) label inconsistencies.

show segment-routing local-block inconsistencies

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines When a new SRLB range is defined, there might be a label conflict (for example, if labels are already allocated, statically or dynamically, in the new SRLB range). In this case, the new SRLB range will be accepted, but not applied (pending). The previous SRLB range (active) will continue to be in use until one of the following occurs:

- Reload the router to release the currently allocated labels and allocate the new SRLB
- Use the **clear segment-routing local-block discrepancy all** command to clear the label conflicts

Task ID	Task ID	Operation

Example

This example shows how to display the SRGB inconsistencies:

```
RP/0/RSP0/CPU0:router(config)# show segment-routing local-block inconsistencies
Tue Aug 15 13:53:30.555 EDT
SRLB inconsistencies range: Start/End: 30000/30009
```

Related Commands	Command	Description
	clear segment-routing local-block discrepancy all	Clears SRLB label conflicts
	segment-routing local-block	Configures the SRLB

show segment-routing mapping-server prefix-sid-map

To verify the locally configured prefix-to-SID mappings, use the **show segment-routing mapping-server prefix-sid-map** command in XR EXEC mode.

show segment-routing mapping-server prefix-sid-map [**ipv4** | **ipv6**] [*prefix*] [**detail**]

Syntax Description	
ipv4	(Optional) Specifies an IPv4 address family.
ipv6	(Optional) Specifies an IPv6 address family.
<i>prefix</i>	(Optional) Specifies a prefix.
detail	(Optional) Displays detailed information on the prefix-to-SID mappings.

Command Default None

Command Modes XR EXEC mode

Command History	Release	Modification
	Release 7.0.12	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operation
		read

Example

The example shows how to verify the IPv4 prefix-to-SID mappings:

```
RP/0/0/CPU0:router# show segment-routing mapping-server prefix-sid-map ipv4
Prefix          SID Index  Range  Flags
20.1.1.0/24    400        300
10.1.1.1/32    10         200
Number of mapping entries: 2
```

The example shows how to display detailed information on the IPv4 prefix-to-SID mappings:

```
RP/0/0/CPU0:router# show segment-routing mapping-server prefix-sid-map ipv4 detail
Prefix
20.1.1.0/24
  SID Index:      400
  Range:          300
  Last Prefix:    20.2.44.0/24
  Last SID Index: 699
```

```

Flags:
10.1.1.1/32
  SID Index:    10
  Range:       200
  Last Prefix:  10.1.1.200/32
  Last SID Index: 209
Flags:
Number of mapping entries: 2

```

Related Commands

Command	Description
segment-routing mapping-server, on page 50	Configures the segment routing mapping server (SRMS).
segment-routing prefix-sid-map advertise-local, on page 53	Enables the router to advertise the SRMS entries that are locally configured.
segment-routing prefix-sid-map receive disable, on page 55	Disables mapping client functionality.
show isis segment-routing prefix-sid-map, on page 59	Displays the active and backup prefix-to-SID mappings for IS-IS.
show ospf segment-routing prefix-sid-map, on page 69	Displays the active and backup prefix-to-SID mappings for OSPF.

traceroute mpls nil-fec labels

To check network connectivity and identify LSP breakages, use the **traceroute mpls nil-fec labels** command in XR EXEC mode.

traceroute mpls nil-fec labels {*label* [,*label*...]} [**output** {**interface** *tx-interface*} [**nexthop** *next-hop-ip-address*]]

Syntax Description	labels <i>label, label...</i>	Specifies the label stack. Use commas to separate the each <i>label</i> .
	output interface <i>tx-interface</i>	Specifies the output interface.
	nexthop <i>next-hop-ip-address</i>	(Optional) Causes packets to go through the specified next-hop address.
Command Default	None	
Command Modes	XR EXEC mode	
Command History	Release	Modification
	Release 7.0.12	This command was introduced.
Usage Guidelines	No specific guidelines impact the use of this command.	
Task ID	Task ID	Operation
	mpls-te	read, write

Example

This example shows how to check connectivity for a known label stack using a specific output interface and next-hop address:

```
RP/0/RSP0/CPU0:router# traceroute mpls nil-fec labels 16005,16007 output interface
GigabitEthernet 0/2/0/1 nexthop 10.1.1.4
Tracing MPLS Label Switched Path with Nil FEC labels 16005,16007, timeout is 2 seconds
```

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no label entry,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'd' - see DDMAP for return code,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
0 10.1.1.3 MRU 1500 [Labels: 16005/16007/explicit-null Exp: 0/0/0]
L 1 10.1.1.4 MRU 1500 [Labels: implicit-null/16007/explicit-null Exp: 0/0/0] 1 ms
L 2 10.1.1.5 MRU 1500 [Labels: implicit-null/explicit-null Exp: 0/0] 1 ms
! 3 10.1.1.7 1 ms
```

Related Commands

Command	Description
ping mpls nil-fec labels, on page 33	Checks network connectivity and identifying LSP breakages.

traceroute sr-mpls

To trace the routes to a destination in a segment routing network, use the **traceroute sr-mpls** command in XR EXEC mode.

```
traceroute sr-mpls { ipv4-address/mask | ipv6-address/mask [ fec-type { bgp | generic
| igp { ospf | isis } } ] | multipath { ipv4-address/mask | ipv6-address/mask [ fec-type
{ bgp | generic | igp { ospf | isis } } ] | nil-fec | dataplane-only { labels { label1 [ ,
label2... ] ipv4-address/mask | ipv6-address/mask | policy } } { output { interface interface-path-id
} } { nexthop next-hop-ip-address } }
```

Syntax Description		
	<i>ipv4 address/mask</i> or <i>ipv6 address/mask</i>	Address prefix of the target and number of bits in the target address network mask.
	fec-type	(Optional) Specifies FEC type to be used. Default FEC type is generic.
	bgp	Use FEC type as BGP.
	generic	Use FEC type as generic.
	igp	Use FEC type as OSPF or ISIS.
	labels <i>label,label...</i>	Specifies the label stack. Use commas to separate each label.
	dataplane-only	Specifies data plane validation without running actual traffic over LSPs.
	output interface <i>interface-path-id</i>	Specifies the output interface where echo request packets are sent.
	nexthop <i>next-hop-ip-address</i>	Causes packets to go through the specified IPv4 or IPv6 next-hop address.

Command Default **fec-type** : generic

Command Modes XR EXEC mode

Command History	Release	Modification
	Release 24.2.11	The dataplane-only keyword was introduced. Support for IPv6 next-hop address was added.
	Release 7.0.12	This command was introduced.

Usage Guidelines

No specific guidelines impact the use of this command.

Task ID**Task Operations ID**

mpls-te read,
write

Example

These examples show how to use segment routing traceroute to trace the LSP for a specified IPv4 prefix segment routing id (SID). In the first example, FEC type is not specified. You can also specify the FEC type as shown in the second example. The third example uses multipath traceroute to discover all the possible paths for a IPv4 prefix SID.

```
RP/0/RP0/CPU0:router# traceroute sr-mps 10.1.1.2/32
```

Tracing MPLS Label Switched Path to 10.1.1.2/32, timeout is 2 seconds

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
0 10.12.12.1 MRU 1500 [Labels: implicit-null Exp: 0]
! 1 10.12.12.2 3 ms
```

```
RP/0/RP0/CPU0:router# traceroute sr-mps 10.1.1.2/32 fec-type igp ospf
```

Tracing MPLS Label Switched Path to 10.1.1.2/32, timeout is 2 seconds

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

Type escape sequence to abort.

```
0 10.12.12.1 MRU 1500 [Labels: implicit-null Exp: 0]
! 1 10.12.12.2 2 ms
```

```
RP/0/RP0/CPU0:router# traceroute sr-mps multipath 10.1.1.2/32
```

Starting LSP Path Discovery for 10.1.1.2/32

```
Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0
```

```

Type escape sequence to abort.

!
Path 0 found,
  output interface GigabitEthernet0/0/0/2 nexthop 10.13.13.2
source 10.13.13.1 destination 127.0.0.0
!
Path 1 found,
  output interface Bundle-Ether1 nexthop 10.12.12.2
source 10.12.12.1 destination 127.0.0.0

Paths (found/broken/unexplored) (2/0/0)
Echo Request (sent/fail) (2/0)
Echo Reply (received/timeout) (2/0)
Total Time Elapsed 14 ms

```

The following example shows how to use segment routing traceroute to validate SR-MPLS over IPv6-based LSPs:

```

Router#traceroute sr-mpls dataplane-only 2001:DB8::1/32
Tue Jan 16 15:08:54.681 EST

Tracing MPLS Label Switched Path with Nil FEC to 2001:DB8::1/32, timeout is 2 seconds

Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0

Type escape sequence to abort.

 0 11:11:11::1 MRU 1500 [Labels: 18004/explicit-null Exp: 0/0]
L 1 11:11:11::2 MRU 1500 [Labels: implicit-null/explicit-null Exp: 0/0] 3 ms
! 2 15:15:15::4 3 ms

```

The following example shows how to use segment routing traceroute for SR-TE policies with IPv6-based LSPs:

```

Router#traceroute sr-mpls nil-fec policy name srte_c_40_ep_2001:DB8::1
Tue Feb  6 12:07:38.295 EST

Tracing MPLS Label Switched Path with Nil FEC for SR-TE Policy srte_c_40_ep_2001:DB8::1,
timeout is 2 seconds

Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
'L' - labeled output interface, 'B' - unlabeled output interface,
'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
'P' - no rx intf label prot, 'p' - premature termination of LSP,
'R' - transit router, 'I' - unknown upstream index,
'X' - unknown return code, 'x' - return code 0

Type escape sequence to abort.

 0 12:12:12::1 MRU 1500 [Labels: 26134/explicit-null Exp: 0/0]
L 1 12:12:12::3 MRU 1500 [Labels: implicit-null/explicit-null Exp: 0/0] 16 ms
! 2 16:16:16::4 16 ms

```

The following example shows how to use segment routing traceroute with labels using IPv6 LSPs:

```
Router#traceroute sr-mpls labels 18004 lsp-end-point 2001:DB8::1
Tue Feb  6 12:10:41.928 EST

Tracing MPLS Label Switched Path to NIL FEC with lsp end point 2001:DB8::1, SID Label(s)
[18004], timeout is 2 seconds

Codes: '!' - success, 'Q' - request not sent, '.' - timeout,
        'L' - labeled output interface, 'B' - unlabeled output interface,
        'D' - DS Map mismatch, 'F' - no FEC mapping, 'f' - FEC mismatch,
        'M' - malformed request, 'm' - unsupported tlvs, 'N' - no rx label,
        'P' - no rx intf label prot, 'p' - premature termination of LSP,
        'R' - transit router, 'I' - unknown upstream index,
        'X' - unknown return code, 'x' - return code 0

Type escape sequence to abort.

 0 11:11:11::1 MRU 1500 [Labels: 18004/explicit-null Exp: 0/0]
L 1 11:11:11::2 MRU 1500 [Labels: implicit-null/explicit-null Exp: 0/0] 7 ms
! 2 15:15:15::4 3 ms
```




Segment Routing Traffic Engineering Commands

This chapter describes the commands used to configure and use Segment Routing Traffic Engineering (SR-TE).

To use commands of this module, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using any command, contact your AAA administrator for assistance.

- [affinity-map](#), on page 86
- [autoroute include ipv6 all](#), on page 87
- [bgp prefix-path-label ignore](#), on page 88
- [binding-sid](#), on page 89
- [distribute link-state \(SRTE\)](#), on page 90
- [distribute link-state](#), on page 91
- [hw-module profile cef sropt enable](#), on page 92
- [kshortest-paths](#), on page 94
- [neighbor sr-policy name targeted](#), on page 95
- [on-demand constraints](#), on page 96
- [on-demand dynamic affinity sid-algorithm](#), on page 97
- [on-demand dynamic affinity disjoint-path](#), on page 98
- [on-demand maximum-sid-depth](#), on page 100
- [on-demand source-address](#), on page 101
- [on-demand steering](#), on page 102
- [policy binding-sid](#), on page 103
- [policy candidate-paths](#), on page 104
- [policy candidate-paths constraints disjoint-path](#), on page 105
- [policy candidate-paths constraints resources](#), on page 107
- [policy color](#), on page 108
- [policy source-address](#), on page 109
- [policy steering](#), on page 110
- [resource-list](#), on page 111
- [segment-list](#), on page 112
- [separate-next-hop](#), on page 113
- [steering labeled-services](#), on page 114
- [te-latency](#), on page 115

affinity-map

To define an affinity map, use the **affinity-map name name bit-position bit-position** command in SR-TE sub-mode.

affinity-map name name bit-position bit-position

Syntax Description	name name	Specify the name of the affinity-map.
	bit-position bit-position	Specify the bit position in the Extended Admin Group bitmask.

Command Default None

Command Modes SR-TE configuration

Command History	Release	Modification
	Release 7.3.1	This command was introduced.

Usage Guidelines Configure affinity maps on the following routers:

- Routers with interfaces that have an associated admin group attribute.
- Routers that act as SR-TE head-ends for SR policies that include affinity constraints.

Example

This example shows how to define an affinity map:

```
Router# configure
Router(config)# segment-routing
Router(config-sr)# traffic-eng
Router(config-sr-te)# affinity-map
Router(config-sr-te-affinity-map)# name RED bit-position 23
```

autoroute include ipv6 all

To enable IPv6 autoroute support for SR-TE policies with IPv4 endpoints, use the **autoroute include ipv6 all** command in the SR-TE policy and PCC profile modes. To disable this feature, use the **no** form of this command.

autoroute include ipv6 all
no autoroute include ipv6 all

Syntax Description This command has no keywords or arguments.

Command Default IPv6 autoroute support is disabled.

Command Modes SR-TE policy
 PCC profile

Command History	Release	Modification
	Release 7.5.4	This command was introduced.

Usage Guidelines The **include ipv6 all** command form enables autoroute support for IPv6 prefixes, for a specified SR-TE policy. This command can be used in the SR-TE policy and PCC profile modes.

Example

The following example shows how to configure the IPv6 autoroute function for an SR-TE policy with an IPv4 endpoint:

```
Router# configure
Router(config)# segment-routing traffic-eng policy pol12
Router(config-sr-te-policy)# autoroute include ipv6 all
Router(config-sr-te-policy)# commit
```

The following example shows how to configure the IPv6 autoroute function for a PCE-instantiated SR-TE policy with an IPv4 endpoint:

```
Router# configure
Router(config)# segment-routing traffic-eng pcc profile 10
Router(config-pcc-prof)# autoroute include ipv6 all
Router(config-pcc-prof)# commit
```

bgp prefix-path-label ignore

To indicate BGP to ignore the programming of the service route's prefix label when recursing onto the BSID of an SR-TE policy, use the **bgp prefix-path-label ignore** command in SR-TE policy steering config mode.

bgp prefix-path-label ignore

Syntax Description This command has no keywords or arguments.

Command Default None

Command Modes SR-TE policy steering

Command History	Release	Modification
	Release 7.9.1	This command was introduced.

Usage Guidelines This command can be configured for manual SR policies.

Example

The following example shows how to configure BGP to ignore the programming of the service route's prefix label when recursing onto the BSID of an SR-TE policy:

```
Router(config)# segment-routing
Router(config-sr)# traffic-eng
Router(config-sr-te)# policy POLICY1
Router(config-sr-te-policy)# steering
Router(config-sr-te-policy-steering)# bgp prefix-path-label ignore
```


binding-sid

To specify the binding SID (BSID) allocation behavior, use the **binding-sid** command in SR-TE sub-mode.

```
binding-sid { dynamic disable | explicit { enforce-srlb | fallback-dynamic } }
```

Syntax Description

dynamic disable	Disables dynamic binding SID allocation. Candidate paths without an explicit BSID will be considered invalid.
explicit enforce-srlb	Specifies strict SRLB enforcement. If the BSID is not within the SRLB, the policy stays down.
explicitfallback-dynamic	Specifies that, if the BSID is not available, the BSID is allocated dynamically and the policy comes up.

Command Default

Binding SIDs are dynamically allocated

Command Modes

SR-TE configuration

Command History

Release	Modification
Release 7.3.1	This command was introduced.

Usage Guidelines

Explicit BSIDs are allocated from the segment routing local block (SRLB) or the dynamic range of labels. A best-effort is made to request and obtain the BSID for the SR-TE policy. If requested BSID is not available (if it does not fall within the available SRLB or is already used by another application or SR-TE policy), the policy stays down.

This command specifies how the BSID allocation behaves if the BSID value is not available:

- Fallback to dynamic allocation – If the BSID is not available, the BSID is allocated dynamically and the policy comes up.
- Strict SRLB enforcement – If the BSID is not within the SRLB, the policy stays down.

Example

This example shows how to configure an SR policy to use an explicit BSID of 1000. If the BSID is not available, the BSID is allocated dynamically and the policy comes up.

```
Router# configure
Router(config)# segment-routing
Router(config-sr)# traffic-eng
Router(config-sr-te)# binding-sid explicit fallback-dynamic
Router(config-sr-te)# policy goo
Router(config-sr-te-policy)# binding-sid mpls 1000
```

distribute link-state (SRTE)

To enable reporting of SRTE policies, use the **distribute link-state** command in the SR-TE configuration mode.

distribute link-state [**report-candidate-path-inactive**]

Table 6: Syntax Description:

Syntax	Description
report-candidate-path-inactive	Enables reporting of SRTE policies using BGP-LS.

Command Default The reporting of policies to BGP-LS is disabled by default.

Command Modes SR-TE configuration (config-sr-te)

Command History	Release	Modification
	Release 24.1.1	Supports reporting of SR-TE policies using BGP- Link State for SRv6.
	Release 7.10.1	This command was introduced and supports reporting of SR-TE policies using BGP- Link State for SR-MPLS.

Task ID	Task ID	Operation
	distribute link-state	write/read

Example

This example shows how to enable BGP-LS reporting and syncing of SRTE Policies:

```
Router# config
Router(config)# segment-routing
Router(config-sr)# traffic-eng
Router(config-sr-te)# distribute link-state
Router(config-sr-te-distribute-ls)# report-candidate-path-inactive
Router(config-sr-te-distribute-ls)# exit
```

distribute link-state

To enable reporting of SRTE policies, use the **distribute link-state** command in the SR-TE configuration mode.

distribute link-state [**report-candidate-path-inactive**]

Table 7. Syntax Description:

Syntax	Description
report-candidate-path-inactive	Enables reporting of SRTE policies using BGP-LS.

Command Default The reporting of policies to BGP-LS is disabled by default.

Command Modes SR-TE configuration (config-sr-te)

Command History	Release	Modification
	Release 24.1.1	Supports reporting of SR-TE policies using BGP- Link State for SRv6.
Release 7.10.1	This command was introduced and supports reporting of SR-TE policies using BGP- Link State for SR-MPLS.	

Task ID	Task ID	Operation
	distribute link-state	

Example

This example shows how to enable BGP-LS reporting and syncing of SRTE Policies:

```
Router# config
Router(config)# segment-routing
Router(config-sr)# traffic-eng
Router(config-sr-te)# distribute link-state
Router(config-sr-te-distribute-ls)# report-candidate-path-inactive
Router(config-sr-te-distribute-ls)# exit
```

hw-module profile cef sropt enable

To enable Segment Routing Encap object optimization, use the **hw-module profile cef sropt enable** command in XR Config mode.

hw-module profile cef sropt enable

Syntax Description This command has no keywords or arguments.

Command Default Segment Routing Encap object optimization is disabled.

Command Modes XR Configuration

Command History	Release	Modification
	Release 7.5.4	This command was introduced.

Usage Guidelines After you enter this command, you must reload the router.

Segment Routing Encap object optimization minimizes the Encap resource consumption of the forwarding ASIC. With this feature, instead of consuming an Encap entry for each outgoing path, the forwarding chain of a labeled prefix with ECMP consumes only a single global Encap entry.

SR Encap object optimization is triggered only when all ECMP paths of a labeled prefix (primary and backup) perform the same egress action (either all pop or all swap); and have the same outgoing label for the swap egress action. If this condition is not met, then the prefix is programmed with a dedicated Encap object per outgoing path.

SR Encap object optimization is supported for both labeled IPv4 /32 (SR-MPLSv4) and labeled IPv6 /128 (SR-MPLSv6).

All paths associated with the prefix (primary and backup) must have the same outgoing label value for SR Encap object optimization to be triggered. For example:

- For prefixes with LFA backup paths, the SR Encap object optimization is triggered because these backup paths do not require an extra label to be pushed.
- For prefixes with TI-LFA backup paths requiring extra labels to be pushed, the SR Encap object optimization is not triggered because all the paths associated with the prefix do not have the same outgoing label value.

Per-label per-interface egress counters are not supported when SR Encap object optimization is enabled. Instead, per-label aggregate egress counters are supported.

SR MicroLoop Avoidance is not supported when SR Encap object optimization is enabled.

Example

This example shows how to enable Segment Routing Encap object optimization:

```
Router(config)# hw-module profile cef sropt enable
```

In order to activate/deactivate SROPT feature, you must manually reload the chassis/all line cards

```
Router(config)# commit
Router(config)# end
```

```
Router# reload location all
Proceed with reload? [confirm] y
```

```
Router# show hw-module profile cef
```

```
-----
Knob                               Status           Applied          Action
-----
CBF Enable                          Unconfigured     N/A              None
CBF forward-class-list               Unconfigured     N/A              None
BGPLU                                Unconfigured     N/A              None
LPTS ACL                             Unconfigured     N/A              None
Dark Bandwidth                       Unconfigured     N/A              None
SR-OPT Enable                       Configured     Yes            None
IP Redirect Punt                     Unconfigured     N/A              None
IPv6 Hop-limit Punt                  Unconfigured     N/A              None
MPLS Per Path Stats                  Unconfigured     N/A              None
Tunnel TTL Decrement                 Unconfigured     N/A              None
High-Scale No-LDP-Over-TE            Unconfigured     N/A              None
Label over TE counters                Unconfigured     N/A              None
Highscale LDPoTE No SRoTE             Unconfigured     N/A              None
LPTS Pifib Entry Counters             Unconfigured     N/A              None
-----
```

kshortest-paths

To set the maximum number of attempts for SRTE to compute paths that satisfy cumulative metric bounds criteria, use the **kshortest-paths** command in SR-TE configuration mode. To revert to the default number of attempts (100), use the **no** form of the command.

kshortest-paths *max-attempts*

no kshortest-paths

Syntax Description

max-attempts Maximum number of attempts.
Choose a value between 1 and 200.

Command Default

100 attempts are made to compute paths that satisfy the cumulative metric bounds criteria.

Command Modes

SR-TE configuration (config-sr-te)

Command History

Release	Modification
Release 7.3.1	This command was introduced.

Usage Guidelines

By default, a maximum of 100 attempts are made. To update the value, you can use this command.

You can use the **show segment-routing traffic-eng policy color** command (**Number of K-shortest-paths** field) to see the K-shortest path algorithm computation result. For example, if the **Number of K-shortest-paths** field displays 4, it means that the K-shortest path algorithm took 4 computations to find the right path. The 4 shortest paths that are computed using K-shortest path algorithm did not respect the cumulative bounds, and the fifth shortest path was valid against the bounds.

Example

This example shows how to set the maximum number of attempts for computing paths that satisfy the cumulative metric bounds criteria:

```
Router# configure terminal
Router(config)# segment-routing traffic-eng
Router(config-sr-te)# kshortest-paths 120
Router(config-sr-te)# commit
```

neighbor sr-policy name targeted

To configure the SR policy name under LDP, use the **neighbor sr-policy name targeted** command in SR-TE configuration mode.

neighbor sr-policy name targeted

Table 8: Syntax Description

Syntax	Description
<i>name</i>	<p>Use the command to configure the SR policy name under LDP</p> <p><i>name</i> is the auto-generated SR policy name assigned by the router when creating an LDP targeted adjacency over an SR policy.</p> <p>Note You can use the show segment-routing traffic-eng policy command to display the auto generated SR policy name. Auto-generated SR policy name uses the following naming convention: srte_c_color_val_ep_endpoint-address. For example, srte_c_1000_ep_10.1.1.2.</p>

Command Default None

Command Modes SR-TE configuration mode

Command History	Release	Modification
	Release 7.10.1	This command was introduced.

Example

The following example shows how to configure the SR policy name under LDP:

```
Router(config)# mpls ldp
Router(config-ldp)# address-family ipv4
Router(config-ldp-af)# neighbor sr-policy srte_c_1000_ep_10.1.1.2 targeted
Router(config-ldp-af)#commit
```

on-demand constraints



Note From Cisco IOS XR Release 7.9.1, you must reconfigure all SR-ODN configurations with Flexible Algorithm constraints that use the [on-demand dynamic sid-algorithm](#) with this command.

To configure the SR Flexible Algorithm constraints, use the **constraints segments sid-algorithm** command in SR-TE sub-mode.

```
on-demand color color constraints { segments sid-algorithm algo | resources { exclude resource-list name | exclude-group group_name | apply-group group_name } }
```

Syntax Description

segments	Specify constraints for segments of a path in a network.
sid-algorithm <i>algo</i>	Specify the SR Flexible Algorithm value. The <i>algo</i> range is from 128 to 255.
resources	Specify resource constraints for path computation.
exclude	Exclude resources from path computation.
resource-list <i>name</i>	Specify the name of the resource-list to exclude from the path computation.

Command Default

None

Command Modes

SR-TE configuration

Command History

Release	Modification
Release 24.1.1	The resources option was introduced.
Release 7.9.1	You must reconfigure all SR-ODN configurations with Flexible Algorithm constraints that use the on-demand dynamic sid-algorithm with this command.
Release 7.4.1	This command was introduced.

Usage Guidelines

No specific guidelines impact the use of this command.

Example

The following example shows how to add an SR Flexible Algorithm constraint:

```
Router(config-sr-te-color)# constraints segments sid-algorithm 128
```

The following example shows how to associate the excluded IPv4 addresses for ODN SR-TE policies:

```
Router(config)#segment-routing
Router(config-sr)#traffic-eng
Router(config-sr-te)#on-demand color 7001
Routerconfig-sr-te-color)#constraints resources exclude resource-list node_resc_list
```


on-demand dynamic affinity sid-algorithm



Note You must reconfigure all SR-ODN configurations with Flexible Algorithm constraints that use this command with the **constraints segments sid-algorithm algo** command.

To configure the SR Flexible Algorithm constraints, use the **on-demand dynamic sid-algorithm** command in SR-TE sub-mode.

on-demand color color dynamic sid-algorithm algo

Syntax Description **sid-algorithm algo** Specify the SR Flexible Algorithm value . The *algo* range is from 128 to 255.

Command Default None

Command Modes SR-TE configuration

Command History	Release	Modification
	Release 6.3.1	This command was introduced.
	Release 7.4.1	This command was replaced by the constraints segments sid-algorithm algo command.
	Release 7.9.1	You must reconfigure all SR-ODN configurations with Flexible Algorithm constraints that use this command with the constraints segments sid-algorithm algo command.

Usage Guidelines This command was replaced by the **constraints segments sid-algorithm algo** command.

Example

```
Router(config-sr-te-color-dyn)# sid-algorithm 128
```

on-demand dynamic affinity disjoint-path

To configure the disjoint-path constraints, use the **on-demand dynamic disjoint-path** command in SR-TE sub-mode.

```
on-demand color color dynamic disjoint-path group-id id type { link | node | srlg | srlg-node } [
{ sub-id sub_id | fallback disable } ]
```

Syntax Description		
group-id <i>id</i>		Specify the group ID of the disjoint path. Valid values are from 1 to 65535.
type {link node srlg srlg-node }		Specify the type of disjointness.
sub-id <i>id</i>		Specify the sub-group ID of the disjoint path. Valid values are from 1 to 65535.
fallback disable		Disable all fallback behavior in case the requested disjointness cannot be achieved.

Command Default None

Command Modes SR-TE configuration

Command History	Release	Modification
	Release 24.1.1	The fallback disable keyword was introduced.
	Release 6.3.1	This command was introduced.

Usage Guidelines Configures the disjoint group ID and defines the preferred level of disjointness (the type of resources that should not be shared by the two paths):

- link—Specifies that links are not shared on the computed paths.
- node—Specifies that nodes are not shared on the computed paths.
- srlg—Specifies that links with the same SRLG value are not shared on the computed paths
- srlg-node—Specifies that SRLG and nodes are not shared on the computed paths.

If a pair of paths that meet the requested disjointness level cannot be found, then the paths will automatically fallback to a lower level:

- If the requested disjointness level is SRLG or node, then link-disjoint paths will be computed.
- If the requested disjointness level was link, or if the first fallback from SRLG or node disjointness failed, then the lists of segments encoding two shortest paths, without any disjointness constraint, will be computed.

Example

```
Router(config-sr-te-color-dyn)# disjoint-path group-id 775 type link
```

The following example indicates how to configure strict disjointness for an ODN SR-TE policy:

```
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#on-demand color 4
Router(config-sr-te-color)#dynamic
Router(config-sr-te-color-dyn)#disjoint-path group-id 1 type node fallback disable
Router(config-sr-te-color-dyn)#commit
```

on-demand maximum-sid-depth

Syntax Description



Command Default

Command Modes

Command History

Release Modification

Usage Guidelines

Task ID

Task Operation ID

Example

on-demand source-address

Syntax Description 

Command Default

Command Modes

Command History

Release **Modification**

Usage Guidelines

Task ID

Task **Operation** **ID**

Example

on-demand steering

Syntax Description



Command Default

Command Modes

Command History

Release Modification

Usage Guidelines

Task ID

**Task Operation
ID**

Example

policy binding-sid

Syntax Description 

Command Default

Command Modes

Command History **Release** **Modification**

Usage Guidelines

Task ID	Task	Operation
	ID	

Example

policy candidate-paths

Syntax Description



Command Default

Command Modes

Command History

Release Modification

Usage Guidelines

Task ID

**Task Operation
ID**

Example

policy candidate-paths constraints disjoint-path

To configure the disjoint-path constraints, use the **on-demand dynamic disjoint-path** command in SR-TE sub-mode.

```
policy policy candidate-paths preference preference constraints disjoint-path group-id
id type { link | node | srlg | srlg-node } [ { sub-id sub_id | shortest-path | fallback disable }
]
```

Syntax Description	group-id <i>id</i>	Specify the group ID of the disjoint path. Valid values are from 1 to 65535.
	type {link node srlg srlg-node } }	Specify the type of disjointness.
	sub-id <i>id</i>	Specify the sub-group ID of the disjoint path. Valid values are from 1 to 65535.
	shortest-path	Enable shortest path computation for the selected candidate path.
	fallback disable	Disable all fallback behavior in case the requested disjointness cannot be achieved.

Command Default None

Command Modes SR-TE configuration

Command History	Release	Modification
	Release 24.1.1	The shortest-path and fallback disable keywords were introduced.
	Release 6.3.1	This command was introduced.

Usage Guidelines Configures the disjoint group ID and defines the preferred level of disjointness (the type of resources that should not be shared by the two paths):

- link—Specifies that links are not shared on the computed paths.
- node—Specifies that nodes are not shared on the computed paths.
- srlg—Specifies that links with the same SRLG value are not shared on the computed paths
- srlg-node—Specifies that SRLG and nodes are not shared on the computed paths.

If a pair of paths that meet the requested disjointness level cannot be found, then the paths will automatically fallback to a lower level:

- If the requested disjointness level is SRLG or node, then link-disjoint paths will be computed.
- If the requested disjointness level was link, or if the first fallback from SRLG or node disjointness failed, then the lists of segments encoding two shortest paths, without any disjointness constraint, will be computed.

Example

```
Router(config-sr-te)# policy FOO
Router(config-sr-te-policy)# candidate-paths preference 100
Router(config-sr-te-poliiloljkl,.cy-path-pref)# constraints disjoint-path group-id 775 type
link
```

The following example indicates how to configure the shortest path preference for a disjoint path:

```
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#policy dynamic_pcep_policy_disjoint
Router(config-sr-te-policy)#candidate-paths
Router(config-sr-te-policy-path)#preference 100
Router(config-sr-te-policy-path-pref)#constraints disjoint-path group-id 1 type link
shortest-path
```

The following example indicates how to configure strict disjointness for a SR-TE policy:

```
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#policy foo
Router(config-sr-te-policy)#color 1 end-point ipv4 10.10.10.1
Router(config-sr-te-policy)#candidate-paths preference 100
Router(config-sr-te-policy-path-pref)#constraints disjoint-path group-id 1 type node fallback
disable
Router(config-sr-te-policy-path-pref)#commit
```

policy candidate-paths constraints resources

To exclude IP addresses from the path computation for SR-TE policies, use the **policy candidate-paths constraints resources** command in the SR-TE configuration mode.

```
policy policy candidate-paths preference preference constraints resources { exclude
resource-list name | exclude-group group_name | apply-group group_name }
```

Syntax Description	resources { exclude-group exclude apply-group }	Specify the resource constraints for path computation: <ul style="list-style-type: none"> • exclude. Excludes resources from the path computation. • exclude-group. Excludes the apply-group configuration from the group. • apply-group. Applies configuration from a group.
	resource-list <i>name</i>	Specify the name of the resource-list to exclude from the path computation.
Command Default	None	
Command Modes	SR-TE configuration	
Command History	Release	Modification
	Release 24.1.1	This command was introduced.
Usage Guidelines	None.	

Example

The following example shows how to exclude a list of IPv4 addresses from the network resource list:

```
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#resource-list node_resc_list
Router(config-sr-te-rl)#index 1 ipv4 10.10.10.1
Router(config-sr-te-rl)#index 2 ipv4 10.10.10.8
```

The following example shows how to associate the excluded IPv4 addresses to one or more candidate paths for SR-TE policies:

```
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#policy dynamic pcep_policy
Router(config-sr-te-policy)#candidate-paths
Router(config-sr-te-policy-path)#preference 100
Router(config-sr-te-policy-path-pref)#constraints resources exclude resource-list
node_resc_list
```

policy color

Syntax Description



Command Default

Command Modes

Command History

Release Modification

Usage Guidelines

Task ID

Task Operation ID

Example

policy source-address

Syntax Description

Command Default

Command Modes

Command History

Release Modification

Usage Guidelines

Task ID

Task Operation ID

Example

policy steering

Syntax Description



Command Default

Command Modes

Command History

Release Modification

Usage Guidelines

Task ID

Task Operation ID

Example

resource-list

To configure a list of IPv4 addresses that you want to exclude from the network resource list for a candidate path, use the **resource-list** command in SR-TE configuration mode.

```
resource-list name index "1-65535" ipv4 ipv4-addr
```

Syntax Description	<p>resource-list <i>name</i> Specify the resource-list name to exclude from the path computation.</p> <p>index <i>1-65535</i> Specify the index entry. Ranges from 1–65535.</p> <p>ipv4 <i>ipv4-addr</i> Specify the IPv4 address that you want to exclude from the network resource list.</p>				
Command Default	None				
Command Modes	SR-TE configuration mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 24.1.1</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 24.1.1	This command was introduced.
Release	Modification				
Release 24.1.1	This command was introduced.				
Usage Guidelines	None.				

Example

The following example shows how to configure a list of IPv4 addresses that you want to exclude from the network resource list:

```
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#resource-list node_resc_list
Router(config-sr-te-rl)#index 1 ipv4 10.10.10.1
Router(config-sr-te-rl)#index 2 ipv4 10.10.10.8
```

segment-list

Syntax Description



Command Default

Command Modes

Command History

Release Modification

Usage Guidelines

Task ID

**Task Operation
ID**

Example

separate-next-hop

To enable SR-TE with next-hop independent scaling optimization, use the **separate-next-hop** command in ST-TE configuration mode.

segment-routing traffic-eng separate-next-hop

This command has no keywords or arguments.

Command Default None

Command Modes SR-TE configuration

Command History	Release	Modification
	Release 7.3.1	This command was introduced.

Usage Guidelines

Example

steering labeled-services

Syntax Description 

Command Default

Command Modes

Command History Release Modification

Usage Guidelines

Task ID Task Operation
ID

Example

te-latency

Syntax Description

Command Default

Command Modes

Command History

Release **Modification**

Usage Guidelines

Task ID

Task **Operation**
ID

Example

te-latency



SRv6 Traffic Engineering

This chapter describes the commands used to configure and use SRv6 Traffic Engineering.

To use commands of this module, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using any command, contact your AAA administrator for assistance.

- [accounting prefixes ipv6 mode](#), on page 118
- [policy srv6 locator](#) , on page 119
- [segment-routing traffic-eng srv6](#), on page 120
- [srv6 locator](#) , on page 121
- [srv6 maximum-sid-depth](#), on page 122
- [segment-lists segment-list](#), on page 123
- [segment-lists srv6](#) , on page 124

accounting prefixes ipv6 mode

To enable SRv6 traffic accounting, use the **accounting prefixes ipv6 mode** command in XR Config mode.

```
accounting prefixes ipv6 mode per-prefix per-nexthop srv6-locator
```

Syntax Description	
per-prefix	Enables accounting for every prefix.
per-nexthop	Enables accounting for every prefix and nexthop.
srv6-locator	Enables accounting only for Segment-routing SRv6 locator.

Command Default	None
-----------------	------

Command Modes	XR Config
---------------	-----------

Command History	Release	Modification
	Release 7.10.1	This command was introduced.

Usage Guidelines	No specific guidelines impact the use of this command.
------------------	--

The following example shows how to enable SRv6 traffic accounting:

```
Router(config)#accounting prefixes ipv6 mode per-prefix per-nexthop srv6-locators
```

policy srv6 locator

To create the SRv6-TE policy and configure customized per-policy locator and BSID behavior, use the **policy srv6 locator** command in the SR-TE interface submode.

```
policy policy-name srv6 locator locatorname binding-sid dynamic behavior  
ub6-encaps-reduced Binding-SID
```

Syntax Description		
policy <i>policy-name</i>	Specifies the policy name. The name can be a maximum of 59 characters.	
locator <i>locator</i>	Specifies the locator name. The locator name can be a maximum of 64 characters.	
binding-sid dynamicbehavior	Configures the BSID dynamic behavior.	
ub6-encaps-reduced	Configures BSID with reduced encapsulation behavior. Reduces the length of the SRH by excluding the first SID in the IPv6 header.	
ub6-insert-reduced	Configures BSID with insert reduced behavior.	

Command Default None

Command Modes SR-TE interface submode

Command History	Release	Modification
	Release 7.10.1	This command was introduced.

Usage Guidelines If you don't specify a customized per-policy locator and BSID behavior, the policy uses the global locator and BSID behavior.

The following example shows how to create the SRv6-TE policy and configure customized per-policy locator and BSID behavior:

```
RP/0/RP0/CPU0:ios (config-sr-te) #policy name  
RP/0/RP0/CPU0:ios (config-sr-te-policy) #srv6  
RP/0/RP0/CPU0:ios (config-sr-te-policy-srv6) #locator loc1 binding-sid dynamic behavior  
ub6-encaps-reduced  
RP/0/RP0/CPU0:ios (config-sr-te-policy-srv6) #
```

segment-routing traffic-eng srv6

To configure SRv6-TE, use the **segment-routing srv6** command in the SR-TE interface submode. To disable SRv6-TE, use the **no** form of this command.

```
segment-routing traffic-eng srv6
```

Syntax Description	This command has no keywords or arguments.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	SR-TE interface submode
----------------------	-------------------------

Command History	Release	Modification
	Release 7.10.1	This command was introduced.

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

The following example shows how to configure SRv6-TE.

```
Router (config) #segment-routing traffic-eng
Router (config-sr-te) #srv6
Router (config-sr-te-srv6) #exit
Router (config-sr-te) #
```


srV6 locator

To configure SRv6-TE locator and binding SID (BSID) behavior, use the **srV6 locator** command in the SR-TE interface submode.

```
Srv6 locator locatorname binding-sid dynamic behavior { ub6-encaps-reduced | ub6-insert-reduced }
```

Syntax Description	locator <i>locator</i>	Specifies the locator name. The locator name can be a maximum of 64 characters.
	binding-sid dynamicbehavior	Configures the BSID dynamic behavior.
	ub6-encaps-reduced	Configures BSID with reduced encapsulation behavior. Reduces the length of the SRH by excluding the first SID in the SRH of the pushed IPv6 header.
	ub6-insert-reduced	Configures BSID with insert reduced behavior.

Command Default None

Command Modes SR-TE interface submode

Command History	Release	Modification
	Release 7.10.1	This command was introduced.

Usage Guidelines If you don't specify a customized per-policy locator and BSID behavior, the policy uses the global locator and BSID behavior.

The following example shows how to configure SRv6-TE locator and binding SID (BSID) behavior.

```
Router#configure
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#srV6 locator loc1 binding-sid dynamic behavior ub6-encaps-reduced
```

srv6 maximum-sid-depth

To customize the Maximum SID Depth (MSD) signaled by PCC during PCEP session establishment, use the **srv6 maximum-sid-depth** command in SR-TE srv6 submode.

maximum-sid-depth *value*

Syntax Description	maximum-sid-depth <i>value</i>	Specifies the Maximum SID Depth (MSD) value. The MSD is expressed as a number uSIDs. The number of uSID is expressed as a number of carriers and the number of uSID per carrier. The range is from 1-255.
---------------------------	--	--

Command Default	None
------------------------	------

Command Modes	SR-TE srv6 submode
----------------------	--------------------

Command History	Release	Modification
	Release 7.10.1	This command was introduced.

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

The following example shows how to customize the MSID:

```
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#srv6
Router(config-sr-te-srv6)#maximum-sid-depth 13
Router(config-sr-te-srv6)#exit
Router(config-sr-te)#
```

segment-lists segment-list

To configure SRv6 explicit segment list, use the **segment-lists segment-list** command in SR-TE interface submode.

```
segment-lists segment-list name srv6 [ index number sid sid-id | topology-check ]
```

Syntax Description	Parameter	Description
	<i>name</i>	Specifies the name for the segment list.
	srv6	Enables the SRv6 segment-list configuration.
	index <i>number</i>	Specifies the index number. The range is from 1-65535.
	sid <i>sid-id</i>	Specifies the SRv6 SID
	topology-check <i>locator</i>	Enables SID verification.

Command Default None

Command Modes SR-TE interface submode

Command History	Release	Modification
	Release 7.10.1	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

The following example shows how to configure SRv6 explicit segment list:

```
Router(config)# segment-routing traffic-eng
Router(config-sr-te) # segment-lists
Router(config-sr-te-segment-lists) # srv6
Router(config-sr-te-sl-global-srv6) # sid-format usid-f3216
Router(config-sr-te-sl-global-srv6) # exit
Router(config-sr-te-segment-lists) # segment-list p1_r8_1
Router(config-sr-te-sl-srv6) # index 10 sid FCBB:BB00:10:feff::
Router(config-sr-te-sl-srv6) # index 15 sid FCBB:BB00:100:fe00::
Router(config-sr-te-sl-srv6) # index 20 sid FCBB:BB00:1::
Router(config-sr-te-sl-srv6) # index 30 sid FCBB:BB00:1:fe00::
Router(config-sr-te-sl-srv6) # index 40 sid FCBB:BB00:fe00::
Router(config-sr-te-sl-srv6) # index 50 sid FCBB:BB00:5::
Router(config-sr-te-sl-srv6) # index 60 sid FCBB:BB00:6::
```

segment-lists srv6

To enable SID validation globally for all SRv6 explicit segment lists, use the **segment-lists srv6** command in SR-TE interface submode.

```
segment-lists  srv6  [  sid-format  usid-f3216  |  topology-check  ]
```

Syntax Description	sid-format usid-f3216 Specifies SID format F3216 micro SID.
	topology-check Enables SID verification. <i>locator</i>

Command Default None

Command Modes SR-TE interface submode

Command History	Release	Modification
	Release 7.10.1	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

The following example shows how to specify SID format for all SRv6 explicit segment lists:

```
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#segment-lists
Router(config-sr-te-segment-lists)#srv6
Router(config-sr-te-sl-global-srv6)#sid-format usid-f3216
Router(config-sr-te-sl-global-srv6)#exit
Router(config-sr-te-segment-lists)#
```

The following example shows how to enable SID verification:

```
Router(config)#segment-routing traffic-eng
Router(config-sr-te)#segment-lists
Router(config-sr-te-segment-lists)#srv6
Router(config-sr-te-sl-global-srv6)#topology-check
Router(config-sr-te-sl-global-srv6)#exit
Router(config-sr-te-segment-lists)#
```