

Hardware Module Commands

This module lists the hardware module commands for Segment Routing (SR) and SR Traffic Engineering (TE) commands.

For detailed information about the hardware module configuration tasks and examples, refer to the *Segment Routing Configuration Guide for Cisco 8000 Series Routers*.

• Hardware Module Commands, on page 2

Hardware Module Commands

Segment Routing Commands

• hw-module profile segment-routing srv6 mode

Segment Routing Traffic Engineering Commands

• hw-module profile cef sropt enable