



Hardware Module Commands

This module lists the system management hardware module commands for Cisco 8000 Series Routers.

For detailed information about the system management concepts, configuration tasks, and examples, see the *System Management Configuration Guide for Cisco 8000 Series Routers*.

- [Hardware Module Commands, on page 2](#)

Hardware Module Commands

Hardware Redundancy Commands

- `hw-module fabric-fec-monitor disable`
- `hw-module fault-recovery`
- `hw-module npu-power-profile`
- `hw-module profile pbr vrfredirect`
- `hw-module profile npu-compatibility`
- `hw-module reset auto`
- `hw-module shutdown`