



Point-to-Point Layer 2 Services Commands

This section describes the commands used to configure point-to-point services for Layer 2 VPNs.

For detailed information about concepts and configuration, see the *Configure Point-to-Point Layer 2 Services* chapter in the *L2VPN and Ethernet Services Configuration Guide for Cisco NCS 5000 Series Routers*

- [interface \(p2p\)](#), on page 2
- [backup \(L2VPN\)](#), on page 4
- [dynamic-arp-inspection](#), on page 5
- [hw-module loadbalancing gtp enable](#), on page 7
- [hw-module storm-control-combine-policer-bw](#), on page 8
- [ip-source-guard](#), on page 9
- [l2vpn](#), on page 10
- [l2vpn switchover](#), on page 11
- [mac secure](#), on page 12
- [neighbor \(L2VPN\)](#), on page 14
- [p2p](#), on page 16
- [pw-class \(L2VPN\)](#), on page 17
- [pw-class encapsulation mpls](#), on page 19
- [show l2vpn](#), on page 21
- [show l2vpn collaborators](#), on page 23
- [show l2vpn bridge-domain \(VPLS\)](#), on page 25
- [show l2vpn database](#), on page 29
- [show l2vpn forwarding](#), on page 32
- [show l2vpn forwarding message counters](#), on page 35
- [show l2vpn index](#), on page 40
- [show l2vpn resource](#), on page 42
- [show l2vpn trace](#), on page 43
- [show l2vpn xconnect](#), on page 46
- [show l2vpn pw-class](#), on page 49
- [storm-control](#) , on page 51
- [xconnect group](#), on page 53

interface (p2p)

To configure an attachment circuit, use the **interface** command in p2p configuration submenu. To return to the default behavior, use the **no** form of this command.

```
interface type interface-path-id l2transport
no interface type interface-path-id l2transport
```

Syntax Description	<p><i>type</i> Interface type. For more information, use the question mark (?) online help function.</p> <hr/> <p><i>interface-path-id</i> Physical interface or a virtual interface.</p> <p>Note Use the show interfaces command to see a list of all possible interfaces currently configured on the router.</p> <p>For more information about the syntax for the router, use the question mark (?) online help function.</p>				
Command Default	None				
Command Modes	p2p configuration sub-mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 6.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 6.0	This command was introduced.
Release	Modification				
Release 6.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operations</th> </tr> </thead> <tbody> <tr> <td>l2vpn</td> <td>read, write</td> </tr> </tbody> </table>	Task ID	Operations	l2vpn	read, write
Task ID	Operations				
l2vpn	read, write				
Examples	<p>The following example shows how you can configure an attachment circuit on a TenGigE interface:</p> <pre>Router# configure Router(config)# interface TenGigE 0/0/0/10.20 l2transport Router(config-subif)# encapsulation dot1ad 3000 Router(config-subif)# commit Router(config-subif)#</pre>				
Related Commands	<table border="1"> <thead> <tr> <th>Command</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>l2transport (Ethernet)</td> <td>Enables Layer 2 transport port mode on an Ethernet interface and enter Layer 2 transport configuration mode.</td> </tr> </tbody> </table>	Command	Description	l2transport (Ethernet)	Enables Layer 2 transport port mode on an Ethernet interface and enter Layer 2 transport configuration mode.
Command	Description				
l2transport (Ethernet)	Enables Layer 2 transport port mode on an Ethernet interface and enter Layer 2 transport configuration mode.				

Command	Description
encapsulation dot1ad	Defines the matching criteria to map 802.1ad frames ingress on an interface to the appropriate service instance.

backup (L2VPN)

To configure the backup pseudowire for the cross-connect, use the **backup** command in L2VPN xconnect p2p pseudowire configuration mode. To disable this feature, use the **no** form of this command.

```
backup neighbor IP-address pw-id value
no backup neighbor IP-address pw-id value
```

Syntax Description	
neighbor <i>IP-address</i>	Specifies the peer to cross connect. The <i>IP-address</i> argument is the IPv4 address of the peer.
pw-id <i>value</i>	Configures the pseudowire ID. The range is from 1 to 4294967295.

Command Default None

Command Modes L2VPN xconnect p2p pseudowire configuration

Command History	Release	Modification
	Release 6.2.1	This command was introduced.

Usage Guidelines Use the **backup** command to enter L2VPN xconnect p2p pseudowire backup configuration mode.

Task ID	Task ID	Operations
	l2vpn	read, write

Examples The following example shows how to configure backup pseudowires:

```
Router# configure
Router(config)# l2vpn
Router(config-l2vpn)# xconnect group gr1
Router(config-l2vpn-xc)# p2p p001
Router(config-l2vpn-xc-p2p)# neighbor 10.0.0.1 pw-id 2
Router(config-l2vpn-xc-p2p-pw)# backup neighbor 10.2.2.2 pw-id 5
```

Related Commands	Command	Description
	neighbor (L2VPN), on page 14	Configures a pseudowire for a cross-connect.
	l2vpn, on page 10	Enters L2VPN configuration mode.
	p2p, on page 16	Enters p2p configuration submode to configure point-to-point cross-connects.
	xconnect group, on page 53	Configures cross-connect groups.

dynamic-arp-inspection

To validate Address Resolution Protocol (ARP) packets in a network, use the **dynamic-arp-inspection** command in the l2vpn bridge group bridge domain configuration mode. To disable dynamic ARP inspection, use the **no** form of this command.

dynamic-arp-inspection {**logging** | **address-validation** {*src-mac**dst-mac**ipv4*}}

Syntax Description	logging	(Optional) Enables logging.
	Note	When you use the logging option, the log messages indicate the interface on which the violation has occurred along with the IP or MAC source of the violation traffic. The log messages are rate limited at 1 message per 10 seconds.
	Caution	Not all the violation events are recorded in the syslog.
	address-validation	(Optional) Performs address-validation.
	<i>src-mac</i>	Source MAC address in the Ethernet header.
	<i>dst-mac</i>	Destination MAC address in the Ethernet header.
	<i>ipv4</i>	IP addresses in the ARP body.

Command Default Dynamic ARP inspection is disabled.

Command Modes L2VPN bridge group bridge domain configuration

Command History	Release	Modification
	Release 7.9.1	This command was introduced.

Usage Guidelines To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID	Task ID	Operations
	l2vpn	read, write

Examples This example shows how to enable dynamic ARP inspection on bridge bar:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# l2vpn
```

```
RP/0/RP0/CPU0:router(config-l2vpn)# bridge group b1  
RP/0/RP0/CPU0:router(config-l2vpn-bg)# bridge-domain bar  
RP/0/RP0/CPU0:router(config-l2vpn-bg-bd)# dynamic-arp-inspection  
RP/0/RP0/CPU0:router(config-l2vpn-bg-bd-dai)#
```

This example shows how to enable dynamic ARP inspection logging on bridge bar:

```
RP/0/RP0/CPU0:router# configure  
RP/0/RP0/CPU0:router(config)# l2vpn  
RP/0/RP0/CPU0:router(config-l2vpn)# bridge group b1  
RP/0/RP0/CPU0:router(config-l2vpn-bg)# bridge-domain bar  
RP/0/RP0/CPU0:router(config-l2vpn-bg-bd)# dynamic-arp-inspection logging  
RP/0/RP0/CPU0:router(config-l2vpn-bg-bd-dai)#
```

This example shows how to enable dynamic ARP inspection address validation on bridge bar:

```
RP/0/RP0/CPU0:router# configure  
RP/0/RP0/CPU0:router(config)# l2vpn  
RP/0/RP0/CPU0:router(config-l2vpn)# bridge group b1  
RP/0/RP0/CPU0:router(config-l2vpn-bg)# bridge-domain bar  
RP/0/RP0/CPU0:router(config-l2vpn-bg-bd)# dynamic-arp-inspection address-validation  
RP/0/RP0/CPU0:router(config-l2vpn-bg-bd-dai)#
```

hw-module loadbalancing gtp enable

To enable the GPRS Tunneling Protocol (GTP) load balancing for IP traffic, use the **hw-module loadbalancing gtp enable** command in the Global Configuration mode. To disable the feature, use the no form of this command.

hw-module loadbalancing gtp enable

Syntax Description	This command has no arguments or keywords.	
Command Default	The load-balancing mode is disabled by default.	
Command Modes	Global Configuration mode	
Command History	Release	Modification
	Release 7.3.2	This command was introduced.
Usage Guidelines	None	
Task ID	Task ID	Operations
	l2vpn	read, write

Examples

The following example shows how to enable GTP load balancing for IP traffic:

```
Router# configure
Router(config)# hw-module loadbalancing gtp enable
Router(config)# commit
```

hw-module storm-control-combine-policer-bw

To increase the storm control policer scale per NPU core, use the **hw-module storm-control-combine-policer-bw** command in the global configuration mode. To disable storm control, use the **no** form of this command.

hw-module storm-control-combine-policer-bw enable

Command Default

Storm control combine is disabled by default.

Command Modes

Global configuration mode

Command History

Release	Modification
Release 7.4.1	This command was introduced for Cisco NC57 line cards.
Release 7.8.1	This command was modified to support storm control configuration per subinterface.

Usage Guidelines

You must manually reload the router to activate the **hw-module storm-control-combine-policer-bw enable** command.

Examples

The following example activates the combined policer mode:

```
Router# configure
Router(config)# hw-module storm-control-combine-policer-bw enable
Router# commit
```

The following example shows storm control configuration per subinterface:

```
Router# configure
Router(config)# hw-module storm-control-combine-policer-bw enable
Router(config)# l2vpn
Router(config-l2vpn)# bridge group bg1
Router(config-l2vpn-bg)# bridge-domain bd1
Router(config-l2vpn-bg-bd)# interface HundredGigE0/0/0/1.10
Router(config-l2vpn-bg-bd-ac)# storm-control unknown-unicast pps 500
Router(config-l2vpn-bg-bd-ac)# storm-control multicast pps 2000
Router(config-l2vpn-bg-bd-ac)# storm-control broadcast pps 1000
Router(config-l2vpn-bg-bd-ac)# commit
Router(config-l2vpn-bg-bd-ac)# exit
Router(config-l2vpn-bg-bd)# interface HundredGigE0/0/0/1.20
Router(config-l2vpn-bg-bd-ac)# storm-control unknown-unicast pps 200
Router(config-l2vpn-bg-bd-ac)# storm-control multicast pps 1000
Router(config-l2vpn-bg-bd-ac)# storm-control broadcast pps 2000
Router(config-l2vpn-bg-bd-ac)# commit
Router(config-l2vpn-bg-bd-ac)# exit
```


ip-source-guard

To enable source IP address filtering on a layer 2 port, use the **ip-source-guard** command in l2vpn bridge group bridge domain configuration mode. To disable source IP address filtering, use the **no** form of this command.

ip-source-guard logging

Syntax Description

logging (Optional) Enables logging.

Command Default

IP Source Guard is disabled.

Command Modes

l2vpn bridge group bridge domain configuration

Command History

Release	Modification
Release 7.9.1	This command was introduced.

Usage Guidelines

To use this command, you must be in a user group associated with a task group that includes appropriate task IDs. If the user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

Task ID

Task ID	Operations
l2vpn	read, write

Examples

This example shows how to enable ip source guard on bridge bar:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# l2vpn
RP/0/RP0/CPU0:router(config-l2vpn)# bridge group b1
RP/0/RP0/CPU0:router(config-l2vpn-bg)# bridge-domain bar
RP/0/RP0/CPU0:router(config-l2vpn-bg-bd)# ip-source-guard
RP/0/RP0/CPU0:router(config-l2vpn-bg-bd-ipsg)#
```

This example shows how to enable ip source guard logging on bridge bar:

```
RP/0/RP0/CPU0:router# configure
RP/0/RP0/CPU0:router(config)# l2vpn
RP/0/RP0/CPU0:router(config-l2vpn)# bridge group b1
RP/0/RP0/CPU0:router(config-l2vpn-bg)# bridge-domain bar
RP/0/RP0/CPU0:router(config-l2vpn-bg-bd)# ip-source-guard logging
RP/0/RP0/CPU0:router(config-l2vpn-bg-bd-ipsg)#
```

l2vpn

To enter L2VPN configuration mode, use the **l2vpn** command in the Global Configuration mode. To return to the default behavior, use the **no** form of this command.

l2vpn
no l2vpn

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes Global Configuration mode

Command History	Release	Modification
	Release 6.0	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	l2vpn	read, write

Examples The following example shows how to enter L2VPN configuration mode:

```
Router# configure
Router(config)# l2vpn
Router(config-l2vpn)#
```

l2vpn switchover

To force a manual pseudowire switchover, use the **l2vpn switchover** command in EXEC mode.

l2vpn switchover xconnect neighbor *IP-address* pw-id *value*

Syntax Description	xconnect	Configures the switchover for the cross-connect.
	neighbor <i>IP-address</i>	Configures the peer for the cross-connect.
	pw-id <i>value</i>	Configures the pseudowire ID. The range is from 1 to 4294967295.

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes EXEC

Command History	Release	Modification
	Release 6.2.1	This command was introduced.

Usage Guidelines If the backup exists, you can switch a primary router over to the backup router. You can use the **l2vpn switchover** command to reactivate the primary router.

Task ID	Task ID	Operations
	l2vpn	read, write

Examples

The following example shows how to switch a primary pseudowire to a backup pseudowire:

```
Router# l2vpn switchover xconnect neighbor 10.0.0.1 pw-id 2
```

mac secure

To configure MAC security at a port and to set the action that is to be taken when security is violated, use the **mac secure** command in the L2VPN bridge-group, bridge-domain configuration mode or in the EVPN configuration mode.

To configure MAC security in the L2VPN bridge-group, bridge-domain configuration mode use:

```
mac secure { action [{ none | shutdown } ] | logging | threshold | shutdown-recovery-timeout timer-value }
```

Syntax Description		
action	(Optional) Indicates the action to be taken when security is violated.	
none	Forwards the violating packet and allows the MAC address to be relearned.	
shutdown	Shuts down the violating bridge port.	
logging	(Optional) Enables logging.	
threshold	Enables threshold based mac secure.	
shutdown-recovery-timeout timer-value	Sets the Recovery timer to revert shutdown action automatically after the timer expires. Recovery timer value can be set in the range of 10 to 3600 seconds.	

To configure MAC security in the EVPN configuration mode use:

```
mac secure [ freeze-time freeze-time | move-count move-count | move-interval move-interval | retry-count retry-count | | reset-freeze-count-interval interval ] disable
```

Syntax Description		
freeze-time freeze-time	Length of time to lock the MAC address after it has been detected as duplicate. Default is 30 seconds.	
move-count move-count	Number of moves to occur within the specified move-interval before freezing the MAC address. Default is 5.	
move-interval move-interval	Interval to watch for subsequent MAC moves before freezing the MAC address. Default is 180 seconds.	
retry-count retry-count	Number of times to unfreeze a MAC address before freezing it permanently. Default is three times.	
reset-freeze-count-interval interval	Interval after which the count of duplicate detection events is reset. Default is 24 hours. The range is from 1 hour to 48 hours.	
disable	Disable duplicate detection of MAC address.	

Command Default None

Command Modes L2VPN bridge-group, bridge-domain configuration

EVPN configuration

Command History	Release	Modification
	Release 7.5.1	This command was introduced.

Usage Guidelines MAC secure is supported on physical and bundle AC, PW, and EVPN.

Task ID	Task ID	Operations
	l2vpn	Read, write

Examples

This example shows how to enable MAC security in the L2VPN bridge-group, bridge-domain configuration mode.

```
Router# configure
Router(config)# l2vpn
Router(config-l2vpn)# bridge-group BG1
Router(config-l2vpn-bg)# bridge-domain BD1
Router(config-l2vpn-bg-bd)# mac secure
Router(config-l2vpn-bg-bd-mac-sec)# action shutdown
Router(config-l2vpn-bg-bd-mac-sec)# threshold
Router(config-l2vpn-bg-bd-mac-sec)# shutdown-recovery-timeout 300
Router(config-l2vpn-bg-bd-mac-sec)# exit
Router(config-l2vpn-bg-bd)# interface GigabitEthernet0/2/0/0.1
Router(config-l2vpn-bg-bd-ac)# exit
Router(config-l2vpn-bg-bd)# interface GigabitEthernet0/2/0/0.2
Router(config-l2vpn-bg-bd-ac)# commit
```

Examples

This example shows how to enable MAC security in the EVPN configuration mode.

```
Router# configure
Router(config)# evpn
Router(config-evpn)# mac secure
Router(config-evpn-mac-secure)# move-count 7
Router(config-evpn-mac-secure)# move-interval 30
Router(config-evpn-mac-secure)# commit
```

neighbor (L2VPN)

To configure a pseudowire for a cross-connect, use the **neighbor** command in p2p configuration submode. To return to the default behavior, use the **no** form of this command.

neighbor *A.B.C.D*{*A.B.C.D* | **ipv4** *ipv4 address*} **pw-id** *value* [{**backup** | **mpls** | **pw-class** }]

no neighbor *A.B.C.D*{*A.B.C.D* | **ipv4** *ipv4 address*} **pw-id** *value* [{**backup** | **mpls** | **pw-class** }]

Syntax Description		
<i>A.B.C.D</i>	IP address of the cross-connect peer.	
ipv4 <i>ipv4 address</i>	Assigns the IPv4 address of the cross-connect peer.	
pw-id <i>value</i>	Configures the pseudowire ID and ID value. Range is 1 to 4294967295.	
backup	(Optional) Specifies the backup pseudowire for the cross-connect.	
mpls	(Optional) Configures an MPLS static label.	
pw-class	(Optional) Configures the pseudowire class template name to use for this cross-connect.	

Command Default None

Command Modes p2p configuration submode

Command History	Release	Modification
	Release 6.2.1	This command was introduced.

Usage Guidelines A cross-connect may have two segments:

1. An Attachment Circuit (AC)
2. An second AC or a pseudowire



Note The pseudowire is identified by two keys: neighbor and pseudowire ID. There may be multiple pseudowires going to the same neighbor. It is not possible to configure only a neighbor.

All L2VPN configurations can be deleted using the **no l2vpn** command.

Task ID	Task ID	Operations
	l2vpn	read, write

Examples This example shows a point-to-point cross-connect configuration (including pseudowire configuration):

```

Router# configure
Router(config)# l2vpn xconnect group l2vpn
Router(config-l2vpn-xc)# p2p rtrA_to_rtrB
Router(config-xc-p2p)# neighbor 10.1.1.2 pw-id 1000 pw-class class12
Router(config-xc-p2p)# neighbor 10.1.1.3 pw-id 1001 pw-class class13
Router(config-xc)# p2p rtrC_to_rtrD
Router(config-xc-p2p)# neighbor 10.2.2.3 pw-id 200 pw-class class23
Router(config-xc-p2p)# neighbor 10.2.2.4 pw-id 201 pw-class class24

```

This example shows a point-to-point cross-connect configuration (including pseudowire configuration):

```

Router# configure
Router(config)# l2vpn xconnect group l2vpn
Router(config-l2vpn-xc)# p2p rtrA_to_rtrB
Router(config-xc-p2p)# neighbor 10.1.1.2 pw-id 1000 pw-class foo
Router(config-xc)# p2p rtrC_to_rtrD
Router(config-xc-p2p)# neighbor 20.2.2.3 pw-id 200 pw-class bar1

```

Related Commands	Command	Description
	l2vpn, on page 10	Enters L2VPN configuration mode.
	p2p, on page 16	Enters p2p configuration submode to configure point-to-point cross-connects.
	pw-class (L2VPN), on page 17	Enters pseudowire class sub-mode to define a pseudowire class template.
	xconnect group, on page 53	Configures cross-connect groups.

p2p

To configure point-to-point cross-connects and to enter p2p configuration submode, use the **p2p** command in L2VPN xconnect mode. To return to the default behavior, use the **no** form of this command.

```
p2p xconnect-name
no p2p xconnect-name
```

Syntax Description	<i>xconnect-name</i> (Optional) Configures the name of the point-to-point cross- connect.
---------------------------	---

Command Default	None
------------------------	------

Command Modes	L2VPN xconnect
----------------------	----------------

Command History	Release	Modification
	Release 6.0	This command was introduced.

Usage Guidelines	The name of the point-to-point cross-connect string is a free format description string.
-------------------------	--

Task ID	Task ID	Operations
	l2vpn	read, write

Examples The following example shows a point-to-point cross-connect configuration:

```
Router# configure
Router(config)# l2vpn
Router(config-l2vpn)# xconnect group XCON1
Router(config-l2vpn-xc)# p2p XCON1_P2P3
Router(config-l2vpn-xc-p2p)# interface TenGigE0/0/0/0
Router(config-l2vpn-xc-p2p)# interface TenGigE0/0/0/8
Router(config-l2vpn-xc-p2p)# commit
```


pw-class (L2VPN)

To enter pseudowire class sub-mode to define a pseudowire class template, use the **pw-class** command in L2VPN configuration sub-mode. To delete the pseudowire class, use the **no** form of this command.

```
pw-class class-name
no pw-class class-name
```

Syntax Description	<i>class-name</i> Pseudowire class name.				
Command Default	None				
Command Modes	L2VPN configuration sub-mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 6.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 6.0	This command was introduced.
Release	Modification				
Release 6.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				



Note All L2VPN configurations can be deleted using the **no l2vpn** command.

Task ID	Task ID	Operations
	l2vpn	read, write

Examples

The following example shows how to define a simple pseudowire class:

```
Router# configure
Router(config)# l2vpn
Router(config-l2vpn)# xconnect group l1vpn
Router(config-l2vpn-xc)# p2p rtrA_to_rtrB
Router(config-l2vpn-xc-p2p)# neighbor 10.1.1.2 pw-id 1000
Router(config-l2vpn-xc-p2p-pw)# pw-class kanata01
Router(config-l2vpn-xc-p2p-pw)# encapsulation mpls
Router(config-l2vpn-xc-p2p-pw)# exit
Router(config-l2vpn-xc-p2p)# exit
Router(config-l2vpn)# commit
```

Related Commands	Command	Description
	interface (p2p), on page 2	Configures an attachment circuit.
	l2vpn, on page 10	Enters L2VPN configuration mode.

Command	Description
show l2vpn, on page 21	Displays L2VPN information
show l2vpn xconnect, on page 46	Displays brief information on configured cross-connects.
show l2vpn pw-class, on page 49	Displays L2VPN pseudowire class information.

pw-class encapsulation mpls

To configure MPLS pseudowire encapsulation, use the **pw-class encapsulation mpls** command in L2VPN pseudowire class configuration mode. To undo the configuration, use the **no** form of this command.

```
pw-class class-name encapsulation mpls {control word | ipv4 | load-balancing flow-label |
preferred-path | protocol ldp | redundancy one-way | sequencing | tag-rewrite | transport-mode | vccv
verification-type none}
no pw-class class-name encapsulation mpls {control word | ipv4 | load-balancing flow-label |
preferred-path | protocol ldp | redundancy one-way | sequencing | tag-rewrite | transport-mode | vccv
verification-type none}
```

Syntax Description		
	<i>class-name</i>	Encapsulation class name.
	control word	Disables control word for MPLS encapsulation. Disabled by default.
	ipv4	Sets the local source IPv4 address.
	load-balancing flow-label	Sets flow label-based load balancing.
	preferred-path	Configures the preferred path tunnel settings.
	protocol ldp	Configures LDP as the signaling protocol for this pseudowire class.
	redundancy one-way	Configures one-way PW redundancy behavior in the Redundancy Group.
	sequencing	Configures sequencing on receive or transmit.
	tag-rewrite	Configures VLAN tag rewrite.
	transport-mode	Configures transport mode to be Ethernet. The transport-mode VLAN is not supported.
	vccv none	Enables or disables the VCCV verification type.

Command Default None

Command Modes L2VPN pseudowire class configuration

Command History	Release	Modification
	Release 6.0.1	This command was introduced.

Usage Guidelines



Note All L2VPN configurations can be deleted using the **no l2vpn** command.

Task ID	Task ID	Operations
	l2vpn	read, write

Examples

This example shows how to define MPLS pseudowire encapsulation:

```
Router# configure
Router(config)# l2vpn
Router(config-l2vpn)# pw-class kanata01
Router(config-l2vpn-pwc)# encapsulation mpls
```

Related Commands	Command	Description
	pw-class (L2VPN), on page 17	Enters pseudowire class sub-mode to define a pseudowire class template.

show l2vpn

To display L2VPN information, use the **show l2vpn** command in the EXEC mode.

show l2vpn

Syntax Description	This command has no keywords or arguments.
---------------------------	--

Command Default	None
------------------------	------

Command Modes	EXEC mode
----------------------	-----------

Command History	Release	Modification
	Release 6.0	This command was introduced.

Usage Guidelines	No specific guidelines impact the use of this command.
-------------------------	--

Task ID	Task	Operation ID
	l2vpn	read

Example

The following example displays output for the **show l2vpn** command. The output provides an overview of the state of the globally configured features.

```
Router# show l2vpn

Mon Oct 12 14:14:48.869 UTC
HA role      : Active
ISSU role    : Primary
Process FSM  : PrimaryActive
-----
PW-Status: enabled
PW-Grouping: disabled
Logging PW: disabled
Logging BD state changes: disabled
Logging VFI state changes: disabled
Logging NSR state changes: disabled
TCN propagation: disabled
PW OAM transmit time: 30s
```

Related Commands	Command	Description
	l2vpn, on page 10	Enters L2VPN configuration mode.
	p2p, on page 16	Enters p2p configuration submode to configure point-to-point cross-connects.

Command	Description
pw-class (L2VPN), on page 17	Enters pseudowire class sub-mode to define a pseudowire class template.

show l2vpn collaborators

To display information about the state of the interprocess communications connections between l2vpn_mgr and other processes, use the **show l2vpn collaborators** command in EXEC mode.

show l2vpn collaborators

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes EXEC mode

Command History	Release	Modification
	Release 6.0	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	l2vpn	read, write

Examples

The following example shows sample output for the **show l2vpn collaborators** command:

```
Router# show l2vpn collaborators
Mon Oct 12 14:14:57.373 UTC

L2VPN Collaborator stats:
Name                State           Up Cnts         Down Cnts
-----
LSD                 Up              1               0
```

This table describes the significant fields shown in the display.

Table 1: show l2vpn collaborators Field Descriptions

Field	Description
Name	Abbreviated name of the task interacting with l2vpn_mgr.
State	Indicates if l2vpn_mgr has a working connection with the other process.
Up Cnts	Number of times the connection between l2vpn_mgr and the other process has been successfully established.

show l2vpn collaborators

Field	Description
Down Cnts	Number of times that the connection between l2vpn_mgr and the other process has failed or been terminated.

Related Commands

Command	Description
show l2vpn, on page 21	Displays L2VPN information

show l2vpn bridge-domain (VPLS)

To display information for the bridge ports such as attachment circuits and pseudowires for the specific bridge domains, use the **show l2vpn bridge-domain** command in XR EXEC mode.

```
show l2vpn bridge-domain [{autodiscovery | bd-name bridge-domain-name | brief | detail | group
bridge-domain-group-name | hardware | interface type interface-path-id | pw-id value }] neighbor
IP-address [{pw-id value | pbb | summary}]
```

Syntax Description	
autodiscovery	(Optional) Displays BGP autodiscovery information.
bd-name <i>bridge-domain-name</i>	(Optional) Displays filter information on the <i>bridge-domain-name</i> . The <i>bridge-domain-name</i> argument is used to name a bridge domain.
brief	(Optional) Displays brief information about the bridges.
detail	(Optional) Displays detailed information about the bridges. Also, displays the output for the Layer 2 VPN (L2VPN) to indicate whether or not the MAC withdrawal feature is enabled and the number of MAC withdrawal messages that are sent or received from the pseudowire.
group <i>bridge-domain-group-name</i>	(Optional) Displays filter information on the bridge-domain group name. The <i>bridge-domain-group-name</i> argument is used to name the bridge domain group.
hardware	(Optional) Displays hardware information.
interface <i>type interface-path-id</i>	(Optional) Displays the filter information for the interface on the bridge domain. Note Use the show interfaces command to see a list of all interfaces currently configured on the router. For more information about the syntax for the router, use the question mark (?) online help function.
neighbor <i>ip-address</i>	(Optional) Displays the bridge domains that contain the pseudowires to match the filter for the neighbor. The <i>ip-address</i> argument is used to specify IP address of the neighbor.
pw-id <i>value</i>	(Optional) Displays the filter for the pseudowire ID. The range is from 1 to 4294967295.
pbb	(Optional) Displays provider backbone bridge information.
summary	(Optional) Displays the summary information for the bridge domain.
Command Default	None
Command Modes	XR EXEC mode
Command History	<u>Release</u> <u>Modification</u>

Usage Guidelines

Use the **interface** keyword to display only the bridge domain that contains the specified interface as an attachment circuit. In the sample output, only the attachment circuit matches the filter that is displayed. No pseudowires are displayed.

When an SR policy is configured as the preferred path for a VPLS circuit, the traffic traverses through the SR policy path. The PW counters are updated with statistics about packets transmitted and received. When the SR policy configuration is deleted, the traffic session is still functional because the traffic transmission switches back to the normal LSP path between the PEs. There is no drop in the end-to-end traffic transmitted. However, the packet statistics counters are reset and start from zero. This is because, when the SR policy is deleted, the PW too gets deleted and the statistics information associated with the old PW is cleared. The counter restarts from zero when the new PW is created after the switch takes place.

Task ID**Task Operations ID**

l2vpn read

Examples

This is the sample output for **show l2vpn bridge-domain** command.

```
RP/0/RP0/CPU0:router# show l2vpn bridge-domain bd-name evpn detail
Fri Dec 11 06:58:17.691 UTC
Legend: pp = Partially Programmed.
Bridge group: evpn-aa-irb-inter, bridge-domain: evpn, id: 1797, state: up, ShgId: 0, MSTi:
0
  Coupled state: disabled
  VINE state: EVPN-IRB
  MAC learning: enabled
  MAC withdraw: enabled
    MAC withdraw for Access PW: enabled
    MAC withdraw sent on: bridge port up
    MAC withdraw relaying (access to access): disabled
  Flooding:
    Broadcast & Multicast: enabled
    Unknown unicast: enabled
  MAC aging time: 300 s, Type: inactivity
  MAC limit: 64000, Action: none, Notification: syslog
  MAC limit reached: no, threshold: 99%
  MAC port down flush: enabled
  MAC Secure: disabled, Logging: disabled
  Split Horizon Group: none
  Dynamic ARP Inspection: disabled, Logging: disabled
  IP Source Guard: disabled, Logging: disabled
  DHCPv4 Snooping: disabled
  DHCPv4 Snooping profile: none
  IGMP Snooping: disabled
  IGMP Snooping profile: none
  MLD Snooping profile: none
  Storm Control: disabled
  Bridge MTU: 1500
  MIB cvplsConfigIndex: 1798
  Filter MAC addresses:
  P2MP PW: disabled
  Multicast Source: Not Set
  Create time: 11/12/2020 02:02:56 (04:55:20 ago)
  No status change since creation
  ACs: 2 (2 up), VFIs: 0, PWs: 0 (0 up), PBBs: 0 (0 up), VNIs: 0 (0 up)
  List of EVPNs:
    EVPN, state: up
```

```

evi: 2001
XC ID 0x800006a7
Statistics:
  packets: received 0 (unicast 0), sent 0
  bytes: received 0 (unicast 0), sent 0
  MAC move: 0
List of ACs:
AC: BVI10001, state is up
  Type Routed-Interface
  MTU 2000; XC ID 0x80000fa3; interworking none
  BVI MAC address:
    0088.0088.0088
  Split Horizon Group: Access
  PD System Data: AF-LIF-IPv4: 0x00000000 AF-LIF-IPv6: 0x00000000 FRR-LIF: 0x00000000

AC: Bundle-Ether30001.2001, state is up
  Type VLAN; Num Ranges: 1
  Outer Tag: 3001
  Rewrite Tags: []
  VLAN ranges: [2001, 2001]
  MTU 1500; XC ID 0xa00005e0; interworking none; MSTi 1
  MAC learning: enabled
  Flooding:
    Broadcast & Multicast: enabled
    Unknown unicast: enabled
  MAC aging time: 300 s, Type: inactivity
  MAC limit: 64000, Action: none, Notification: syslog
  MAC limit reached: no, threshold: 99%
  MAC port down flush: enabled
  MAC Secure: disabled, Logging: disabled
  Split Horizon Group: none
  E-Tree: Root
  Dynamic ARP Inspection: disabled, Logging: disabled
  IP Source Guard: disabled, Logging: disabled
  DHCPv4 Snooping: disabled
  DHCPv4 Snooping profile: none
  IGMP Snooping: disabled
  IGMP Snooping profile: none
  MLD Snooping profile: none
  Storm Control: bridge-domain policer
  Static MAC addresses:
  Statistics:
    packets: received 404672709 (multicast 0, broadcast 0, unknown unicast 0, unicast
0), sent 0
    bytes: received 30835628366 (multicast 0, broadcast 0, unknown unicast 0, unicast
0), sent 0
    MAC move: 0
  Storm control drop counters:
    packets: broadcast 0, multicast 0, unknown unicast 0
    bytes: broadcast 0, multicast 0, unknown unicast 0
  Dynamic ARP inspection drop counters:
    packets: 0, bytes: 0
  IP source guard drop counters:
    packets: 0, bytes: 0
  PD System Data: AF-LIF-IPv4: 0x00018919 AF-LIF-IPv6: 0x0001891a FRR-LIF: 0x00000000

List of Access PWs:
List of VFIs:
List of Access VFIs:

```

Related Commands

Command	Description
l2vpn, on page 10	Enters L2VPN configuration mode.

Command	Description
p2p, on page 16	Enters p2p configuration submode to configure point-to-point cross-connects.
pw-class (L2VPN), on page 17	Enters pseudowire class sub-mode to define a pseudowire class template.
show l2vpn, on page 21	Displays L2VPN information

show l2vpn database

To display L2VPN database, use the **show l2vpn database** command in EXEC mode.

```
show l2vpn database {ac | node}
```

Syntax Description	ac Displays L2VPN Attachment Circuit (AC) database				
	node Displays L2VPN node database.				
Command Default	None				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 6.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 6.0	This command was introduced.
Release	Modification				
Release 6.0	This command was introduced.				
Usage Guidelines	Even when xSTP (extended spanning tree protocol) operates in the PVRST mode, the output of the show or debug commands flag prefix is displayed as MSTP or MSTi, instead of PVRST.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>l2vpn</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operation	l2vpn	read
Task ID	Operation				
l2vpn	read				

The following example displays output for the **show l2vpn database ac** command:

```
Router# show l2vpn database ac

Mon Oct 12 14:15:47.731 UTC
Bundle-Ether1:
  Other-Segment MTU: 0
  Other-Segment status flags: 0x3
  Signaled capability valid: Yes
  Signaled capability flags: 0x360018
  Configured capability flags: 0x0
  XCID: 0xa0000001
  PSN Type: Undefined
  ETH data:
    Xconnect tags: 0
    Vlan rewrite tag: 0
  AC defn:
    ac-iframe: Bundle-Ether1
    capabilities: 0x00368079
    extra-capabilities: 0x00000000
    parent-ifh: 0x00000000
    ac-type: 0x04
    interworking: 0x00
  AC info:
    seg-status-flags: 0x00000003
    segment mtu/l2-mtu: 1500/1514
```

show l2vpn database

```
TenGigE0/0/0/0.1:
  Other-Segment MTU: 0
  Other-Segment status flags: 0x3
  Signaled capability valid: Yes
  Signaled capability flags: 0x360018
  Configured capability flags: 0x0
  XCID: 0xea
  PSN Type: Undefined
  ETH data:
    Xconnect tags: 0
    Vlan rewrite tag: 0
  AC defn:
    ac-ifname: TenGigE0_0_0_0.1
    capabilities: 0x00368079
    extra-capabilities: 0x00000000
    parent-ifh: 0x08000018
    ac-type: 0x15
    interworking: 0x00
  AC info:
    seg-status-flags: 0x00000003
    segment mtu/l2-mtu: 1504/1518
```

The following example displays output for the **show l2vpn database node** command:

```
Router# show l2vpn database node
Mon Oct 12 14:16:30.540 UTC
Node ID: 0x1000 (0/RP0/CPU0)
MA: vlan_ma      inited:1, flags:0x 2, circuits:3744
  AC event trace history [Total events: 4]
  -----
  Time           Event                               Num Rcvd   Num Sent
  ====           =====                               =
  10/12/2015 12:46:00 Process joined                       0           0
  10/12/2015 12:46:00 Process init success                   0           0
  10/12/2015 12:46:00 Replay start rcvd                     0           0
  10/12/2015 12:46:00 Replay end rcvd                       0           0

MA: ether_ma     inited:1, flags:0x 2, circuits:2
  AC event trace history [Total events: 4]
  -----
  Time           Event                               Num Rcvd   Num Sent
  ====           =====                               =
  10/12/2015 12:41:19 Process joined                       0           0
  10/12/2015 12:41:19 Process init success                   0           0
  10/12/2015 12:41:19 Replay start rcvd                     0           0
  10/12/2015 12:41:19 Replay end rcvd                       0           0

MA: atm_ma       inited:0, flags:0x 0, circuits:0
MA: hdlc_ma      inited:0, flags:0x 0, circuits:0
MA: fr_ma        inited:0, flags:0x 0, circuits:0
MA: ppp_ma       inited:0, flags:0x 0, circuits:0
MA: cem_ma       inited:0, flags:0x 0, circuits:0
MA: vif_ma       inited:0, flags:0x 0, circuits:0
MA: pwhe_ma      inited:0, flags:0x 0, circuits:0
MA: nve_mgr      inited:0, flags:0x 0, circuits:0
MA: mstp         inited:0, flags:0x 0, circuits:0
MA: span         inited:0, flags:0x 0, circuits:0
MA: erp          inited:0, flags:0x 0, circuits:0
MA: erp_test     inited:0, flags:0x 0, circuits:0
```

```
MA: mstp_test    inited:0, flags:0x 0, circuits:0
MA: evpn        inited:0, flags:0x 0, circuits:0
```

Related Commands	Command	Description
	l2vpn, on page 10	Enters L2VPN configuration mode.
	p2p, on page 16	Enters p2p configuration submode to configure point-to-point cross-connects.
	pw-class (L2VPN), on page 17	Enters pseudowire class sub-mode to define a pseudowire class template.
	show l2vpn, on page 21	Displays L2VPN information

show l2vpn forwarding

To display forwarding information from the layer2_fib manager, use the **show l2vpn forwarding** command in EXEC mode.

show l2vpn forwarding {**counter** | **debug** | **detail** | **hardware** | **interface** | **location** [*node-id*] | **private**}

Syntax Description		
counter		Displays the cross-connect counters.
debug		Displays debug information.
detail		Displays detailed information from the layer2_fib manager.
hardware		Displays hardware-related layer2_fib manager information.
interface		Displays the match AC subinterface.
location <i>node-id</i>		Displays layer2_fib manager information for the specified location. The <i>node-id</i> argument is entered in the <i>rack/slot/module</i> notation.
private		Output includes private information.

Command Default None

Command Modes EXEC mode

Command History	Release	Modification
	Release 6.0	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	l2vpn	read

Examples

The following sample output is from the **show l2vpn forwarding** command:

```
Router# show l2vpn forwarding location 0/RP0/CPU0
Mon Oct 12 14:19:11.771 UTC
Segment 1                               Segment 2                               State
-----
Te0/0/0/0.234                           ac Te0/0/0/26.234                       UP
Te0/0/0/0.233                           ac Te0/0/0/26.233                       UP
Te0/0/0/0.232                           ac Te0/0/0/26.232                       UP
Te0/0/0/0.231                           ac Te0/0/0/26.231                       UP
Te0/0/0/0.230                           ac Te0/0/0/26.230                       UP
```


The following sample output is from the **show l2vpn forwarding counter location** command:

```
Router# show l2vpn forwarding counter location 0/RP0/CPU0

Mon Oct 12 14:18:01.194 UTC
Legend: ST = State, DN = Down

Segment 1                               Segment 2                               ST Byte
-----                               -----                               -
Te0/0/0/0.234                           ac Te0/0/0/26.234                       UP 15098997504
Te0/0/0/0.233                           ac Te0/0/0/26.233                       UP 15098997568
Te0/0/0/0.232                           ac Te0/0/0/26.232                       UP 15098997504
Te0/0/0/0.231                           ac Te0/0/0/26.231                       UP 15098997568
Te0/0/0/0.230                           ac Te0/0/0/26.230                       UP 15098997568
```

The following sample output is from the **show l2vpn forwarding summary location** command:

```
Router# show l2vpn forwarding summary location 0/RP0/CPU0
Mon Oct 12 14:18:25.838 UTC
To Resynchronize MAC table from the Network Processors, use the command...
    l2vpn resynchronize forwarding mac-address-table location <r/s/i>

Major version num:1, minor version num:0
Shared memory timestamp:0xa41120d180
Global configuration:
Number of forwarding xconnect entries:1873
  Up:1873  Down:0
  AC-PW(atom):0 AC-PW(l2tpv2):0 AC-PW(l2tpv3):0
  AC-PW(l2tpv3-ipv6):0
  AC-AC:1873 AC-BP:0 (PWHE AC-BP:0) AC-Unknown:0
  PW-BP:0 PW-Unknown:0
  PBB-BP:0 PBB-Unknown:0
  EVPN-BP:0 EVPN-Unknown:0
  VNI-BP:0 VNI-Unknown:0
  Monitor-Session-PW:0 Monitor-Session-Unknown:0
Number of xconnects down due to:
  AIB:0 L2VPN:0 L3FIB:0 VPDN:0
Number of xconnect updates dropped due to:
  Invalid XID: 0 VPWS PW, 0 VPLS PW, 0 Virtual-AC, 0 PBB,
  0 EVPN
  0 VNI
Exceeded max allowed: 0 VPLS PW, 0 Bundle-AC
Number of p2p xconnects: 1873
Number of bridge-port xconnects: 0
Number of nexthops:0
Number of bridge-domains: 0
  0 with routed interface
  0 with PBB-EVPN enabled
  0 with EVPN enabled
  0 with p2mp enabled
Number of bridge-domain updates dropped: 0
Number of total macs: 0
  0 Static macs
  0 Routed macs
  0 BMAC
  0 Source BMAC
  0 Locally learned macs
  0 Remotely learned macs
Number of total P2MP Ptree entries: 0
Number of PWHE Main-port entries: 0
Number of EVPN Multicast Replication lists: 0 (0 default)
```

The following sample output is from the **show l2vpn forwarding detail location** command:

```
Router# show l2vpn forwarding detail location 0/RP0/CP00
Mon Oct 12 14:18:47.187 UTC
Local interface: TenGigE0/0/0/0.234, Xconnect id: 0x1, Status: up
  Segment 1
    AC, TenGigE0/0/0/0.234, status: Bound
    Statistics:
      packets: received 238878391, sent 313445
      bytes: received 15288217024, sent 20060480
      packets dropped: PLU 0, tail 0
      bytes dropped: PLU 0, tail 0
  Segment 2
    AC, TenGigE0/0/0/26.234, status: Bound

Local interface: TenGigE0/0/0/0.233, Xconnect id: 0x2, Status: up
  Segment 1
    AC, TenGigE0/0/0/0.233, status: Bound
    Statistics:
      packets: received 238878392, sent 313616
      bytes: received 15288217088, sent 20071424
      packets dropped: PLU 0, tail 0
      bytes dropped: PLU 0, tail 0
  Segment 2
    AC, TenGigE0/0/0/26.233, status: Bound

Local interface: TenGigE0/0/0/0.232, Xconnect id: 0x3, Status: up
  Segment 1
    AC, TenGigE0/0/0/0.232, status: Bound
    Statistics:
      packets: received 238878391, sent 313476
      bytes: received 15288217024, sent 20062464
      packets dropped: PLU 0, tail 0
      bytes dropped: PLU 0, tail 0
  Segment 2
    AC, TenGigE0/0/0/26.232, status: Bound
```

Related Commands

Command	Description
l2vpn, on page 10	Enters L2VPN configuration mode.
p2p, on page 16	Enters p2p configuration submode to configure point-to-point cross-connects.
pw-class (L2VPN), on page 17	Enters pseudowire class sub-mode to define a pseudowire class template.
show l2vpn, on page 21	Displays L2VPN information
show l2vpn database, on page 29	Displays L2VPN database
show l2vpn forwarding message counters, on page 35	Displays l2vpn forwarding message counters information.

show l2vpn forwarding message counters

To display L2VPN forwarding messages exchanged with L2FIB Collaborators, use the **show l2vpn forwarding message counters** command in EXEC mode.

```
show l2vpn forwarding message counters {hardware | location node-id}
```

Syntax Description	hardware Displays message counter information from hardware.				
	location node-id Displays message counter information for the specified location.				
Command Default	None				
Command Modes	EXEC mode				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 6.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 6.0	This command was introduced.
Release	Modification				
Release 6.0	This command was introduced.				
Usage Guidelines	Even when xSTP (extended spanning tree protocol) operates in the PVRST mode, the output of the show or debug commands flag prefix is displayed as MSTP or MSTi, instead of PVRST.				
Task ID	<table border="1"> <thead> <tr> <th>Task ID</th> <th>Operation</th> </tr> </thead> <tbody> <tr> <td>l2vpn</td> <td>read</td> </tr> </tbody> </table>	Task ID	Operation	l2vpn	read
Task ID	Operation				
l2vpn	read				

The following examples shows the output from the **show l2vpn forwarding message counters location** command:

```
Router# show l2vpn forwarding message counters location 0/RP0/CPU0
Mon Oct 12 14:19:41.768 UTC
Messages exchanged with L2FIB Collaborators:
-----
      Message                               Count      Info1      Info2
      Time
      =====
      =====
      l2vpn provision messages received:    7496      0x800001c   0x0
      Oct 12 13:09:38.477
      l2vpn unprovision messages received:    0         0x0         0x0
      -
      l2vpn bridge provision messages received: 0         0x0         0x0
      -
      l2vpn bridge unprovision messages received: 0         0x0         0x0
      -
      l2vpn bridge main port update messages received: 0         0x0         0x0
      -
      bdx bridge main port update messages received: 0         0x0         0x0
      -
      l2vpn bridge main port update w/ action=MSTI_DELETE 0         0x0         0x0
      -
      l2vpn bridge main port update ACK sent: 0         0x0         0x0
```

show l2vpn forwarding message counters

```

-
bdxc bridge main port update ACK sent:          0          0x0          0x0
-
l2vpn reception of ACK relay msg received:      0          0x0          0x0
-
l2vpn bridge port provision messages received:  0          0x0          0x0
-
l2vpn bridge port unprovision messages received: 0          0x0          0x0
-
l2vpn shg provision messages received:         0          0x0          0x0
-
l2vpn shg unprovision messages received:       0          0x0          0x0
-
l2vpn static mac provision messages received:   0          0x0          0x0
-
l2vpn static mac unprovision messages received: 0          0x0          0x0
-
l2vpn static mac flush messages received:      0          0x0          0x0
-
l2vpn dynamic mac local learning messages received: 0          0x0          0x0
-
l2vpn dynamic mac local learning dropped queue len: 0          0x0          0x0
-
l2vpn dynamic mac local learning dropped cache: 0          0x0          0x0
-
l2vpn dynamic mac local learning dropped multicast: 0          0x0          0x0
-
l2vpn dynamic mac bcst send failed:           0          0x0          0x0
-
l2vpn dynamic mac remote learning messages received 0          0x0          0x0
-
l2vpn dynamic mac refresh messages received:   0          0x0          0x0
-
l2vpn dynamic mac delete/create messages received: 0          0x0          0x0
-
l2vpn dynamic mac no-xid dropped:              0          0x0          0x0
-
l2vpn dynamic local mac unprovision messages:  0          0x0          0x0
-
l2vpn dynamic remote mac unprovision messages: 0          0x0          0x0
-
l2vpn dynamic local mac aged out messages sent: 0          0x0          0x0
-
l2vpn dynamic mac limit message received:      0          0x0          0x0
-
l2vpn dynamic mac delete notification:        0          0x0          0x0
-
l2vpn mac move counter:                       0          0x0          0x0
-
l2vpn qid mac remote:                         0          0x0          0x0
-
l2vpn qid mac remote evpn:                   0          0x0          0x0
-
l2vpn qid mac refresh:                       0          0x0          0x0
-
l2vpn qid mac learning:                      0          0x0          0x0
-
AIB update messages received:                 7494        0x8007502    0x8000150
Oct 12 12:49:44.112
AIB delete messages received:                 0          0x0          0x0
-
FIB nhop registration messages sent:          0          0x0          0x0
-
FIB nhop unregistration messages sent:        0          0x0          0x0

```

```

-
FIB ecd ldi update messages received:          0          0x0          0x0
-
FIB invalid NHOP prov messages received:       0          0x0          0x0
-
l2vpn hw learn MAC update messages received:   0          0x0          0x0
-
l2vpn hw learn MAC BD limit set messages received: 0          0x0          0x0
-
l2vpn hw learn MAC BD limit clr messages received: 0          0x0          0x0
-
l2vpn hw learn MAC BP limit set messages received: 0          0x0          0x0
-
l2vpn hw learn MAC BP limit clr messages received: 0          0x0          0x0
-
l2vpn backbone source mac provision msg received: 1          0x0          0x0
Oct 12 12:41:19.807
l2vpn backbone source mac unprovision msg received: 0          0x0          0x0
-
l2vpn bridge port MAC flush msg received:      0          0x0          0x0
-
bdxc ISSU drop msg received:                   0          0x0          0x0
-
l2vpn ISSU drop msg received:                  0          0x0          0x0
-
l2vpn BD MAC Flush messages received:          0          0x0          0x0
-
l2vpn TCN messages received:                   0          0x0          0x0
-
bdxc G8032 TCN messages transmitted:           0          0x0          0x0
-
l2fib PD failure count:                        0          0x0          0x0
-
bdxc DHCP binding provision msg received:      0          0x0          0x0
-
bdxc DHCP binding unprovision msg received:    0          0x0          0x0
-
bdxc DHCP configuration msg received:          0          0x0          0x0
-
platform DAI violation msg received:           0          0x0          0x0
-
platform IPSG violation msg received:          0          0x0          0x0
-
platform MAC Secure violation msg received:     0          0x0          0x0
-
l2vpn g8032 ring provision msg received:        0          0x0          0x0
-
l2vpn g8032 ring unprovision msg received:      0          0x0          0x0
-
l2vpn g8032 ring inst provision msg received:   0          0x0          0x0
-
l2vpn g8032 ring inst unprovision msg received: 0          0x0          0x0
-
bdxc VPDN L2TPv2 provision msg received:       0          0x0          0x0
-
bdxc VPDN L2TPv2 unprovision msg received:     0          0x0          0x0
-
bdxc VPDN L2TPv2 invalid msg received:         0          0x0          0x0
-
bdxc P2MP PTREE provision msg received:        0          0x0          0x0
-
bdxc P2MP PTREE unprovision msg received:      0          0x0          0x0
-
bdxc P2MP PTREE provision msg dropped:         0          0x0          0x0

```

show l2vpn forwarding message counters

```

-
  bdx P2MP PTREE unprovision msg dropped:          0          0x0          0x0
-
  l2vpn reception of protection ack msg received:  0          0x0          0x0
-
  l2vpn GLOBAL messages received:                 1          0x0          0x0
Oct 12 12:41:19.807
  l2vpn BD Flush request messages to l2vpn:       0          0x0          0x0
-
  l2vpn evpn mcast provision msg received:        0          0x0          0x0
-
  l2vpn evpn mcast unprovision msg received:      0          0x0          0x0
-
  l2vpn evpn mcast invalid msg received:         0          0x0          0x0
-
  l2vpn evpn mcast unprovision all msg received:  0          0x0          0x0
-
  l2vpn evpn main port provision msg received:    0          0x0          0x0
-
  l2vpn evpn main port unprovision msg received:  0          0x0          0x0
-
  l2vpn evpn main port invalid msg received:     0          0x0          0x0
-
  l2vpn MVRP request:                             0          0x0          0x0
-
  l2vpn pwgroup status update msg received:      0          0x0          0x0
-

```

The following examples shows the output from the **show l2vpn forwarding message counters hardware location** command:

```

Router# show l2vpn forwarding message counters hardware location 0/$
Mon Oct 12 14:19:59.017 UTC

```

Event Statistics Summary

```

-----
          Create      Modify      Bind      Unbind      Delete
LOCXC AC      7492      3748      7496         4         0
VPWS AC         0         0         0         0         0
VPLS AC         0         0         0         0         0
L2TP AC         0         0         0         0         0
VPWS PW         0         0         0         0         0
VPLS PW         0         0         0         0         0
BRIDGE         0         0         0         0         0
BRIDGEPORT     0         0         0         0         0
MAC             0         0         0         0         0
PBB            0         0         0         0         0
DHCP           0         0         0         0         0
L2TP           0         0         0         0         0
L2TP SESSION   0         0         0         0         0

```

Performance Statistics Summary

```

-----
          Create      Modify      Delete      Bind      Unbind
LOCXC AC    000.032 s    000.790 s    < 1 ms    000.810 s    000.003 s
VPWS AC     < 1 ms     < 1 ms     < 1 ms     < 1 ms     < 1 ms
VPLS AC     < 1 ms     < 1 ms     < 1 ms     < 1 ms     < 1 ms
L2TP AC     < 1 ms     < 1 ms     < 1 ms     < 1 ms     < 1 ms
VPWS PW     < 1 ms     < 1 ms     < 1 ms     < 1 ms     < 1 ms
VPLS PW     < 1 ms     < 1 ms     < 1 ms     < 1 ms     < 1 ms
BRIDGE     < 1 ms     < 1 ms     < 1 ms     < 1 ms     < 1 ms
BRIDGEPORT < 1 ms     < 1 ms     < 1 ms     < 1 ms     < 1 ms
MAC        < 1 ms     < 1 ms     < 1 ms     < 1 ms     < 1 ms

```

PBB	< 1 ms	< 1 ms	< 1 ms	< 1 ms	< 1 ms
DHCP	< 1 ms	< 1 ms	< 1 ms	< 1 ms	< 1 ms
L2TP	< 1 ms	< 1 ms	< 1 ms	< 1 ms	< 1 ms
L2TP SESSION	< 1 ms	< 1 ms	< 1 ms	< 1 ms	< 1 ms

Related Commands

Command	Description
l2vpn, on page 10	Enters L2VPN configuration mode.
p2p, on page 16	Enters p2p configuration submode to configure point-to-point cross-connects.
pw-class (L2VPN), on page 17	Enters pseudowire class sub-mode to define a pseudowire class template.
show l2vpn, on page 21	Displays L2VPN information
show l2vpn database, on page 29	Displays L2VPN database
show l2vpn forwarding, on page 32	Displays forwarding information from the layer2_fib manager on the line card.

show l2vpn index

To display statistics about the index manager, use the **show l2vpn index** command in EXEC mode.

show l2vpn index [{location | private}]private

Syntax Description	location	(Optional) Displays index manager statistics for the specified location.
	private	(Optional) Detailed information about all indexes allocated for each pool.

Command Default None

Command Modes EXEC mode

Command History	Release	Modification
	Release 6.0	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	l2vpn	read

Examples

This example shows the sample output of the **show l2vpn index** command:

```
Router# show l2vpn index
Mon Oct 12 14:20:20.218 UTC
Pool id: 0x0, App: AC
  Max number of ID mgr instances: 1
  ID mgr instances in use: 1
  Pool size: 32513
  zombied IDs: 0
  allocated IDs: 3745

Pool id: 0xffff80002, App: BD
  Max number of ID mgr instances: 1
  ID mgr instances in use: 1
  Pool size: 8192
  zombied IDs: 0
  allocated IDs: 0

Pool id: 0xffff80003, App: MP2MP
  Max number of ID mgr instances: 1
  ID mgr instances in use: 1
  Pool size: 65535
  zombied IDs: 0
```



```

allocated IDs: 0

Pool id: 0xffff80004, App: RD
Max number of ID mgr instances: 1
ID mgr instances in use: 1
Pool size: 65536
zombied IDs: 0
allocated IDs: 0

Pool id: 0xffff80005, App: IFLIST
Max number of ID mgr instances: 1
ID mgr instances in use: 1
Pool size: 65535
zombied IDs: 0
allocated IDs: 1

Pool id: 0xffff80006, App: ATOM
Max number of ID mgr instances: 1
ID mgr instances in use: 1
Pool size: 131071
zombied IDs: 0
allocated IDs: 0

Pool id: 0xffff80007, App: PWGroup
Max number of ID mgr instances: 1
ID mgr instances in use: 1
Pool size: 65535
zombied IDs: 0
allocated IDs: 1

Pool id: 0xffffd0000, App: Global
Max number of ID mgr instances: 1
ID mgr instances in use: 1
Pool size: 16383
zombied IDs: 0
allocated IDs: 2

```

Related Commands	Command	Description
	l2vpn, on page 10	Enters L2VPN configuration mode.
	p2p, on page 16	Enters p2p configuration submode to configure point-to-point cross-connects.
	pw-class (L2VPN), on page 17	Enters pseudowire class sub-mode to define a pseudowire class template.
	show l2vpn, on page 21	Displays L2VPN information
	show l2vpn database, on page 29	Displays L2VPN database
	show l2vpn forwarding, on page 32	Displays forwarding information from the layer2_fib manager on the line card.

show l2vpn resource

To display the memory state in the L2VPN process, use the **show l2vpn resource** command in EXEC mode.

show l2vpn resource

Syntax Description This command has no arguments or keywords.

Command Default None

Command Modes EXEC mode

Command History	Release	Modification
	Release 6.0	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	l2vpn	read

Examples

The following example shows sample output for the **show l2vpn resource** command:

```
Router# show l2vpn resource
Mon Oct 12 14:21:54.670 UTC
Memory: Normal
```

This table describes the significant fields shown in the display.

Table 2: show l2vpn resource Command Field Descriptions

Field	Description
Memory	Displays memory status.

Related Commands	Command	Description
	l2vpn, on page 10	Enters L2VPN configuration mode.
	p2p, on page 16	Enters p2p configuration submode to configure point-to-point cross-connects.
	pw-class (L2VPN), on page 17	Enters pseudowire class sub-mode to define a pseudowire class template.
	show l2vpn, on page 21	Displays L2VPN information
	show l2vpn index, on page 40	Displays statistics about the index manager.

show l2vpn trace

To display trace data for L2VPN, use the **show l2vpn trace** command in EXEC mode.

```
show l2vpn trace [{checker | file | hexdump | last | location | reverse | stats | tailf | unique | usec | verbose
| wide | wrapping}]
```

Syntax Description	Parameter	Description
	checker	Displays trace data for the L2VPN Uberverifier.
	file	Displays trace data for the specified file.
	hexdump	Display traces data in hexadecimal format.
	last	Display last <n> entries
	location	Displays trace data for the specified location.
	reverse	Display latest traces first
	stats	Display trace statistics
	tailf	Display new traces as they are added
	unique	Display unique entries with counts
	usec	Display usec details with timestamp
	verbose	Display internal debugging information
	wide	Display trace data excluding buffer name, node name, tid
	wrapping	Display wrapping entries

Command Default None

Command Modes EXEC mode

Command History	Release	Modification
	Release 6.0	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operation
	l2vpn	read

This example displays output for the **show l2vpn trace** command:

show l2vpn trace

```

Router# show l2vpn trace
Mon Oct 12 14:22:09.082 UTC
188 unique entries (2596 possible, 0 filtered)
Oct 12 12:37:44.197 l2vpn/policy 0/RP0/CPU0 1# t4349 POLICY:320: l2vpn_policy_reg_agent
started - route_policy_supported=False, forward_class_supported=False
Oct 12 12:39:21.870 l2vpn/fwd-pd 0/RP0/CPU0 1# t5664 FWD_PD:731:
Oct 12 12:39:21.883 l2vpn/fwd-err 0/RP0/CPU0 1# t5664 FWD_ERR|ERR:76: Major version mis-match,
SHM: 0x0 Expected: 0x1
Oct 12 12:39:21.883 l2vpn/fwd-err 0/RP0/CPU0 1# t5664 FWD_ERR|ERR:87: Magic number mis-match,
SHM: 0x0 Expected: 0xa7b6c3d8
Oct 12 12:39:21.884 l2vpn/err 0/RP0/CPU0 1# t5664 FWD_ERR|ERR:76: Major version mis-match,
SHM: 0x0 Expected: 0x1
Oct 12 12:39:21.884 l2vpn/err 0/RP0/CPU0 1# t5664 FWD_ERR|ERR:87: Magic number mis-match,
SHM: 0x0 Expected: 0xa7b6c3d8
Oct 12 12:39:21.890 l2vpn/fwd-detail 0/RP0/CPU0 1# t5664 FWD_DETAIL:263: PWGROUP Table init
succeeded
Oct 12 12:39:21.890 l2vpn/fwd-detail 0/RP0/CPU0 2# t5664 FWD_DETAIL:416: l2tp session table
rebuilt
Oct 12 12:39:21.903 l2vpn/fwd-common 0/RP0/CPU0 1# t5664 FWD_COMMON:39: L2FIB_OBJ_TRACE:
trace_buf=0x7d48e0
Oct 12 12:39:25.613 l2vpn/issu 0/RP0/CPU0 1# t5664 ISSU:790: ISSU - iMDR init called;
'infra/imdr' detected the 'informational' condition 'the service is not supported in the
node'
Oct 12 12:39:25.613 l2vpn/issu 0/RP0/CPU0 1# t5664 ISSU:430: ISSU - attempt to start
COLLABORATOR wait timer while not in ISSU mode
Oct 12 12:39:25.638 l2vpn/fwd-common 0/RP0/CPU0 1# t5664 FWD_COMMON:4241: show edm thread
initialized
Oct 12 12:39:25.781 l2vpn/fwd-mac 0/RP0/CPU0 1# t5664 FWD_MAC|ERR:783: Mac aging init
Oct 12 12:39:25.781 l2vpn/fwd-mac 0/RP0/CPU0 2# t5664 FWD_MAC:1954: l2vpn_gsp_cons_init
returned Success
Oct 12 12:39:25.781 l2vpn/err 0/RP0/CPU0 1# t5664 FWD_MAC|ERR:783: Mac aging init
Oct 12 12:39:25.782 l2vpn/fwd-aib 0/RP0/CPU0 4# t5664 FWD_AIB:446: aib connection opened
successfully
Oct 12 12:39:25.783 l2vpn/fwd-mac 0/RP0/CPU0 2# t5664 FWD_MAC:2004: Client successfully
joined gsp group
Oct 12 12:39:25.783 l2vpn/fwd-mac 0/RP0/CPU0 1# t5664 FWD_MAC:781: Initializing the txlist
IPC thread
Oct 12 12:39:25.783 l2vpn/fwd-mac 0/RP0/CPU0 1# t5664 FWD_MAC:3195: gsp_optimal_msg_size =
31264 (real: True)
Oct 12 12:39:25.783 l2vpn/fwd-mac 0/RP0/CPU0 1# t5664 FWD_MAC:626: Entering mac aging timer
init
Oct 12 12:39:25.783 l2vpn/fwd-mac 0/RP0/CPU0 1# t7519 FWD_MAC:725: Entering event loop for
mac txlist thread
Oct 12 12:39:25.797 l2vpn/fwd-mac 0/RP0/CPU0 1# t4222 FWD_MAC:2221: learning_client_colocated
0, is_client_netio 1

```

Related Commands

Command	Description
l2vpn, on page 10	Enters L2VPN configuration mode.
p2p, on page 16	Enters p2p configuration submode to configure point-to-point cross-connects.
pw-class (L2VPN), on page 17	Enters pseudowire class sub-mode to define a pseudowire class template.
show l2vpn, on page 21	Displays L2VPN information
show l2vpn index, on page 40	Displays statistics about the index manager.

Command	Description
show l2vpn resource, on page 42	Displays the memory state in the L2VPN process.

show l2vpn xconnect

To display brief information on configured cross-connects, use the **show l2vpn xconnect** command in EXEC mode.

show l2vpn xconnect [{**brief** | **detail***encapsulation* | **group** | **groups** | **interface** | **location** | **neighbor** | **standby** | **state** | **summary** | **type** **locally-switched**}]

Syntax Description

brief	(Optional) Displays encapsulation brief information.
detail	(Optional) Displays detailed information.
<i>encapsulation</i>	(Optional) Filters on encapsulation type.
group	(Optional) Displays all cross-connects in a specified group.
groups	(Optional) Displays all groups information.
interface	(Optional) Filters on interface and subinterface.
location	(Optional) Displays location specific information.
neighbor	(Optional) Filters on neighbor.
private	(Optional) Displays private information.
standby	(Optional) Displays standby node specific information.
state	(Optional) Filters the following xconnect state types: <ul style="list-style-type: none"> • up • down
summary	(Optional) Displays AC information from the AC Manager database.
type	(Optional) Filters the locally switched xconnect type.

Command Default

None

Command Modes

EXEC mode

Command History

Release	Modification
Release 6.0	This command was introduced.
Release 7.4.1	

Usage Guidelines

If a specific cross-connect is specified in the command then only that cross-connect will be displayed; otherwise, all cross-connects are displayed.

Task ID	Task ID	Operations
	l2vpn	read, write

Examples

The following example shows sample output for the **show l2vpn xconnect** command:

```
Router# show l2vpn xconnect
Mon Oct 12 14:22:20.566 UTC
Legend: ST = State, UP = Up, DN = Down, AD = Admin Down, UR = Unresolved,
        SB = Standby, SR = Standby Ready, (PP) = Partially Programmed
XConnect
Group      Name      ST      Segment 1      Segment 2      ST      ST
-----
XC         XC         UP      BE1             BE2             UP      UP
-----
XCON31    XCON1_P2P1 UP      Te0/0/0/0.1    Te0/0/0/26.1   UP      UP
-----
XCON32    XCON1_P2P2 UP      Te0/0/0/0.2    Te0/0/0/26.2   UP      UP
-----
XCON33    XCON1_P2P3 UP      Te0/0/0/0.3    Te0/0/0/26.3   UP      UP
-----
XCON34    XCON1_P2P4 UP      Te0/0/0/0.4    Te0/0/0/26.4   UP      UP
-----
XCON35    XCON1_P2P5 UP      Te0/0/0/0.5    Te0/0/0/26.5   UP      UP
-----
XCON36    XCON1_P2P6 UP      Te0/0/0/0.6    Te0/0/0/26.6   UP      UP
-----
XCON37    XCON1_P2P7 UP      Te0/0/0/0.7    Te0/0/0/26.7   UP      UP
-----
XCON38    XCON1_P2P8 UP      Te0/0/0/0.8    Te0/0/0/26.8   UP      UP
-----
```

This example shows the output of the **show run l2vpn** command :

```
Router# show run l2vpn
Mon Oct 12 14:23:24.723 UTC
l2vpn
xconnect group XC
  p2p XC
    interface Bundle-Ether1
    interface Bundle-Ether2
  !
!
xconnect group XCON31
  p2p XCON1_P2P1
    interface TenGigE0/0/0/0.1
    interface TenGigE0/0/0/26.1
  !
!
xconnect group XCON32
  p2p XCON1_P2P2
    interface TenGigE0/0/0/0.2
    interface TenGigE0/0/0/26.2
  !
!
xconnect group XCON33
  p2p XCON1_P2P3
```

```
interface TenGigE0/0/0/0.3
interface TenGigE0/0/0/26.3
```

This table describes the significant fields shown in the display.

Table 3: show l2vpn xconnect Command Field Descriptions

Field	Description
XConnect Group	Displays a list of all configured cross-connect groups.
Group	Displays the cross-connect group number.
Name	Displays the cross-connect group name.
Description	Displays the cross-connect group description. If no description is configured, the interface type is displayed.
ST	State of the cross-connect group: up (UP) or down (DN).

Related Commands

Command	Description
l2vpn, on page 10	Enters L2VPN configuration mode.
p2p, on page 16	Enters p2p configuration submode to configure point-to-point cross-connects.
pw-class (L2VPN), on page 17	Enters pseudowire class sub-mode to define a pseudowire class template.
show l2vpn, on page 21	Displays L2VPN information
show l2vpn database, on page 29	Displays L2VPN database
show l2vpn pw-class, on page 49	Displays L2VPN pseudowire class information.

show l2vpn pw-class

To display L2VPN pseudowire class information, use the **show l2vpn pw-class** command in EXEC mode.

```
show l2vpn pw-class [{detail | location | name class name | standby}]
```

Syntax Description	detail	(Optional) Displays detailed information.
	location	(Optional) Displays location specific information.
	name <i>class-name</i>	(Optional) Displays information about a specific pseudowire class name.
	standby	(Optional) Displays standby node specific information.

Command Default None

Command Modes EXEC mode

Command History	Release	Modification
	Release 6.0	This command was introduced.

Usage Guidelines No specific guidelines impact the use of this command.

Task ID	Task ID	Operations
	l2vpn	read

Examples

The following example shows sample output for the **show l2vpn pw-class** command:

```
Router# show l2vpn pw-class

Name                               Encapsulation   Protocol
-----
mplsclass_75                       MPLS             LDP
l2tp-dynamic                       L2TPv3          L2TPv3
```

This example shows sample output for the **show l2vpn pw-class detail** command:

```
Router# show l2vpn pw-class detail
  Encapsulation MPLS, protocol LDP
  Transport mode not set, control word unset (default)
  Sequencing not set
  Static tag rewrite not set
  PW Backup disable delay: 0 sec
  MAC withdraw message is sent over PW: no
  IPv4 source address 10.0.0.1
```

This table describes the significant fields shown in the display.

Table 4: show l2vpn pw-class Command Field Descriptions

Field	Description
Name	Displays the name of the pseudowire class.
Encapsulation	Displays the encapsulation type.
Protocol	Displays the protocol type.

Related Commands

Command	Description
l2vpn, on page 10	Enters L2VPN configuration mode.
p2p, on page 16	Enters p2p configuration submode to configure point-to-point cross-connects.
pw-class (L2VPN), on page 17	Enters pseudowire class sub-mode to define a pseudowire class template.
show l2vpn, on page 21	Displays L2VPN information
show l2vpn database, on page 29	Displays L2VPN database

storm-control

To enable storm control on an access circuit (AC) under a VPLS bridge, use the **storm-control** command in l2vpn bridge group bridge-domain access circuit configuration mode. To disable storm control, use the **no** form of this command.

```
storm-control {broadcast | multicast | unknown-unicast} {pps pps-value | kbps kbps-value}
no storm-control {broadcast | multicast | unknown-unicast} {pps pps-value | kbps kbps-value}
```

Syntax Description		
broadcast		Configures storm control for broadcast traffic.
multicast		Configures storm control for multicast traffic.
unknown-unicast		Configures storm control for unknown unicast traffic. <ul style="list-style-type: none"> Storm control does not apply to bridge protocol data unit (BPDU) packets. All BPDU packets are processed as if traffic storm control is not configured. Storm control does not apply to internal communication and control packets, route updates, SNMP management traffic, Telnet sessions, or any other packets addressed to the router.
pps pps-value		Configures the packets-per-second (pps) storm control threshold for the specified traffic type. Valid values range from 1 to 160000.
kbps kbps-value		Configures the storm control in kilo bits per second (kbps). The range is from 64 to 1280000.

Command Default Storm control is disabled by default.

Command Modes l2vpn bridge group bridge-domain access circuit configuration

Command History	Release	Modification
	Release 6.3.1	This command was introduced.

Usage Guidelines

- The storm control configuration is supported only on one sub-interface under a main interface, though the system allows you to configure storm control on more than one sub-interface. However, only the first storm control configuration under a main interface takes effect, though the running configuration shows all the storm control configurations that are committed. After reload, any of the storm control configurations may take effect irrespective of the order of configuration.
- Starting from 7.8.1, you can enable per subinterface configuration support for storm control by using the **hw-module storm-control-combine-policer-bw enable** command.
- System supports storm control per-EFP.
- If storm control is applied on one bridge port, you cannot apply storm control on another bridge port or sub-interface under the same main-port. On configuring, system pop-ups an error, but needs to be manually unconfigured.

- System does not support storm control on pseudowire bridge-ports.
- Storm control counters are not supported
- Only kbps rate is supported by hardware. Though the pps configuration is allowed, it is converted to kbps. The pps rate is calculated as 1 pps = 8 kbps.

Task ID	Task ID	Operations
	l2vpn	read, write

Examples

The following example enables two storm control thresholds on an access circuit:

```
RP/0/RSP0/CPU0:router# configure
RP/0/RSP0/CPU0:router(config)# l2vpn
RP/0/RSP0/CPU0:router(config-l2vpn)# bridge group cisco
RP/0/RSP0/CPU0:router(config-l2vpn-bg)# bridge-domain abc
RP/0/RSP0/CPU0:router(config-l2vpn-bg-bd)# interface GigabitEthernet0/1/0/0.100
RP/0/RSP0/CPU0:router(config-l2vpn-bg-bd-ac)# storm-control broadcast kbps 4500
RP/0/RSP0/CPU0:router(config-l2vpn-bg-bd-ac)# commit
```

xconnect group

To configure cross-connect groups, use the **xconnect group** command in L2VPN configuration mode. To return to the default behavior, use the **no** form of this command.

```
xconnect group group-name
no xconnect group group-name
```

Syntax Description	<i>group-name</i> Configures a cross-connect group name using a free-format 32-character string.				
Command Default	None				
Command Modes	L2VPN configuration				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Release 6.0</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Release 6.0	This command was introduced.
Release	Modification				
Release 6.0	This command was introduced.				
Usage Guidelines	No specific guidelines impact the use of this command.				



Note You can configure up to a maximum of 16K cross-connects per box.

Task ID	Task ID	Operations
	l2vpn	read, write

Examples

The following example shows how to group all cross-connects for XCON1:

```
Router# configure
Router(config)# l2vpn
Router(config-l2vpn)# xconnect group XCON1
Router(config-l2vpn)# p2p xc1
Router(config-l2vpn-xc-p2p)# interface gigabitethernet0/1/0/0.1
Router(config-l2vpn-xc-p2p)# neighbor 10.165.100.151 pw-id 100
Router(config-l2vpn-xc-p2p-pw)# mpls static label local 50 remote 40
Router(config-l2vpn-xc-p2p-pw)# commit
```

Related Commands	Command	Description
	interface (p2p), on page 2	Configures an attachment circuit.
	l2vpn, on page 10	Enters L2VPN configuration mode.
	show l2vpn, on page 21	Displays L2VPN information

Command	Description
show l2vpn xconnect, on page 46	Displays brief information on configured cross-connects.