



Supervisory Control and Data Acquisition

This chapter contains the following sections:

- [SCADA Overview, on page 1](#)
- [Role of the IR1101, on page 2](#)
- [Key Terms, on page 2](#)
- [Protocol Translation Application, on page 3](#)
- [Prerequisites, on page 3](#)
- [Guidelines and Limitations, on page 4](#)
- [Default Settings, on page 4](#)
- [Configuring Protocol Translation, on page 5](#)
- [Configuring the T101 Protocol Stack, on page 6](#)
- [Configuring the T104 Protocol Stack, on page 8](#)
- [SCADA Enhancement for TNB, on page 11](#)
- [Configuration Example, on page 12](#)
- [Yang Data Model Support for Scada, on page 13](#)
- [Configuring the DNP3 Protocol Stacks, on page 15](#)
- [DNP3 Enhancement, on page 19](#)
- [Starting and Stopping the Protocol Translation Engine, on page 19](#)
- [Verifying Configuration, on page 20](#)
- [Debug Commands, on page 21](#)

SCADA Overview

SCADA refers to a control and management system employed in industries such as water management, electric power, and manufacturing. A SCADA system collects data from various types of equipment within the system and forwards that information back to a Control Center for analysis. Generally, individuals located at the Control Center monitor the activity on the SCADA system and intervene when necessary.

The Remote Terminal Unit (RTU) acts as the primary control system within a SCADA system. RTUs are configured to control specific functions within the SCADA system, which can be modified as necessary through a user interface.

On the IR1101, line is 0/2/0 same as the Async interface.

Role of the IR1101

In the network, the Control Center always serves as the master in the network when communicating with the IR1101. The IR1101 serves as a proxy master station for the Control Center when it communicates with the RTU.

The IR1101 provides protocol translation to serve as a SCADA gateway to do the following:

- Receive data from RTUs and relay configuration commands from the Control Center to RTUs.
- Receive configuration commands from the Control Center and relay RTU data to the Control Center.
- Terminate incoming requests from the Control Center, when an RTU is offline.

The IR1101 performs Protocol Translation for the following protocols:

- IEC 60870 T101 to/from IEC 60870 T104.
- DNP3 serial to DNP3 IP

Key Terms

The following terms are relevant when you configure the T101 and T104 protocol stacks on the IR1101:

- Channel—A channel is configured on each IR1101 serial port interface to provide a connection to a single RTU for each IP connection to a remote Control Center. Each connection transports a single T101 (RTU) or T104 (Control Center) protocol stack.
- Link Address—Refers to the device or station address.
- Link Mode (Balanced and Unbalanced)—Refers to the modes of data transfer.
 - An Unbalanced setting refers to a data transfer initiated from the master.
 - A Balanced setting can refer to either a primary or secondary initiated data transfer.
- Sector—Refers to a single RTU within a remote site.
- Sessions—Represents a single connection to a remote site.

The following terms are relevant when you configure the DNP3 protocol stacks on the on the IR1101:


- Channel—A channel is configured on the IR1101 serial port interface to provide a connection to a single RTU for each IP connection to a remote Control Center. Each connection transports a single DNP3 serial (RTU) or DNP3 IP (Control Center) protocol stack.
- Link Address—Refers to the device or station address.
- Sessions—Represents a single connection to a remote site.

Protocol Translation Application

In the figure below, the IR1101 (installed within a secondary substation of the Utility Network) employs Protocol Translation to provide secure, end-to-end connectivity between Control Centers and RTUs within a SCADA System.

The IR1101 connects to the RTU (slave) through a RS232 connection. To protect the traffic when forwarded over public infrastructures (for example, cellular), the IR1101 forwards SCADA data from the RTU to the Control Center in the SCADA system through an IPsec tunnel (FlexVPN site-to-site or hub and spoke). The IPsec tunnel protects all traffic between the IR1101 and the Head-end aggregation router. SCADA traffic can be inspected through an IPS device positioned in the path of the SCADA traffic before it is forwarded to the proper Control Center.

Figure 1: Routers Within a SCADA System

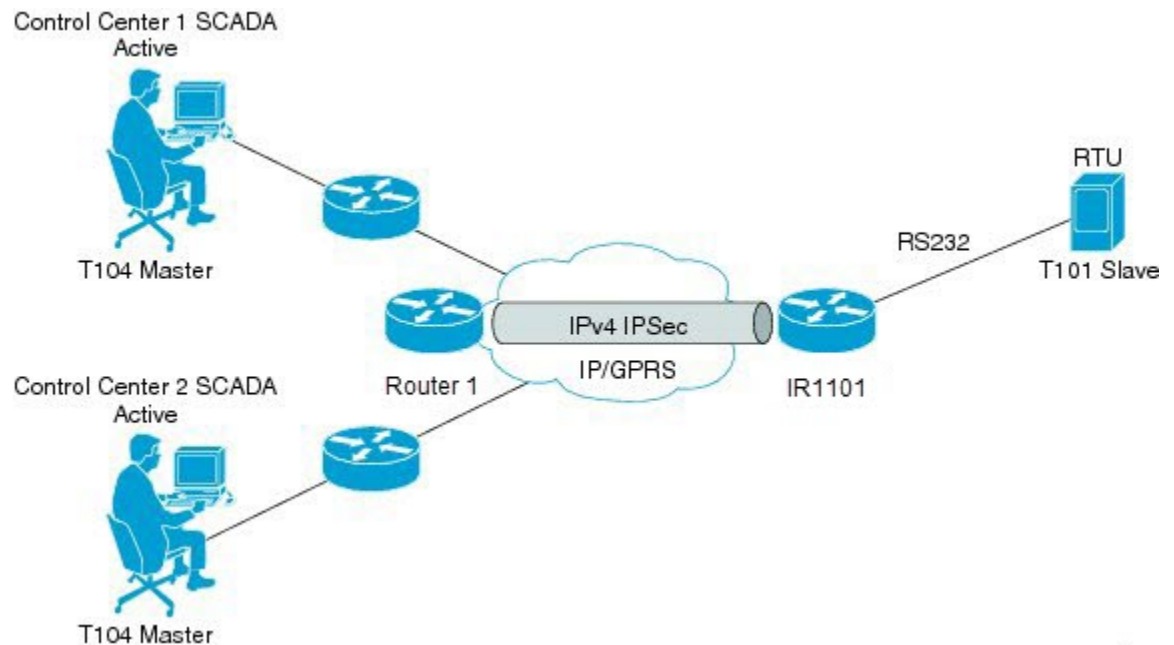

Prerequisites

RTUs must be configured and operating in the network.

For each RTU that connects to the IR1101, you will need the following information for T101/T104:

- Channel information
 - Channel name
 - Connection type: serial
 - Link transmission procedure setting: unbalanced or balanced
 - Address field of the link (number expressed in octets)

- Session information
 - Session name
 - Size of common address of Application Service Data Unit (ASDU) (number expressed in octets)
 - Cause of transmission (COT) size (number expressed in octets)
 - Information object address (IOA) size (number expressed in octets)
- Sector information
 - Sector name
 - ASDU address, (number expressed in octets)

For each RTU that connects to the IR1101, you will need the following information for DNP3:

- Channel information
 - Channel name
 - Connection type: serial
 - Link address
- Session information
 - Session name

Guidelines and Limitations

- Each channel supports only one session.
- Each sessions supports only one sector.
- The object types 8, 17, 18, 19, 20, 38, 39, and 40 are not supported for IEC protocol translation.

Default Settings

T101/T104 Parameters	Default
Role for T101	Master
Role for T104	Slave

DNP3 Parameters	Default
Unsolicited Response (DNP3-serial)	Not Enabled

DNP3 Parameters	Default
Send Unsolicited Message (DNP3-IP)	Enabled

Configuring Protocol Translation

This section includes the following topics:



Note Before making any configuration changes to a IR1101 operating with Protocol Translation, please review the section on [Starting and Stopping the Protocol Translation Engine, on page 19](#).

Enabling the IR1101 Serial Port and SCADA Encapsulation

Before you can enable and configure Protocol Translation on the IR1101, you must first enable the serial port on the IR1101 and enable SCADA encapsulation on that port.

Before you begin

Determine availability of serial port on the IR1101.

Procedure

	Command or Action	Purpose
Step 1	<code>configure terminal</code>	Enters the global configuration mode.
Step 2	<code>interface async slot/port/interface</code>	Enters the interface command mode for the async slot/port/interface. <i>slot</i> –value of 0 <i>port</i> –value of 2 <i>interface</i> –value of 0
Step 3	<code>no shutdown</code>	Brings up the port, administratively.
Step 4	<code>encapsulation scada</code>	Enables encapsulation on the serial port for protocol translation and other SCADA protocols.

EXAMPLE

This example shows how to enable serial port 0/2/0 and how to enable encapsulation on that interface to support SCADA protocols.

```
router# configure terminal
router(config)# interface async 0/2/0
```

```
router (config-if)# no shutdown
router (config-if)# encapsulation scada
```

Configuring T101 and T104 Protocol Stacks

You can configure T101 and T104 protocol stacks, which allow end-to-end communication between Control Centers (T104) and RTUs (T101) within a SCADA system.

- [Configuring the T101 Protocol Stack, on page 6](#)
- [Configuring the T104 Protocol Stack, on page 8](#)
- [Starting and Stopping the Protocol Translation Engine, on page 19](#)

Prerequisites

Ensure that you have gathered all the required configuration information.

Enable the serial port and SCADA encapsulation.

Configuring the T101 Protocol Stack

Configure the channel, session, and sector parameters for the T101 protocol stack.

Procedure

	Command or Action	Purpose
Step 1	<code>configure terminal</code>	Enters global configuration mode.
Step 2	<code>scada-gw protocol t101</code>	Enters the configuration mode for the T101 protocol.
Step 3	<code>channel <i>channel_name</i></code>	<p>Enters the channel configuration mode for the T101 protocol.</p> <p><i>channel_name</i> –Identifies the channel on which the serial port of the IR1101 communicates to the RTU.</p> <p>Note When the entered channel name does not already exist, the router creates a new channel.</p> <p>Entering the no form of this command deletes an existing channel. However, all sessions must be deleted before you can delete a channel.</p>
Step 4	<code>role master</code>	Assigns the master role to the T101 protocol channel (default).
Step 5	<code>link-mode {balanced unbalanced}</code>	<p>Configures the link-mode as either balanced or unbalanced.</p> <p>unbalanced—Refers to a data transfer initiated from the master.</p> <p>balanced—Refers to either a master or slave data transfer.</p>

	Command or Action	Purpose
Step 6	link-addr-size {none one two}	Defines the link address size in octets.
Step 7	bind-to-interface <i>async slot/port/interface</i>	Defines the IR1101 serial interface on which the system sends its T101 protocol traffic. <i>slot</i> –Value of 0 <i>port</i> –Value of 2 <i>interface</i> –Value of 0
Step 8	exit	Ends configuration of the channel and exits the channel configuration mode. Saves all settings.
Step 9	session <i>session_name</i>	Enters the session configuration mode and assigns a name to the session.
Step 10	attach-to-channel <i>channel_name</i>	Attaches the session to the channel. Enter the same channel name that you entered in Step 3 . <i>channel_name</i> –Identifies the channel.
Step 11	common-addr-size {one two three}	Defines the common address size in octets.
Step 12	cot size {one two three}	Defines the cause of transmission such as spontaneous or cyclic data schemes in octets.
Step 13	info-obj-addr-size {one two three}	Defines the information object element address size in octets.
Step 14	link-addr-size {one two three}	Defines the link address size in octets.
Step 15	link-addr <i>link_address</i>	Refers to the link address of the RTU. Note The link address entered here must match the value set on the RTU to which the serial port connects. <i>link_address</i> –Range of 0-65535.
Step 16	exit	Exits the session configuration mode.
Step 17	sector <i>sector_name</i>	Enters the sector configuration mode and assigns a name to the sector for the RTU. <i>sector_name</i> –Identifies the sector.
Step 18	attach-to-session <i>session_name</i>	Attaches the RTU sector to the session. Enter the same session name that you entered in Step 9 . <i>session_name</i> - Identifies the session.
Step 19	asdu-addr <i>asdu_address</i>	Refers to the ASDU structure address of the RTU.
Step 20	exit	Exits the sector configuration mode.

EXAMPLE

	Command or Action	Purpose
Step 21	exit	Exits the protocol configuration mode.

EXAMPLE

This example shows how to configure the parameters for the T101 protocol stack for *RTU_10*.

```

router# configure terminal
router(config)# scada-gw protocol t101
router(config-t101)# channel rtu_channel
router(config-t101-channel)# role master
router(config-t101-channel)# link-mode unbalanced
router(config-t101-channel)# link-addr-size
one
router(config-t101-channel)# bind-to-interface async 0/2/0
router(config-t101-channel)# exit
router(config-t101)# session rtu_session
router(config-t101-session)# attach-to-channel rtu_channel
router(config-t101-session)# common-addr-size two
router(config-t101-session)# cot-size one
router(config-t101-session)# info-obj-addr-size two
router(config-t101-session)# link-addr 3
router(config-t101-session)# exit
router(config-t101)# sector rtu_sector
router(config-t101-sector)# attach-to-session rtu_session
router(config-t101-sector)# asdu-addr 3
router(config-t101-sector)# exit
router(config-t101)# exit
router(config)#

```

Configuring the T104 Protocol Stack

Follow the steps below for each Control Center that you want to connect to over a T104 protocol.

Before you begin

Ensure that you have gathered all the required configuration information. (See [Prerequisites](#), on page 3)

Enable the serial port and SCADA encapsulation. (See [Enabling the IR1101 Serial Port and SCADA Encapsulation](#), on page 5)

Procedure

	Command or Action	Purpose
Step 1	configure terminal	Enters configuration mode.
Step 2	scada-gw protocol t104	Enters the configuration mode for the T104 protocol.
Step 3	channel <i>channel_name</i>	Enters the channel configuration mode for the T104 protocol.

	Command or Action	Purpose
		<p><i>channel_name</i> –Identifies the channel on which the router communicates with the Control Center.</p> <p>Note When the entered channel name does not already exist, the router creates a new channel.</p> <p>Entering the no form of this command deletes an existing channel. However, all sessions must be deleted before you can delete a channel.</p>
Step 4	k-value <i>value</i>	<p>Sets the maximum number of outstanding Application Protocol Data Units (APDUs) for the channel.</p> <p>Note An APDU incorporates the ASDU and a control header.</p> <p><i>value</i> –Range of values from 1 to 32767. Default value is 12 APDUs.</p>
Step 5	w-value <i>value</i>	<p>Sets the maximum number of APDUs for the channel.</p> <p><i>value</i> –Range of values from 1 to 32767. Default value is 8 APDUs.</p>
Step 6	t0-timeout <i>value</i>	<p>Defines the t0-timeout value for connection establishment of the T104 channel.</p>
Step 7	t1-timeout <i>value</i>	<p>Defines the t1-timeout value for send or test APDUs on the T104 channel.</p>
Step 8	t2-timeout <i>value</i>	<p>Defines the t2-timeout value for acknowledgements when the router receives no data message.</p> <p>Note The t2 value must always be set to a lower value than the t1 value on the T104 channel.</p>
Step 9	t3-timeout <i>value</i>	<p>Defines the t3-timeout value for sending s-frames in case of a long idle state on the T104 channel.</p> <p>Note The t3 value must always be set to a higher value than the t1 value on the T104 channel.</p>
Step 10	tcp-connection {0 1} local-port { <i>port_number</i> default } remote-ip { <i>A.B.C.D</i> <i>A.B.C.D/LEN</i> any } [vrf <i>WORD</i>]	<p>In a configuration where there are redundant Control Centers, sets the connection value for the secondary Control Center as defined on the primary Control Center.</p> <p><i>port-number</i> –value between 2000 and 65535.</p> <p>default–value of 2404.</p> <p><i>A.B.C.D</i> –single host.</p> <p><i>A.B.C.D/mn</i> –subnet A.B.C.D/LEN.</p> <p>any–any remote hosts 0.0.0.0/0.</p> <p>WORD–VRF name.</p>

EXAMPLE

	Command or Action	Purpose
Step 11	exit	Exits the channel configuration mode.
Step 12	session <i>session_name</i>	Enters the session configuration mode and assigns a name to the session. <i>session_name</i> –Use the same name that you assigned to the channel in Step 3 .
Step 13	attach-to-channel <i>channel_name</i>	Defines the name of the channel that transports the session traffic.
Step 14	cot size { one two three }	Defines the cause of transmission (cot), such as spontaneous or cyclic data schemes in octets.
Step 15	exit	Exits the session configuration mode.
Step 16	sector <i>sector_name</i>	Enters the sector configuration mode and assigns a name to the sector for the Control Center.
Step 17	attach-to-session <i>session_name</i>	Attaches the Control Center sector to the channel. <i>session_name</i> –Use the same name that you assigned to the channel in Step 3 .
Step 18	asdu-addr <i>asdu_address</i>	Refers to the ASDU structure address. Value entered here must match the ASDU value on the RTU. <i>asdu_address</i> – <i>asdu_address</i> –Value of 1 or 2.
Step 19	map-to-sector <i>sector_name</i>	Maps the Control Center (T104) sector to the RTU (T101) sector.
Step 20	Return to Step 1 .	Repeat all steps in this section for each Control Center active in the network.

EXAMPLE

This example shows how to configure the parameters for the T104 protocol stack on *Control Center 1* and *Control Center 2*, both of which are configured as *masters*, and how to map the T104 sector to the T101 sector.

To configure Control Center 1 (*cc_master1*), enter the following commands.

```

router# configure terminal
router(config)# scada-gw protocol t104
router(config-t104)# channel cc_master1
router(config-t104-channel)# k-value 12
router(config-t104-channel)# w-value 8
router(config-t104-channel)# t0-timeout 30
router(config-t104-channel)# t1-timeout 15
router(config-t104-channel)# t2-timeout 10
router(config-t104-channel)# t3-timeout 30
router(config-t104-channel)# tcp-connection 0 local-port 2050 remote-ip 209.165.200.225
router(config-t104-channel)# tcp-connection 1 local-port 2051 remote-ip 209.165.201.25

```

```

router(config-t104-channel)# exit
router(config-t104)# session cc_master1
router(config-t104-session)# attach-to-channel cc_master1
router(config-t104-session)# cot-size two
router(config-t104-session)# exit
router(config-t104)# sector cc_master1-sector
router(config-t104-sector)# attach-to-session cc_master1
router(config-t104-sector)# asdu-adr 3
router(config-t104-sector)# map-to-sector rtu_sector
router(config-t104)# exit
router(config)#

```

To configure Control Center 2 (*cc_master2*), enter the following commands.

```

router(config)# scada-gw protocol t104
router(config-t104)# channel cc_master2
router(config-t104-channel)# k-value 12
router(config-t104-channel)# w-value 8
router(config-t104-channel)# t0-timeout 30
router(config-t104-channel)# t1-timeout 15
router(config-t104-channel)# t2-timeout 10
router(config-t104-channel)# t3-timeout 30
router(config-t104-channel)# tcp-connection 0 local-port 2060 remote-ip 209.165.201.237
router(config-t104-channel)# tcp-connection 1 local-port 2061 remote-ip 209.165.200.27
router(config-t104-channel)# exit
router(config-t104)# session cc_master2
router(config-t104-session)# attach-to-channel cc_master2
router(config-t104-session)# cot-size two
router(config-t104-session)# exit
router(config-t104)# sector cc_master2-sector
router(config-t104-sector)# attach-to-session cc_master2
router(config-t104-sector)# asdu-adr 3
router(config-t104-sector)# map-to-sector rtu_sector
router(config-t104-sector)# exit
router(config-t104)# exit
router(config)#

```

SCADA Enhancement for TNB

This enhancement provides compatibility with TNB's WG RTUs, including the following:

- TNB RTUs require Reset-Link message to be sent out along with Link-Status message to ensure correct initialization of the serial. The feature can be selectively turned on using the new configuration CLI **scada-gw protocol force reset-link**.
- When clock passthru is enabled and if the router hasn't received the timestamp from the DNP3-IP master, the router's hardware time will be sent downstream to RTU. Upon receiving a new timestamp from DNP3-IP master, the router will start sending the new timestamp sourced from DNP3-IP master to RTU.
- The number of bufferable DNP3 events in memory will be increased from 600 to 10000.
- The **scada-gw protocol interlock** command will be supported for DNP3. Previously, the support only existed for T101/T104. With this new enhancement, the router will disconnect Serial link if the DNP3-IP master is down or unreachable. Similarly, when the Serial link to RTU is down, the TCP connection to DNP3-IP master will be untethered.
- Custom "requests" will be automatically ordered based on priority so that the user can specify them in any order that they would like to.

Configuration Example

The following example shows how to configure the serial port interface for T101 connection, configure T101 and T104 protocol stacks, and starts the Protocol Translation Engine on the IR1101.

```

router# configure terminal
router(config)# interface async 0/2/0
router (config-if)# no shutdown
router (config-if)# encapsulation scada
router (config-if)# exit
router(config)# scada-gw protocol t101
router(config-t101)# channel rtu_channel
router (config-t101-channel)# role master
router (config-t101-channel)# link-mode unbalanced
router (config-t101-channel)# link-addr-size one
router (config-t101-channel)# bind-to-interface async 0/2/0
router (config-t101-channel)# exit
router (config-t101)# session rtu_session
router (config-t101-session)# attach-to-channel rtu_channel
router (config-t101-session)# common-addr-size two
router (config-t101-session)# cot-size one
router (config-t101-session)# info-obj-addr-size two
router (config-t101-session)# link-addr 3
router (config-t101-session)# exit
router (config-t101)# sector rtu_sector
router (config-t101-sector)# attach-to-session rtu_session
router (config-t101-sector)# asdu-addr 3
router (config-t101-sector)# exit
router (config-t101)# exit
router (config)# scada-gw protocol t104
router (config-t104)# channel cc_master1
router (config-t104-channel)# k-value 12
router (config-t104-channel)# w-value 8
router (config-t104-channel)# t0-timeout 30
router (config-t104-channel)# t1-timeout 15
router (config-t104-channel)# t2-timeout 10
router (config-t104-channel)# t3-timeout 30
router (config-t104-channel)# tcp-connection 0 local-port 2050 remote-ip any
router (config-t104-channel)# tcp-connection 1 local-port 2051 remote-ip any
router (config-t104-channel)# exit
router (config-t104)# session cc_master1
router (config-t104-session)# attach-to-channel cc_master1
router (config-t104-session)# cot-size two
router (config-t104-session)# exit
router (config-t104)# sector cc_master1-sector
router (config-t104-sector)# attach-to-session cc_master1
router (config-t104-sector)# asdu-adr 3
router (config-t104-sector)# map-to-sector rtu_sector
router (config-t104)# exit

router (config-t104)# session cc_master2
router (config-t104-session)# attach-to-channel cc_master2
router (config-t104-session)# cot-size two
router (config-t104-session)# exit
router (config-t104)# sector cc_master2-sector
router (config-t104-sector)# attach-to-session cc_master2
router (config-t104-sector)# asdu-adr 3
router (config-t104-sector)# map-to-sector rtu_sector
router (config-t104-sector)# exit

```

```
router(config-t104)# exit
router(config)# scada-gw enable
```

This example configures end-to-end communication between Control Centers and RTUs within a SCADA system using the DNP3 protocol stacks and starts the Protocol Translation Engine on the IR1101:

```
router# configure terminal
router(config)# interface async 0/2/0
router (config-if)# no shutdown
router (config-if)# encapsulation scada
router (config-if)# exit
router(config)# scada-gw protocol dnp3-serial
router(config-dnp3s)# channel rtu_channel
router(config-dnp3s-channel)# bind-to-interface async 0/2/0
router(config-dnp3s-channel)# link-addr source 3
router(config-dnp3s-channel)# unsolicited-response enable
router(config-dnp3s-channel)# exit
router(config-dnp3s)# session rtu_session
router(config-dnp3s-session)# attach-to-channel rtu_channel
router(config-dnp3s-session)# link-addr dest 3
router(config-dnp3s-session)# exit
router(config-dnp3s)# exit
router(config)# scada-gw protocol dnp3-ip
router(config-dnp3n)# channel cc_channel
router(config-dnp3n-channel)# link-addr dest 3
router(config-dnp3n-channel)# tcp-connection local-port default remote-ip any
router(config-dnp3n-channel)# exit
router(config-dnp3n)# session cc_session
router(config-dnp3n-session)# attach-to-channel cc_channel
router(config-dnp3n-session)# link-addr source 3
router(config-dnp3n-session)# map-to-session rtu_session
router(config-dnp3n)# exit
router(config)# exit
router(config)# scada-gw enable
```



Note IOA addresses obtained from T101 side are sent to T104 side without any modification by the SCADA Gateway

Yang Data Model Support for Scada

The Cisco IOS XE 17.1.1 release introduces support for the Cisco IOS XE YANG model for the Scada System. Previous releases already provided Yang models in other areas.

<https://github.com/YangModels/yang/tree/master/vendor/cisco/xe/17111> .

Scada Yang Models

There are two feature modules available for Scada that belong to the main Cisco-IOS-XE-native model:

- Cisco-IOS-XE-scada-gw.yang

This module contains a collection of YANG definitions for Scada Gateway Configuration commands.

- Cisco-IOS-XE-scada-gw-oper.yang

This module contains a collection of YANG definitions for Scada Gateway operational data.

There are eight dependent modules (also belonging to the main Cisco-IOS-XE-native model), that should be imported for the Scada models to work. The following section shows the Scada Yang Models list, configuration CLI commands, and the dependent modules that each feature module covers.

Cisco-IOS-XE-scada-gw

This module has the following corresponding CLI commands:

```
(config)# scada-gw protocol t101
(config-t101)# channel <channel-name>
(config-t101)# bind-to-interface <interface-name>
(config-t101)# link-mode <link-mode>
(config-t101)# link-addr-size <size>
(config-t101)# day-of-week <enable>
(config-t101)# session <session_name>
(config-t101)# attach-to-channel <channel-name>
(config-t101)# cot-size <size>
(config-t101)# common-addr-size <size>
(config-t101)# info-obj-addr-size <size>
(config-t101)# link-addr <addr>
(config-t101)# request
(config-t101)# sector <sector_name>
(config-t101)# attach-to-session <session-name>
(config-t101)# asdu-addr <addr>
(config-t101)# request
(config)# scada-gw protocol t104
(config-t104)# channel <channel-name>
(config-t104)# tcp connection
(config-t104)# to-timeout <value>
(config-t104)# t1-timeout <value>
(config-t104)# t2-timeout <value>
(config-t104)# t3-timeout <value>
(config-t104)# k-value <value>
(config-t104)# w-value <value>
(config-t101)# day-of-week <enable>
(config-t101)# send-ei <enable>
(config-t104)# session <session_name>
(config-t104)# attach-to-channel <channel_name>
(config-t104)# sector <sector_name>
(config-t104)# attach-to-session <session-name>
config-t104)# map-to-sector <sector-name>
(config) scada-gw enable
```

The Cisco-IOS-XE-scada-gw module has the following dependent modules:

- Cisco-IOS-XE-native
- Cisco-IOS-XE-features
- ietf-inet-types
- Cisco-IOS-XE-interfaces
- Cisco-IOS-XE-ip
- Cisco-IOS-XE-vlan
- ietf-yang-types @ (any revision)

- cisco-semver

Cisco-IOS-XE-scada-gw-oper

This module has the following corresponding Cli commands:

```
# show scada statistics
# show scada tcp
```

The Cisco-IOS-XE-scada-gw-oper module has the following dependent modules:

- Cisco-IOS-XE-native
- Cisco-IOS-XE-features
- ietf-inet-types
- Cisco-IOS-XE-interfaces
- Cisco-IOS-XE-ip
- Cisco-IOS-XE-vlan
- ietf-yang-types @ (any revision)
- cisco-semver

Configuring the DNP3 Protocol Stacks

You can configure the DNP3 serial and DNP3 IP protocol stacks, which allow end-to-end communication between Control Centers and RTUs within a SCADA system.

Configuring DNP3 Serial

Configure the channel and session parameters for the DNP serial communication with an RTU.

Procedure

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
Step 2	scada-gw protocol dnp3-serial	Enters configuration mode for the DNP3 serial protocol.
Step 3	channel <i>channel_name</i>	Enters channel configuration mode for the DNP3 serial protocol. <i>channel_name</i> –Identifies the channel on which the router serial port communicates to the RTU. Note: When the entered channel name does not already exist, the router creates a new channel

EXAMPLE

	Command or Action	Purpose
		Entering the no form of this command deletes an existing channel. However, all sessions must be deleted before you can delete a channel.
Step 4	bind-to-interface <i>async0/2/0</i>	Defines the router <i>async</i> interface on which the system sends its DNP3 protocol traffic.
Step 5	link-addr source <i>source_address</i>	Refers to the link address of the master. <i>source_address</i> –Range of values from 1 to 65535.
Step 6	unsolicited-response enable	(Optional) Allows unsolicited responses. Entering the no form of this command disables unsolicited responses. The default is disabled.
Step 7	exit	Ends configuration of the channel and exits channel configuration mode. Saves all settings.
Step 8	session <i>session_name</i>	Enters session configuration mode and assigns a name to the session. Note: When the entered session name does not already exist, the router creates a new session. Entering the no form of this command deletes an existing session.
Step 9	attach-to-channel <i>channel_name</i>	Attaches the session to the channel. Note: Enter the same channel name that you entered in Step 3 above <i>channel_name</i> –Identifies the channel.
Step 10	link-addr dest <i>destination_address</i>	Refers to the link address of the slave. <i>destination_address</i> –Range of values from 1 to 65535.
Step 11	exit	Exits session configuration mode.
Step 12	exit	Exits protocol configuration mode.

EXAMPLE

This example shows how to configure the parameters for the DPN3-serial protocol stack:

```

router# configure terminal
router(config)# scada-gw protocol dnp3-serial
router(config-dnp3s)# channel rtu_channel
router(config-dnp3s-channel)# bind-to-interface async 0/2/0
router(config-dnp3s-channel)# link-addr source 3
router(config-dnp3s-channel)# unsolicited-response enable
router(config-dnp3s-channel)# exit

```



```

router(config-dnp3s)# session rtu_session
router(config-dnp3s-session)# attach-to-channel rtu_channel
router(config-dnp3s-session)# link-addr dest 3
router(config-dnp3s-session)# exit
router(config-dnp3s)# exit
router(config)#

```

Configuring DNP3 IP

Follow the steps below for the Control Center that you want to connect to over DNP3 IP. For redundancy, you can create multiple connections that share the same session configuration under the same session.

Procedure

	Command or Action	Purpose
Step 1	configure terminal	Enters configuration mode.
Step 2	scada-gw protocol dnp3-ip	Enters configuration mode for the DNP-IP protocol.
Step 3	channel <i>channel_name</i>	Enters channel configuration mode for the DNP-IP protocol. <i>channel_name</i> –Identifies the channel on which the router communicates with the Control Center. Note: When the entered channel name does not already exist, the router creates a new channel. Entering the no form of this command deletes an existing channel. However, all sessions must be deleted before you can delete a channel.
Step 4	link-addr dest <i>destination_address</i>	Refers to the link address of the master. <i>destination_address</i> –Range of values from 1 to 65535.
Step 5	send-unsolicited-msg enable	(Optional) Allow unsolicited messages. The default is enabled.
Step 6	tcp-connection local-port [default <i>local_port</i>] remote-ip [any <i>remote_ip</i> <i>remote_subnet</i>]	Configures the local port number and remote IP address for the TCP connection: <ul style="list-style-type: none"> • default – 20000. • <i>local_port</i> – Range of values from 2000 to 65535. • any – Any remote hosts 0.0.0.0/0 • <i>remote_ip</i> – Single host: A.B.C.D • <i>remote_subnet</i> – Subnet: A.B.C.D/LEN If <i>remote_subnet</i> is specified, when two channels have the same local ports, the remote subnets cannot overlap each other.

EXAMPLE

	Command or Action	Purpose
		Note: Every <local-port, remote-ip> must be unique per channel. If remote_subnet is specified, when two channels have the same local ports, the remote subnets cannot overlap each other.
Step 7	exit	Exits channel configuration mode.
Step 8	session <i>session_name</i>	Enters session configuration mode and assigns a name to the session. Note: When the entered session name does not already exist, the router creates a new session. Entering the no form of this command deletes an existing session.
Step 9	attach-to-channel <i>channel_name</i>	Attaches the session to the channel. Enter the same channel name that you entered in Step 3 . <i>channel_name</i> –Identifies the channel.
Step 10	link-addr source <i>source_address</i>	Refers to the link address of the slave. <i>source_address</i> –Value of 1-65535.
Step 11	map-to-session <i>session_name</i>	Maps the dnp3-ip session to an existing dnp3-serial session. Note: One dnp3-ip session can be mapped to only one dnp3-serial session.
Step 12	exit	Exits session configuration mode.
Step 13	exit	Exits protocol configuration mode.

EXAMPLE

This example shows how to configure the DNP3 IP parameters:

```

router# configure terminal
router(config)# scada-gw protocol dnp3-ip
router(config-dnp3n)# channel cc_channel
router(config-dnp3n-channel)# link-addr dest 3
router(config-dnp3n-channel)# tcp-connection local-port default remote-ip any
router(config-dnp3n-channel)# exit
router(config-dnp3n)# session cc_session
router(config-dnp3n-session)# attach-to-channel cc_channel
router(config-dnp3n-session)# link-addr source 4
router(config-dnp3n-session)# map-to-session rtu_session
router(config-dnp3n)# exit
router(config)# exit

```

DNP3 Enhancement

In some cases, older RTUs were previously used in peer-to-peer mode. These RTUs dynamically swapped the roles of DNP3 Serial subordinate and primary by setting the bit DIR=1 in the message header. ASE's SCADA stack used in Cisco routers are always configured to be DNP3 Serial primary. In this case, all the packets received from DNP3 serial with DIR=1 were ignored causing many messages from RTU to be discarded. To handle these scenarios, a new SCADA configuration CLI has been added:

scada-gw protocol ignore direction.

Enabling this CLI will allow the router to accept incoming packets from RTU even when DIR=1. The new CLI will also be added to the Cisco-IOS-XE-scada-gw.yang config model.

The following is an example usage:

```
Router# config term  
Router(config)# scada-gw protocol ignore direction
```

Configuration Example

Configuration example with scada-gw protocol ignore direction on T101/T104

```
scada-gw protocol t101  
channel rt-chan  
link-addr-size two  
bind-to-interface Async0/2/0  
session rt-sess  
attach-to-channel rt-chan  
common-addr-size one  
cot-size two  
info-obj-addr-size three  
link-addr 31  
sector rt-sec  
attach-to-session rt-sess  
asdu-addr 100  
scada-gw protocol t104  
channel mt-chan  
t3-timeout 20  
tcp-connection 0 local-port 8001 remote-ip 192.168.1.0/24  
session mt-sess  
attach-to-channel mt-chan  
sector mt-sec  
attach-to-session mt-sess  
asdu-addr 101  
map-to-sector rt-sec  
scada-gw protocol ignore direction  
scada-gw enable
```

Starting and Stopping the Protocol Translation Engine

You must start the Protocol Translation Engine to use Protocol Translation on the IR1101.

Starting—After enabling SCADA encapsulation on the IR1101 serial port and configuring the T101 and T104 protocols on the IR1101, you can start the Protocol Translation Engine.

Stopping—Before you can make any configuration changes to Protocol Translation on the IR1101 with an active Protocol Translation Engine, you must stop the engine.

Before you begin

Before **starting** the Protocol Translation Engine on the router for the **first time**, make sure you complete the following items:

[Enabling the IR1101 Serial Port and SCADA Encapsulation, on page 5](#)

[Configuring T101 and T104 Protocol Stacks, on page 6](#)

Procedure

	Command or Action	Purpose
Step 1	<code>configure terminal</code>	Enters global configuration mode.
Step 2	<code>[no] scada-gw enable</code>	Starts (<code>scada-gw enable</code>) or stops (<code>no scada-gw enable</code>) the Protocol Translation Engine on the IR1101.

EXAMPLE

To start the protocol translation engine on the router, enter the following commands:

```
router# configure terminal
router(config)# scada-gw enable
```

To stop the protocol translation engine on the router, enter the following commands:

```
router# configure terminal
router(config)# no scada-gw enable
```

Verifying Configuration

Command	Purpose
<code>show running-config</code>	Shows the configuration of the router including active features and their settings.
<code>show scada database</code>	Displays details on the SCADA database.
<code>show scada statistics</code>	Shows statistics for the SCADA gateway, including the number of messages sent and received, timeouts, and errors.
<code>show scada tcp</code>	Displays TCP connections associated with the SCADA gateway.

This example shows the output from the `show scada tcp` and `show scada statistics` commands:

```
router# show scada tcp
```

```

DNP3 network channel [test]: 4 max simultaneous connections
conn: local-ip: 3.3.3.21      local-port 20000      remote-ip 3.3.3.15      data-socket
1
Total:
  1 current client connections
  0 total closed connections
router# show scada statistics
DNP3 network Channel [test]:
  5 messages sent, 2 messages received
  0 timeouts, 0 aborts, 0 rejections
  2 protocol errors, 2 link errors, 0 address errors
DNP3 serial Channel [test]:
  152 messages sent, 152 messages received
  1 timeouts, 0 aborts, 0 rejections
  0 protocol errors, 0 link errors, 0 address errors

```

Debug Commands

This section lists some debug commands that are helpful when troubleshooting.

Table 1: SCADA Function Level Debug Commands

Command	Purpose
debug scada function config	Configuration trace
debug scada function control	Control trace
debug scada function file	File trace
debug scada function freeze	Freeze trace
debug scada function physical	Physical trace
debug scada function poll	Poll trace
debug scada function stack	Stack trace
debug scada function umode	Umode trace

