



## **Preface**   vii

Audience	vii
Organization	vii
Conventions	viii
Safety Warnings	ix
Warning Definition	ix
Related Documentation	xiv
Obtaining Documentation	xv
Cisco.com	xv
Ordering Documentation	xv
Documentation Feedback	xv
Obtaining Technical Assistance	xvi
Cisco Technical Support Website	xvi
Submitting a Service Request	xvi
Definitions of Service Request Severity	xvi
Obtaining Additional Publications and Information	xvii

---

## **CHAPTER 1**

## **Overview of the Cisco VG224 Voice Gateway**   1-1

Overview	1-1
Product Serial Number Location for the <i>Cisco VG224 Voice Gateway</i>	1-2
Configuration Options	1-4
Cisco VG224 Voice Gateway Deployment	1-4
Interfaces and Service Capabilities	1-4
Physical Description and LEDs	1-5
Chassis Grounding	1-6
Port Numbering Conventions	1-6
Specifications	1-6
Software Elements	1-7
Configuration Connections	1-7
Configuration Methods	1-7
Automated Configuration	1-7
Manual Configuration	1-7

**CHAPTER 2**

**Planning Your Installation 2-1**

- Location and Mounting Requirements 2-1
  - Temperature Control and Ventilation 2-1
    - Enclosed Racks 2-2
    - Wall-Mounted 2-2
    - Bench-Mounted 2-2
  - Access to Chassis 2-2
  - Chassis Grounding 2-2
  - Power Source 2-3
  - Cable Types 2-3
- Distance Limitations for Interface Cables 2-3
  - Fast Ethernet Maximum Distance 2-4
  - FXS Analog Voice Port Maximum Distance 2-4
- Interference Considerations 2-4

**CHAPTER 3**

**Installing the Cisco VG224 Voice Gateway 3-1**

- Safety Recommendations 3-2
  - Maintaining Safety with Electricity 3-2
  - General Safety Practices 3-2
  - Safety Tips 3-2
  - Preventing Electrostatic Discharge Damage 3-3
- Site Log 3-3
- Keeping Track—Checklist 3-4
  - Installation Checklist 3-4
- Mounting Tools and Equipment 3-5
- Unpacking and Inspection 3-5
- Rack-Mounting the Chassis 3-6
  - Mounting Screws 3-6
  - Attaching the Brackets 3-7
  - Installing the Cisco VG224 Voice Gateway in a Rack 3-8
- Wall-Mounting the Chassis 3-9
- Bench-Top Installation 3-11
- Installing the Ground Connection 3-11
- Connecting Cables 3-14
  - LAN and Power Cables 3-15
  - Connecting the Input Power 3-16
    - Cable 3-16
    - Procedure 3-16

Connecting the Console Port to a PC or an ASCII Terminal	3-16
Cable	3-16
Procedure	3-16
Connecting the Auxiliary Port to a Modem	3-17
Cable	3-17
Procedure	3-17
Connecting the Fast Ethernet Port to the Fast Ethernet Switch	3-17
Cable	3-17
Procedure	3-17
Voice Cables	3-18
Connecting the Analog Voice Interface to a Distribution Panel	3-19
Cable	3-19
Procedure	3-19
Ports, Connectors, and Pinouts	3-20
Remote Terminal Connections (If Applicable)	3-20
Connecting to a Modem	3-20
Connecting to a Remote PC	3-20
Connecting to a Remote ASCII Terminal	3-21
Connecting Backup Power	3-21
Connecting a Backup Battery to a DC-Powered Cisco VG224	3-21
Connecting a UPS to an AC-Powered Cisco VG224	3-23

**CHAPTER 4****Powering On the Cisco VG224 Voice Gateway** 4-1

Checklist for Power-On	4-1
Power-On Procedure	4-1
Initial Configuration Procedures	4-2
Manual Configuration	4-2
Getting Your Network Information	4-3
Setting the Fast Ethernet Port IP Address	4-3
Verifying and Saving Your Configuration	4-4
Troubleshooting	4-4

**APPENDIX A****Cable Specifications and Information** A-1

Console and Auxiliary Port Cables and Pinouts	A-1
Identifying a Rollover Cable	A-2
Console Port to PC	A-3
Console Port to ASCII Terminal	A-4
Auxiliary Port to Modem	A-5
Alternative Connections to Terminal and Modem	A-5

Fast Ethernet Port Pinouts (RJ-45) **A-6**

Analog Voice Multiport Pinouts (RJ-21X/CA21A) **A-7**

- EIA/TIA-232 Connections **A-7**
- EIA/TIA-449 Connections **A-7**
- V.35 Connections **A-8**
- X.21 Connections **A-8**
- EIA/TIA-530 Connections **A-9**

---

**INDEX**