



Configuring Breakout

This chapter gives procedure to configure breakout.

- [Configure Breakout, on page 1](#)

Configure Breakout

Procedure

- Step 1** **configure**
Step 2 **controller optics R/S/I/P**

Example:

```
RP/0/ (config)# controller optics 0/0/0/1
```

Enters the Optics controller mode.

- Step 3** **otn framing framing type**

Example:

```
RP/0/ (config)# controller optics 0/0/0/1 breakout-mode 1 otn framing opu2
```

Configures OTN framing.

- Step 4** **commit**
-

Example: Configure Breakout mode for Controller

The following example shows how to configure breakout-mode for a controller using Cisco IOS XR commands:

```
RP/0/# configure terminal  
RP/0/(config)# controller optics 0/0/0/1  
RP/0/(config)# controller optics 0/0/0/1 breakout-mode 1  
RP/0/(config)# controller optics 0/0/0/1 breakout-mode 1 otn framing opu2  
RP/0/(config-otul)#commit
```

