



Configure LC Priority Shutdown

This chapter describes the procedure to configure the shutdown priority on line cards using IOS.

- [Configure LC Priority Shutdown, on page 1](#)

Configure LC Priority Shutdown

This task enables the LC priority shutdown feature on a NCS 4000 chassis and assigns a shutdown priority on the line cards. For more information, see [LC Priority Shutdown](#).

Procedure

Step 1

configure

Enters the configuration mode terminal.

Example:

```
RP/0/RP0:hostname# configure
```

Step 2

power-mgmt progressive location *rack-id*

Enables the LC priority shutdown feature on the chassis specified and assigns a default priority of 20 to all the line cards.

To disable this feature, use the **no** form of this command.

Example:

```
RP/0/RP0:hostname (config)#power-mgmt progressive location L0
```

Step 3

priority location *line-card-location card-priority*

Configures the shutdown priority to the line card specified.

To remove the priority, use the **no** form of this command.

Example:

```
RP/0/RP0:hostname (config-location-L0)#priority location 0/9 6
```

Step 4

commit
