



## Migration : NCS4K-ECU to NCS4K-ECU2

This chapter provides the CTC procedure for migration of External Connection Unit (ECU) in a Multi Chassis system.

- [Migrate from NCS4K-ECU to NCS4K-ECU2, on page 1](#)

### Migrate from NCS4K-ECU to NCS4K-ECU2

<b>Purpose</b>	This procedure provide instructions to migrate from NCS4K-ECU to NCS4K-ECU2 using CTC.
<b>Tools/Equipment</b>	None
<b>Prerequisite Procedures</b>	"Login to CTC" in <i>System Setup and Software Installation Guide for Cisco NCS 4000 Series</i> .
<b>Required/As Needed</b>	As needed
<b>Onsite/Remote</b>	Onsite
<b>Security Level</b>	Provisioning or higher



**Note** Do not perform router or route processor reload during the migration procedure.



**Note** To check the current status of migration while performing this procedure, click the **Status** button.



**Note** You can check the alarm(s) and alarm state in the **Alarms** tab of CTC.

## Procedure

- 
- Step 1** In the **Node View**, click the **Maintenance > ECU Upgrade** tab.
- Step 2** Click the **Detach** button.
- Step 3** Click the **Yes** button.  
Alarms **The Detach Operation for disk started** and **Disk provision** will be raised.
- Step 4** Wait for the alarm **The Detach Operation for disk started** to clear.
- Note**  
The **Disk provision** alarm will persist all through the migration procedure.
- Step 5** Remove the NCS4K-ECU unit physically from the chassis and replace it with the NCS4K-ECU2 unit.
- Note**  
For detailed procedure on Removing and Replacing the ECU unit refer *Hardware Installation Guide for Cisco NCS 4000 Series*.
- Step 6** Wait 2-3 minutes, for the newly installed ECU unit to initialize.
- Step 7** Check to ensure that the **ECU Plugged out** alarm has cleared.
- Note**  
Proceeding to next step without waiting for ECU Plugged out alarm to clear, may lead system to inconsistent system state.
- Step 8** Click the **Attach** button.  
This will trigger the attach procedure and **The attach provision for disk started** alarm will be raised.
- Step 9** Wait for **Disk Provision** and **The attach provision for disk started** alarms to clear.  
Once above alarms are cleared from the system, ECU migration from NCS4K-ECU to NCS4K- ECU2 is completed successfully.
- Stop. You have completed this procedure.**
-