



Factory Default Reset Command

- [factory-default-reset](#), on page 2

factory-default-reset

To reset the Cisco Enterprise NFVIS host server to the default factory setting, use the **factory-default-reset** command in global configuration mode.

factory-default-reset { **all** | **all-except-images** | **all-except-images-connectivity** | **manufacturing** | **all-with-bios-password** }

Syntax Description		
all		Erases all configuration. Connectivity is lost, and the admin password is changed to factory default password.
all-except-images		Erases all configuration except images. Connectivity is lost, and the admin password is changed to factory default password.
all-except-images-connectivity		Erases all configuration except images and network connectivity.
manufacturing		Erases all configuration except images. Connectivity is lost, and the admin password is changed to factory default password.
all-with-bios-password		Erases all configuration along with the BIOS password. Connectivity is lost, and the admin password and BIOS password is changed to factory default password.

Command Default None

Command Modes Global configuration (config)

Command History	Release	Modification
	3.5.1	This command was introduced.
	4.7.1	Additional keyword introduced: all-with-bios-password

Usage Guidelines This command is used only for troubleshooting. We recommend you contact Cisco Technical Support before using this command.

Example

The following is an example of how to reset to the default factory setting:

```
nfviz(config)# factory-default-reset all
nfviz(config)# commit
```