

Resource Commands

- show resources cpu-info allocation, on page 2
- show resources cpu-info cpus, on page 3

show resources cpu-info allocation

To get information on the number of CPUs allocated to VMs and the CPUs that are already used by the VMs, use the **show resources cpu-info allocation** command in privileged EXEC mode.

show resources cpu-info allocation [total-sockets | cores-per-socket | logical-cpus-used-by-system | logical-cpus-used-by-vnfs | logical-cpus-used-dedicated | logical-cpus-used-sharable | total-logical-cpus]

Syntax Description

| total-sockets | (Optional) Total sockets allocated. |
|-----------------------------|---|
| cores-per-socket | (Optional) Number of cores per socket. |
| logical-cpus-used-by-system | (Optional) Number of CPUs used by the system. |
| logical-cpus-used-dedicated | (Optional) Number of dedicated CPUs. |
| total-logical-cpus | (Optional) Total number of CPUs. |
| logical-cpus-used-by-vnfs | (Optional) Number of CPUs used by VNFs. |

Command Default

Complete information about CPU allocation to VMs.

Command Modes

Privileged EXEC (#)

Command History

| Release | Modification |
|---------|------------------------------|
| 3.5.1 | This command was introduced. |

Example

The following is the sample output from the **show resources cpu-info allocation** command:

nfvis# show resources cpu-info allocation

```
resources cpu-info allocation total-sockets 1 resources cpu-info allocation cores-per-socket 8 resources cpu-info allocation total-logical-cpus 16 resources cpu-info allocation logical-cpus-used-by-system 2 resources cpu-info allocation logical-cpus-used-by-vnfs 14 resources cpu-info allocation logical-cpus-used-dedicated 12 resources cpu-info allocation logical-cpus-used-sharable 2
```

show resources cpu-info cpus

To display information on the VMs running in all the physical CPUs or a specific physical CPU in the system, use the **show resources cpu-info cpus** command in privileged EXEC mode.

show resources cpu-info cpus [cpu cpu-id]

| Syntax Description cpu | cpu-id | (Optional) The ID of the physical CPU. |
|------------------------|--------|--|
|------------------------|--------|--|

Command Default Display information on the VMs running in all the physical CPUs.

Command Modes Privileged EXEC (#)

Release Modification3.5.1 This command was introduced.

Example

The following is a sample output from the **show resources cpu-info cpus cpu 7** command:

nfvis# show resources cpu-info cpus cpu 7

| CPU | SOCKET | CORE | SYSTEM | | | LOW | VCPU |
|-----|--------|------|--------|--------------------|-------|---------|------|
| ID | ID | ID | USE | NAME | VCPUS | LATENCY | ID |
| | | | | | | | |
| 7 | 0 | 7 | false | 1471588629.ROUTER3 | 4 | true | Ω |

show resources cpu-info cpus