

System Routes Commands

- system routes route, on page 2
- show system routes, on page 3
- show system dhcp-routes, on page 4
- show running-config system routes, on page 5

system routes route

To create a new system route or to modify an existing system route, use the **system routes route** command in global configuration mode. To delete a system route, use the **no** form of the command.

system routes route destination prefix-length [gateway gateway] [dev device] no system routes route destination prefix-length

Syntax Description

destination	The route destination address.		
prefix-length	The netmask for the destination address.		
gateway gateway	(Optional) The gateway for the route.		
dev device	(Optional) The device interface that the route will use.		

Command Default

None

Command Modes

Global configuration (config)

Command History

Release	Modification		
3.5.1	This command was introduced.		

Usage Guidelines

Though only the destination and prefix length are mandatory parameters for creating a route, a valid route requires that you specify the gateway or the interface or both.

Example

The following command creates a system route to the destination 203.0.113.1:

```
nfvis(config)# system routes route 203.0.113.1 12 dev lan-br
nfvis(config)# commit
nfvis(config)# end
```

show system routes

To display the list of system routes, use the **show system routes** command in privileged EXEC mode.

show system routes [route route-name]

Syntax Description	route route-name	(Optional) Name of the process.
Syntax Description	route route-name	(Optional) Name of the process.

Command Default

None

Command Modes

Privileged EXEC (#)

Command History

Release	Modification		
3.5.1	This command was introduced.		

Example

The following is a sample output from the **show system routes** command:

nfvis# show	system routes	
DESTINATION	PREFIXLEN	STATUS
203.0.113.1	12 -	
203.0.113.2	12 -	
203.0.113.3	24 -	

show system dhcp-routes

To display the DHCP static routes, use the **show system dhcp-routes** command in privileged EXEC mode.

show system dhcp-routes

Syntax Description

This command has no arguments or keywords.

Command Modes

Privileged EXEC (#)

Command History

Release	Modification	
3.6.1	This command was introduced.	

Example

nfvis# show system dhcp-routes

show running-config system routes

To display the running configuration of system routes, use the **show running-config system routes** command in privileged EXEC mode.

show running-config system routes [route route-name]

Syntax Description	route route-name (Optional) Name of the process.
Command Default	None
Command Modes	Privileged EXEC (#)
Command History	Release Modification

Example

3.5.1

nfvis#	${\tt show}$	runni	ng-config	system	routes
DESTINA	MOITA		PREFIXLEN	STATUS	5
203.0.1	13.1	12	-	-	
203.0.1	13.2	12	-	-	
203.0.1	13.3	24	-	-	
	DESTINA 203.0.1 203.0.1	nfvis# show DESTINATION 203.0.113.1 203.0.113.2 203.0.113.3	DESTINATION 203.0.113.1 12 203.0.113.2 12	DESTINATION PREFIXLEN	203.0.113.1 12 - 203.0.113.2 12 -

This command was introduced.

show running-config system routes