



Platform Specific Configurations

- [ENCS Switch Configuration, on page 1](#)
- [Configuring vBranch High Availability, on page 10](#)

ENCS Switch Configuration

Access to the ENCS switch is restricted through Consent Token. Consent Token is a security feature that is used to authenticate the network administrator of an organization to access system shell with mutual consent from the network administrator and Cisco Technical Assistance Centre (Cisco TAC).



Note From the switch console, there is access to debug mode and an advanced debug mode. Credentials of the local user are synchronized to access debug mode. Advanced debug uses unique credentials for each device that allows for additional debugging options for Cisco engineering. To enter either debug mode permission must be granted through Consent Token.

ENCS Switch Commands

See, [Cisco Enterprise Network Compute System Switch Command Reference](#) for switch commands.

ENCS Switch APIs

See, [API Reference for Cisco Enterprise Network Function Virtualization Infrastructure Software](#) for switch related APIs.

ENCS Switch Portal Configuration

Switch Settings

The **Switch** option from the Cisco Enterprise NFVIS portal allows you to configure STP/RSTP, VLAN on specified ranges, RADIUS based authentication, and port channel load balancing for various switch ports. This section describes how to configure settings on the ENCS switch portal.

SwitchPort	Description	Status	MAC Address	PortType	VLAN	Speed	RXBytes	PktDrop	
GigabitEthernet1/0		down	00:a6:ca:d6:32:d9	access	1	1000	0	0	
GigabitEthernet1/1		down	00:a6:ca:d6:32:da	access	1	1000	0	0	
GigabitEthernet1/2		down	00:a6:ca:d6:32:db	access	1	1000	0	0	
GigabitEthernet1/3		down	00:a6:ca:d6:32:dc	access	1	1000	0	0	
GigabitEthernet1/4		down	00:a6:ca:d6:32:dd	access	1	1000	0	0	
GigabitEthernet1/5		down	00:a6:ca:d6:32:de	access	1	1000	0	0	
GigabitEthernet1/6		down	00:a6:ca:d6:32:df	access	1	1000	0	0	
GigabitEthernet1/7		down	00:a6:ca:d6:32:e0	access	1	1000	0	0	

366823

POR	IN-UCAS	OUT-UCAS	IN-MCAS	OUT-MCAS	IN-BCAS	OUT-BCAST
T	T	T	T	T	T	
1/0	0	0	0	0	0	0
1/1	0	0	0	0	0	0
1/2	0	0	0	0	0	0
1/3	0	0	0	0	0	0
1/4	0	0	0	0	0	0
1/5	0	0	0	0	0	0
1/6	0	0	0	0	0	0
1/7	0	0	0	0	0	0

366823

You can view the Switch Interface operational data and the statistics parameters in the following table:

Table 1: Switch Settings Interface

Parameter	Description	Values
SwitchPort	Specifies the switch interface name.	
Description	Specifies the description of the interface.	
Status	Specifies the status of the interface.	up or down
MAC Address	Specifies the MAC address of the interface.	
PortType	Specifies the mode of the port interface.	Supported types are: <ul style="list-style-type: none"> • access • dot1q-tunnel • private-vlan • trunk
VLAN	Specifies the VLAN ID.	Range: 1-2349 and 2450-4093

Speed	Specifies the speed of the interface.	Speed: <ul style="list-style-type: none"> • 10 MBPS • 100 MBPS • 1000 MBPS
RxBytes	Specifies the received data on interface in bytes.	
PktDrop	Specifies the number of packet drops.	
PORT	Specifies the port number.	
IN-UCAST	Specifies the number of incoming unicast packets at the interface.	
OUT-UCAST	Specifies the number of outgoing unicast packets at the interface.	
IN-MCAST	Specifies the number of incoming multicast packets at the interface.	
OUT-MCAST	Specifies the number of outgoing multicast packets at the interface.	
IN-BCAST	Specifies the number of incoming broadcast packets at the interface.	
OUT-BCAST	Specifies the number of outgoing broadcast packets at the interface.	

Configuring Spanning Tree

Spanning Tree Protocol (STP) is a Layer 2 protocol that runs on bridges and switches. The main purpose of STP is to ensure that you do not create loops when you have redundant paths in your network.

The Spanning Tree option is enabled by default. You can click on **edit** and make the necessary settings or disable Spanning Tree if required.

The screenshot displays the configuration interface for Spanning Tree. The main window has a sidebar with 'dot1x', 'LACP', and 'Vlan' options. The main content area shows the following settings:

- Spanning Tree:** Enable (selected), Disable
- Mode:** rstp (dropdown)
- Forward Time:** 15 (range: - to +)
- Hello Time:** 2 (range: - to +)
- Max Age:** 20 (range: - to +)
- Loopback Guard:** Enable, Disable (selected)
- Path Cost Method:** long (dropdown)
- Priority:** 32768 (range: - to +)

An 'Edit' button is located at the bottom of the main configuration area. A smaller, partially visible configuration window is shown to the right, with the ID '366824' below it.

The configuration of spanning tree has the following parameters when it is enabled:


Table 2: Spanning Tree Parameters

Parameter	Description	Values
Spanning Tree	Specifies the state of the Spanning Tree.	Enable or Disable The default value is Enable.
Mode	Specifies the mode of the Spanning Tree.	stp or rstp
Forward Time	Specifies the Spanning Tree forward time in seconds.	Range: 4-30 seconds
Hello Time	Specifies the Hello time in seconds.	Range: 1 to 10 seconds
Max Age	Specifies the spanning-tree bridge maximum age in seconds.	Range: 6 to 40 seconds
Loopback Guard	Specifies the loopback guard status.	Enable or Disable

Path Cost Method	Specifies the speed of the interface.	Method: <ul style="list-style-type: none"> • long - for 32 bit based values for default port path costs. • short - 16 bit based values for default port path costs. The default method is long.
Priority	Specifies the port priority.	Range: 0 to 61440 in steps of 4096 The default value is 32768.
BPDU Filtering	Specifies that BPDU packets are filtered when the spanning tree is disabled on an interface.	
BPDU Flooding	Specifies that BPDU packets are flooded unconditionally when the spanning tree is disabled on an interface.	

Configuring Dot1x

This chapter describes how to configure dot1x port-based authentication on the Cisco Enterprise NFWIS portal. dot1x prevents unauthorized devices (clients) from gaining access to the network. It is a standard for media-level (Layer 2) access control, offering the capability to permit or deny network connectivity based on the identity of the end user or device. The dot1x is disabled by default. You can click on **edit** to enable dot1x.

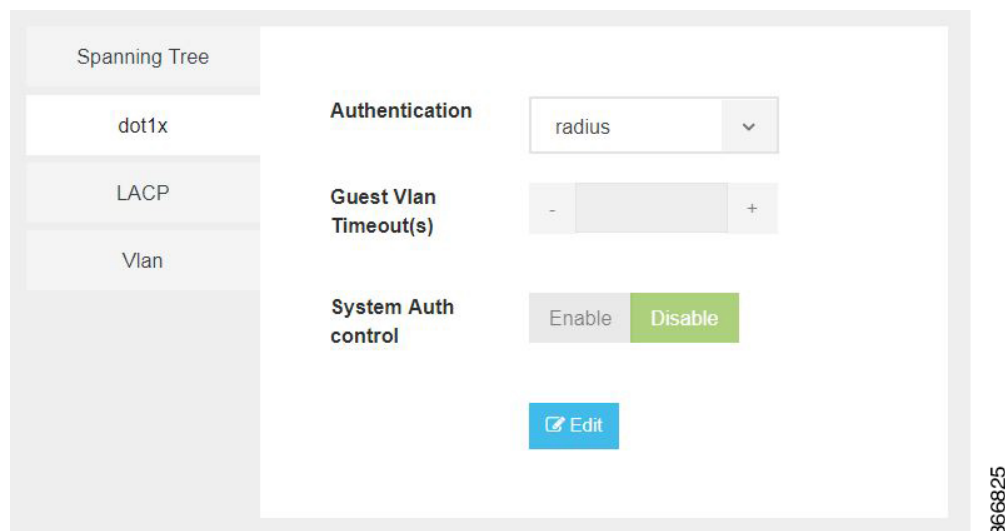

The configuration of dot1x has the following parameters:


Table 3: Dot1x Parameters

Parameter	Description	Values
-----------	-------------	--------

Authentication	Specifies the authentication type for the port.	radius or none The default value is radius.
Guest VLAN Timeout(s)	Specifies the time delay in seconds between enabling Dot1X (or port up) and adding the port to the guest VLAN.	Range: 30 to 180 seconds
System Auth control	Specifies the authentication control.	Enable or Disable

Configuring LACP

The Link Aggregation Control Protocol (LACP) enables you to bundle several physical ports together to form a single logical channel. LACP enables you to form a single Layer 2 link automatically from two or more Ethernet links. This protocol ensures that both ends of the Ethernet link are functional and are part of the aggregation group.

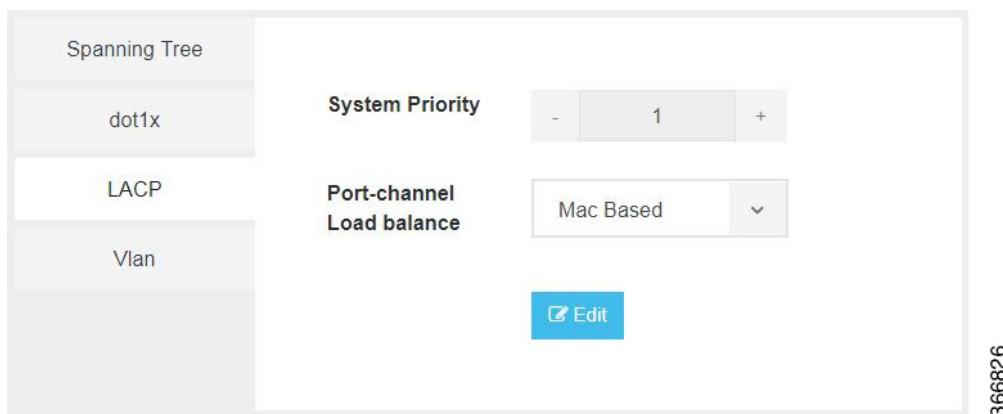

LACP uses the following parameters to control aggregation:

Table 4: LACP Parameters

Parameter	Description	Values
System Priority	Specifies the port priority.	Range: 1 to 65535
Port-channel load balance	Specifies the load balance of the port channel.	Mac Based or IP Based

Configuring VLAN

You can use virtual LANs (VLANs) to divide the network into separate logical areas. VLANs can also be considered as broadcast domains. Any switch port can belong to a VLAN, and unicast, broadcast, and multicast packets are forwarded and flooded only to end stations in that VLAN. Each VLAN is considered a logical network, and packets destined for stations that do not belong to the VLAN must be forwarded through a router.

You can configure VLANs in the range <1-2349>|<2450-4093> for a specified switch port.

Spanning Tree		
dot1x	VLAN	1
LACP	Edit	
Vlan		

366827

Configuring General Settings

General Settings	Advanced Settings	Spanning Tree
<p>Interface: GigabitEthernet1/0</p> <p>Description: <input type="text"/></p> <p>Speed: 1000</p> <p>Dot1x Auth: 802.1x</p> <p>Admin Status: <input type="checkbox"/></p> <p>Apply Cancel</p>		

366828

You can configure general settings using the following parameters for each switch interface:

- Interface—Name of the interface
- Description—Set the description per interface
- Speed—10/100/1000 MBPS
- Dot1x Auth—802.1x, mac or both
- PoE Method—auto, never or four-pair
- PoE Limit—0-60000mW
- Admin Status—enable or disable

Configuring Advanced Settings

You can make the advanced settings using the following parameters for each switch interface:

- Mode—access, dot1q-tunnel, private-vlan, or trunk
- Access Vlan—Specifies the number of VLANs.
- Allowed Vlan—All or VLAN IDs
- Native Vlan—Specifies the VLAN ID. You can enter a value from one of the following ranges:
 - 1 to 2349
 - 2450 to 4093
- Dot1q Tunnel Vlan—Specifies the Layer 2 tunnel port.
- Community—Specifies the community number. Range: 1 to 29
- Protected Port—Yes or No



Note The VLAN configuration takes effect only if the global VLANs are also configured with the same values in [Configuring VLAN, on page 6](#).

Configuring Spanning Tree per Interface

The image displays two screenshots of a network configuration interface, specifically the 'Spanning Tree' configuration page. The top screenshot shows the 'Spanning Tree' tab with the following settings: Spanning Tree (Enable/Disable), Cost (Choose from 1-200000000), Priority (128), Link Type (dropdown), BPDU Guard (Enable/Disable), Root Guard (Enable/Disable), and Port Fast (auto). The bottom screenshot shows the 'Spanning Tree' tab with the following settings: Spanning Tree (Enable/Disable), BPDU Filtering (toggle), and BPDU Flooding (toggle). Both screenshots include 'Apply' and 'Cancel' buttons.

You can configure spanning tree for each switch interface using the following parameters:

- Spanning Tree—Enable or Disable
- Cost—Specifies the cost. Range: 1 to 200000000
- Priority—Specifies the port priority. Range: 0 to 240, default value is 128
- Link Type—point-to-point or shared
- BPDU Guard—Enable or Disable
- Root Guard—Enable or Disable
- Port Fast—auto or enable
- BPDU Filtering—Specifies that BPDU packets are filtered when the spanning tree is disabled
- BPDU Flooding—Specifies that BPDU packets are flooded when the spanning tree is disabled

Configuring Storm Control

Storm control is used to monitor incoming traffic levels and limit excessive flow of packets on any user facing switch port that could cause a traffic storm. Traffic storms can lead to device instability and unintended behavior.

You can configure storm control from NFVIS Portal, from Storm Control tab.

The screenshot shows the Storm Control configuration page with the following settings:

- Multicast:** Enable (selected)
- Storm Control Suppression (Level):** 57 (slider)
- Broadcast:** Enable (selected)
- Storm Control Suppression (Kbps):** 7000 (text input)
- Unicast:** Disable (selected)

Storm control can be configured for specific type of traffic - unicast or multicast or broadcast. The suppression range can be in terms of a percentage level (1-100) or Kbps value (1-1000000).

Configuring vBranch High Availability

High availability design provides redundancy for WAN, LAN, ENCS device, vRouter, vFirewall VNF level redundancy.

A branch site can have two routers for redundancy. If vEdge-cloud router is chosen, Each of the vedge-cloud router maintains:

- A secure control plane connection, via a DTLS connection, with each vSmart controller in its domain
- A secure data plane connection with the other vEdge routers at the site

Because both vEdge routers receive the same routing information from the vSmart controllers, each one is able to continue to route traffic if one should fail, even if they are connected to different transport providers.

Two firewalls are placed in a group and their configuration is synchronized to prevent a single point of failure on your network. A heartbeat connection between the firewall peers ensures seamless failover in the event that a peer goes down. Setting up two firewalls in an HA pair provides redundancy and allows you to ensure business continuity.

Prerequisites for vBranch HA

The WAN links are active on both Cisco ENCS1 and Cisco ENCS2. Each of the ENCS WAN link is connected to the WAN network (most cases with two SPs), with two ENCSs in an active-active mode.

The LAN facing links of both Cisco ENCS devices are connected to an external switch (as an uplink), and all the devices on the LAN segment are also connected to the external switch. There should be no LAN device connecting directly to the Cisco ENCS internal switch.

Two vRouters and the Two vFirewalls have full mesh L3 connectivity.

VMs and VNFs on both ENCS devices must be configured identical.

SD-Branch HA Design and Topology

In HA design, there are two sets of VLANs. Traffic path is between the VNFs and traffic from or towards LAN.

To protect against cable connection issue and box failure, there is back-to-back cable between ENCS and connection from each ENCS to the external switch.

When using Cisco ENCS and Cisco switches, common expectation is to use PVST+, detect loops and switch specific ports to BLOCKING mode. ENCS switch does not support PVST (Per VLAN spanning tree). By Default, RSTP could end up blocking ENCS port back-to-back connection, this will result in blocking traffic path between the VNFs.

The recommended solution is to use MSTP in ENCS and the external switches. The following topology and configuration provides a step-by-step procedure with reasoning for specific configuration use. There are two instances of MSTP created. One for handling traffic path between VNFs and the second for handling traffic from or towards LAN.




Note

In cases where external switch cannot be configured for MSTP, RSTP is used and the two links back-2-back between ENCS is not in port-channel.

- One of the links carries traffic between VNFs by configuring disable spanning tree. The second back-to-back link between ENCS processes RSTP and forward or block for the traffic from or towards LAN.
 - From each of the ENCS, a third physical link connects to the external switch. This also forwards or blocks the traffic from or towards LAN depending on the RSTP decisions.
-

Physical Device Connections

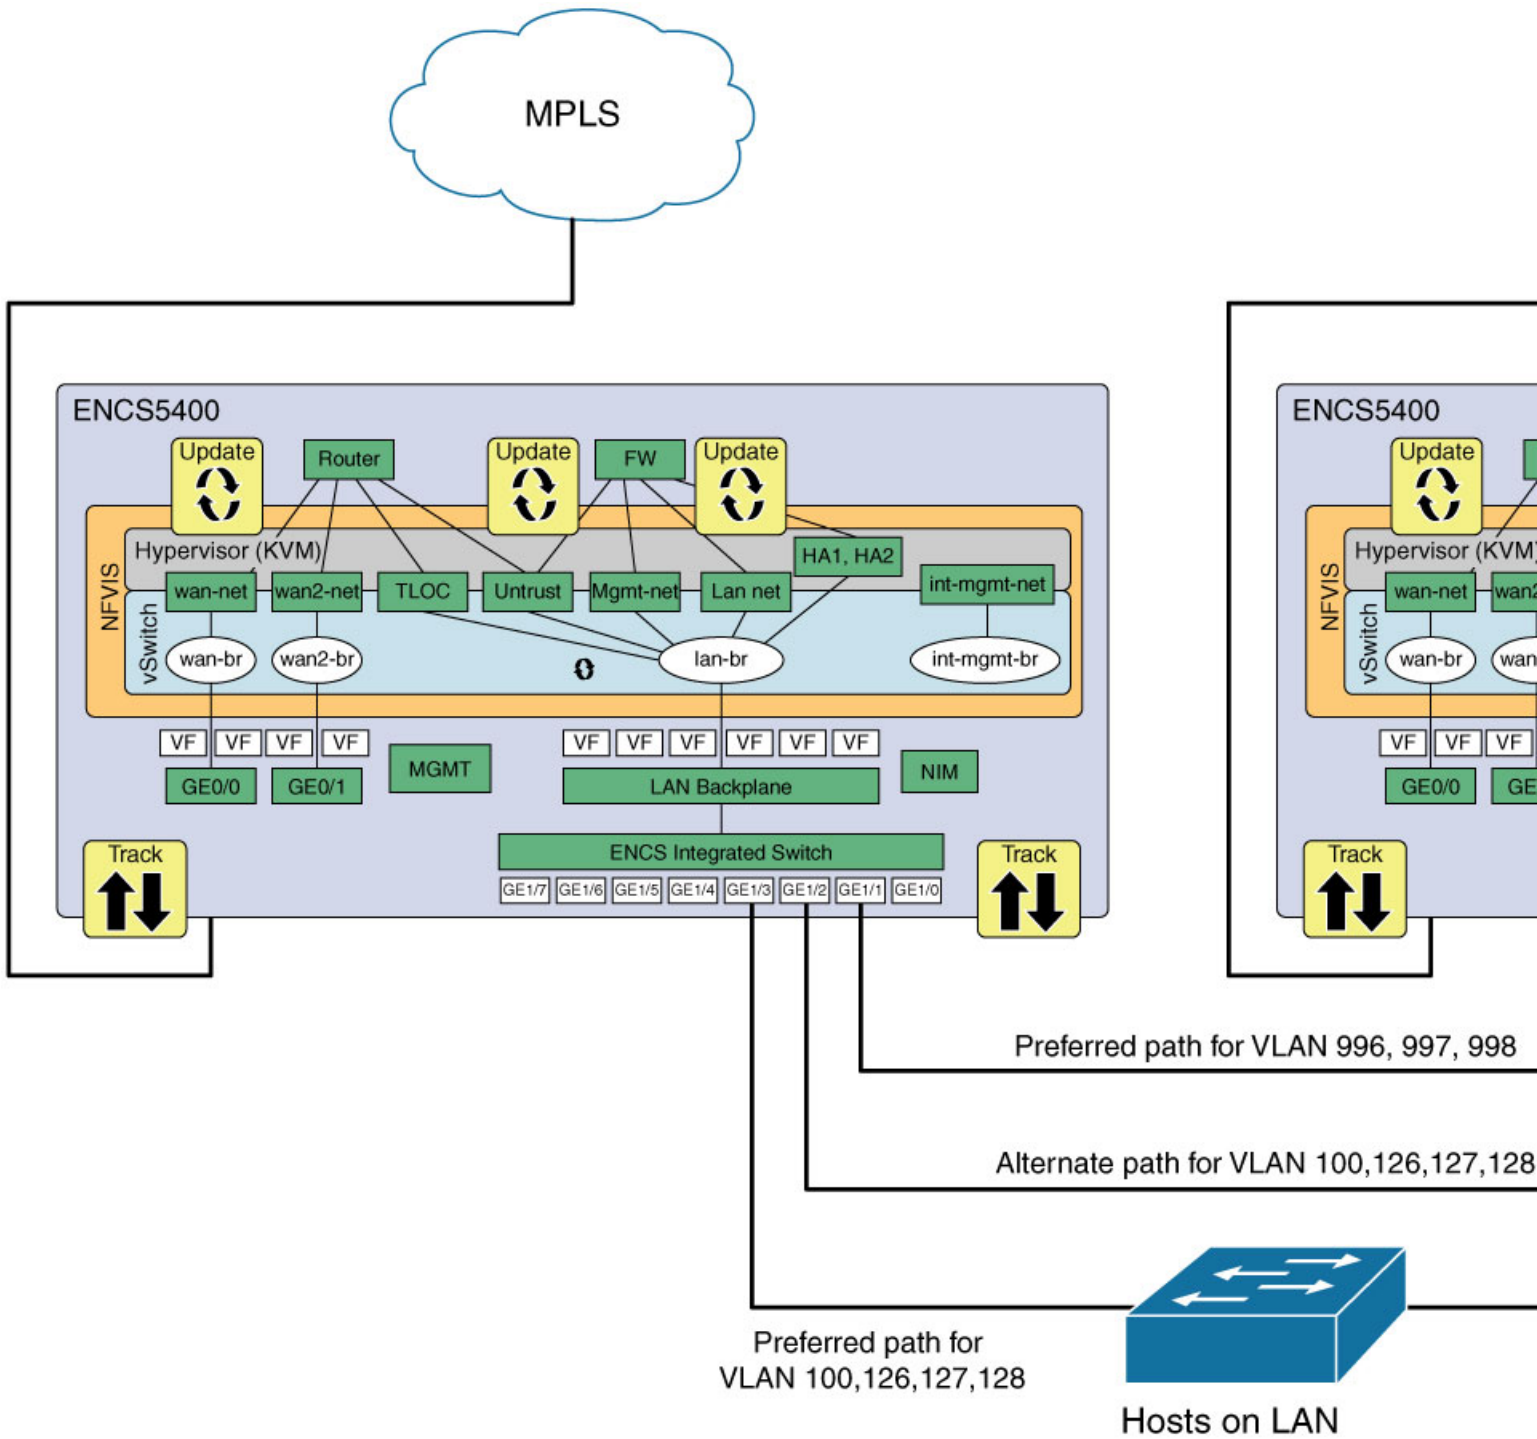

VM and Service Chain Network Connection

Figure 1: ENCS-Left

Name	Status	Profile	Port Forwarding	vnic								Management IP	Actions	
				0	1	2	3	4	5	6	7			
FIREWALL	Active	VM-100		mgmt-net	Utrust	HA1	HA2	Trust					10.20.0.2	
ROUTER	Active	srv-small	2001 => 22	internal	wan-net2	pt-2-pt	Utrust	mgmt-net					10.20.0.2	

Figure 2: ENCS-Right

Name	Status	Profile	Port Forwarding	vnic								Management IP	Actions	
				0	1	2	3	4	5	6	7			
FIREWALL	Active	VM-100		mgmt-net	Utrust	HA1	HA2	Trust					10.20.0.2	
ROUTER	Active	srv-small	2001 => 22	internal	wan-net2	pt-2-pt	Utrust	mgmt-net					10.20.0.2	



Note In the absence of firewall in the design, the router is directly connected to the LAN side. Pt-to-Pt network extends the TLOC connection across the ENCS devices and VRRP is enabled in the router LAN facing connection.

Isolating LAN and Transit Link Traffic for vBranch HA

Traffic from or towards LAN and traffic between the VNFs are isolated by configuring different VLANs for each traffic since both links are connected to the same ENCS internal switch. If you do not isolate the traffic, both LAN traffic and transit link will flow through the same internal switch on the Cisco ENCS.

Enable Port Tracking and Virtual NIC Update

The configured VNICs tracks the state of the ports based on the PNICs notifications. To verify the state of the port, use **show interface** or **ethtool** commands. You can also use commands specific to the VM, that displays the interface link state.

To configure track state on GE0-0 & GE0-1:

```
configure terminal
pnic GE0-0 track-state ROUTER 1
end
```

ENCS-Left# **support show ifconfig GE0-0**

```
GE0-0: flags=4611<UP,BROADCAST,ALLMULTI,MULTICAST> mtu 9216
ether 70:db:98:c3:df:28 txqueuelen 1000 (Ethernet)
```

To configure track state on switch port:

```
configure terminal
switch interface gigabitEthernet 1/3 track-state FIREWALL 4
end
```

```
ENCS-Left# show vm_lifecycle deployments FIREWALL
```

```
Name: FIREWALL
Deployment Name : FIREWALL
VM Group Name : FIREWALL
State: ALIVE
Internal State: VM_INERT_STATE
Bootup Time: -1
Image: Palo-Alto-8.1.3.tar.gz
Flavor: VM-100
```

```
VCPU#   Memory(MB)   Disk(MB)
-----
2       7168          61440
```

```
Low Latency: true
VCPU  CPU  CORE  SOCKET
-----
0     3    3     0
1     2    2     0
```


```
NICID  VNIC    NETWORK  IP    MAC-ADDRESS        MODEL    PORT-FORWARD
-----
0      vnic6  mgmt-net -    52:54:00:2b:72:d2  virtio
1      vnic7  Untrust  -    52:54:00:eb:a3:e7  virtio
2      vnic8  HA1      -    52:54:00:f4:de:e5  virtio
3      vnic9  HA2      -    52:54:00:12:f8:21  virtio
4      vnic10 Trust    -    52:54:00:7a:6b:e9  virtio
```

```
ENCS-Left# support show ifconfig vnic10
```

```
vnic10: flags=4163<UP,BROADCAST,RUNNING,MULTICAST> mtu 9216
inet6 fe80::fc54:ff:fe7a:6be9 prefixlen 64 scopeid 0x20<link>
ether fe:54:00:7a:6b:e9 txqueuelen 4000 (Ethernet)
```

Packet Flow for SD-Branch HA


This section explains high-level packet flow in non-failure and failure cases.

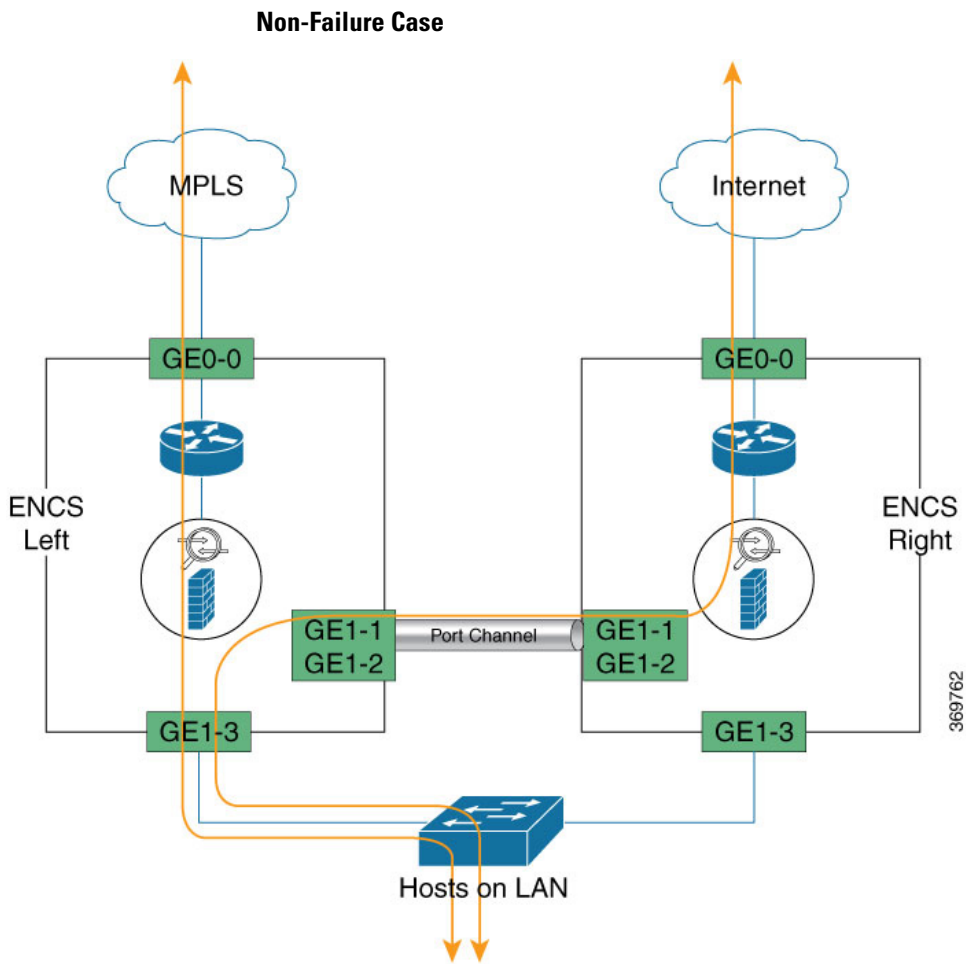


In the non-failure case, both ENCS devices are Active, up and running

- LAN to WAN through the ENCS1 Firewall and ENCS1 Router
- LAN to WAN through the ENCS1 Firewall and ENCS2 Router
- WAN to LAN through ENCS1 Router and ENCS1 Firewall
- WAN to LAN through ENCS2 Router and ENCS1 Firewall

Failure Case

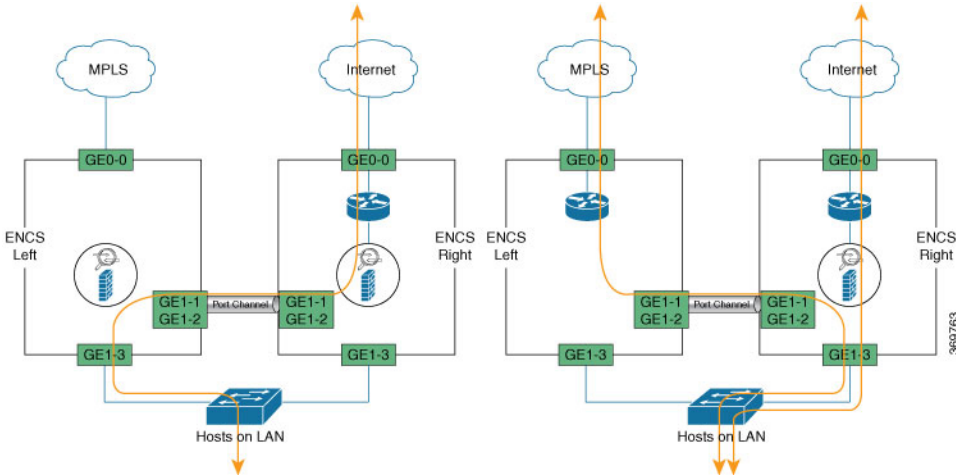

Following are failures that a router must be designed and configured to adapt

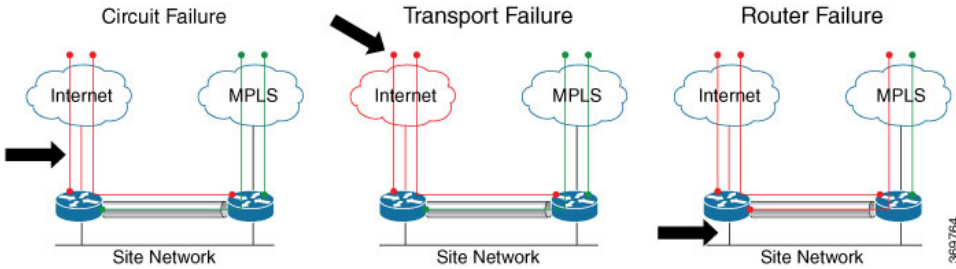

The conditions that trigger a firewall failover are:

- One or more of the monitored interfaces fail. (Link Monitoring)
- One or more of the destinations specified on the firewall cannot be reached. (Path Monitoring)
- The firewall does not respond to heartbeat polls. (Heartbeat Polling and Hello messages)

Configuration Examples and Usage Description

ENCS-Left and ENCS-Right with Same Config	Description or Reasons for configuration
<pre> networks network wan-net bridge wan-br ! networks network HA1 vlan [126] trunk false bridge lan-br ! networks network HA2 vlan [127] trunk false bridge lan-br ! networks network Trust vlan [128] bridge lan-br ! networks network Untrust vlan [998] bridge lan-br ! networks network mgmt-net vlan [100] trunk false bridge lan-br ! networks network pt-2-pt vlan [996 997] bridge lan-br </pre>	<p>In a HA design involving a router or Firewall, there are 3 to 6 paths required. ENCS platform has 2 WAN facing ports and 8 LAN facing ports.</p> <ul style="list-style-type: none"> • WAN facing ports are reserved for connection to WAN circuits. • LAN facing ports are the only set of available ports for creating the 3 to 6 path required. <p>Between VNFs and LAN, OVS or SR-IOV VFs and physical switch ports are the two Layer2 entities to traverse.</p>
<pre> ! vlan 1 ! vlan 100 ! vlan 126 ! vlan 127 ! vlan 128 ! vlan 996 ! vlan 997 ! vlan 998 ! spanning-tree enable spanning-tree mode mst spanning-tree mst 2 priority 61440 spanning-tree mst configuration name mst_LAN instance 1 vlan 996-998 instance 2 vlan 100,126-128 ! </pre>	<p>VLAN must be explicitly created before they are used in the interfaces.</p> <p>Enable MSTP. For MST group 2 carrying “Traffic towards/from LAN”, force the External Switch to become the ROOT using the “mst <group> priority <value>” CLI. The Higher the value, lower the chance of becoming spanning-tree ROOT.</p> <p>“priority” configuration is NOT required for the MST group 1 carrying “Traffic between VNFs”. There is NO loop possibility for MST group 1 VLANs.</p>

ENCS-Left and ENCS-Right with Same Config	Description or Reasons for configuration
<pre> nfvis# show running-config switch switch interface gigabitEthernet1/1 no shutdown channel-group 1 mode auto ! interface gigabitEthernet1/2 no shutdown channel-group 1 mode auto ! switch interface port-channel1 negotiation auto no shutdown spanning-tree mst 1 cost 200000000 spanning-tree mst 2 cost 200000000 switchport mode trunk switchport trunk native vlan 1 switchport trunk allowed vlan 100,126-128,996-998 ! </pre>	<p>For the back-to-back ENCS connection, link redundancy is achieved using port-channel configuration. Interfaces that are belong to a port-channel group use configuration from “interface port-channel x”</p> <p>Goal is to prefer the direct links from ENCS to the External Switch for “Traffic towards/from LAN”. In ENCS back-to-back connection, Spanning tree cost is HIGH for MST group carrying “Traffic towards/from LAN”. This config will block one of the ENCS back-to-back interfaces for breaking the loop for MST group carrying “Traffic towards/from LAN”.</p>

Status of MST instances.

For MST instance 1, “Traffic between the VNFs”, back-to-back portchannel link is root and forwarding state.

For MST instance 2, “Traffic from/towards the LAN”, links connected to External Switch are in forwarding state, path via back-to-back portchannel link is “Blocking state”. If one of the Links fail between ENCS and External switch, portchannel path for MST instance 2 will be unblocked.

ENCS-Left# show switch vlan detailed					ENCS-Right# show switch vlan detail				
VLAN ID	VLAN NAME	TAGGED PORTS	UNTAGGED PORTS	CREATED BY	VLAN ID	VLAN NAME	TAGGED PORTS	UNTAGGED PORTS	CREATED BY
1	1	1	None		1	1	1	None	
gi0,gi4-6,te2,po2-4			DefaultVoiceVLAN		gi0,gi4-6,te2,po2-4			DefaultVoiceVLAN	
100	100	100	gi3,te2,po1	gi7	100	100	100	gi3,te2,po1	gi7
			Manual					Manual	
126	126	126	gi3,te2,po1	None	126	126	126	gi3,te2,po1	None
			Manual					Manual	
127	127	127	gi3,te2,po1	None	127	127	127	gi3,te2,po1	None
			Manual					Manual	
128	128	128	gi3,te2,po1	None	128	128	128	gi3,te2,po1	None
			Manual					Manual	
996	996	996	te2,po1	None	996	996	996	te2,po1	None
			Manual					Manual	
997	997	997	te2,po1	None	997	997	997	te2,po1	None
			Manual					Manual	
998	998	998	te2,po1	None	998	998	998	te2,po1	None
			Manual					Manual	
ENCS-Left# show switch spanning-tree mstp summary					ENCS-Right# show switch spanning-tree mstp summary				
spanning-tree mstp summary ist-info summary					spanning-tree mstp summary ist-info summary				
admin-status enabled					admin-status enabled				
spanning-tree mstp summary ist-info summary					spanning-tree mstp summary ist-info summary				
Operation-mode MSTP					Operation-mode MSTP				
spanning-tree mstp summary ist-info summary					spanning-tree mstp summary ist-info summary				
Port-Cost-Method long					Port-Cost-Method long				
spanning-tree mstp summary ist-info summary					spanning-tree mstp summary ist-info summary				
Loopback-guard disabled					Loopback-guard disabled				
spanning-tree mstp summary ist-info root					spanning-tree mstp summary ist-info root				
Priority 32768					Priority 32768				
spanning-tree mstp summary ist-info root					spanning-tree mstp summary ist-info root				
Address 70:db:98:c3:df:14					Address 70:db:98:c3:df:14				
spanning-tree mstp summary ist-info root Cost					spanning-tree mstp summary ist-info root Cost				
0					0				
spanning-tree mstp summary ist-info root Port					spanning-tree mstp summary ist-info root Port				
LAG1					0				
spanning-tree mstp summary ist-info root					spanning-tree mstp summary ist-info root				
Hello-Time 2					spanning-tree mstp summary ist-info root				
spanning-tree mstp summary ist-info root					spanning-tree mstp summary ist-info root				
Max-Age 20					spanning-tree mstp summary ist-info root				
spanning-tree mstp summary ist-info root					spanning-tree mstp summary ist-info root				
Forward-Delay 15					spanning-tree mstp summary ist-info root				
spanning-tree mstp summary ist-info bridge					spanning-tree mstp summary ist-info bridge				
Priority 32768					spanning-tree mstp summary ist-info bridge				
spanning-tree mstp summary ist-info bridge					spanning-tree mstp summary ist-info bridge				
Address 70:db:98:c3:df:a0					spanning-tree mstp summary ist-info bridge				
spanning-tree mstp summary ist-info bridge					spanning-tree mstp summary ist-info bridge				
Hello-Time 2					spanning-tree mstp summary ist-info bridge				
spanning-tree mstp summary ist-info bridge					spanning-tree mstp summary ist-info bridge				
Max-Age 20					spanning-tree mstp summary ist-info bridge				
spanning-tree mstp summary ist-info bridge					spanning-tree mstp summary ist-info bridge				
Forward-Delay 15					spanning-tree mstp summary ist-info bridge				
spanning-tree mstp summary ist-info					spanning-tree mstp summary ist-info				
.....					spanning-tree mstp summary ist-info				
.....								
INSTANCE PRIORITY DSG ROOT ADDRESS BRIDGE					INSTANCE PRIORITY DSG ROOT ADDRESS BRIDGE				

ADDRESS							ADDRESS							
1	32768	70:db:98:c3:df:14					1	32768	70:db:98:c3:df:14					
		70:db:98:c3:df:a0							70:db:98:c3:df:14					
2	61440	f0:b2:e5:56:e4:80					2	61440	f0:b2:e5:56:e4:80					
		70:db:98:c3:df:a0							70:db:98:c3:df:14					
INST			PRIO.				INST			PRIO.				
ID	PORT	STATE	NBR	COST	STS		ID	PORT	STATE	NBR	COST	STS		
	ROLE							ROLE						
1	gil/0	enabled	128.1	2000000	disabled		1	gil/0	enabled	128.1	2000000	disabled		
	disabled							disabled						
1	gil/3	enabled	128.4	20000			1	gil/3	enabled	128.4	20000			
	forwarding	designated						forwarding	designated					
1	gil/4	enabled	128.5	2000000	disabled		1	gil/4	enabled	128.5	2000000	disabled		
	disabled							disabled						
1	gil/5	enabled	128.6	2000000	disabled		1	gil/5	enabled	128.6	2000000	disabled		
	disabled							disabled						
1	gil/6	enabled	128.7	2000000	disabled		1	gil/6	enabled	128.7	2000000	disabled		
	disabled							disabled						
1	gil/7	enabled	128.8	2000000	disabled		1	gil/7	enabled	128.8	2000000	disabled		
	disabled							disabled						
2	gil/0	enabled	128.1	2000000	disabled		2	gil/0	enabled	128.1	2000000	disabled		
	disabled							disabled						
2	gil/3	enabled	128.4	20000			2	gil/3	enabled	128.4	20000			
	forwarding	root						forwarding	root					
2	gil/4	enabled	128.5	2000000	disabled		2	gil/4	enabled	128.5	2000000	disabled		
	disabled							disabled						
2	gil/5	enabled	128.6	2000000	disabled		2	gil/5	enabled	128.6	2000000	disabled		
	disabled							disabled						
2	gil/6	enabled	128.7	2000000	disabled		2	gil/6	enabled	128.7	2000000	disabled		
	disabled							disabled						
2	gil/7	enabled	128.8	2000000	disabled		2	gil/7	enabled	128.8	2000000	disabled		
	disabled							disabled						
INST			PRIO.				INST			PRIO.				
ID	PORT	STATE	NBR	COST	STS		ID	PORT	STATE	NBR	COST	STS		
	ROLE							ROLE						
1	po1	enabled	128.1000	10000			1	po1	enabled	128.1000	10000			
	forwarding	root						forwarding	designated					
1	po2	enabled	128.1001	2000000			1	po2	enabled	128.1001	2000000			
	disabled	disabled						disabled	disabled					
1	po3	enabled	128.1002	2000000			1	po3	enabled	128.1002	2000000			
	disabled	disabled						disabled	disabled					
1	po4	enabled	128.1003	2000000			1	po4	enabled	128.1003	2000000			
	disabled	disabled						disabled	disabled					
2	po1	enabled	128.1000	200000000			2	po1	enabled	128.1000	200000000			
	blocking	alternate						forwarding	designated					
2	po2	enabled	128.1001	2000000			2	po2	enabled	128.1001	2000000			
	disabled	disabled						disabled	disabled					
2	po3	enabled	128.1002	2000000			2	po3	enabled	128.1002	2000000			
	disabled	disabled						disabled	disabled					
2	po4	enabled	128.1003	2000000			2	po4	enabled	128.1003	2000000			
	disabled	disabled						disabled	disabled					
ENCS-Left#							ENCS-Right#							

From the above summary output, MST instances indicates ID and associated VLAN, and then displays all interfaces as part of VLAN instances. This behaviour differs from the way MST instances are displayed on other Cisco switching platforms.

External Switch MST Configuration



Note It is recommended that VLAN 996-998 is not allowed through the interfaces connecting to ENCS-Left and ENCS-Right. As a result, the external switch MSTP does not participate for VLAN 996-998.

Table 5:

<pre>vlan 100,126-128 ! spanning-tree mode mst spanning-tree extend system-id spanning-tree uplinkfast ! spanning-tree mst configuration name mst_LAN instance 1 vlan 996-998 instance 2 vlan 100, 126-128 ! interface GigabitEthernet1/0/1 switchport trunk allowed vlan 100,126-128 switchport mode trunk ! interface GigabitEthernet1/0/2 switchport trunk allowed vlan 100,126-128 switchport mode trunk</pre>	<p>VLANs carrying “Traffic between the VNFs” are NOT sent to the External Switch.</p> <p>MST instance priority and MST link COST are kept default in the External Switch.</p> <p>MST Priority and COST Configuration in ENCS ensure the External switch is the root and the Interfaces in the External switch connecting to ENCS are in Forwarding state.</p>
---	---



Note VLANs carrying traffic between VNFs are not used in external switch and not configured in any interface.

Switch#**show spanning-tree mst detail**

```
##### MST0    vlans mapped: 1-99,101-125,129-995,999-4094
Bridge        address f0b2.e556.e480  priority 32768 (32768 sysid 0)
Root          address 70db.98c3.df14  priority 32768 (32768 sysid 0)
              port      Gi1/0/2                path cost 0
Regional Root address 70db.98c3.df14  priority 32768 (32768 sysid 0)
              internal cost 20000      rem hops 19
Operational   hello time 2 , forward delay 15, max age 20, txholdcount 6
Configured    hello time 2 , forward delay 15, max age 20, max hops 20

GigabitEthernet1/0/1 of MST0 is alternate blocking
Port info      port id 128.1  priority 128  cost 20000
Designated root address 70db.98c3.df14  priority 32768  cost 0
Design. regional root address 70db.98c3.df14  priority 32768  cost 10000
Designated bridge address 70db.98c3.dfa0  priority 32768  port id 128.4
Timers: message expires in 5 sec, forward delay 0, forward transitions 0
Bpdus sent 27905, received 31061

GigabitEthernet1/0/2 of MST0 is root forwarding
Port info      port id 128.2  priority 128  cost 20000
Designated root address 70db.98c3.df14  priority 32768  cost 0
Design. regional root address 70db.98c3.df14  priority 32768  cost 0
Designated bridge address 70db.98c3.df14  priority 32768  port id 128.4
Timers: message expires in 5 sec, forward delay 0, forward transitions 1
Bpdus sent 27904, received 31070
```

```
##### MST2    vlans mapped: 100,126-128
Bridge        address f0b2.e556.e480 priority 32770 (32768 sysid 2)
Root          this switch for MST2

GigabitEthernet1/0/1 of MST2 is designated forwarding
Port info      port id 128.1 priority 128 cost 20000
Designated root address f0b2.e556.e480 priority 32770 cost 0
Designated bridge address f0b2.e556.e480 priority 32770 port id 128.1
Timers: message expires in 0 sec, forward delay 0, forward transitions 1
Bpdus (MRecords) sent 27905, received 31061

GigabitEthernet1/0/2 of MST2 is designated forwarding
Port info      port id 128.2 priority 128 cost 20000
Designated root address f0b2.e556.e480 priority 32770 cost 0
Designated bridge address f0b2.e556.e480 priority 32770 port id 128.2
Timers: message expires in 0 sec, forward delay 0, forward transitions 1
Bpdus (MRecords) sent 27904, received 31070

Switch#
```