



## Default Configuration at Startup

---

Cisco ships each Cisco ISR 1100 and ISR 1100X Series router from the factory with a default configuration, either for Cisco vEdge operating system or Cisco IOS XE. The default configuration file sets the default CLI prompt, configures OMP, and enables logging of syslog messages to a file.

### Smart Licensing

The default configurations include a command that relates to Cisco Smart Licensing. For information about Cisco Smart Licensing, see the [Cisco Smart Licensing Guide](#).

- [Cisco ISR1100-4G and Cisco ISR1100-6G Routers, Cisco vEdge Operating System, on page 1](#)
- [Cisco ISR1100-4GLTE Routers, Cisco vEdge Operating System, on page 3](#)
- [Cisco ISR1100-4G Routers, Cisco IOS XE, on page 5](#)
- [Cisco ISR1100-6G Routers, Cisco IOS XE, on page 6](#)
- [Cisco ISR1100-4GLTE Routers, Cisco IOS XE, on page 8](#)

## Cisco ISR1100-4G and Cisco ISR1100-6G Routers, Cisco vEdge Operating System

The following is the default configuration at start up for the following router models when ordered with Cisco vEdge operating system.

- Cisco ISR1100-4G
- Cisco ISR1100X-4G
- Cisco ISR1100-6G
- Cisco ISR1100X-6G



---

**Note** This information is provided for convenience. Default configurations are subject to change.

---

```
device# show running-config
system
host-name                vedge
```

```

admin-tech-on-failure
no route-consistency-check
vbond ztp.viptela.com

aaa

auth-order local radius tacacs

usergroup basic
  task system read write
  task interface read write
!

usergroup netadmin
!

usergroup operator
  task system read
  task interface read
  task policy read
  task routing read
  task security read
!

usergroup tenantadmin
!

user admin
  password
  $6$tebXK3g64cMdwjSp$kIbJ/qShDI4/eLQ0M8NlyCK7rlmsZAlnwGFqCVZc7rNlIE6f801Q6IuP4pHJinc8pSTNGAEYtoCAwDuAiGPF9/
!
!
logging
  disk
  enable
!
!
!
omp
no shutdown
graceful-restart
advertise connected
advertise static
!
security
ipsec
  authentication-type ah-sha1-hmac sha1-hmac
!
!
```

```

vpn 0
interface ge0/0
  ip dhcp-client
  ipv6 dhcp-client
  tunnel-interface
  encapsulation ipsec
  no allow-service bgp
  allow-service dhcp
  allow-service dns
  allow-service icmp
  no allow-service sshd
  no allow-service netconf
  no allow-service ntp
  no allow-service ospf
  no allow-service stun
  allow-service https
  !
no shutdown
!
!
vpn 512
!
```

## Cisco ISR1100-4GLTE Routers, Cisco vEdge Operating System

The following is the default configuration at start up for the following router models when ordered with Cisco vEdge operating system.

- Cisco ISR1100-4GLTENA
- Cisco ISR1100-4GLTEGB




---

**Note** This information is provided for convenience. Default configurations are subject to change.

---

```

Device# show running-config
system
  host-name                vedge
  admin-tech-on-failure
  no route-consistency-check
  vbond ztp.viptela.com
aaa
  auth-order local radius tacacs
  usergroup basic
    task system read write
    task interface read write
  !
  usergroup netadmin
  !
  usergroup operator
    task system read
    task interface read
    task policy read
    task routing read
    task security read
  !
  usergroup tenantadmin
  !
  user admin
```

```

password
$6$tebXK3g64cMdWjSp$kIbJ/qShDI4/eLQ0M8NlyCK7rlmsZAlnwGFqCVZc7rNlIE6f801Q6IuP4pHJinc8pSTNGAEYtoCAwDuAiGPF9/

!
!
logging
disk
enable
!
!
!
omp
no shutdown
graceful-restart
advertise connected
advertise static
!
security
ipsec
authentication-type ah-shal-hmac sha1-hmac
!
!
vpn 0
interface cellular0
ip dhcp-client
tunnel-interface
encapsulation ipsec
color lte
no allow-service bgp
allow-service dhcp
allow-service dns
allow-service icmp
no allow-service sshd
no allow-service netconf
no allow-service ntp
no allow-service ospf
no allow-service stun
allow-service https
!
mtu 1428
profile 0
technology auto
no shutdown
!
interface ge0/0
ip dhcp-client
ipv6 dhcp-client
tunnel-interface
encapsulation ipsec
no allow-service bgp
allow-service dhcp
allow-service dns
allow-service icmp
no allow-service sshd
no allow-service netconf
no allow-service ntp
no allow-service ospf
no allow-service stun
allow-service https
!
no shutdown
!
!

```

```
vpn 512
!
```

## Cisco ISR1100-4G Routers, Cisco IOS XE

The following is the default configuration at start up for the following router models when ordered with Cisco IOS XE.

- Cisco ISR1100-4G
- Cisco ISR1100X-4G




---

**Note** This information is provided for convenience. Default configurations are subject to change.

---

```
device# show sdwan running-config
system
  admin-tech-on-failure
  !
memory free low-watermark processor 68184
call-home
  contact-email-addr sch-smart-licensing@cisco.com
  profile CiscoTAC-1
  active
  destination transport-method http
  !
!
no service tcp-small-servers
no service udp-small-servers
platform qfp utilization monitor load 80
hostname Router
username admin privilege 15 secret 0 admin
no ip finger
no ip rcmd rcp-enable
no ip rcmd rsh-enable
no ip dhcp use class
ip ssh version 2
no ip http server
ip http secure-server
ip nat settings central-policy
ip nat settings gatekeeper-size 1024
interface GigabitEthernet0/0/0
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/1
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/2
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/3
  no shutdown
  negotiation auto
exit
aaa authentication enable default enable
aaa authentication login default local
```

```

aaa authorization console
aaa authorization exec default local
login on-success log
line aux 0
!
line con 0
  login authentication default
  speed 115200
  stopbits 1
!
line vty 0 4
  login authentication default
!
line vty 5 80
  login authentication default
!
sdwan
  appqoe
  no tcpopt enable
  no dreopt enable
!
omp
  no shutdown
  graceful-restart
  no as-dot-notation
  address-family ipv4
    advertise connected
    advertise static
  !
  address-family ipv6
    advertise connected
    advertise static
  !
!
!
security
  ipsec
    authentication-type ah-shal-hmac sha1-hmac
  !
!

```

## Cisco ISR1100-6G Routers, Cisco IOS XE

The following is the default configuration at start up for the following router models when ordered with Cisco IOS XE.

- Cisco ISR1100-6G
- Cisco ISR1100X-6G




---

**Note** This information is provided for convenience. Default configurations are subject to change.

---

```

device# show sdwan running-config
system
  admin-tech-on-failure
!
memory free low-watermark processor 68184
call-home

```

```
contact-email-addr sch-smart-licensing@cisco.com
profile CiscoTAC-1
  active
  destination transport-method http
!
!
no service tcp-small-servers
no service udp-small-servers
platform qfp utilization monitor load 80
hostname Router
username admin privilege 15 secret 0 admin
no ip finger
no ip rcmd rcp-enable
no ip rcmd rsh-enable
no ip dhcp use class
ip ssh version 2
no ip http server
ip http secure-server
ip nat settings central-policy
ip nat settings gatekeeper-size 1024
interface GigabitEthernet0/0/0
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/1
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/2
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/3
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/4
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/5
  no shutdown
  negotiation auto
exit
aaa authentication enable default enable
aaa authentication login default local
aaa authorization console
aaa authorization exec default local
login on-success log
line aux 0
!
line con 0
  login authentication default
  speed 115200
  stopbits 1
!
line vty 0 4
  login authentication default
!
line vty 5 80
  login authentication default
!
sdwan
appqoe
```

```

no tcpopt enable
no dreopt enable
!
omp
no shutdown
graceful-restart
no as-dot-notation
address-family ipv4
  advertise connected
  advertise static
!
address-family ipv6
  advertise connected
  advertise static
!
!
!
security
ipsec
  authentication-type ah-shal-hmac shal-hmac
!
!

```

## Cisco ISR1100-4GLTE Routers, Cisco IOS XE

The following is the default configuration at start up for the following router models when ordered with Cisco IOS XE.

- Cisco ISR1100-4GLTENA
- Cisco ISR1100-4GLTEGB




---

**Note** This information is provided for convenience. Default configurations are subject to change.

---

```

device# show sdwan running-config
system
  admin-tech-on-failure
!
memory free low-watermark processor 68304
call-home
  contact-email-addr sch-smart-licensing@cisco.com
  profile CiscoTAC-1
  active
  destination transport-method http
!
!
no service tcp-small-servers
no service udp-small-servers
platform qfp utilization monitor load 80
hostname Router
username admin privilege 15 secret 0 admin
controller Cellular 0/1/0
!
no ip finger
no ip rcmd rcp-enable
no ip rcmd rsh-enable
no ip dhcp use class
no ip http server

```



```
ip http secure-server
ip nat settings central-policy
ip nat settings gatekeeper-size 1024
interface GigabitEthernet0/0/0
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/1
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/2
  no shutdown
  negotiation auto
exit
interface GigabitEthernet0/0/3
  no shutdown
  negotiation auto
exit
interface Cellular0/1/0
  no shutdown
  ip address negotiated
  ipv6 enable
exit
interface Cellular0/1/1
  shutdown
  ip address negotiated
exit
aaa authentication enable default enable
aaa authentication login default local
aaa authorization console
aaa authorization exec default local
login on-success log
line aux 0
!
line con 0
  login authentication default
  stopbits 1
!
line vty 0 4
  login authentication default
!
line vty 5 80
  login authentication default
!
sdwan
  appqoe
  no tcptopt enable
!
  omp
  no shutdown
  graceful-restart
  no as-dot-notation
  address-family ipv4
    advertise connected
    advertise static
  !
  address-family ipv6
    advertise connected
    advertise static
  !
!
!
security
```

```
ipsec
 authentication-type ah-sha1-hmac sha1-hmac
!
```