



Configuring ERSPAN

This chapter describes how to configure an encapsulated remote switched port analyzer (ERSPAN) to transport mirrored traffic in an IP network on Cisco NX-OS devices.

- [About ERSPAN, on page 1](#)
- [Prerequisites for ERSPAN, on page 3](#)
- [Guidelines and Limitations for ERSPAN, on page 3](#)
- [Default Settings, on page 8](#)
- [Configuring ERSPAN, on page 8](#)
- [Verifying the ERSPAN Configuration, on page 24](#)
- [Configuration Examples for ERSPAN, on page 24](#)

About ERSPAN

ERSPAN transports mirrored traffic over an IPv4 or IPv6 network, which provides remote monitoring of multiple switches across your network. The traffic is encapsulated at the source router and is transferred across the network. The packet is decapsulated at the destination router and then sent to the destination interface. Another method is that the destination can be the analyzer itself, which needs to understand the ERSPAN encapsulation format to parse the packet and access the inner (SPAN copy) frame.

ERSPAN Sources

The interfaces from which traffic can be monitored are called ERSPAN sources. Sources designate the traffic to monitor and whether to copy ingress, egress, or both directions of traffic. ERSPAN sources include the following:

- Ethernet ports (but not subinterfaces)
- Port channels
- The inband interface to the control plane CPU



Note When you specify the supervisor inband interface as a SPAN source, the device monitors all packets that are sent by the Supervisor CPU.



Note If you use the supervisor inband interface as a SPAN source, all packets generated by the supervisor hardware (egress) are monitored.

Rx is from the perspective of the ASIC (traffic egresses from the supervisor over the inband and is received by the ASIC/SPAN).

- VLANs
 - When a VLAN is specified as an ERSPAN source, all supported interfaces in the VLAN are ERSPAN sources.
 - VLANs can be ERSPAN sources only in the ingress direction, except for Cisco Nexus 9300-EX/-FX/-FX2/-FX3/-GX series platform switches, and Cisco Nexus 9500 series platform switches with -EX/-FX line cards.



Note A single ERSPAN session can include mixed sources in any combination of the above.

ERSPAN Destination

Destination ports receive the copied traffic from ERSPAN sources. The destination port is a port that is connected to the device such as a Remote Monitoring (RMON) probe or security device that can receive and analyze the copied packets from single or multiple source port. Destination ports do not participate in any spanning tree instance or any Layer 3 protocols

Cisco Nexus 9200, 9300-EX, 9300-FX, and 9300-FX2 platform switches support an ERSPAN destination session configured on physical or port-channel interfaces in switchport mode through the use of GRE header traffic flow. The source IP address should be configured on the default VRF. Multiple ERSPAN destination sessions should be configured with the same source IP address.

ERSPAN Sessions

You can create ERSPAN sessions that designate sources to monitor.

Localized ERSPAN Sessions

An ERSPAN session is localized when all of the source interfaces are on the same line card.



Note An ERSPAN session with a VLAN source is not localized

ERSPAN Truncation

Beginning with Cisco NX-OS Release 7.0(3)I7(1), you can configure the truncation of source packets for each ERSPAN session based on the size of the MTU. Truncation helps to decrease ERSPAN bandwidth by

reducing the size of monitored packets. Any ERSPAN packet that is larger than the configured MTU size is truncated to the given size. For ERSPAN, an additional ERSPAN header is added to the truncated packet from 54 to 166 bytes depending on the ERSPAN header type. For example, if you configure the MTU as 300 bytes, the packets are replicated with an ERSPAN header size from 354 to 466 bytes depending on the ERSPAN header type configuration.

ERSPAN truncation is disabled by default. To use truncation, you must enable it for each ERSPAN session.

Prerequisites for ERSPAN

ERSPAN has the following prerequisites:

- You must first configure the ports on each device to support the desired ERSPAN configuration. For more information, see the Cisco Nexus 9000 Series NX-OS Interfaces Configuration Guide.

Guidelines and Limitations for ERSPAN



Note For scale information, see the release-specific *Cisco Nexus 9000 Series NX-OS Verified Scalability Guide*.

ERSPAN has the following configuration guidelines and limitations:

- A maximum of 48 source interfaces are supported per ERSPAN session (Rx and Tx, Rx, or Tx).
- ERSPAN destination handles jumbo frames for MTU differently based on the platform. For the following Cisco Nexus 9300 platform switches and Cisco Nexus 9500 platform switches with supporting line cards, ERSPAN destination drops the jumbo frames:
 - Cisco Nexus 9332PQ
 - Cisco Nexus 9372PX
 - Cisco Nexus 9372PX-E
 - Cisco Nexus 9372TX
 - Cisco Nexus 9372TX-E
 - Cisco Nexus 93120TX
 - Cisco Nexus 9500 platform switches with the following line cards:
 - Cisco Nexus 9564PX
 - Cisco Nexus 9464TX
 - Cisco Nexus 9464TX2
 - Cisco Nexus 9564TX
 - Cisco Nexus 9464PX
 - Cisco Nexus 9536PQ

Guidelines and Limitations for ERSPAN

- Cisco Nexus 9636PQ
- Cisco Nexus 9432PQ

For the following Cisco Nexus 9200 platform switches and Cisco Nexus 9500 platform switches with supporting line cards, ERSPAN truncates the packets at port MTU, and issues a TX Output error:

- Cisco Nexus 92160YC-X
- Cisco Nexus 92304QC
- Cisco Nexus 9272Q
- Cisco Nexus 9232C
- Cisco Nexus 9236C
- Cisco Nexus 92300YC
- Cisco Nexus 93108TC-EX
- Cisco Nexus 93180LC-EX
- Cisco Nexus 93180YC-EX
- Cisco Nexus 9500 platform switches with the following line cards:
 - Cisco Nexus 9736C-EX
 - Cisco Nexus 97160YC-EX
 - Cisco Nexus 9732C-EX
 - Cisco Nexus 9732C-EXM
- Using the ACL filter to ERSPAN subinterface traffic on the parent interface is not supported on the Cisco Nexus 9200 platform switches.
- Using the ACL filter to ERSPAN subinterface traffic on the parent interface is not supported on the Cisco Nexus 9300-EX/FX/FX2/FX3/GX platform switches.
- ERSPAN mirroring is not supported for PBR traffic.
- ERSPAN with a Type three header is not supported in Cisco NX-OS Release 9.3(3).
- For ERSPAN session limits, see the *Cisco Nexus 9000 Series NX-OS Verified Scalability Guide*.
- The number of ERSPAN sessions per line card reduces to two if the same interface is configured as a bidirectional source in more than one session.
- Configuring two SPAN or ERSPAN sessions on the same source interface with only one filter is not supported. If the same source is used in multiple SPAN or ERSPAN sessions either all the sessions must have different filters or no sessions should have filters.
- Beginning with Cisco NX-OS Release 9.3(5), the following ERSPAN features are supported on Cisco Nexus 9300-GX platform switch:
 - ERSPAN Type III Header
 - ERSPAN Destination Support

- Packets with FCS errors are not mirrored in an ERSPAN session.
- TCAM carving is not required for SPAN/ERSPAN on the following line cards:
 - Cisco Nexus 9636C-R
 - Cisco Nexus 9636Q-R
 - Cisco Nexus 9636C-RX
 - Cisco Nexus 96136YC-R
 - Cisco Nexus 9624D-R2



Note All other switches supporting SPAN/ERSPAN must use TCAM carving.

- Statistics are not supported for the filter access group.
- An access-group filter in an ERSPAN session must be configured as `vlan-accessmap`.
- Control plane packets that are generated by the Supervisor cannot be ERSPAN encapsulated or filtered by an ERSPAN access control list (ACL).
- ERSPAN is not supported for management ports.
- ERSPAN does not support destinations on Layer 3 port-channel subinterfaces.
- VLAN as a source is not supported with ERSPAN configuration on R-series linecards and N3K-C36180YC-R, N3KC36480LD-R2, and N3K-C3636C-R platform switches.
- A VLAN can be part of only one session when it is used as an ERSPAN source or filter.
- VLAN ERSPAN monitors only the traffic that leaves or enters Layer 2 ports in the VLAN.
- If you enable ERSPAN on a vPC and ERSPAN packets must be routed to the destination through the vPC, packets that come through the vPC peer link cannot be captured.
- ERSPAN is not supported over a VXLAN overlay.
- ERSPAN copies for multicast packets are made before rewrite. Therefore, the TTL, VLAN ID, any remarking due to egress policy, and so on, are not captured in the ERSPAN copy.
- The timestamp granularity of ERSPAN Type III sessions is not configurable through the CLI. It is 100 picoseconds and driven through PTP.
- ERSPAN works on default and nondefault VRFs, but ERSPAN marker packets work only on the default VRF.
- The same source can be part of multiple sessions.

The following guidelines and limitations apply to egress (Tx) ERSPAN:

- The flows for post-routed unknown unicast flooded packets are in the ERSPAN session, even if the ERSPAN session is configured to not monitor the ports on which this flow is forwarded. This limitation applies to Network Forwarding Engine (NFE) and NFE2-enabled EOR switches and ERSPAN sessions that have TX port sources.

Guidelines and Limitations for ERSPAN

- For ERSPAN Tx multicast for Layer 2, ERSPAN copies are created independent of multicast replication. Due to this, multicast and SPAN packet have different values for VLAN tag, which is the ingress interface VLAN ID.
- The following guidelines and limitations apply to ingress (Rx) ERSPAN:
 - VLAN sources are spanned only in the Rx direction.
 - Session filtering functionality (VLAN or ACL filters) is supported only for Rx sources.
 - VLANs are supported as ERSPAN sources only in the ingress direction.
- Priority flow control (PFC) ERSPAN has the following guidelines and limitations:
 - It cannot coexist with filters.
 - It is supported only in the Rx direction on physical or port-channel interfaces. It is not supported in the Rx direction on VLAN interfaces or in the Tx direction.
- The following guidelines and limitations apply to FEX ports:
 - If the sources used in bidirectional ERSPAN sessions are from the same FEX, the hardware resources are limited to two ERSPAN sessions.
 - FEX ports are supported as ERSPAN sources in the ingress direction for all traffic and in the egress direction only for known Layer 2 unicast traffic.
 - Cisco Nexus 9300 platform switches do not support ERSPAN destination being connected on a FEX interface. The ERSPAN destination must be connected to a front panel port.
 - VLAN and ACL filters are not supported for FEX ports. It cannot coexist with filters.
- The following guidelines and limitations apply to ERSPAN destination:
 - Cisco Nexus 9200, 9300-EX, 9300-FX, and 9300-FX2 platform switches support an ERSPAN destination session that is configured on physical or port-channel interfaces in switchport mode by using GRE header traffic flow.
 - ERSPAN destination cannot coexist with other tunnel features such as MPLS and VXLAN for Cisco Nexus 9200, 9300, 9300-EX, 9300-FX, and 9300-FX2 platform switches.
 - On Cisco Nexus 9300-GX switches, dot1q-tagged broadcast or multicast packets passing through a device where the ERSPAN destination session is active, get tagged with the native VLAN instead of the correct VLAN due to a hardware limitation.
 - ERSPAN destination supports only default VRF.
 - Cisco Nexus 9300-EX/FX switches cannot serve as an ERSPAN destination for Cisco Nexus 3000 and non-EX/FX Cisco Nexus 9000 switches.
- Beginning with Cisco NX-OS Release 10.1(2), ERSPAN is supported on the Cisco Nexus N9K-X9624D-R2 Line Card.
- The following guidelines and limitations apply to ERSPAN over IPv6:
 - Beginning with Cisco NX-OS Release 10.2(1)F, the ERSPAN over IPv6 feature is supported on Cisco Nexus 9300-GX2, 9300-GX, 9300-FXP, 9300-FX2, 9300-EX, 9300-FX3, 9300-FX3S, and

9300-FX3P platform switches and N9K-X9716D-GX, N9K-X9736C-EX, N9K-X9732C-EX(X86_64 Atom), N9K-X9732C-EXM, N9K-X97160YC-EX, and N9K-X9736C-FX line cards.

- This feature is not supported for Load balancing across egress port-channel members and egress ECMP path.
- This feature is not supported for header-type 3, udf in filter ACL, and marker-packets.
- This feature is not supported for FEX host interface as ERSPAN source with IPv6.
- Beginning with Cisco NX-OS Release 10.2(3)F, IPv6 is supported on ERSPAN destination/termination on Cisco Nexus 9300-GX2, 9300-GX, 9300-FXP, 9300-FX2, 9300-EX, 9300-FX3, 9300-FX3S, and 9300-FX3P platform switches and N9K-X9716D-GX, N9K-X9736C-EX, N9K-X9732C-EX(X86_64 Atom), N9K-X9732C-EXM, N9K-X97160YC-EX, and N9K-X9736C-FX line cards.
- The following guidelines and limitations are applicable:
 - Only VRF default is supported.
 - You can only have one IPv6 address per switch.
 - This feature is not supported with other tunnel features.
 - You can bring up four ERSPAN destination sessions at a time.
 - ERSPAN ID is unique per session and the range is 1–32.
- Beginning with Cisco NX-OS Release 10.3(1)F, ERSPAN is supported on Cisco Nexus 9808 platform switches.
 - Only RX is supported on ERSPAN.
 - Type 3 header is not supported.
 - ERSPAN destination/termination is not supported.
- Beginning with Cisco NX-OS Release 10.4(1)F, ERSPAN is supported on the following switches and line cards:
 - Cisco Nexus 9332D-H2R switch
 - Cisco Nexus 9804 switch
 - Type 3 header is not supported
 - ERSPAN destination/termination is not supported
 - Cisco Nexus X98900CD-A and X9836DM-A line cards with Cisco Nexus 9808 and 9804 switches
- Beginning with Cisco NX-OS Release 10.4(2)F, Cisco Nexus 9300-H2R platform switches supports SPAN on ACL drop in ingress direction for the ERSPAN source session.
- Beginning with Cisco NX-OS Release 10.4(2)F, Layer 3 Port-channel interface as ERSPAN source and destination is supported on 9804 and 9808 platform switches. However, the following guidelines and limitations are applicable:
 - Load balancing of mirrored traffic on port channel is not supported.

Default Settings

- Sharing of the same source port or interface across sessions is not supported.
- A maximum of 10 monitor sessions are supported at a time.
- 10 active ERSPAN sessions are supported at a time.
- ERSPAN MTU truncation is only supported for 343 bytes on 9804 and 9808 switches excluding FCS.
- ERSPAN Type 3 header is not supported.
- ERSPAN destination/termination is not supported.
- ERSPAN Layer 2 interface (switch port) and VLAN as source is not supported.
- UDF-based ERSPAN is not supported.
- ERSPAN mirrored packets do not have separate SPAN egress queue, they take the default queue.
- When port-channel interface (with more than one member port) is configured as ERSPAN destination, only one member interface is used for sending out mirrored traffic.
- The member selection is done in software, so there will be packet loss when membership changes.
- Beginning with Cisco NX-OS Release 10.4(2)F, ERSPAN is supported on Cisco Nexus 93400LD-H1 platform switch.
- Beginning with Cisco NX-OS Release 10.4(3)F, ERSPAN is supported on Cisco Nexus 9364C-H1 platform switch.

Default Settings

The following table lists the default settings for ERSPAN parameters.

Table 1: Default ERSPAN Parameters

Parameters	Default
ERSPAN sessions	Created in the shut state

Configuring ERSPAN



Note

Be aware that the Cisco NX-OS commands for this feature may differ from those commands used in Cisco IOS.

Configuring an ERSPAN Source Session

You can configure an ERSPAN session on the local device only. By default, ERSPAN sessions are created in the shut state.



Note ERSPAN does not monitor any packets that are generated by the supervisor, regardless of their source.

SUMMARY STEPS

1. **configure terminal**
2. **monitor erspan origin ip-address *ip-address* global** or **monitor erspan origin ipv6-address *ipv6-address* global**
3. **no monitor session {session-number | all}**
4. **monitor session {session-number | all} type erspan-source [shut]**
5. **description *description***
6. **source {interface type [tx | rx | both] vlan {number | range} [rx]}**
7. (Optional) Repeat Step 7 to configure all ERSPAN sources.
8. **filter vlan {number | range}**
9. (Optional) Repeat Step 9 to configure all source VLANs — to filter.
10. (Optional) **filter access-group *acl-filter***
11. **destination ip *ip-address***
12. **erspan-id *erspan-id***
13. **vrf *vrf-name***
14. (Optional) **ip ttl *ttl-number***
15. (Optional) **ip dscp *dscp-number***
16. **no shut**
17. **exit**
18. (Optional) **show monitor session {all | session-number | range *session-range*} [brief]**
19. (Optional) **show running-config monitor**
20. (Optional) **show startup-config monitor**
21. (Optional) **copy running-config startup-config**

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.

	Command or Action	Purpose
Step 2	monitor erspan origin ip-address <i>ip-address global</i> or monitor erspan origin ipv6-address <i>ipv6-address global</i> Example: <pre>switch(config)# monitor erspan origin ip-address 10.0.0.1 global switch(config)# monitor erspan origin ipv6-address 2001:DB8:1::1 global</pre>	Configures the ERSPAN global origin IPv4 or IPv6 address.
Step 3	no monitor session {<i>session-number</i> all} Example: <pre>switch(config)# no monitor session 3</pre>	Clears the configuration of the specified ERSPAN session. The new session configuration is added to the existing session configuration.
Step 4	monitor session {<i>session-number</i> all} type erspan-source [shut] Example: <pre>switch(config)# monitor session 3 type erspan-source switch(config-erspan-src) #</pre>	Configures an ERSPAN Type II source session. By default the session is bidirectional. The optional keyword shut specifies a shut state for the selected session.
Step 5	description <i>description</i> Example: <pre>switch(config-erspan-src) # description erspan_src_session_3</pre>	Configures a description for the session. By default, no description is defined. The description can be up to 32 alphanumeric characters.
Step 6	source {interface <i>type</i> [tx rx both] vlan {<i>number</i> range} [<i>rx</i>]} Example: <pre>switch(config-erspan-src) # source interface ethernet 2/1-3, ethernet 3/1 rx</pre> Example: <pre>switch(config-erspan-src) # source interface port-channel 2</pre> Example: <pre>switch(config-erspan-src) # source interface sup-eth 0 rx</pre> Example: <pre>switch(config-erspan-src) # source vlan 3, 6-8 rx</pre> Example: <pre>switch(config-erspan-src) # source interface etherent 10/1/1-3</pre>	Configures the sources and traffic direction in which to copy packets. You can enter a range of Ethernet ports, a port channel, an inband interface, a range of VLANs, or a satellite port or host interface port channel on the Cisco Nexus 2000 Series Fabric Extender (FEX). You can configure one or more sources, as either a series of comma-separated entries or a range of numbers. You can specify the traffic direction to copy as ingress, egress, or both. For a unidirectional session, the direction of the source must match the direction specified in the session. Note Source VLANs are supported only in the ingress direction. Source FEX ports are supported in the ingress direction for all traffic and in the egress direction only for known Layer 2 unicast traffic. Supervisor as a source is only supported in the Rx direction.
Step 7	(Optional) Repeat Step 7 to configure all ERSPAN sources.	—

	Command or Action	Purpose
Step 8	filter vlan {number range} Example: switch(config-erspan-src) # filter vlan 3-5, 7	Configures which VLANs to select from the configured sources. You can configure one or more VLANs, as either a series of comma-separated entries or a range of numbers. For information on the VLAN range, see the Cisco Nexus 9000 Series NX-OS Layer 2 Switching Configuration Guide. Note A FEX port that is configured as an ERSPAN source does not support VLAN filters.
Step 9	(Optional) Repeat Step 9 to configure all source VLANs — to filter.	—
Step 10	(Optional) filter access-group acl-filter Example: switch(config-erspan-src) # filter access-group ACL1	Associates an ACL with the ERSPAN session. (You can create an ACL using the standard ACL configuration process. For more information, see the <i>Cisco Nexus 9000 Series NX-OS Security Configuration Guide</i> .) Note Before executing this command, configure ip access list and associated vlan access map. See Configuring an ERSPAN ACL .
Step 11	destination ip ip-address Example: switch(config-erspan-src) # destination ip 10.1.1.1 switch(config-erspan-src) # destination ipv6 2001:DB8:1::1	destination ipv6 ipv6-address Configures the destination IPv4 or IPv6 address in the ERSPAN session. Note Only one destination IPv4 or IPv6 address is supported per ERSPAN source session.
Step 12	erspan-id erspan-id Example: switch(config-erspan-src) # erspan-id 5	Configures the ERSPAN ID for the ERSPAN source session. The ERSPAN range is from 1 to 1023.
Step 13	vrf vrf-name Example: switch(config-erspan-src) # vrf default	Configures the virtual routing and forwarding (VRF) instance that the ERSPAN source session uses for traffic forwarding. The VRF name can be any case-sensitive, alphanumeric string up to 32 characters.
Step 14	(Optional) ip ttl ttl-number Example: switch(config-erspan-src) # ip ttl 25	Configures the IP time-to-live (TTL) value for the ERSPAN traffic. The range is from 1 to 255.
Step 15	(Optional) ip dscp dscp-number Example: switch(config-erspan-src) # ip dscp 42	Configures the differentiated services code point (DSCP) value of the packets in the ERSPAN traffic. The range is from 0 to 63.

Shutting Down or Activating an ERSPAN Session

	Command or Action	Purpose
Step 16	no shut Example: switch(config-erspan-src) # no shut	Enables the ERSPAN source session. By default, the session is created in the shut state.
Step 17	exit Example: switch(config-erspan-src) # exit switch(config) #	Exits the monitor configuration mode.
Step 18	(Optional) show monitor session {all session-number range session-range} [brief] Example: switch(config) # show monitor session 3	Displays the ERSPAN session configuration.
Step 19	(Optional) show running-config monitor Example: switch(config) # show running-config monitor	Displays the running ERSPAN configuration.
Step 20	(Optional) show startup-config monitor Example: switch(config) # show startup-config monitor	Displays the ERSPAN startup configuration.
Step 21	(Optional) copy running-config startup-config Example: switch(config) # copy running-config startup-config	Copies the running configuration to the startup configuration.

Shutting Down or Activating an ERSPAN Session

You can shut down ERSPAN sessions to discontinue the copying of packets from sources to destinations. You can shut down one session in order to free hardware resources to enable another session. By default, ERSPAN sessions are created in the shut state.

You can enable ERSPAN sessions to activate the copying of packets from sources to destinations. To enable an ERSPAN session that is already enabled but operationally down, you must first shut it down and then enable it. You can shut down and enable the ERSPAN session states with either a global or monitor configuration mode command.

SUMMARY STEPS

1. **configure terminal**
2. **monitor session {session-range | all} shut**
3. **no monitor session {session-range | all} shut**
4. **monitor session session-number type erspan-source**
5. **shut**
6. **no shut**
7. **exit**

8. (Optional) **show monitor session all**
9. (Optional) **show running-config monitor**
10. (Optional) **show startup-config monitor**
11. (Optional) **copy running-config startup-config**

DETAILED STEPS**Procedure**

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	monitor session {session-range all} shut Example: switch(config)# monitor session 3 shut	Shuts down the specified ERSPAN sessions. By default, sessions are created in the shut state.
Step 3	no monitor session {session-range all} shut Example: switch(config)# no monitor session 3 shut	Resumes (enables) the specified ERSPAN sessions. By default, sessions are created in the shut state. If a monitor session is enabled but its operational status is down, then to enable the session, you must first specify the monitor session shut command followed by the no monitor session shut command.
Step 4	monitor session session-number type erspan-source Example: switch(config)# monitor session 3 type erspan-source switch(config-erspan-src) #	Enters the monitor configuration mode for the ERSPAN source type. The new session configuration is added to the existing session configuration.
Step 5	shut Example: switch(config-erspan-src) # shut	Shuts down the ERSPAN session. By default, the session is created in the shut state.
Step 6	no shut Example: switch(config-erspan-src) # no shut	Enables the ERSPAN session. By default, the session is created in the shut state.
Step 7	exit Example: switch(config-erspan-src) # exit switch(config) #	Exits the monitor configuration mode.
Step 8	(Optional) show monitor session all Example:	Displays the status of ERSPAN sessions.

Configuring an ERSPAN ACL

	Command or Action	Purpose
	switch(config)# show monitor session all	
Step 9	(Optional) show running-config monitor Example: switch(config)# show running-config monitor	Displays the ERSPAN running configuration.
Step 10	(Optional) show startup-config monitor Example: switch(config)# show startup-config monitor	Displays the ERSPAN startup configuration.
Step 11	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Configuring an ERSPAN ACL

You can create an IPv4 ERSPAN ACL on the device and add rules to it.

Before you begin

To modify the DSCP value or the GRE protocol, you need to allocate a new destination monitor session. A maximum of four destination monitor sessions are supported.

SUMMARY STEPS

1. **configure terminal**
2. **ip access-list *acl-name***
3. **[sequence-number] {permit | deny} protocol source destination [set-erspan-dscp *dscp-value*] [set-erspan-gre-proto *protocol-value*]**
4. **vlan access-map erpsan-acl *map name* [sequence-number]**
5. **match ip address *acl-name***
6. **action forward**
7. **exit**
8. **monitor session [session-number| all] type erspan-source [shut]**
9. **filter access_group *name***
10. (Optional) **copy running-config startup-config**

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example:	Enters global configuration mode.

	Command or Action	Purpose
	switch# configure terminal switch(config)#	
Step 2	ip access-list <i>acl-name</i> Example: switch(config)# ip access-list erspan-acl switch(config-acl)#	Creates the ERSPAN ACL and enters IP ACL configuration mode. The <i>acl-name</i> argument can be up to 64 characters.
Step 3	[<i>sequence-number</i>] { permit deny } <i>protocol source destination [set-erspan-dscp dscp-value] [set-erspan-gre-proto protocol-value]</i> Example: switch(config-acl)# permit ip 192.168.2.0/24 any set-erspan-dscp 40 set-erspan-gre-proto 5555 Example: switch(config)# ip access-list match_11_pkts switch(config-acl)# permit ip 10.0.0.0/24 any switch(config-acl)# exit	Creates a rule in the ERSPAN ACL. You can create many rules. The <i>sequence-number</i> argument can be a whole number between 1 and 4294967295. The permit and deny commands support many ways of identifying traffic. The set-erspan-dscp option sets the DSCP value in the ERSPAN outer IP header. The range for the DSCP value is from 0 to 63. The DSCP value configured in the ERSPAN ACL overrides the value configured in the monitor session. If you do not include this option in the ERSPAN ACL, 0 or the DSCP value configured in the monitor session will be set. The set-erspan-gre-proto option sets the protocol value in the ERSPAN GRE header. The range for the protocol value is from 0 to 65535. If you do not include this option in the ERSPAN ACL, the default value of 0x88be will be set as the protocol in the GRE header for ERSPAN-encapsulated packets. Each access control entry (ACE) with the set-erspan-gre-proto or set-erspan-dscp action consumes one destination monitor session. A maximum of three ACEs with one of these actions is supported per ERSPAN ACL. For example, you can configure one of the following: <ul style="list-style-type: none">• One ERSPAN session with an ACL having a maximum of three ACEs with the set-erspan-gre-proto or set-erspan-dscp action• One ERSPAN session with an ACL having two ACEs with the set-erspan-gre-proto or set-erspan-dscp action and one additional local or ERSPAN session• A maximum of two ERSPAN sessions with an ACL having one ACE with the set-erspan-gre-proto or set-erspan-dscp action

Verifying ERSPAN ACL Configuration

	Command or Action	Purpose
Step 4	vlan access-map erpsan-acl map name [sequence-number] Example: <pre>switch(config)# vlan access-map erspan_filter</pre>	Enters VLAN access-map configuration mode for the VLAN access map specified. If the VLAN access map does not exist, the device creates it. If you do not specify a sequence number, the device creates a new entry whose sequence number is 10 greater than the last sequence number in the access map.
Step 5	match ip address acl-name Example: <pre>switch(config-access-map)# match ip address erspan-acl</pre>	Specifies an ACL for the access-map entry.
Step 6	action forward Example: <pre>switch(config-access-map)# action forward</pre>	Specifies the action that the device applies to traffic that matches the ACL.
Step 7	exit Example: <pre>switch(config-access-map)# exit</pre>	Exits VLAN access-map configuration mode.
Step 8	monitor session [session-number all] type erspan-source [shut] Example: <pre>switch(config)# monitor session 1 type erspan-source</pre>	Configures an ERSPAN Type II source session. By default, the session is bidirectional. The optional keyword shut specifies a shut state for the selected session.
Step 9	filter access_group name Example: <pre>switch(config-erspan-src)# filter access_group erspan_filter</pre>	Associates an ACL with the ERSPAN session. (You can create an ACL using the standard ACL configuration process. For more information, see <i>Cisco Nexus 9000 Series NX-OS Security Configuration Guide</i> .)
Step 10	(Optional) copy running-config startup-config Example: <pre>switch(config-acl)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

Verifying ERSPAN ACL Configuration

To display the ERSPAN ACL configuration, execute the appropriate show commands from the following table.

Command	Purpose
show ip access-lists name Example: <pre>switch(config-acl)# show ip access-lists erspan-acl</pre>	Displays the ERSPAN ACL configuration.

Command	Purpose
show vlan access-map name Example: <pre>switch(config-acl) # show vlan access-map erspan_filter</pre>	Displays information about VLAN access maps.
show monitor session {all session-number range session-range} [brief] Example: <pre>switch(config-acl) # show monitor session 1</pre>	Displays the ERSPAN session configuration.

Configuring UDF-Based ERSPAN

You can configure the device to match on user-defined fields (UDFs) of the outer or inner packet fields (header or payload) and to send the matching packets to the ERSPAN destination. Doing so can help you to analyze and isolate packet drops in the network.

Before you begin

Make sure that the appropriate TCAM region (racl, ifacl, or vacl) has been configured using the **hardware access-list tcam region** command to provide enough free space to enable UDF-based ERSPAN. For information, see the "Configuring ACL TCAM Region Sizes" section in the Cisco Nexus 9000 Series NX-OS Security Configuration Guide.

SUMMARY STEPS

1. **configure terminal**
2. **udf udf-name offset-base offset length**
3. **hardware access-list tcam region {racl | ifacl | vacl }qualify udf udf-names**
4. **copy running-config startup-config**
5. **reload**
6. **ip access-list erspan-acl**
7. Enter one of the following commands:
 - **permit udf udf-name value mask**
 - **permit ip source destination udf udf-name value mask**
8. (Optional) **copy running-config startup-config**

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example:	Enters global configuration mode.

	Command or Action	Purpose
	switch# configure terminal switch(config) #	
Step 2	udf udf-name offset-base offset length Example: switch(config) # udf udf-x packet-start 12 1 switch(config) # udf udf-y header outer 13 20 2	Defines the UDF as follows: <ul style="list-style-type: none">• <i>udf-name</i>—Specifies the name of the UDF. You can enter up to 16 alphanumeric characters for the name.• <i>offset-base</i>—Specifies the UDF offset base as follows, where header is the packet header to consider for the offset: packet-start header {outer inner {13 14}}.• <i>offset</i>—Specifies the number of bytes offset from the offset base. To match the first byte from the offset base (Layer 3/Layer 4 header), configure the offset as 0.• <i>length</i>—Specifies the number of bytes from the offset. Only 1 or 2 bytes are supported. To match additional bytes, you must define multiple UDFs. You can define multiple UDFs, but Cisco recommends defining only required UDFs.
Step 3	hardware access-list tcam region {racl ifacl vacl }qualify udf udf-names Example: switch(config) # hardware access-list tcam region racl qualify udf udf-x udf-y	Attaches the UDFs to one of the following TCAM regions: <ul style="list-style-type: none">• racl—Applies to Layer 3 ports.—Applies to layer 2 and Layer 3 ports.• ifacl—Applies to Layer 2 ports.• vacl—Applies to source VLANs. You can attach up to 8 UDFs to a TCAM region. Note When the UDF qualifier is added, the TCAM region goes from single wide to double wide. Make sure enough free space is available; otherwise, this command will be rejected. If necessary, you can reduce the TCAM space from unused regions and then re-enter this command. For more information, see the "Configuring ACL TCAM Region Sizes" section in the Cisco Nexus 9000 Series NX-OS Security Configuration Guide.
Step 4	Required: copy running-config startup-config Example: switch(config) # copy running-config startup-config	Saves the change persistently through reboots and restarts by copying the running configuration to the startup configuration.
Step 5	Required: reload	Reloads the device.

	Command or Action	Purpose
	Example: switch(config)# reload	Note Your UDF configuration is effective only after you enter copy running-config startup-config + reload .
Step 6	ip access-list erspan-acl Example: switch(config)# ip access-list erspan-acl-udf-only switch(config-acl)#	Creates an IPv4 access control list (ACL) and enters IP access list configuration mode.
Step 7	Enter one of the following commands: <ul style="list-style-type: none"> • permit udf udf-name value mask • permit ip source destination udf udf-name value mask Example: switch(config-acl)# permit udf udf-x 0x40 0xF0 udf-y 0x1001 0xFOOF Example: switch(config-acl)# permit ip 10.0.0.0/24 any udf udf-x 0x02 0x0F udf-y 0x1001 0xFOOF	Configures the ACL to match only on UDFs (example 1) or to match on UDFs along with the current access control entries (ACEs) for the outer packet fields (example 2). A single ACL can have ACEs with and without UDFs together. Each ACE can have different UDF fields to match, or all ACEs can match for the same list of UDFs.
Step 8	(Optional) copy running-config startup-config Example: switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Configuring ERSPAN Truncation

You can configure truncation for local and ERSPAN source sessions only.

SUMMARY STEPS

1. **configure terminal**
2. **monitor session *session-number* type erspan-source**
3. **source interface *type slot/port [rx | tx | both]***
4. **mtu *size***
5. **destination interface *type slot/port***
6. **no shut**
7. (Optional) **show monitor session *session***
8. **copy running-config startup-config**

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: <pre>switch# configure terminal switch(config) #</pre>	Enters global configuration mode.
Step 2	monitor session <i>session-number</i> type erspan-source Example: <pre>switch(config) # monitor session 10 type erspan-source switch(config-erspan-src) #</pre>	Enters monitor configuration mode for the specified ERSPAN session.
Step 3	source interface <i>type slot/port [rx tx both]</i> Example: <pre>switch(config-erspan-src) # source interface ethernet 1/5 both</pre>	Configures the source interface.
Step 4	mtu <i>size</i> Example: <pre>switch(config-erspan-src) # mtu 512</pre> Example: <pre>switch(config-erspan-src) # mtu ? <512-1518> Enter the value of MTU truncation size for ERSPAN packets (erspan header + truncated original packet)</pre>	Configures the MTU size for truncation. Any ERSPAN packet that is larger than the configured MTU size is truncated to the configured size. The MTU ranges for ERSPAN packet truncation are: <ul style="list-style-type: none"> The MTU size range is 512 to 1518 bytes for Cisco Nexus 9300-EX Series switches. The MTU size range is 64 to 1518 bytes for Cisco Nexus 9300-FX Series switches. The MTU size range is 512 to 1518 bytes for Cisco Nexus 9500 platform switches with 9700-EX and 9700-FX line cards. The MTU size is 343 bytes (excluding FCS) for Cisco Nexus 9808 and 9804 platform switches.
Step 5	destination interface <i>type slot/port</i> Example: <pre>switch(config-erspan-src) # destination interface Ethernet 1/39</pre>	Configures the Ethernet ERSPAN destination port.
Step 6	no shut Example: <pre>switch(config-erspan-src) # no shut</pre>	Enables the ERSPAN session. By default, the session is created in the shut state.
Step 7	(Optional) show monitor session <i>session</i> Example: <pre>switch# show monitor session 10</pre>	Displays the ERSPAN configuration.

	Command or Action	Purpose
	switch(config-erspan-src) # show monitor session 5	
Step 8	copy running-config startup-config Example: <pre>switch(config-erspan-src) # copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

Configuring an ERSPAN Destination Session

You can configure a ERSPAN destination session to copy packets from a source IP address to destination ports on the local device. By default, ERSPAN destination sessions are created in the shut state.

Before you begin

Ensure that you have already configured the destination ports in switchport monitor mode.

SUMMARY STEPS

1. **configure terminal**
2. **interface ethernet slot/port[-port]**
3. **switchport**
4. **switchport mode [access | trunk]**
5. **switchport monitor**
6. Repeat Steps 2 to 5 to configure monitoring on additional ERSPAN destinations.
7. **no monitor session {session-number | all};**
8. **monitor session {session-number | all} type erspan-destination**
9. **description description**
10. **source ip ip-address**
11. **destination {[interface [type slot/port[-port]]] [port-channel channel-number]} {**
12. (Optional) Repeat Step 11 to configure all ERSPAN destinations.
13. **erspan-id erspan-id**
14. **no shut**
15. **exit**
16. **exit**
17. (Optional) **show monitor session {all | session-number | range session-range}**
18. (Optional) **show running-config monitor**
19. (Optional) **show startup-config monitor**
20. (Optional) **copy running-config startup-config**

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: switch# configure terminal switch(config)#	Enters global configuration mode.
Step 2	interface ethernet slot/port[-port] Example: switch(config)# interface ethernet 2/5 switch(config-if)#	Enters interface configuration mode on the selected slot and port or range of ports.
Step 3	switchport Example: switch(config-if)# switchport	Configures switchport parameters for the selected slot and port or range of ports.
Step 4	switchport mode [access trunk] Example: switch(config-if)# switchport mode trunk	Configures the following switchport modes for the selected slot and port or range of ports: <ul style="list-style-type: none">• access• trunk
Step 5	switchport monitor Example: switch(config-if)# switchport monitor	Configures the switchport interface as an ERSPAN destination.
Step 6	Repeat Steps 2 to 5 to configure monitoring on additional ERSPAN destinations.	—
Step 7	no monitor session {session-number all} Example: switch(config-if)# no monitor session 3	Clears the configuration of the specified ERSPAN session. The new session configuration is added to the existing session configuration.
Step 8	monitor session {session-number all} type erspan-destination Example: switch(config-if)# monitor session 3 type erspan-destination switch(config-erspan-dst) #	Configures an ERSPAN destination session.
Step 9	description description Example: switch(config-erspan-dst) # description erspan_dst_session_3	Configures a description for the session. By default, no description is defined. The description can be up to 32 alphanumeric characters.

	Command or Action	Purpose
Step 10	source ip <i>ip-address</i> Example: <pre>switch(config-erspan-dst) # source ip 10.1.1.1 switch(config-erspan-dst) # source ipv6 2001:DB8:1::1</pre>	source ipv6 <i>ipv6-address</i> Configures the source IPv4 or IPv6 address in the ERSPAN session. The source IPv4 or IPv6 address is a locally configured IPv4 or IPv6 address. The source IPv4 or IPv6 address in an ERSPAN destination session must match the destination IPv4 or IPv6 address configured in the ERSPAN source session from which the encapsulated data is received. Only one source IPv4 or IPv6 address is supported per ERSPAN destination session. Note IPv6 is supported from Cisco NX-OS Release 10.2(3)F.
Step 11	destination {[interface [type slot/port[-port]]] [port-channel channel-number]}} Example: <pre>switch(config-erspan-dst) # destination interface ethernet 2/5</pre>	Configures a destination for copied source packets. You can configure a destination interface. Note You can configure destination ports as trunk ports.
Step 12	(Optional) Repeat Step 11 to configure all ERSPAN destinations.	—
Step 13	erspan-id <i>erspan-id</i> Example: <pre>switch(config-erspan-dst) # erspan-id 5</pre>	Configures the ERSPAN ID for the ERSPAN session. The range is from 1 to 1023.
Step 14	no shut Example: <pre>switch(config-erspan-dst) # no shut</pre>	Enables the ERSPAN destination session. By default, the session is created in the shut state.
Step 15	exit Example: <pre>switch(config-erspan-dst) # exit</pre>	Exits monitor configuration mode.
Step 16	exit Example: <pre>switch(config) # exit</pre>	Exits global configuration mode.
Step 17	(Optional) show monitor session {all session-number range session-range} Example: <pre>switch(config) # show monitor session 3</pre>	Displays the ERSPAN session configuration.
Step 18	(Optional) show running-config monitor Example: <pre>switch(config-erspan-src) # show running-config monitor</pre>	Displays the running ERSPAN configuration.

	Command or Action	Purpose
Step 19	(Optional) show startup-config monitor Example: switch(config-erspan-src)# show startup-config monitor	Displays the ERSPAN startup configuration.
Step 20	(Optional) copy running-config startup-config Example: switch(config-erspan-src)# copy running-config startup-config	Copies the running configuration to the startup configuration.

Verifying the ERSPAN Configuration

To display the ERSPAN configuration, perform one of the following tasks:

Command	Purpose
show monitor session {all session-number range session-range} [brief]	Displays the ERSPAN session configuration.
show running-config monitor	Displays the running ERSPAN configuration.
show startup-config monitor	Displays the ERSPAN startup configuration.
show monitor session [session-id all] stats	Displays the ERSPAN session stats for Cisco Nexus 9808 and 9804 platform switches.
clear monitor session [session-id all] stats [both rx tx]	Clears the ERSPAN session stats for Cisco Nexus 9808 and 9804 platform switches.

Configuration Examples for ERSPAN

Configuration Example for an ERSPAN Source Session Over IPv6

This example shows how to configure an ERSPAN source session over IPv6:

```
switch# configure terminal
switch(config)# monitor erspan origin ipv6-address 2001::10:0:0:9 global
switch(config)# moni session 10 type erspan-source
switch(config-erspan-src)# erspan-id 10
switch(config-erspan-src)# vrf default
switch(config-erspan-src)# source interface ethernet 1/64
switch(config-erspan-src)# destination ip 10.1.1.2
```

Configuration Example for a Unidirectional ERSPAN Session

This example shows how to configure a unidirectional ERSPAN session:

```

switch# configure terminal
switch(config)# interface ethernet 14/30
switch(config-if)# no shut
switch(config-if)# exit
switch(config)# no monitor session 3
switch(config)# monitor session 3 rxswitch(config-erspan-src)# source interface ethernet
2/1-3 rx
switch(config-erspan-src)# erspan-id 1
switch(config-erspan-src)# ip ttl 16
switch(config-erspan-src)# ip dscp 5
switch(config-erspan-src)# vrf default
switch(config-erspan-src)# destination ip 10.1.1.2
switch(config-erspan-src)# no shut
switch(config-erspan-src)# exit
switch(config)# show monitor session 1

```

Configuration Example for an ERSPAN ACL

This example shows how to configure an ERSPAN ACL:

```

switch# configure terminal
switch(config)# ip access-list match_10_pkts
switch(config-acl)# permit ip 10.0.0.0/24 any
switch(config-acl)# exit
switch(config)# ip access-list match_172_pkts
switch(config-acl)# permit ip 172.16.0.0/24 any
switch(config-acl)# exit

switch# configure terminal
switch(config)# ip access-list match_11_pkts
switch(config-acl)# permit ip 11.0.0.0 0.255.255.255 any
switch(config-acl)# exit
switch(config)# ip access-list match_12_pkts
switch(config-acl)# permit ip 12.0.0.0 0.255.255.255 any
switch(config-acl)# exit
switch(config)# vlan access-map erspan_filter 5
switch(config-access-map)# match ip address match_11_pkts
switch(config-access-map)# action forward
switch(config-access-map)# exit
switch(config)# vlan access-map erspan_filter 10
switch(config-access-map)# match ip address match_12_pkts
switch(config-access-map)# action forward
switch(config-access-map)# exit
switch(config)# monitor session 1 type erspan-source
switch(config-erspan-src)# filter access_group erspan_filter

```

In the case of different ERSPAN destinations where the interesting traffic is chosen based on the defined ACL filters, the last configured session would always have the higher priority.

For example, if Monitor Session 1 is configured; then Monitor Session 2 is configured; then ERSPAN traffic filter works as intended. But, if the user goes back to Monitor Session 1 and re-applies one of the existing configuration line (no new changes in the config); then the spanned traffic switches back to Monitor Session 1.

Configuration Example for a Marker Packet

This example shows how to enable the ERSPAN marker packet with an interval of 2 seconds:

```

switch# configure terminal
switch(config)# monitor erspan origin ip-address 172.28.15.250 global

```

Configuration Examples for UDF-Based ERSPAN

```

switch(config)# monitor session 1 type erspan-source
switch(config-erspan-src)# header-type 3
switch(config-erspan-src)# erspan-id 1
switch(config-erspan-src)# ip ttl 16
switch(config-erspan-src)# ip dscp 5
switch(config-erspan-src)# vrf default
switch(config-erspan-src)# destination ip 10.1.1.2
switch(config-erspan-src)# source interface ethernet 1/15 both
switch(config-erspan-src)# marker-packet 100
switch(config-erspan-src)# no shut
switch(config-erspan-src)# show monitor session 1
session 1
-----
type          : erspan-source
state         : up
granularity   : nanoseconds
erspan-id     : 1
vrf-name      : default
destination-ip: 10.1.1.2
ip-ttl        : 16
ip-dscp       : 5
header-type   : 3
origin-ip     : 172.28.15.250 (global)
source intf   :
    rx        : Eth1/15
    tx        : Eth1/15
    both      : Eth1/15
    rx        :
marker-packet: enabled
packet interval: 100
packet sent   : 25
packet failed : 0
egress-intf   :

```

Configuration Examples for UDF-Based ERSPAN

This example shows how to configure UDF-based ERSPAN to match on the inner TCP flags of an encapsulated IP-in-IP packet using the following match criteria:

- Outer source IP address: 10.0.0.2
- Inner TCP flags: Urgent TCP flag is set
- Bytes: Eth Hdr (14) + Outer IP (20) + Inner IP (20) + Inner TCP (20, but TCP flags at 13th byte)
- Offset from packet-start: $14 + 20 + 20 + 13 = 67$
- UDF match value: 0x20
- UDF mask: 0xFF

```

udf udf_tcpflags packet-start 67 1
hardware access-list tcam region racl qualify udf udf_tcpflags
copy running-config startup-config
reload
ip access-list acl-udf
permit ip 10.0.0.2/32 any udf udf_tcpflags 0x20 0xff
monitor session 1 type erspan-source
source interface Ethernet 1/1
filter access-group acl-udf

```

This example shows how to configure UDF-based ERSPAN to match regular IP packets with a packet signature (DEADBEEF) at 6 bytes after a Layer 4 header start using the following match criteria:

- Outer source IP address: 10.0.0.2
- Inner TCP flags: Urgent TCP flag is set
- Bytes: Eth Hdr (14) + IP (20) + TCP (20) + Payload: 112233445566DEADBEEF7788
- Offset from Layer 4 header start: $20 + 6 = 26$
- UDF match value: 0xDEADBEEF (split into two-byte chunks and two UDFs)
- UDF mask: 0xFFFFFFFF

```
udf udf_pktsig_msb header outer 13 26 2
udf udf_pktsig_lsb header outer 13 28 2
hardware access-list tcam region racl qualify udf udf_pktsig_msb udf_pktsig_lsb
copy running-config startup-config
reload
ip access-list acl-udf-pktsig
permit udf udf_pktsig_msb 0xDEAD 0xFFFF udf udf_pktsig_lsb 0xBEEF 0xFFFF
monitor session 1 type erspan-source
source interface Ethernet 1/1
filter access-group acl-udf-pktsig
```

Configuration Example for ERSPAN Truncation

This example shows how to configure ERSPAN truncation for use with MPLS stripping:

```
mpls strip
ip access-list mpls
  statistics per-entry
  20 permit ip any any redirect Ethernet1/5

interface Ethernet1/5
  switchport
  switchport mode trunk
  mtu 9216
  no shutdown

  monitor session 1
    source interface Ethernet1/5 tx
    mtu 64
    destination interface Ethernet1/6
    no shut
  monitor session 21 type erspan-source
    description "ERSPAN Session 21"
    header-type 3
    erspan-id 21
    vrf default
    destination ip 10.1.1.2
    source interface Ethernet1/5 tx
    mtu 64
    no shut
  monitor session 22 type erspan-source
    description "ERSPAN Session 22"
    erspan-id 22
    vrf default
    destination ip 10.2.1.2
    source interface Ethernet1/5 tx
```

Configuration Example for an ERSPAN Destination Session Over IPv4

```

mtu 750
no shut
monitor session 23 type erspan-source
description "ERSPAN Session 23"
header-type 3
marker-packet 1000
erspan-id 23
vrf default
destination ip 10.3.1.2
source interface Ethernet1/5 tx
mtu 1000
no shut

```

Configuration Example for an ERSPAN Destination Session Over IPv4

This example shows how to configure an ERSPAN destination session over IPv4:

```

switch# config t
switch(config)# interface e14/29
switch(config-if)# no shut
switch(config-if)# switchport
switch(config-if)# switchport monitor
switch(config-if)# exit
switch(config)# monitor session 2 type erspan-destination
switch(config-erspan-dst)# source ip 9.1.1.2
switch(config-erspan-dst)# destination interface e14/29
switch(config-erspan-dst)# erspan-id 1
switch(config-erspan-dst)# vrf default
switch(config-erspan-dst)# no shut
switch(config-erspan-dst)# exit
switch(config)# show monitor session 2

switch# config t
switch(config)# interface e14/29
switch(config-if)# no shut
switch(config-if)# switchport
switch(config-if)# switchport monitor
switch(config-if)# exit
switch(config)# monitor session 2 type erspan-destination
switch(config-erspan-dst)# source ip 9.1.1.2
switch(config-erspan-dst)# destination interface e14/29
switch(config-erspan-dst)# no shut
switch(config-erspan-dst)# exit
switch(config)# show monitor session 2

switch# config t
switch(config)# interface e14/29
switch(config-if)# no shut
switch(config-if)# switchport
switch(config-if)# switchport monitor
switch(config-if)# exit
switch(config)# monitor session 2 type erspan-destination
switch(config-erspan-dst)# source ip 9.1.1.2
switch(config-erspan-dst)# destination interface e14/29
switch(config-erspan-src)# erspan-id 1
switch(config-erspan-dst)# no shut
switch(config-erspan-dst)# exit
switch(config)# show monitor session 2

```

The **destination interface eth1/1** is in switchport monitor mode. This interface can not co-exist with mpls strip, tunnel, nv overlay, vn-segment-vlan-based, mpls segment-routing, mpls evpn, mpls static, mpls oam, mpls l3vpn , mpls ldp, and nv overlay evpn features.

```
switch# monitor session 1 type erspan-destination
switch(config)# erspan-id 1
switch(config-erspan-dst)# source ip 10.1.1.1
switch(config-erspan-dst)# destination interface eth1/1
switch(config-erspan-dst)# no shut
switch(config-erspan-dst)# exit
```

Configuration Example for an ERSPAN Destination Session Over IPv6

This example shows how to configure an ERSPAN destination session over IPv6:

The **destination interface eth1/1** is in switchport monitor mode. This interface can not co-exist with mpls strip, tunnel, nv overlay, vn-segment-vlan-based, mpls segment-routing, mpls evpn, mpls static, mpls oam, mpls l3vpn , mpls ldp, and nv overlay evpn features.

```
switch# monitor session 1 type erspan-destination
switch(config)# erspan-id 1
switch(config-erspan-dst)# source ipv6 2001:DB8:1::1
switch(config-erspan-dst)# destination interface eth1/1
switch(config-erspan-dst)# no shut
switch(config-erspan-dst)# exit
```

