



# Performing Software Maintenance Upgrades

This chapter describes how to perform software maintenance upgrades (SMUs) on Cisco NX-OS devices.

This chapter includes the following sections:

- [About SMUs, on page 1](#)
- [Prerequisites for SMUs, on page 3](#)
- [Guidelines and Limitations for SMUs, on page 4](#)
- [Performing a Software Maintenance Upgrade for Cisco NX-OS, on page 5](#)
- [Performing a Software Maintenance Upgrade for Guest Shell Bash, on page 25](#)
- [Additional References, on page 26](#)
- [SMU History, on page 27](#)

## About SMUs

A software maintenance upgrade (SMU) is a package file that contains fixes for a specific defect. SMUs are created to respond to immediate issues and do not include new features. Typically, SMUs do not have a large impact on device operations. SMU versions are synchronized to the package major, minor, and maintenance versions they upgrade.

The effect of an SMU depends on its type:

- Process restart SMU-Causes a process or group of processes to restart on activation.
- Reload SMU-Causes a parallel reload of supervisors and line cards.

SMUs are not an alternative to maintenance releases. They provide a quick resolution of critical issues. All defects fixed by SMUs are integrated into the next maintenance releases of upcoming software trains, as applicable. SMUs also have the following considerations:

- SMUs are created for the following:
  - Critical SIR PSIRTs without a workaround or fix
  - Severity1 and Severity2 issues without a workaround or fix
- If a fix is already available in a maintenance release of the same software train or already released on a later long-lived release, no SMU is provided. You are encouraged to acquire the fix from the maintenance release.



---

**Note** Depending on the fix, in some cases it may not be possible to provide an SMU. In such cases, the only option is to upgrade to the next maintenance release when available.

---

For information on upgrading your device to a new feature or maintenance release, see the [Cisco Nexus 9000 Series NX-OS Software Upgrade and Downgrade Guide](#).

For information on Cisco NX-OS optionality feature, see the [Cisco Nexus 9000 Series NX-OS Software Upgrade and Downgrade Guide](#).



---

**Note** Activating an SMU does not cause any earlier SMUs, or the package to which the SMU applies, to be automatically deactivated.

---

## RPM Patching

RPM patching helps to avoid the additional reload when you perform ISSU. You can mention the required patches using the ISSU commands. These patches are validated during the pre-upgrade stage of installation and are saved in the patching repository. They are applied when the system comes up during ISSU with the new version.

The patch should be compatible with the target image. ISSU will be stopped if the patch is not compatible with the target image and a warning message is displayed. Patches are version specific and are not applied if they are not compatible with the target image. This compatibility check is done before the upgrade.

The bundled tar image used for patching contains the NX-OS image and RPMs to be installed for the image.


## Package Management

The general procedure for adding and activating SMU packages on the device is as follows:

1. Copy the package file or files to a local storage device or file server.
2. Add the package or packages on the device using the **install add** command.
3. Activate the package or packages on the device using the **install activate** command.
4. Commit the current set of packages using the **install commit** command.
5. (Optional) Deactivate and remove the package.

The following figure illustrates the key steps in the package management process.

Figure 1: Process to Add, Activate, and Commit SMU Packages

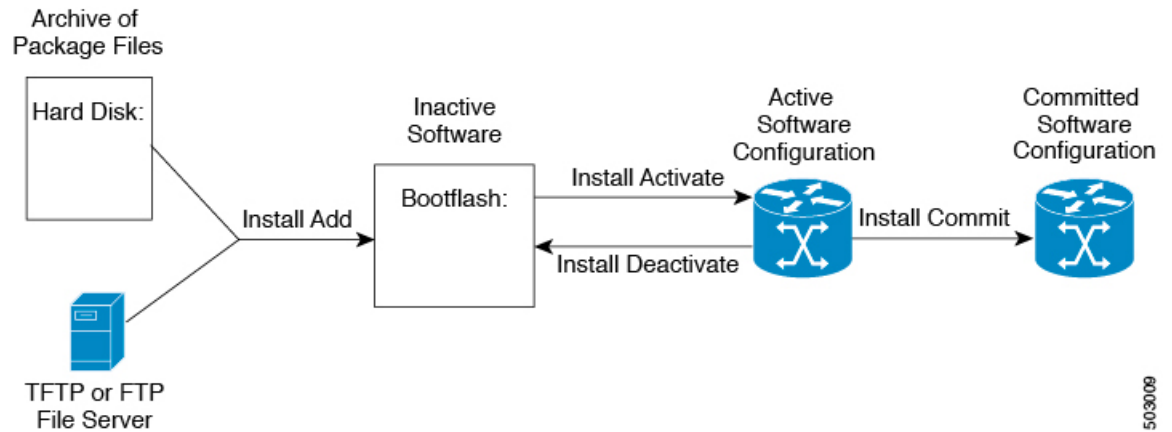

503009

## Impact of Package Activation and Deactivation

The activation or deactivation of an SMU package can have an immediate impact on the system. The system can be affected in the following ways:

- New processes might be started.
- Running processes might be stopped or restarted.
- All processes in the line cards might be restarted. Restarting processes in the line cards is equivalent to a soft reset.
- The line cards might reload.
- No processes in the line cards might be affected.



**Note** You must address any issues that result from the revised configuration and reapply the configuration, if necessary.



**Tip** After the activation process completes, enter the **show install log** command to display the process results.

## Prerequisites for SMUs

These prerequisites must be met for a package to be activated or deactivated:

- You must be in a user group associated with a task group that includes the proper task IDs. If you suspect a user group assignment is preventing you from using a command, contact your AAA administrator for assistance.

- Verify that all line cards are installed and operating properly. For example, do not activate or deactivate packages while line cards are booting, while line cards are being upgraded or replaced, or when you anticipate an automatic switchover activity.

## Guidelines and Limitations for SMUs

SMUs have the following guidelines and limitations:

- Beginning with Cisco NX-OS Release 9.3(9), you can apply a reload SMU along with (ND) ISSU to the same image version (currently running an image on the switch) without a disruptive reload of the switch. You can apply a reload SMU by upgrading to the same image version using ND-ISSU along with the reload SMU using the **install all nxos <same image> package <smu> non-disruptive** command.
- Beginning with Cisco NX-OS Release 10.3(4a)M, a new option is added to the **install all nxos** command, **keep-committed-smu**, to retain the previously installed SMU after upgrade to the same image version when the SMU is compatible with the target image. Execute the command as follows:

**install all nxos <image> package <smu> keep-committed-smu**

### Example:

```
switch# install all nxos nxos64-cs.10.4.3.M.bin package
nxos64-cs.CSCxy11111-1.0.0-10.4.3.lib32_64_n9000.rpm keep-committed-smu non-disruptive
```

- No-reload options are supported in Cisco NX-OS Release 9.3(9) for the SMU installation. The **no-immediate-reload** option is used for activating or deactivating the SMU feature.
- Some packages require the activation or deactivation of other packages. If the SMUs have dependencies on each other, you cannot activate them without first activating the previous ones.
- SMU packages being activated must be compatible with the image version running in the switch.
- Activation is performed only after the package compatibility checks have been passed. If a conflict is found, an error message is displayed.
- You can install multiple SMU packages by creating a tar bundle. See the [Advanced SMU Installation Methods, on page 21](#) section for more details.
- While a software package is being activated, other requests are not allowed to run on any of the impacted nodes. Package activation is completed when a message similar to this one appears:
 

```
Install operation 1 completed successfully at Thu Jan 9 01:19:24 2014
```
- Each CLI install request is assigned a request ID, which can be used later to review the events.
- If you perform a software maintenance upgrade and later upgrade your device to a new Cisco NX-OS software release, the new image will overwrite both the previous Cisco NX-OS release and the SMU package file.
- The SMU package file is named `nxos.CSCab00001-n9k_ALL-1.0.0-7.0.3.I5.1.lib32_n9000.rpm`, which support both n9k\_EOR and n9k\_TOR platforms.
- For the "Unable to remove MAC ACE using sequence number in 7.0(3)I7(2)" issue, if you are going to apply the patch that resolves it, you must make sure that the ACL is deleted before applying the patch. Otherwise, the issue will be seen again. This issue applies only to the ACL which has the redirect keyword in it.

# Performing a Software Maintenance Upgrade for Cisco NX-OS

## Preparing for Package Installation

You should use several **show** commands to gather information in preparation for the SMU package installation.

### Before you begin

Determine if a software change is required.

Verify that the new package is supported on your system. Some software packages require that other packages or package versions be activated, and some packages support only specific line cards.

Review the release notes for important information related to that release and to help determine the package compatibility with your device configuration.

Verify that the system is up, stable, and prepared for the software changes.

### SUMMARY STEPS

1. **show logging logfile | grep -i "System ready"**
2. **show install active**
3. **show module**
4. **show clock**

### DETAILED STEPS

#### Procedure

|        | Command or Action   | Purpose  |
|--------|---|--|
| Step 1 | <b>show logging logfile   grep -i "System ready"</b><br><b>Example:</b><br><pre>switch# show logging logfile   grep -i "System ready"</pre> | Displays if your system is up. Use this command to verify that the system is ready for SMU package installation. Configuring install commands before the system is ready, may result with an "Install operation 11 failed because cannot lock config" error message. |
| Step 2 | <b>show install active</b><br><b>Example:</b><br><pre>switch# show install active</pre>   | Displays the active software on the device. Use this command to determine what software should be added on the device and to compare to the active software report after installation operations are complete.   |
| Step 3 | <b>show module</b><br><b>Example:</b><br><pre>switch# show module</pre>   | Confirms that all modules are in the stable state.   |
| Step 4 | <b>show clock</b><br><b>Example:</b><br><pre>switch# show clock</pre>   | Verifies that the system clock is correct. Software operations use certificates based on device clock times.   |

### Example

This example shows how to verify that the system is up. A "System ready" response indicates that the system is ready for SMU package installation.

```
switch# show logging logfile | grep -i "System ready"
2018 Feb 19 11:13:04 switch %ASCII-CFG-2-CONF_CONTROL: System ready
```

This example shows how to display the active packages for the entire system. Use this information to determine if a software change is required.

```
switch# show install active
Boot Image:
  NXOS Image: bootflash:///nxos.7.0.3.I7.3.1.bin

Active Packages:

switch#
```

This example shows how to display the current system clock setting:

```
switch# show clock
02:14:51.474 PST Wed Jan 04 2014
```

## Downloading the SMU Package File from Cisco.com

Follow these steps to download the SMU package file:

### SUMMARY STEPS

1. Log in to Cisco.com.
2. Go to the Download Software page at this URL: <http://software.cisco.com/download/navigator.html>
3. In the Select a Product list, choose **Switches > Data Center Switches > Cisco Nexus 9000 Series Switches > model**.
4. Choose the appropriate SMU file for your device and click **Download**.

### DETAILED STEPS

#### Procedure

- 
- |               |   |
|---------------|---|
| <b>Step 1</b> | Log in to Cisco.com.  |
| <b>Step 2</b> | Go to the Download Software page at this URL: <a href="http://software.cisco.com/download/navigator.html">http://software.cisco.com/download/navigator.html</a> |
| <b>Step 3</b> | In the Select a Product list, choose <b>Switches &gt; Data Center Switches &gt; Cisco Nexus 9000 Series Switches &gt; model</b> .                               |
| <b>Step 4</b> | Choose the appropriate SMU file for your device and click <b>Download</b> .   |
-

## Copying the Package File to a Local Storage Device or Network Server

You must copy the SMU package file to a local storage device or a network file server to which the device has access. After this task is done, the package can be added and activated on the device.

If you need to store package files on the device, we recommend that you store the files on the hard disk. The boot device is the local disk from which the package is added and activated. The default boot device is bootflash:.



---

**Tip** Before you copy package files to a local storage device, use the **dir** command to determine if the required package files are already on the device.

---

If the SMU package files are located on a remote TFTP, FTP, or SFTP server, you can copy the files to a local storage device. After the files are located on the local storage device, the package can be added and activated on the device from that storage device. The following server protocols are supported:

- Trivial File Transfer Protocol—TFTP allows files to be transferred from one computer to another over a network, usually without the use of client authentication (for example, username and password). It is a simplified version of FTP.



---

**Note** Some package files might be larger than 32 MB, and the TFTP services provided by some vendors might not support a file this large. If you do not have access to a TFTP server that supports files larger than 32 MB, download the file using FTP.

---

- File Transfer Protocol—FTP is part of the TCP/IP protocol stack and requires a username and password.
- SSH File Transfer Protocol—SFTP is part of the SSHv2 feature in the security package and provides for secure file transfers. For more information, see the [Cisco Nexus 9000 Series NX-OS Security Configuration Guide](#).



---

**Note** Consult your system administrator for the location and availability of your network server.

---

Use the commands in the following table to copy the SMU package file from the server to your device using the file transfer protocols.

**Table 1: Commands for Copying SMU Package Files to the Device**

| Command   | Purpose  |
|---|--|
| <b>copy tftp://hostname-or-ipaddress/directory-path/filename<br/>bootflash:</b> | Copies the package file from the TFTP server to the bootflash: <ul style="list-style-type: none"><li>• <i>hostname-or-ipaddress</i>—The hostname or IP address of the network file server.</li><li>• <i>directory-path</i>—The network file server path that leads to the package file to be added.</li><li>• <i>filename</i>—The name of the package file that you want to add.</li></ul> |



| Command   | Purpose   |
|---|---|
| <p><b>copy</b><br/> <b>ftp://username:password@hostname-or-ipaddress/directory-path/filename</b><br/> <b>bootflash:</b></p> | <p>Copies the package file from the FTP server to the bootflash:</p> <ul style="list-style-type: none"> <li>• <i>username</i>—The username of the user who has access privileges to the directory in which the package file is stored.</li> <li>• <i>password</i>—The password associated with the username of the user who has access privileges to the directory in which the package file is stored. If a password is not provided, the networking device accepts anonymous FTP.</li> <li>• <i>hostname-or-ipaddress</i>—The hostname or IP address of the network file server.</li> <li>• <i>directory-path</i>—The network file server path that leads to the package file to be added. The specified directory should be a directory under the home directory of the user. In this example, the file being downloaded is in a subdirectory called "images" in the home directory of the user "john."</li> </ul> <p><b>Note</b><br/> For FTP services, <i>directory-path</i> is the directory relative to the <i>username</i> home directory. If you want to specify an absolute path for the directory, you must add a "/" following the server address.</p> <ul style="list-style-type: none"> <li>• <i>filename</i>—The name of the package file that you want to add.</li> </ul> |

| Command   | Purpose   |
|---|---|
| <pre>copy sftp://hostname-or-ipaddress/directory-path/filename bootflash:</pre> | <p>Copies the package file from the SFTP server to the bootflash:</p> <ul style="list-style-type: none"> <li>• <i>hostname-or-ipaddress</i>—The hostname or IP address of the network file server.</li> <li>• <i>directory-path</i>—The network file server path that leads to the package file to be added.</li> <li>• <i>filename</i>—The name of the package file that you want to add.</li> </ul> |

After the SMU package file has been transferred to a network file server or the local storage device, you are ready to add and activate the file.

## Adding and Activating Packages

You can add SMU package files that are stored on a local storage device or on a remote TFTP, FTP, or SFTP server to your device.



**Note** The SMU package being activated must be compatible with the currently active software to operate. When an activation is attempted, the system runs an automatic compatibility check to ensure that the package is compatible with the other active software on the device. If a conflict is found, an error message displays. The activation is performed only after all compatibility checks have been passed.



**Note** Activating an SMU does not cause any earlier SMUs or the package to which the SMU applies to be automatically deactivated.

### Before you begin

Make sure that all packages to be added are present on a local storage device or a network file server.

Make sure that you meet all of the prerequisites for the activation of packages.

Complete the procedure described in [Copying the Package File to a Local Storage Device or Network Server, on page 7](#).

### SUMMARY STEPS

1. Connect to the console port and log in.
2. (Optional) **dir bootflash:**
3. **install add** *filename* [**activate**]
4. (Optional) **show install inactive**
5. **install activate** *filename*

6. Repeat Step 5 until all packages are activated.
7. (Optional) **show install active**

## DETAILED STEPS

### Procedure

|        | Command or Action   | Purpose  |
|--------|---|--|
| Step 1 | Connect to the console port and log in.                                       | Establishes a CLI management session to the console port.  |
| Step 2 | (Optional) <b>dir bootflash:</b>  | Displays the package files that are available to be added.<br><br><b>Note</b><br>Only SMU package files can be added and activated using this procedure.   |
| Step 3 | <b>install add</b> <i>filename</i> [ <b>activate</b> ]<br><br><b>Example:</b> | Unpacks the package software files from the local storage device or network server and adds them to the bootflash: and all active and standby supervisors installed on the device.<br><br>The <i>filename</i> argument can take any of these formats: <ul style="list-style-type: none"> <li>• <b>bootflash:</b><i>filename</i></li> <li>• <b>tftp://</b><i>hostname-or-ipaddress/directory-path/filename</i></li> <li>• <b>ftp://</b><i>username:password@hostname-or-ipaddress/directory-path/filename</i></li> <li>• <b>usb1:</b><i>filename</i></li> <li>• <b>usb2:</b><i>filename</i></li> </ul> For all SMU packages except the CSCur02700 SMU package, you can use the optional <b>activate</b> keyword to automatically activate the package after it is added successfully.<br><br><b>Note</b><br>For the CSCur02700 SMU package, use the <b>install activate</b> command in Step 5 to activate the package. Do not use the optional <b>activate</b> keyword with the <b>install add</b> command as the package might fail and require a reboot.<br><br>Multiple versions of an SMU package can be added to the storage device without impacting the running configuration, but only one version of a package can be activated for a line card.<br><br><b>Note</b><br>Press <b>?</b> after a partial package name to display all possible matches available for activation. If there is only one match, press the <b>Tab</b> key to fill in the rest of the package name. |

|               | Command or Action   | Purpose   |
|---------------|---|---|
| <b>Step 4</b> | (Optional) <b>show install inactive</b><br><b>Example:</b><br>switch# show install inactive | Displays the inactive packages on the device. Verify that the package added in the previous step appears in the display.  |
| <b>Step 5</b> | Required: <b>install activate filename</b><br><b>Example:</b><br><b>Example:</b>            | Activates a package that was added to the device. SMU packages remain inactive until activated. (Skip this step if the package was activated earlier with the <b>install add activate</b> command.)<br><br><b>Tip</b><br>After the activation process finishes, enter the <b>show install log</b> command to display the process results. |
| <b>Step 6</b> | Repeat Step 5 until all packages are activated.   | Activates additional packages as required.  |
| <b>Step 7</b> | (Optional) <b>show install active</b><br><b>Example:</b><br>switch# show install active     | Displays all active packages. Use this command to determine if the correct packages are active.   |

## Committing the Active Package Set

When an SMU package is activated on the device, it becomes part of the current running configuration. To make the package activation persistent across system-wide reloads, you must commit the package on the device.



**Note** On startup, the device loads the committed package set. If the system is reloaded before the current active package is committed, the previously committed package set is used.

### Before you begin

Before you commit a package set, verify that the device is operating correctly and is forwarding packets as expected.

Complete the procedure described in [Adding and Activating Packages, on page 10](#).

### SUMMARY STEPS

1. **install commit filename**
2. (Optional) **show install committed**

## DETAILED STEPS

### Procedure

|        | Command or Action   | Purpose   |
|--------|---|---|
| Step 1 | <b>install commit</b> <i>filename</i><br><b>Example:</b>                                      | Commits the current set of packages so that these packages are used if the device is restarted. |
| Step 2 | (Optional) <b>show install committed</b><br><b>Example:</b><br>switch# show install committed | Displays which packages are committed.  |

### Example

This example shows how to commit active SMU packages on the device and then verify the committed packages:

## Installing RPM Packages

The **install all** command is the recommended method for software upgrades and downgrades because it performs configuration compatibility checks and BIOS upgrades automatically. If you enter the **install all** command without specifying a filename, the command performs a compatibility check, notifies you of the modules that will be upgraded, and confirms that you want to continue with the installation. If you choose to proceed, it installs the NXOS software image that is currently running on the switch and upgrades the BIOS of various modules from the running image if required.

### SUMMARY STEPS

1. **install all nxos** *scheme package scheme*
2. (Optional) **show install all status**

### DETAILED STEPS

#### Procedure

|        | Command or Action  | Purpose  |
|--------|--|--|
| Step 1 | <b>install all nxos</b> <i>scheme package scheme</i><br><b>Example:</b><br>switch# install all nxos bootflash:/nxos.9.2.1.bin<br>package<br>bootflash:/nxos.CSCJKrestart-n9k_ALL-1.0.0-9.2.2.lib32_n9000.rpm.2 | Installs the target set of packages for RPM patching so that these packages are used when the device is restarted. |
| Step 2 | (Optional) <b>show install all status</b><br><b>Example:</b>   | Displays the entire installation process.  |

|  | Command or Action               | Purpose |
|--|---------------------------------|---------|
|  | switch# show install all status |         |

## Deactivating and Removing Packages

When a package is deactivated, it is no longer active on the device, but the package files remain on the boot disk. The package files can be reactivated later, or they can be removed from the disk.

The Cisco NX-OS software also provides the flexibility to roll back the selected package set to a previously saved package set. If you find that you prefer a previous package set over the currently active package set, you can use the **install deactivate** and **install commit** commands to make a previously active package set active again.

### Before you begin

You cannot deactivate a package if it is required by another active package. When you attempt to deactivate a package, the system runs an automatic check to ensure that the package is not required by other active packages. The deactivation is performed only after all compatibility checks have been passed.

You cannot delete a package if it is part of the running or committed software of the device.

### SUMMARY STEPS

1. Connect to the console port and log in.
2. **install deactivate** *filename*
3. (Optional) **show install inactive**
4. (Optional) **install commit**
5. (Optional) **install remove** {*filename* | **inactive**}

### DETAILED STEPS

#### Procedure

|               | Command or Action   | Purpose  |
|---------------|---|--|
| <b>Step 1</b> | Connect to the console port and log in.   | Establishes a CLI management session to the console port.  |
| <b>Step 2</b> | <b>install deactivate</b> <i>filename</i><br><br><b>Example:</b>                                | Deactivates a package that was added to the device and turns off the package features for the line card.<br><br><b>Note</b><br>You must run <b>install commit</b> after <b>install deactivate</b> to deactivate the package completely, otherwise the package gets activated again after reload. For reload SMU, run <b>install commit</b> after the device reloads. |
| <b>Step 3</b> | (Optional) <b>show install inactive</b><br><br><b>Example:</b><br>switch# show install inactive | Displays the inactive packages on the device.  |

|        | Command or Action   | Purpose  |
|--------|---|--|
| Step 4 | (Optional) <b>install commit</b><br><b>Example:</b><br><pre>switch# install commit</pre>  | Commits the current set of packages so that these packages are used if the device is restarted.<br><br><b>Note</b><br>Packages can be removed only if the deactivation operation is committed.   |
| Step 5 | (Optional) <b>install remove</b> <i>{filename   inactive}</i><br><b>Example:</b><br><b>Example:</b><br><pre>switch# install remove inactive Proceed with removing? (y/n)? [n] y</pre> | Removes the inactive package. <ul style="list-style-type: none"> <li>• Only inactive packages can be removed.</li> <li>• Packages can be removed only if they are deactivated from all line cards in the device.</li> <li>• The package deactivation must be committed.</li> <li>• To remove a specific inactive package from a storage device, use the <b>install remove</b> command with the <i>filename</i> argument.</li> <li>• To remove all inactive packages from all nodes in the system, use the <b>install remove</b> command with the <b>inactive</b> keyword.</li> </ul> |

## No-Reload Options for SMU Installation

The following are the no-reload options for SMU installation:

### Method 1: CLI Install Add/Activate

```
switch# show version internal build-identifier
nxos image file: bootflash:///nxos64.10.2.0.184.bin : S184
switch# show install inactive
Boot Image:
  NXOS Image: bootflash:///nxos64.10.2.0.184.bin

Inactive Packages:

Inactive Base Packages:
  tahusd_common-1.0.0.0-10.2.0.184.lib32_64_n9000
  tor-2.0.0.0-10.2.0.184.lib32_n9000
  tor_n9k-2.0.0.0-10.2.0.184.lib32_n9000
switch#
switch# install add nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000.rpm
[#####] 100%
Install operation 3 completed successfully at Mon Jul 12 11:32:28 2021

switch# show install inactive
Boot Image:
  NXOS Image: bootflash:///nxos64.10.2.0.184.bin

Inactive Packages:
  nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000 available

Inactive Base Packages:
  tahusd_common-1.0.0.0-10.2.0.184.lib32_64_n9000
  tor-2.0.0.0-10.2.0.184.lib32_n9000
  tor_n9k-2.0.0.0-10.2.0.184.lib32_n9000
switch#
switch# show install pkg-info nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000
```

```
Request timeout:: Success
Name       : nxos64.CSCaa12345-n9k_ALL
Version    : 1.0.0
Release    : 10.2.1
License    : Cisco proprietary
Patch Type : reload
Requires   : core
Provides   : nxos64.CSCaa12345-n9k_ALL
Conflicts  :
Description : This is a patch for CSCaa12345-n9k_ALL
switch#
```

### CLI Install Activate PATCH with no-immediate-reload option

```
switch# install activate nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000 ?
<CR>
WORD                Package Name
forced              Non-interactive
no-immediate-reload Skip immediate reload for reload type patches.
switch# install activate nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000
no-immediate-reload
[#####] 100%
Install operation 4 !!WARNING!! This patch will get activated only after
a reload of the switch. at Mon Jul 12 11:33:50 2021

switch#
switch# show install inactive
Boot Image:
  NXOS Image: bootflash:///nxos64.10.2.0.184.bin

Inactive Packages:
  nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000 activate_pending_reload

Inactive Base Packages:
  tahusd_common-1.0.0.0-10.2.0.184.lib32_64_n9000
  tor-2.0.0.0-10.2.0.184.lib32_n9000
  tor_n9k-2.0.0.0-10.2.0.184.lib32_n9000

switch#
switch# show install patch
Boot Image:
  NXOS Image: bootflash:///nxos64.10.2.0.184.bin

-----
nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000 Inactive Committed
(activate_pending_reload)
-----

switch##

switch# reload
This command will reboot the system. (y/n)? [n] y

CISCO SWITCH Ver7.69
Switch G2
Device detected on 0:1:2 after 0 msec
Device detected on 0:1:1 after 0 msec
Device detected on 0:1:0 after 0 msec
....

After switch reload, wait for system in ready state

:///nxos64.10.2.0.184.bin : S184
switch#

switch# show logging logfile | include ready
2021 Jul 12 11:40:34 N93180-1 %ASCII-CFG-2-CONF_CONTROL: System ready
```



```

switch#

switch# show install patch
Boot Image:
  NXOS Image: bootflash:///nxos64.10.2.0.184.bin

-----
nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000 Active
-----

switch#

switch# show install active
Boot Image:
  NXOS Image: bootflash:///nxos64.10.2.0.184.bin

Active Packages:
  nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000 active

Active Base Packages:
....

```

### CLI Install Deactivate PATCH with no-immediate-reload option

```

switch# install deactivate nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000 ?
<CR>
WORD                Package Name[Note: startup configuration may get affected]
forced              Non-interactive
no-immediate-reload Skip immediate reload for reload type patches.

switch# install deactivate nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000
no-immediate-reload
[#####] 100%
Install operation 5 !!WARNING!! This patch will get deactivated only after
a reload of the switch. at Mon Jul 12 11:42:24 2021

switch#

switch# show install patch
Boot Image:
  NXOS Image: bootflash:///nxos64.10.2.0.184.bin

-----
nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000 Active (deactivate_pending_reload)
-----

switch#
switch# show install active
Boot Image:
  NXOS Image: bootflash:///nxos64.10.2.0.184.bin

Active Packages:
  nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000 active

Active Base Packages:
....
switch# reload
WARNING: Uncommitted patches present
This command will reboot the system. (y/n)? [n] y

CISCO SWITCH Ver7.69
Switch G2
Device detected on 0:1:2 after 0 msec
Device detected on 0:1:1 after 0 msec

```

```
Device detected on 0:1:0 after 0 msec
....
```

### After switch reload, wait for system in ready state

```
switch# show logging logfile | include ready
2021 Jul 12 11:52:28 N93180-1 %ASCII-CFG-2-CONF_CONTROL: System ready
switch#
```

```
switch# show install patch
Boot Image:
    NXOS Image: bootflash:///nxos64.10.2.0.184.bin
```

```
-----
nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000 Inactive Committed
-----
```

```
switch# show install inactive
Boot Image:
    NXOS Image: bootflash:///nxos64.10.2.0.184.bin
```

```
Inactive Packages:
    nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000 available
```

```
Inactive Base Packages:
    tahusd_common-1.0.0.0-10.2.0.184.lib32_64_n9000
    tor-2.0.0.0-10.2.0.184.lib32_n9000
    tor_n9k-2.0.0.0-10.2.0.184.lib32_n9000
```

```
switch#
```

```
switch# install remove nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000
Proceed with removing nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000? (y/n)? [n] y
[#####] 100%
Install operation 6 completed successfully at Mon Jul 12 11:57:06 2021
switch# show install patch
Boot Image:
    NXOS Image: bootflash:///nxos64.10.2.0.184.bin
```

```
-----
switch# show install inactive
Boot Image:
    NXOS Image: bootflash:///nxos64.10.2.0.184.bin
```

```
Inactive Packages:
```

```
Inactive Base Packages:
    tahusd_common-1.0.0.0-10.2.0.184.lib32_64_n9000
    tor-2.0.0.0-10.2.0.184.lib32_n9000
    tor_n9k-2.0.0.0-10.2.0.184.lib32_n9000
```

```
switch#
```

### CLI Install ADD ACTIVATE via bootflash: with no-immediate-reload

```
switch# install add nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000.rpm activate ?
<CR>
  downgrade          Downgrade package
  forced             Non-interactive
  no-immediate-reload Skip immediate reload for reload type patches.
  upgrade            Upgrade package
```

```
switch# install add nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000.rpm activate
no-immediate-reload
```

```

Adding the patch (/nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000.rpm)
[#####] 100%
Install operation 7 completed successfully at Mon Jul 12 12:03:02 2021

Activating the patch (/nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000.rpm)
[#####] 100%
Install operation 8 !!WARNING!! This patch will get activated only after
a reload of the switch. at Mon Jul 12 12:03:10 2021

switch#

```

### CLI Install ADD ACTIVATE via tftp with no-immediate-reload

```

switch# install add
tftp://172.27.250.42/auto/tftp-sjc-users1/shuojun/nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000.rpm
vrf management activate ?
<CR>
downgrade          Downgrade package
forced             Non-interactive
no-immediate-reload Skip immediate reload for reload type patches.
upgrade           Upgrade package

switch# install add
tftp://172.27.250.42/auto/tftp-sjc-user1/tester/nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000.rpm
vrf management activate no-immediate-reload
[#####] 100%
Install operation 11 !!WARNING!! This patch will get activated only after
a reload of the switch. at Mon Jul 12 12:06:49 2021

switch#

```

### Method 2: VIA DME REST Action/Exec payload



**Note** In the payload below, "reloadFlag": "noreload", you need to set "reloadFlag" as "noreload". "reloadFlag" is not new in the Action/Exec items.

```

POST URL:
http://172.27.250.239//api/mo/sys/action.json

{
  "actionLCont": {
    "children": [
      {
        "actionLSubj": {
          "attributes": {
            "dn": "sys/action/lsubj-[sys]"
          },
          "children": [
            {
              "topSystemSwpkgsInstallLTask": {
                "attributes": {
                  "dn":
"sys/action/lsubj-[sys]/topSystemSwpkgsInstallLTask",
                  "pkgAction": "add-activate",
                  "reloadFlag": "noreload",
                  "adminSt": "start",
                  "url":
"nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000.rpm"
                }
              }
            }
          ]
        }
      }
    ]
  }
}

```

```

    }
  ]
}

{
  "actionLCont": {
    "children": [
      {
        "actionLSubj": {
          "attributes": {
            "dn": "sys/action/lsubj-[sys]"
          },
          "children" : [
            {
              "topSystemSwpkgsInstallLTask": {
                "attributes": {
                  "dn":
"sys/action/lsubj-[sys]/topSystemSwpkgsInstallLTask",
                  "pkgAction": "activate",
                  "reloadFlag": "noreload",
                  "adminSt": "start",
                  "url":
"nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000"
                }
              }
            }
          ]
        }
      }
    ]
  }
}

{
  "actionLCont": {
    "children": [
      {
        "actionLSubj": {
          "attributes": {
            "dn": "sys/action/lsubj-[sys]"
          },
          "children" : [
            {
              "topSystemSwpkgsInstallLTask": {
                "attributes": {
                  "dn":
"sys/action/lsubj-[sys]/topSystemSwpkgsInstallLTask",
                  "pkgAction": "deactivate",
                  "reloadFlag": "noreload",
                  "adminSt": "start",
                  "url":
"nxos64.CSCaa12345-n9k_ALL-1.0.0-10.2.1.lib32_64_n9000"
                }
              }
            }
          ]
        }
      }
    ]
  }
}

```

```
}  
}
```

## Advanced SMU Installation Methods

### Installing Multiple SMU Packages Using a Single TAR File

If you want to install multiple SMU packages, you can create a single TAR bundle file and use it across the switches in the Data Center.

Follow these steps to generate a TAR file from a given list of SMU packages downloaded from a software download center.



**Note** The file name mentioned in the following examples is for illustration purposes only, and the actual file name will depend on the appropriate release.

#### Procedure

**Step 1** Create a new folder in the user computer or virtual machine.

```
bash# mkdir nx1043
```

**Step 2** Download the required SMU packages from the Cisco Software Download Center portal and copy the SMU packages to the new folder.

```
bash# cp nxos64-cs.CSCxy11111-1.0.0-10.4.3.lib32_64_n9000.rpm nx1043/  
bash# cp nxos64-cs.CSCxy22222-1.0.0-10.4.3.lib32_64_n9000.rpm nx1043/
```

**Step 3** Create a tar bundle file.

```
bash# cd nx1043  
bash# tar cf nxos64-cs.10.4.3.smu.bundle.tar *.rpm
```

**Step 4** Use the existing **install add filename activate** command to install the SMU packages from the TAR bundle.

```
switch# install add nxos64-cs.10.4.3.smu.bundle.tar activate
```

### Installing SMU Packages as Part of the New NX-OS Software Image Installation

On Cisco Nexus switches, the NX-OS software image can be upgraded to a newer version using the **install all** command. This command has been enhanced to include SMU packages apart from the NX-OS switch software image, which benefits the software maintenance operations by reducing the number of reload required during the installation process for both the software image and SMU packages.

The **install all** command can be initiated with a single .tar bundle file containing either:

- One NX-OS software image and a single SMU .rpm file
- One NX-OS software image and a tar bundle of multiple SMU .rpm files




---

**Note** The child tar bundle must not contain a mix of SMU .rpm files and another tar bundle of SMU .rpm files.

---

When the **install all** command is initiated with one or more SMU .rpm files, the switch will automatically commit the SMU files after the upgrade.

If the switch is reloaded during bootup, the SMUs will not be applied and will remain in an inactive state. The SMUs can be installed using the **install all** or **install activate** commands.

The following section describes all the supported scenarios when SMU packages are included in the **install all** command.




---

**Note** The filename mentioned in the following examples is for illustration purposes only, and the actual filename will depend on the appropriate release.

---

**Example-1:** In this scenario, a new software image and a single SMU package is used.

```
switch# install all nxos nxos64-cs.10.4.3.M.bin package
nxos64-cs.CSCxy11111-1.0.0-10.4.3.lib32_64_n9000.rpm
```

**Example-2:** In this scenario, a set of SMU packages are created as a TAR bundle following the TAR file method mentioned above and installed along with the NX-OS software image.

```
switch# install all nxos nxos64-cs.10.4.3.M.bin package nxos64-cs.10.4.3.smu.bundle.tar
```

**Example-3:** In this scenario, a single SMU package and the NX-OS software image can be bundled into one single tar file and installed using the **install all** command.

```
switch# install all nxos nxos64-cs.10.4.3.M.SMU.plus.IMAGE.tar
```

1. Download the SMU package from the Cisco Download center. For example:  
nxos64-cs.CSCxy11111-1.0.0-10.4.3.lib32\_64\_n9000.rpm
2. Download **nxos64-cs.10.4.3.M.bin** and place it in the same folder.
3. Create a tar bundle **nxos64-cs.10.4.3.M.SMU.plus.IMAGE.tar** consisting of the NX-OS image and SMU package.

```
bash# tar cf nxos64-cs.10.4.3.M.SMU.plus.IMAGE.tar nxos64-cs.10.4.3.M.bin
nxos64-cs.CSCxy11111-1.0.0-10.4.3.lib32_64_n9000.rpm
```

**Example-4:** When there are multiple SMU packages must be installed along with the NX-OS image, the SMU packages must be built into a SMU tar bundle file first as explained in the [Installing Multiple SMU Packages Using a Single TAR File, on page 21](#) section. Subsequently, this SMU tar bundle can be further bundled together with the NX-OS image and a single tar file could be used in the **install all** command.

```
Switch# install all nxos nxos64-cs.10.4.3.M.SMU.BUNDLE.plus.IMAGE.tar
```

1. Create a SMU tar bundle image with the list of SMU packages as explained in the [Installing Multiple SMU Packages Using a Single TAR File, on page 21](#) section.

```
bash# mkdir nx1043
bash# cp nxos64-cs.CSCxy11111-1.0.0-10.4.3.lib32_64_n9000.rpm nx1043/
bash# cp nxos64-cs.CSCxy22222-1.0.0-10.4.3.lib32_64_n9000.rpm nx1043/
bash# cd nx1043
bash# tar cf nxos64-cs.10.4.3.smu.bundle.tar *.rpm
```

2. Download **nxos64-cs.10.4.3.M.bin** and place it in the same folder.

3. Create another tar bundle **nxos64-cs.10.4.3.M.SMU.BUNDLE.plus.IMAGE.tar**.

```
bash# tar cf nxos64-cs.10.4.3.M.SMU.BUNDLE.plus.IMAGE.tar nxos64-cs.10.4.3.M.bin
nxos64-cs.10.4.3.smu.bundle.tar
```

## Downgrading Feature RPMs

Follow this procedure to downgrade an installed feature RPM to the base feature RPM.

### SUMMARY STEPS

1. (Optional) **show install packages**
2. **run bash**
3. **cd /rpms**
4. **ls \*feature\***
5. **cp filename /bootflash**
6. **exit**
7. **install add bootflash:filename activate downgrade**
8. (Optional) **show install packages | i feature**

### DETAILED STEPS

#### Procedure

|               | Command or Action   | Purpose  |
|---------------|---|--|
| <b>Step 1</b> | (Optional) <b>show install packages</b><br><br><b>Example:</b><br>switch# show install packages<br>ntp.lib32_n9000 1.0.1-7.0.3.I2.2e<br>installed | Displays the feature RPM packages on the device. |
| <b>Step 2</b> | Required: <b>run bash</b><br><br><b>Example:</b><br>switch# run bash<br>bash-4.2\$  | Loads Bash.                                      |
| <b>Step 3</b> | Required: <b>cd /rpms</b><br><br><b>Example:</b><br>bash-4.2\$ cd /rpms   | Changes to the RPMs folder in Bash.              |
| <b>Step 4</b> | Required: <b>ls *feature*</b><br><br><b>Example:</b><br>bash-4.2\$ ls *ntp*<br>ntp-1.0.0-7.0.3.I2.2e.lib32_n9000.rpm                              | Lists the RPM for the specified feature.         |
| <b>Step 5</b> | Required: <b>cp filename /bootflash</b><br><br><b>Example:</b>  | Copies the base feature RPM to the bootflash.    |

|               | Command or Action   | Purpose   |
|---------------|---|---|
|               | <pre>bash-4.2\$ cp ntp-1.0.0-7.0.3.I2.2e.lib32_n9000.rpm /bootflash</pre>   |   |
| <b>Step 6</b> | <p>Required: <b>exit</b></p> <p>Example:</p> <pre>bash-4.2\$ exit</pre>   | Exits Bash.   |
| <b>Step 7</b> | <p>Required: <b>install add bootflash:filename activate downgrade</b></p> <p>Example:</p> <pre>switch# install add bootflash:ntp-1.0.0-7.0.3.I2.2e.lib32_n9000.rpm activate downgrade Adding the patch (/ntp-1.0.0-7.0.3.I2.2e.lib32_n9000.rpm) [#####          ] 60% Adding the patch (/ntp-1.0.0-7.0.3.I2.2e.lib32_n9000.rpm) [#####          ] 100% Install operation 11 completed successfully at Thu Sep 8 15:35:35 2015  Activating the patch (/ntp-1.0.0-7.0.3.I2.2e.lib32_n9000.rpm) This install operation requires system reload. Do you wish to continue (y/n)?: [n] y [ 217.975959] [1473348971] writing reset reason 132, System reset due to reload patch(es) activation [ 217.991166] [1473348971]\ufffd\ufffd CISCO SWITCH Ver7.51 Device detected on 0:6:0 after 0 msecs Device detected on 0:1:1 after 0 msecs Device detected on 0:1:0 after 0 msecs MCFrequency 1333Mhz Relocated to memory</pre> | <p>Downgrades the feature RPM.</p> <p><b>Note</b><br/>If you are prompted to reload the device, enter <b>Y</b>. A reload is required only when downgrading the NTP and SNMP feature RPMs.</p> |
| <b>Step 8</b> | <p>(Optional) <b>show install packages   i feature</b></p> <p>Example:</p> <pre>switch# show install packages   i ntp ntp.lib32_n9000 1.0.0-7.0.3.I2.2e installed</pre>   | Displays the base feature RPM on the device.  |

## Displaying Installation Log Information

The installation log provides information on the history of the installation operations. Each time an installation operation is run, a number is assigned to that operation.

- Use the **show install log** command to display information about both successful and failed installation operations.
- Use the **show install log** command with no arguments to display a summary of all installation operations. Specify the *request-id* argument to display information specific to an operation. Use the **detail** keyword



to display details for a specific operation, including file changes, nodes that could not be reloaded, and any impact to processes.

This example shows how to display information for all installation requests:

This example shows how to display additional information, including any impact to nodes and processes:

This example shows the output after an SMU package has been activated but before the switch has been reloaded:

# Performing a Software Maintenance Upgrade for Guest Shell Bash

You can perform a software maintenance upgrade for Bash in the Guest Shell.

## SUMMARY STEPS

1. Download the SMU package file for Guest Shell Bash from Cisco.com.
2. Copy the SMU package file to the bootflash: of the switch.
3. **guestshell**
4. **sudo rpm -Uvh /bootflash/filename**
5. **rpm -qa | grep bash**
6. **guestshell sync**

## DETAILED STEPS

### Procedure

|               | Command or Action  | Purpose  |
|---------------|--|--|
| <b>Step 1</b> | Download the SMU package file for Guest Shell Bash from Cisco.com.   | Obtains the package file from Cisco.com. For instructions, see <a href="#">Downloading the SMU Package File from Cisco.com, on page 6</a> .                    |
| <b>Step 2</b> | Copy the SMU package file to the bootflash: of the switch.   | Copies the package file to the device. For instructions, see <a href="#">Copying the Package File to a Local Storage Device or Network Server, on page 7</a> . |
| <b>Step 3</b> | <b>guestshell</b><br><br><b>Example:</b><br>switch# guestshell<br>guestshell:~\$   | Accesses the Guest Shell.  |
| <b>Step 4</b> | <b>sudo rpm -Uvh /bootflash/filename</b><br><br><b>Example:</b><br>guestshell:~\$ sudo rpm -Uvh<br>/bootflash/bash-4.2-r8.x86_64.rpm<br>Preparing...<br>##### [100%] | Upgrades the existing Bash file in the Guest Shell.  |

|               | Command or Action  | Purpose  |
|---------------|--|--|
|               | <pre>l: bash ##### [100%] update-alternatives: Linking //bin/sh to /bin/bash</pre>   |  |
| <b>Step 5</b> | <p><b>rpm -qa   grep bash</b></p> <p><b>Example:</b></p> <pre>guestshell:~\$ rpm -qa   grep bash bash-4.2-r8.x86_64</pre>  | Verifies that the new version of the Bash file was installed successfully.   |
| <b>Step 6</b> | <p><b>guestshell sync</b></p> <p><b>Example:</b></p> <pre>switch# guestshell sync Access to the guest shell will be temporarily disabled while it synchronizes contents to standby. Are you sure you want to continue? (y/n) [n] y dt-n9k3-1# 2014 Oct 7 05:00:01 dt-n9k3-1 %\$ VDC-1 %\$ %VMAN-2-INSTALL_STATE: Deactivating virtual service 'guestshell+' dt-n9k3-1# 2014 Oct 7 05:00:06 dt-n9k3-1 %\$ VDC-1 %\$ %VMAN-2-ACTIVATION_STATE: Successfully deactivated virtual service 'guestshell+' 2014 Oct 7 05:00:12 dt-n9k3-1 %\$ VDC-1 %\$ %VMAN-2-ACTIVATION_STATE: Successfully deactivated virtual service 'guestshell+' ; Starting sync to standby sup 2014 Oct 7 05:00:32 dt-n9k3-1 %\$ VDC-1 %\$ %VMAN-2-MOVE_STATE: Successfully synced virtual service 'guestshell+' ; Activating 2014 Oct 7 05:00:32 dt-n9k3-1 %\$ VDC-1 %\$ %VMAN-2-ACTIVATION_STATE: Activating virtual service 'guestshell+' 2014 Oct 7 05:00:56 dt-n9k3-1 %\$ VDC-1 %\$ %VMAN-2-ACTIVATION_STATE: Successfully activated virtual service 'guestshell+'</pre> | <p>On a dual-supervisor system, synchronizes the rootfs with the Bash SMU version to the standby supervisor before doing a switchover. If you do not run this command, you will need to repeat this procedure after a supervisor switchover.</p> <p><b>Note</b></p> <p>The new Bash file is preserved after a Guest Shell reboot or Guest Shell disable+enable. However, you need to reinstall the Guest Shell Bash SMU package file after a Guest Shell destroy+enable.</p> |

## Additional References

### Related Documents

| Related Topic     | Document Title  |
|-------------------|---|
| Software upgrades | <i>Cisco Nexus 9000 Series NX-OS Software Upgrade and Downgrade Guide</i> |

# SMU History

This table lists the release history for SMU package files.

| SMU Package File                    | Releases  | Description  |
|-------------------------------------|---|--|
| bash-4.2-r8.x86_64.rpm              | 6.1(2)I3(1)   | Guest Shell Bash SMU for Bash vulnerabilities CVE-2014-6277, CVE-2014-6278, CVE-2014-7186, and CVE-2014-7187         |
| n9000-dk9.6.1.2.I3.1.CSCur02700.bin | 6.1(2)I3(1) and all 6.1(2)I2(x) releases                | Cisco NX-OS SMU for CSCur02700 (Bash vulnerabilities CVE-2014-6277, CVE-2014-6278, CVE-2014-7186, and CVE-2014-7187) |
| n9000-dk9.6.1.2.I2.1.CSCup81353.bin | 6.1(2)I2(1), 6.1(2)I2(2), 6.1(2)I2(2a), and 6.1(2)I2(3) | Cisco NX-OS SMU for CSCup81353   |

