



## INDEX

### Symbols

^ matches the beginning of a string [1-7](#)  
\_ matches a comma (,), left brace ({), left parenthesis [1-7](#)  
? command [1-1](#)  
? matches 0 or 1 occurrence of a pattern [1-7](#)  
. matches any single character [1-7](#)  
( ) in commands [1-11](#)  
\* matches 0 or more sequences of a pattern [1-7](#)  
+ matches 1 or more sequences of a pattern [1-7](#)  
\$ matches the end of a string [1-7](#)

### Numerics

10-Gigabit Ethernet uplink  
    selecting [2-275](#)  
    showing the mode [2-701, 2-704](#)  
802.1Q trunk ports and native VLANs [2-1127](#)  
802.1Q tunnel ports  
    configuring [2-1059](#)  
802.1S Multiple Spanning Tree  
    see MST  
802.1X  
    configuring for multiple hosts [2-221](#)  
    configuring for single host [2-221](#)  
    configuring multiple domains [2-221](#)  
    disabling port control [2-213](#)  
    enabling port control [2-213](#)  
802.1X Critical Authentication  
    disabling on a port [2-215](#)  
    disabling on a VLAN [2-218](#)  
EAPOL  
    disabling send success packets [2-216](#)

enabling send success packets [2-216](#)  
enabling on a port [2-215](#)  
enabling on a VLAN [2-218](#)  
returning delay time to default setting [2-217](#)  
setting delay time on a port [2-217](#)  
802.1X critical authentication  
    configure parameters [2-25](#)  
802.1X critical recovery delay, configuring [2-25](#)  
802.1X Port Based Authentication  
    debugging 802.1X Port Based Authentication [2-152](#)  
    displaying port based authentication [2-684](#)  
    enabling accounting for authentication sessions [2-4](#)  
    enabling authentication on the system [2-232](#)  
    enabling guest VLAN [2-219](#)  
    enabling guest VLAN supplicant [2-212, 2-220](#)  
    enabling manual control of auth state [2-228](#)  
    enabling periodic re-authentication of the client [2-231](#)  
    initializing re-authentication of dot1x ports [2-230](#)  
    initializing state machines [2-223](#)  
    receive session termination message upon reboot [2-5](#)  
    setting maximum number for EAP requests [2-226](#)  
    setting the reauthentication timer [2-233](#)

### A

aaa authorization network command [2-214](#)  
abbreviating commands  
    context-sensitive help [1-1](#)  
Access Gateway Module  
    connecting to a module [2-22](#)  
    connecting to a remote module [2-591](#)  
    connecting to a specific remote module [2-620](#)  
access-group

- displaying mac interface **2-825**
- show mode interface **2-555, 2-641, 2-911**
- access groups
  - IP **2-6, 2-72, 2-73, 2-208, 2-653**
- access lists
  - clearing an access template **2-106**
  - defining ARP **2-21**
  - displaying ARP information **2-645**
  - See also ACLs, MAC ACLs, and VACLS
- access maps
  - applying with VLAN filter **2-1129**
- access-node-identifier, setting for the switch **2-558**
- access-policies, applying using host-mode **2-30**
- ACLs
  - access-group mode **2-6**
  - balancing hardware regions **2-12**
  - capturing control packets **2-8**
  - determining ACL hardware programming **2-10**
  - disabling hardware statistics **2-261**
  - displaying mac access-group interface **2-825**
  - enabling hardware statistics **2-261**
  - using ACL naming conventions for MAC ACLs **2-406**
- action clause
  - specifying drop or forward action in a VACL **2-13**
- addresses, configuring a maximum **2-532**
- adjacency
  - debugging the adjacency table **2-143**
  - disabling the debug facility **2-143**
  - displaying information about the adjacency table **2-642**
  - displaying IPC table entries **2-143**
- aggregate policer
  - displaying information **2-912**
- aging time
  - displaying MAC address aging time **2-828**
  - MAC address table **2-409, 2-411**
- alarms
  - displaying operational status **2-688**
- alternation
  - description **1-10**
- anchoring
  - description **1-10**
- ancp, show multicast **2-644**
- ANCP client
  - port identifier **2-16**
  - remote server **2-17**
  - set router to become **2-18**
- ARP
  - access list, displaying detailed information **2-645**
  - defining access-lists **2-21**
- ARP inspection
  - enforce certain types of checking **2-297**
- ARP packet
  - deny based on DHCP bindings **2-187**
  - permit based on DHCP bindings **2-510**
- authentication **2-25, 2-32**
  - changing the control-direction **2-23**
  - configure actions for events
    - configuring the actions **2-26**
  - configuring port-control **2-36**
  - enabling reauthentication **2-35**
  - enabling Webauth fallback **2-29**
  - host-mode configuration **2-30**
  - setting priority of methods **2-38**
  - setting the timer **2-40**
  - setting username **2-1114**
  - specifying the order of methods **2-33**
  - using an MD5-type encryption method **2-1114**
  - verifying MD5 signature **2-1116**
  - verifying the checksum for Flash memory **2-1116**
- authentication control-direction command **2-23**
- authentication critical recovery delay command **2-25**
- authentication event command **2-26**
- authentication fallback command **2-29**
- authentication host-mode **2-30**
- authentication methods, setting priority **2-38**

authentication methods, specifying the order of attempts **2-33**

authentication open command **2-32**

authentication order command **2-33**

authentication periodic command **2-35**

authentication port-control command **2-36**

authentication priority command **2-38**

authentication timer, setting **2-40**

authentication timer command **2-40**

authentication violation command **2-42**

auth fail VLAN

enable on a port **2-212**

set max number of attempts **2-211**

Auth Manager

configuring

    authentication timer **2-40**

authorization state

    enabling manual control **2-228**

authorization state of a controlled port **2-228**

automatic installation

    displaying status **2-651**

automatic medium-dependent interface crossover

    See Auto-MDIX

Auto-MDIX

    disabling **2-457**

    enabling **2-457**

auto-negotiate interface speed

    example **2-1029**

auto-QoS

    configuring for VoIP **2-64**

    displaying configuration **2-652**

auto qos srnd4 command **2-52**

auto security command **2-72**

auto security-port **2-73**

average-packet-size (netflow-lite monitor submode) command **2-75**

---

## B

baby giants

    displaying the system MTU setting **2-952**

    setting the maximum Layer 2 payload size **2-1086**

BackboneFast

    displaying debugging messages **2-174**

    displaying spanning tree status **2-935**

    enabling debugging **2-174**

bandwidth command **2-77**

bindings

    store for DHCP snooping **2-309**

BOOT environment variable

    displaying information **2-657**

bootflash

    displaying information **2-655**

BPDUs

    debugging spanning tree activities **2-172**

bridge protocol data units

    See BPDUs

broadcast suppression level

    configuring **2-1030, 2-1032**

    enabling **2-1030, 2-1032**

---

## C

cable diagnostics

TDR

    displaying test results **2-658**

    testing conditions of copper cables **2-1090**

call home

    displaying information **2-660**

    e-mailing output **2-85**

    entering configuration submode **2-80**

    executing **2-85**

    manually send test message **2-88**

    receiving information **2-83**

    sending alert group message **2-86**

    submitting information **2-83**

call home destination profiles  
  displaying **2-662**

Catalyst 4507R **2-530**

CDP  
  configuring tunneling encapsulation rate **2-391**  
  displaying  
    neighbor information **2-665**  
  enabling protocol tunneling for **2-386**  
  set drop threshold for **2-389**

CEF  
  displaying next-hop information **2-741**  
  displaying VLAN configuration information **2-741**

chassis  
  displaying  
    chassis MAC address ranges **2-822**  
    current and peak traffic meter readings **2-822**  
    percentage of backplane utilization **2-822**  
    switching clock failure recovery mode **2-822**

circuit-id  
  setting for an interface **2-560**

circuit-id, setting for an interface VLAN range **2-561**

cisco-desktop  
  macro apply **2-420**

Cisco Express Forwarding  
  See CEF

cisco-phone  
  macro apply **2-422**

cisco-router  
  macro apply **2-424**

cisco-switch  
  macro apply **2-426**

CISP  
  See Client Information Signalling Protocol

cisp enable command **2-93**

class maps  
  creating **2-97**  
  defining the match criteria **2-450**

monitor capture **2-463**

clear commands  
  clearing Gigabit Ethernet interfaces **2-104**  
  clearing IGMP group cache entries **2-113**  
  clearing interface counters **2-99**  
  clearing IP access lists **2-106, 2-107**  
  clearing IP ARP inspection statistics VLAN **2-108**  
  clearing IP DHCP snooping database statistics **2-112**  
  clearing MFIB counters and routes **2-116**  
  clearing MFIB fastdrop entries **2-117**  
  clearing PAgP channel information **2-126**  
  clearing QoS aggregate counters **2-130**  
  clearing VLAN interfaces **2-105**

clear ip wccp command **2-118**

clear netflow-lite exporter statistics command **2-123**

clear netflow-lite monitor statistics interface command **2-124**

clear nmsp statistics command **2-125**

Client Information Signalling Protocol **2-214**

Client Information Signalling Protocol, enabling **2-93**

CLI string search  
  anchoring **1-10**  
  expressions **1-7**  
  filtering **1-6**  
  multiple-character patterns **1-8**  
  multipliers **1-9**  
  parentheses for recall **1-11**  
  searching outputs **1-6**  
  single-character patterns **1-7**  
  using **1-6**

command **2-463**

command modes  
  accessing privileged EXEC mode **1-5**  
  exiting **1-5**  
  understanding user EXEC and configuration modes **1-5**

condition interface  
  debugging interface-related activities **2-145**

condition vlan  
  debugging VLAN output **2-148**

configuration, saving **1-11**

- configuring  
     root as secondary **2-1013**
- configuring a SPAN session to monitor  
     limit SPAN source traffic **2-476**
- configuring critical recovery **2-25**
- configuring forward delay **2-1009**
- configuring root as primary **2-1013**
- CoPP  
     attaching  
         policy map to control plane **2-618**  
     displaying  
         policy-map class information **2-886**  
     entering configuration mode **2-135**  
     removing  
         service policy from control plane **2-618**
- CoS  
     assigning to Layer 2 protocol packets **2-388**
- cos (netflow-lite exporter submode) command **2-137**
- counter command **2-139**
- counters  
     clearing interface counters **2-99**
- critical authentication, configure 802.1X parameters **2-25**
- critical recovery, configuring 802.1X parameter **2-25**
- 
- D**
- DAI  
     clear statistics **2-108**
- DBL  
     displaying qos dbl **2-913**
- debug commands  
     debugging backup events **2-144**  
     debugging DHCP snooping events **2-157**  
     debugging DHCP snooping messages **2-158**  
     debugging EtherChannel/PAgP/shim **2-153**  
     debugging IPC activity **2-156**  
     debugging IP DHCP snooping security messages **2-159**  
     debugging NVRAM activities **2-163**
- debugging PAgP activities **2-164**  
     debugging port manager activities **2-167**  
     debugging spanning tree activities **2-172**  
     debugging spanning tree backbonefast **2-174**  
     debugging spanning tree UplinkFast **2-177**  
     debugging supervisor redundancy **2-171**  
     debugging VLAN manager activities **2-178**  
     displaying monitor activity **2-161**  
     displaying the adjacency table **2-143**  
     enabling debug dot1x **2-152**  
     enabling debugging messages for ISL VLAN IDs **2-181**  
     enabling debugging messages for VTP **2-182**  
     enabling debugging of UDLD activity **2-183**  
     enabling switch shim debugging **2-175**  
     enabling VLAN manager file system error tests **2-179**  
     limiting debugging output for VLANs **2-148**  
     limiting interface debugging output **2-145**  
     limiting output for debugging standby state changes **2-146**  
     shortcut to the debug condition interface **2-155**
- debugging  
         activity monitoring **2-161**  
         DHCP snooping events **2-157**  
         DHCP snooping packets **2-158**  
         IPC activities **2-156**  
         IP DHCP snooping security packets **2-159**  
         NVRAM activities **2-163**  
         PAgP activities **2-164**  
         PAgP shim **2-153**  
         PM activities **2-167**  
         PPPoE Intermediate Agent **2-169**  
         spanning tree BackboneFast events **2-174**  
         spanning tree switch shim **2-175**  
         spanning tree UplinkFast events **2-177**  
         VLAN manager activities **2-178**  
         VLAN manager IOS file system error tests **2-179**  
         VTP protocol debug messages **2-182**
- debug nmsp command **2-162**

- debug spanning tree switch **2-175**  
 debug sw-vlan vtp **2-182**  
 default form of a command, using **1-6**  
 destination (netflow-lite exporter submode) command **2-189**  
 detect mechanism, causes **2-248**  
 device-sensor filter-list command **2-199**  
 device-sensor filter-list dhcp command **2-202**  
 device-sensor filter-spec command **2-204**  
 device-sensor notify command **2-206**  
 DHCP  
     clearing database statistics **2-112**  
 DHCP bindings  
     configuring bindings **2-307**  
     deny ARP packet based on matches **2-187**  
     permit ARP packet based on matches **2-510**  
 DHCP snooping  
     clearing binding entries **2-109**  
     clearing database **2-111**  
     displaying binding table **2-743**  
     displaying configuration information **2-742**  
     displaying status of DHCP database **2-747**  
     displaying status of error detection **2-691**  
     enabling DHCP globally **2-306**  
     enabling IP source guard **2-348**  
     enabling on a VLAN **2-316**  
     enabling option 82 **2-311, 2-313**  
     enabling option-82 **2-318**  
     enabling rate limiting on an interface **2-314**  
     enabling trust on an interface **2-315**  
     establishing binding configuration **2-307**  
     renew binding database **2-593**  
     store generated bindings **2-309**  
 diagnostic fpga soft-error recover command **2-208**  
 diagnostic test  
     bootup packet memory **2-678**  
     displaying attributes **2-672**  
     display module-based results **2-674**  
     running **2-210**  
     show results for TDR **2-658**  
     testing conditions of copper cables **2-1090**  
 displaying error disable recovery **2-693**  
 displaying inline power status **2-900**  
 displaying monitoring activity **2-161**  
 displaying PoE policing and monitoring status **2-908**  
 displaying SEEPROM information  
     GBIC **2-705**  
 displaying SPAN session information **2-952, 2-1032**  
 document conventions **1-20**  
 document organization **1-19**  
 DoS  
     CoPP  
         attaching policy map to control plane **2-618**  
         displaying policy-map class information **2-886**  
         entering configuration mode **2-135**  
         removing service policy from control plane **2-618**  
         entering  
             CoPP configuration mode **2-135**  
 DOS attack  
     protecting system's resources **2-292**  
 dot1x credentials (global configuration) command **2-214**  
 drop threshold, Layer 2 protocol tunneling **2-389**  
 dscp (netflow-lite exporter submode command **2-235**  
 DSCP rewrite for IP packets  
     enable **2-581**  
 DTP flap  
     error detection for **2-248**  
 dual-active detection (virtual switch) command **2-237**  
 dual-active recovery ip address command **2-240**  
 dual-capable port  
     selecting a connector **2-459**  
 duplex mode  
     configuring autonegotiation on an interface **2-242**  
     configuring full duplex on an interface **2-242**  
     configuring half duplex on an interface **2-242**  
 dynamic ARP inspection  
     error detection for **2-248**  
     preventing **2-292**

Dynamic Host Configuration Protocol

See DHCP

## E

EAP

  restarting authentication process **2-226**

EDCS-587028 **2-646, 2-822**

EIGRP (Enhanced IGRP)

  filters

    routing updates, preventing **2-507**

enabling

  debugging for UDLD **2-183**

  voice VLANs **2-1046, 2-1047, 2-1049, 2-1051, 2-1052**

enabling open access **2-32**

environmental

  alarms **2-688**

  displaying information **2-688**

  status **2-688**

  temperature **2-688**

epm access control command **2-244**

erase a file **2-245**

errdisable detect cause command **2-248**

error disable detection **2-248**

  clearing error disable on an interface **2-101**

  enabling error disable detection **2-101, 2-248**

  enabling per-VLAN on BPDU guard **2-248**

error-disabled state

  displaying **2-725**

error disable recovery

  configuring recovery mechanism variables **2-251**

  displaying recovery timer information **2-693**

  enabling ARP inspection timeout **2-251**

  specifying recovery cause **2-251**

EtherChannel

  assigning interfaces to EtherChannel groups **2-89**

  debugging EtherChannel **2-153**

  debugging PAgP shim **2-153**

  debugging spanning tree activities **2-172**

displaying information for a channel **2-695**

PAgP

  error detection for **2-248**

removing interfaces from EtherChannel groups **2-89**

EtherChannel guard

  detecting STP misconfiguration **2-999**

Explicit Host Tracking

  clearing the database **2-115**

  enabling per-VLAN **2-330**

exporter (netflow-lite monitor submode) command **2-256**

expressions

  matching multiple expression occurrences **1-9**

  multiple-character patterns **1-8**

  multiplying pattern occurrence **1-11**

  single-character patterns **1-7**

Extensible Authentication Protocol

See EAP

## F

fallback profile, specifying **2-29**

field replaceable unit (FRU)

  displaying status information **2-688**

filters

EIGRP

  routing updates, preventing **2-507**

Flash memory file system

  displaying file system information **2-655**

  verifying checksum **2-1116**

flow control

  configuring a gigabit interface for pause frames **2-258**

  displaying per-interface statistics for flow control **2-699**

## G

GBIC

  displaying EEPROM information **2-705**

generic-error-message, setting for the switch **2-558**

Gigabit Ethernet interface  
     clearing the hardware logic **2-104**

Gigabit Ethernet uplink  
     selecting **2-275**  
     showing the mode **2-701, 2-704**

global configuration mode  
     using **1-5**

---

**H**

hardware module  
     resetting a module by toggling the power **2-268**

hardware statistics  
     disabling **2-261**  
     enabling **2-261**

hardware uplink  
     selecting the mode **2-275**  
     showing the mode **2-701, 2-704**

helper addresses, IP **2-762**

hot standby protocol  
     debugging **2-146**  
     disabling debugging **2-146**  
     limiting output **2-146**

hw-module beacon command **2-262**

hw-module module start command **2-263**

hw-module module stop command **2-265**

hw-module system max-port-num-mode 1/2 command **2-269**

hw-module system max-port-num-mode 1/2 switch 1/2/all command **2-270**

hw-module uplink mode command **2-273**

---

identifier-string, setting for the switch **2-558**

ID mapping, creating an ANCP client **2-16**

IDPROMs  
     displaying SEEPROM information  
         chassis **2-705**

clock module **2-705**  
     fan trays **2-705**  
     module **2-705**  
     mux buffer **2-705**  
     power supplies **2-705**  
     supervisor engine **2-705**

ifIndex persistence  
     clearing SNMP ifIndex commands **2-981**  
     compress SNMP ifIndex table format **2-988**  
     disabling globally **2-987**  
     disabling on an interface **2-983**  
     enabling globally **2-987**  
     enabling on an interface **2-983**

IGMP  
     applying filters for host joining on Layer 2 interfaces **2-320**  
     clearing IGMP group cache entries **2-113**  
     configuring frequency for IGMP host-query messages **2-323**  
     creating an IGMP profile **2-322**  
     displaying IGMP interface configuration information **2-749**  
     displaying profiles **2-751**  
     setting maximum group numbers **2-321**

IGMP profiles  
     displaying **2-751**

IGMP snooping  
     clearing the EHT database **2-115**  
     configuring a Layer 2 interface as a group member **2-336**  
     configuring a Layer 2 interface as a multicast router **2-334**  
     configuring a static VLAN interface **2-336**  
     displaying multicast information **2-758**  
     displaying VLAN information **2-752, 2-756, 2-759**  
     enabling **2-325**  
     enabling immediate-leave processing **2-332**  
     enabling on a VLAN **2-329**  
     enabling per-VLAN Explicit Host Tracking **2-330**

Immediate-Leave feature, MVR **2-485**

informs  
    enabling **2-985**

inline power  
    displaying inline power status **2-900**

In Service Software Upgrade  
    See ISSU

inspection log  
    clearing log buffer **2-107**

interface  
    displaying suppressed multicast bytes **2-716, 2-718**

interface (virtual switch) command **2-283**

interface capabilities  
    displaying **2-714**

interface configuration mode  
    summary **1-5**

interface link  
    display cable disconnect time **2-722**

interfaces  
    configuring dot1q tunnel ports **2-1059**  
    creating an interface-range macro **2-186**  
    debugging output of interface related activities **2-145**  
    displaying description **2-721**  
    displaying error-disabled state **2-725**  
    displaying information when tunneling is enabled **2-810**  
    displaying status **2-721**  
    displaying traffic for a specific interface **2-711**  
    entering interface configuration mode **2-281, 2-283**  
    executing a command on multiple ports in a range **2-286**  
    selecting an interface to configure **2-281, 2-283**  
    setting a CoS value for Layer 2 packets **2-388**  
    setting drop threshold for Layer 2 packets **2-389**  
    setting the interface type **2-1059**

interface speed  
    configuring interface speed **2-1027**

interface transceiver  
    displaying diagnostic data **2-729**

internal VLAN allocation

configuring **2-1132**  
default setting **2-1132**  
displaying allocation information **2-966**

Internet Group Management Protocol  
    See IGMP

invalid GBIC  
    error detection for **2-248**

IP address of remote ANCP server, setting **2-17**

IP ARP  
    applying ARP ACL to VLAN **2-290**  
    clearing inspection statistics **2-108**  
    clearing status of log buffer **2-107**  
    controlling packet logging **2-301**  
    enabling dynamic inspection **2-299**  
    limit rate of incoming requests **2-292**  
    set per-port config trust state **2-296**  
    showing status of dynamic ARP inspection **2-736**  
    showing status of log buffer **2-739**

IPC  
    debugging IPC activities **2-156**

IP DHCP Snooping  
    See DHCP snooping

IP header validation  
    disabling **2-347**  
    enabling **2-347**

IP interfaces  
    displaying usability status **2-761**

IP multicast  
    displaying multicast routing table information **2-767**

IP multicast addresses **2-482**

ip multicast multipath command **2-340**

IP packets  
    enable DSCP rewrite **2-581**

IP phone and standard desktop  
    enabling Cisco-recommended features **2-422**

IP Port Security  
    enabling **2-348**

IP source binding  
    adding or deleting **2-344**

displaying bindingstagging **2-772**  
 IP source guard  
   debugging messages **2-159**  
   displaying configuration and filters **2-773**  
   enabling on DHCP snooping **2-348**  
 IPv4 statistics, enabling collection **2-139**  
 IPv6 MLD  
   configuring queries **2-365, 2-367**  
   configuring snooping  
     last-listener-query-intervals **2-367**  
   configuring snooping  
     listener-message-suppression **2-369**  
   configuring snooping robustness-variables **2-370**  
   configuring tcn topology change notifications **2-372**  
   counting snooping last-listener-queries **2-365**  
   displaying information **2-786**  
   displaying ports for a switch or VLAN **2-788**  
   displaying querier information **2-789**  
   enabling snooping **2-363**  
   enabling snooping on a VLAN **2-373**  
 IPv6 statistics, enabling collection **2-139**  
 ip wccp check services all command **2-355**  
 ip wccp command **2-352**  
 ip wccp group-address command **2-352**  
 ip wccp group-list command **2-352**  
 ip wccp group-listen command **2-357**  
 ip wccp password command **2-352, 2-354**  
 ip wccp redirect command **2-359**  
 ip wccp redirect exclude in command **2-361**  
 ip wccp redirect-list command **2-352**  
 ISSU  
   canceling process **2-375**  
   configuring rollback timer **2-385**  
   displaying capability **2-791**  
   displaying client information **2-793**  
   displaying compatibility matrix **2-795**  
   displaying endpoint information **2-800**  
   displaying entities **2-801**  
   displaying FSM session **2-802**

displaying messages **2-803**  
 displaying negotiated **2-805**  
 displaying rollback-timer **2-806**  
 displaying session information **2-807**  
 displaying software version **2-808**  
 displaying state **2-808**  
 forcing switchover to standby supervisor engine **2-383**  
 loading new image **2-379**  
 starting process **2-381**  
 stopping rollback timer **2-377**

**J**

Jumbo frames  
   enabling jumbo frames **2-481**

**L**

LACP  
   deselecting channeling protocol **2-91**  
   enabling LACP on an interface **2-91**  
   setting channeling protocol **2-91**  
 lacp port-priority command **2-393**  
 lacp system-priority command **2-394**  
 Layer 2  
   displaying ACL configuration **2-825**  
 Layer 2 interface type  
   specifying a nontrunking, nontagged single VLAN interface **2-1059**  
   specifying a trunking VLAN interface **2-1059**  
 Layer 2 protocol ports  
   displaying **2-810**  
 Layer 2 protocol-tunnel  
   error detection for **2-248**  
 Layer 2 protocol tunneling error recovery **2-391**  
 Layer 2 switching  
   enabling voice VLANs **2-1046, 2-1047, 2-1049, 2-1051, 2-1052**

- modifying switching characteristics **2-1046, 2-1047, 2-1049, 2-1051, 2-1052**
  - Layer 2 traceroute
    - IP addresses **2-1095**
  - Layer 3 interface, assign counters **2-139**
  - Layer 3 switching
    - displaying information about an adjacency table **2-642**
    - displaying port status **2-727**
    - displaying status of native VLAN tagging **2-727**
  - license right-to-use activate command **2-395**
  - license right-to-use deactivate command **2-396**
  - link flap
    - error detection for **2-248**
  - link-status event messages
    - disabling
      - globally **2-398, 2-401**
      - on an interface **2-399, 2-402**
    - enabling
      - globally **2-398, 2-401**
      - on an interface **2-399, 2-402**
  - LLDP
    - enabling power negotiation **2-397**
  - lldp tlv-select power-management command **2-397**
  - log buffer
    - show status **2-739**
  - logging
    - controlling IP ARP packets **2-301**
  - loopback error
    - detection for **2-248**
- 
- M**
  - MAB, display information **2-822**
  - MAB, enable and configure **2-404**
  - mab command **2-404**
  - MAC Access Control Lists
    - See MAC ACLs
  - MAC ACLs
  - defining extended MAC access list **2-406**
  - displaying MAC ACL information **2-962**
  - naming an ACL **2-406**
  - mac-address (virtual switch) command **2-409**
  - MAC addresses
    - disabling MAC address learning per VLAN **2-415**
    - displaying
      - notification settings **2-244, 2-785, 2-836**
    - MAC address filtering
      - configuring **2-419**
      - disabling **2-419**
      - enabling **2-419**
    - MAC address learning on a VLAN, enabling **2-415**
    - MAC address table
      - adding static entries **2-447**
      - clearing dynamic entries **2-120, 2-122**
      - configuring aging time **2-409, 2-411**
      - displaying dynamic table entry information **2-832**
      - displaying entry count **2-830**
      - displaying information **2-826**
      - displaying interface-based information **2-834**
      - displaying multicast information **2-837**
      - displaying notification information **2-839**
      - displaying protocol-based information **2-841**
      - displaying static table entry information **2-843**
      - displaying the MAC address aging time **2-828**
      - displaying VLAN-based information **2-846**
      - enabling authentication bypass **2-224**
      - enabling notifications **2-417**
      - learning in the protocol buckets **2-412**
      - removing static entries **2-447**
    - mac address-table learning vlan command **2-415**
    - MAC address tables
      - adding static entries **2-419**
      - deleting secure or specific addresses **2-127**
      - disabling IGMP snooping on static MAC addresses **2-419**
      - removing static entries **2-419**
    - mac-address-table static **2-419**

- MAC address unicast filtering  
dropping unicast traffic **2-419**
- MAC authentication bypass (MAB), display information **2-822**
- MAC authorization bypass(MAB), enable and configure **2-404**
- macro  
displaying descriptions **2-446**
- macro auto global processing command **2-428, 2-430, 2-433, 2-435, 2-437, 2-439, 2-441, 2-443, 2-848**
- macro auto monitor command **2-440**
- macro keywords  
help strings **2-2**
- macros  
adding a global description **2-446**  
cisco global **2-444**  
system-cpp **2-445**
- mapping secondary VLANs to MST instance **2-574**
- mapping VLAN(s) to an MST instance **2-279**
- match (class-map configuration) command **2-14, 2-191, 2-193, 2-195, 2-197, 2-450, 2-577, 2-1034, 2-1036, 2-1038, 2-1040, 2-1044**
- maximum transmission unit (MTU)  
displaying the system MTU setting **2-952**  
setting the maximum Layer 2 payload size **2-1086**
- MD5  
verifying MD5 signature **2-1116**
- message digest 5  
See MD5
- MFIB  
clearing ip mfib counters **2-116**  
clearing ip mfib fastdrop **2-117**  
displaying all active MFIB routes **2-764**  
displaying MFIB fastdrop table entries **2-766**  
enabling IP MFIB fastdrops **2-339**
- MLD  
configuring snooping  
last-listener-query-intervals **2-367**  
configuring snooping  
listener-message-suppression **2-369**  
configuring snooping robustness-variables **2-370**
- configuring topology change notifications **2-372**  
counting snooping last-listener-queries **2-365**  
enabling snooping **2-363**  
enabling snooping on a VLAN **2-373**
- MLD snooping  
displaying **2-789**
- mode, MVR **2-482**
- modes  
access-group **2-6**  
show access-group interface **2-555, 2-641, 2-911**  
switching between PVST+, MST, and Rapid PVST **2-1004**  
See also command modes
- module password clearing **2-103**
- module reset  
resetting a module by toggling the power **2-268**
- monitor capture {access-list | class-map} command **2-462**
- monitor capture mycap match command **2-469**
- monitor capture start command **2-471**
- More-- prompt  
filter **1-6**  
search **1-7**
- MST  
designating the primary and secondary root **2-1013**  
displaying MST protocol information **2-940**  
displaying region configuration information **2-940**  
displaying spanning tree information **2-940**  
entering MST configuration submode **2-1007**  
setting configuration revision number **2-610**  
setting path cost and port priority for instances **2-1005**  
setting the forward delay timer for all instances **2-1009**  
setting the hello-time delay timer for all instances **2-1010**  
setting the max-age timer for all instances **2-1011**  
setting the MST region name **2-488**  
specifying the maximum number of hops **2-1012**  
switching between PVST+ and Rapid PVST **2-1004**  
using the MST configuration submode revision command **2-610**

- using the submode name command **2-488**
- MTU**  
displaying global MTU settings **2-952**
- multi-auth**, setting **2-30**
- Multicase Listener Discovery**  
See MLD
- multicast**  
enabling storm control **2-1032**  
show ancp **2-644**
- multicast/unicast packets**  
prevent forwarding **2-1058**
- Multicast Forwarding Information Base**  
See MFIB
- multicast group address, MVR** **2-485**
- multicast VLAN, MVR** **2-482**
- multicast VLAN registration**  
See MVR
- multi-domain**, setting **2-30**
- multiple-character patterns** **1-8**
- Multiple Spanning Tree**  
See MST
- MVR**  
configuring **2-482**  
configuring interfaces **2-485**  
displaying **2-868**  
displaying interface information **2-869**  
members, displaying **2-871**
- mvr (global configuration) command** **2-482**
- mvr (interface configuration) command** **2-485**
- mvr vlan group command** **2-486**
- 
- N**
- native VLAN**  
controlling tagging of traffic **2-1079**  
displaying ports eligible for native tagging **2-964**  
displaying ports eligible for tagging **2-964**  
enabling tagging on 802.1Q trunk ports **2-1127**  
specifying the tagging of traffic **2-1080**
- NetFlow**  
enabling NetFlow statistics **2-342**  
including infer fields in routing statistics **2-342**  
netflow-lite exporter command **2-489**  
netflow-lite monitor command **2-491**  
netflow-lite sampler command **2-493**  
next-hop  
displaying CEF VLAN information **2-741**
- nmsp attachment suppress command** **2-496**
- nmsp command** **2-495**
- no form of a command, using** **1-6**
- NVRAM**  
debugging NVRAM activities **2-163**
- 
- O**
- open access on a port, enabling** **2-32**
- options timeout (netflow-lite exporter submode) command** **2-254, 2-497**
- output**  
pattern searches **1-7**
- 
- P**
- packet counters, display for PPPoE Intermediate Agent** **2-909**
- packet counters (statistics)**  
clear for PPPoE Intermediate Agent **2-129**
- packet forwarding**  
prevent unknown packets **2-1058**
- packet memory failure**  
direct switch action upon detection **2-209**
- packet memory test**  
bootup, displaying results **2-678, 2-680**  
ongoing, displaying results **2-682**
- packet-offset (netflow-lite sampler submode) command** **2-499**
- packet rate (netflow-lite sampler submode) command** **2-501**

- packet-section size (netflow-lite sampler submode command [2-503](#))
- PACL
  - access-group mode [2-6](#)
- paging prompt
  - see --More-- prompt
- PAgP
  - clearing port channel information [2-126](#)
  - debugging PAgP activity [2-164](#)
  - deselecting channeling protocol [2-91](#)
  - displaying port channel information [2-881, 2-883](#)
  - hot standby mode
    - returning to defaults [2-506](#)
    - selecting ports [2-506](#)
  - input interface of incoming packets
    - learning [2-505](#)
    - returning to defaults [2-505](#)
  - setting channeling protocol [2-91](#)
- parentheses [1-11](#)
- password
  - clearing on an intelligent line module [2-103](#)
  - establishing enhanced password security [2-1114](#)
  - setting username [2-1114](#)
- PBR
  - displaying route maps [1-20](#)
  - redistributing route maps [1-20](#)
- PM activities
  - debugging [2-167](#)
  - disabling debugging [2-167](#)
- PoE
  - error detection for [2-248](#)
- PoE policing
  - configure on an interface [2-543](#)
- PoE policing and monitoring
  - displaying status [2-908](#)
- police (percent) command [2-517](#)
- police (two rates) command [2-519, 2-521](#)
- police command [2-512](#)
- policing, configure PoE [2-543](#)
- policing and monitoring status
  - displaying PoE [2-908](#)
- Policy Based Routing
  - See PBR
- policy maps
  - creating [2-525](#)
  - marking [2-622](#)
  - See also QoS, hierarchical policies
  - traffic classification
    - defining the class
    - defining trust states [2-1102](#)
- port, dual-capable
  - selecting the connector [2-459](#)
- Port Aggregation Protocol
  - See PAgP
- port-based authentication
  - displaying debug messages [2-152](#)
  - displaying statistics and status [2-684](#)
  - enabling 802.1X [2-228](#)
  - host modes [2-221](#)
  - manual control of authorization state [2-228](#)
  - periodic re-authentication
    - enabling [2-231](#)
  - re-authenticating 802.1X-enabled ports [2-230](#)
  - switch-to-client frame-retransmission number [2-226](#)
- port channel
  - accessing [2-285](#)
  - creating [2-285](#)
  - displaying information [2-881, 2-883](#)
  - load distribution method
    - resetting to defaults [2-527](#)
    - setting [2-527](#)
- port-channel standalone-disable command [2-529](#)
- port control, changing from unidirectional or bidirectional [2-23](#)
- port-control value, configuring [2-36](#)
- port range
  - executing [2-286](#)
- port security

- debugging ports security [2-168](#)
- deleting secure or specific addresses [2-127](#)
- displaying settings for an interface or switch [2-894](#)
- enabling [2-1064](#)
- filter source IP and MAC addresses [2-348](#)
- setting action upon security violation [2-1064](#)
- setting the rate limit for bad packets [2-1064](#)
- sticky port [2-1064](#)
- Port Trust Device**
  - displaying [2-914](#)
- port types, MVR** [2-485](#)
- power efficient-ethernet auto command** [2-535](#)
- power inline four-pair forced command** [2-540](#)
- power inline logging global command** [2-542](#)
- power negotiation through LLDP, enabling** [2-397](#)
- power status**
  - displaying inline power [2-900](#)
  - displaying power status [2-900](#)
- power supply**
  - configuring combined and redundant power on the Catalyst 4507R [2-530](#)
  - configuring inline power [2-536](#)
  - configuring power consumption [2-530](#)
  - displaying the EEPROM [2-705](#)
  - setting inline power state [2-534](#)
- PPPoE Discovery**
  - enable vendor-tag stripping on packets
  - PPPoE Server**
    - enable vendor-tag stripping on Discovery packets [2-564](#)
- PPPoE Discovery packets, limit rate arriving on an interface** [2-562](#)
- PPPoE Intermediate Agent**
  - clear statistics (packet counters) [2-129](#)
  - debugging [2-169](#)
- pppoe intermediate-agent**
  - enable intermediate agent on a switch [2-554](#)
  - enable on an interface VLAN range [2-557](#)
  - enable PPPoE Intermediate Agent on an interface [2-555](#)
- enable vendor-tag stripping of Discovery packets [2-564](#)
- format-type (global) [2-558](#)
- limit rate of PPPoE Discovery packets [2-562](#)
- set circuit-id or remote-id for an interface [2-560](#)
- set circuit-id or remote-id for an interface VLAN range [2-561](#)
- set trust configuration on an interface [2-562, 2-563](#)
- PPPoE Intermediate Agent, display configuration and statistics (packet counters)** [2-909](#)
- priority command** [2-565](#)
- priority-queue command** [2-141](#)
- Private VLAN**
  - See PVLANs
- privileged EXEC mode, summary** [1-5](#)
- prompts**
  - system [1-5](#)
- protocol tunneling**
  - configuring encapsulation rate [2-391](#)
  - disabling [2-386](#)
  - displaying port information [2-810](#)
  - enabling [2-386](#)
  - setting a CoS value for Layer 2 packets [2-388](#)
  - setting a drop threshold for Layer 2 packets [2-389](#)
- PVLANs**
  - configuring isolated, primary, and community PVLANs [2-567](#)
  - controlling tagging of native VLAN traffic [2-1079](#)
  - disabling sticky-ARP [2-345](#)
  - displaying map information for VLAN SVIs [2-724](#)
  - displaying PVLAN information [2-970](#)
  - enabling interface configuration mode [2-1059](#)
  - enabling sticky-ARP [2-345](#)
  - mapping VLANs to the same SVI [2-571](#)
  - specifying host ports [2-1059](#)
  - specifying promiscuous ports [2-1059](#)
- PVST+**
  - switching between PVST and MST [2-1004](#)

**Q****QoS**

- account Layer 2 encapsulation **2-579**
- attaching a policy-map to an interface **2-613**
- automatic configuration **2-44, 2-48, 2-52, 2-56, 2-60, 2-64, 2-67**
- class maps
  - creating **2-97**
  - defining the match criteria **2-450**
- clearing aggregate counters **2-130**
- configuring auto **2-64**
- defining a named aggregate policer **2-581**
- displaying aggregate policer information **2-912**
- displaying auto configuration **2-652**
- displaying class maps information **2-668**
- displaying configuration information **2-652**
- displaying configurations of policies **2-889**
- displaying policy map information **2-885, 2-892**
- displaying QoS information **2-911**
- displaying QoS map information **2-916**
- egress queue-sets
  - enabling the priority queue **2-141**
- enabling global configuration mode **2-56, 2-578**
- enabling per-VLAN QoS for a Layer 2 interface **2-583**
- hierarchical policies
  - average-rate traffic shaping on a class **2-635**
  - bandwidth allocation for a class **2-77, 2-96**
  - creating a service policy **2-616**
  - marking **2-622**
  - strict priority queueing (LLQ) **2-565**
- policy maps
  - creating **2-525**
  - marking **2-622**
  - traffic classifications
    - trust states **2-1102**
  - setting the trust state **2-581**
  - specifying flow-based match criteria **2-453**

## Supervisor Engine 6-E

- setting CoS **2-624**
- setting DSCP **2-627**
- setting precedence values **2-630**
- setting QoS group identifiers **2-633**

**QoS CoS**

configuring for tunneled Layer 2 protocol packets **2-388**

## quality of service

See QoS

querytime, MVR **2-482**question command **1-1**

## queueing information

displaying **2-914**

## queue limiting

configuring packet limits **2-583**

**R**

## Rapid PVST

switching between PVST and MST **2-1004**

re-authenticating 802.1X-enabled ports **2-230**

## re-authentication

periodic **2-231**

set the time **2-233**

reauthentication, enabling **2-35**

## reboots

restoring bindings across **2-307**

receiver ports, MVR **2-485**

## recovery mechanism

display **2-102, 2-693**

## redundancy

accessing the main CPU **2-585**

changing from active to standby supervisor engine **2-589**

displaying information **2-918**

displaying ISSU config-sync failure information **2-922**

displaying redundancy facility information **2-918**

displaying RF client list **2-918**  
 displaying RF operational counters **2-918**  
 displaying RF states **2-918**  
 enabling automatic synchronization **2-74**  
 forcing switchover to standby supervisor engine **2-589**  
 mismatched command listing **2-587**  
 set the mode **2-460**  
 synchronizing the route processor configurations **2-447**  
 related documentation **1-20**  
 remote-id, setting for an interface **2-560**  
 remote-id, setting for an interface VLAN range **2-561**  
 remote SPAN  
   See RSPAN  
 renew commands  
   ip dhcp snooping database **2-593**  
 rep admin vlan command **2-594**  
 rep block port command **2-595**  
 rep lsl-age-timer command **2-599**  
 rep preempt delay command **2-601**  
 rep preempt segment command **2-603**  
 rep segment command **2-604**  
 rep stcn command **2-607**  
 resetting PVLAN trunk  
   setting switchport to trunk **2-1059**  
 retry failed authentication, configuring **2-26**  
 rj45 connector, selecting the connector **2-459**  
 ROM monitor mode  
   summary **1-6**  
 Route Processor Redundancy  
   See redundancy  
 router, set to become ANCP client **2-18**  
 RPF  
   disabling IPv4 exists-only checks **2-350**  
   enabling IPv4 exists-only checks **2-350**  
 RPR  
   set the redundancy mode **2-460**  
 RSPAN

converting VLAN to RSPAN VLAN **2-592**  
 displaying list **2-972**

## S

sampler (netflow-lite monitor submode) command **2-611**  
 saving configuration changes **1-11**  
 secure address, configuring **2-530**  
 secure ports, limitations **2-1065**  
 server (AAA) alive actions, configuring **2-26**  
 server (AAA) dead actions, configuring **2-26**  
 service-policy command (policy-map class) **2-616**  
 session classification, defining **2-30**  
 set the redundancy mode **2-460**  
 sfp connector, selecting the connector **2-459**  
 shape command **2-635**  
 shell trigger command **2-639, 2-928**  
 show ancp multicast **2-644**  
 show authentication interface command **2-646**  
 show authentication registration command **2-646**  
 show authentication sessions command **2-646**  
 show auto security command **2-653**  
 show capture command **2-860**  
 show commands  
   filtering parameters **1-7**  
   searching and filtering **1-6**  
   show platform commands **1-11**  
 show device-sensor cache command **2-670**  
 show interfaces (virtual switch) command **2-714**  
 show interfaces counters (virtual switch) command **2-718**  
 show ipv6 snooping counters command **2-785**  
 show ip wccp command **2-776**  
 show ip wccp detail command **2-776**  
 show ip wccp view command **2-776**  
 show license right-to-use command **2-816**  
 show mab command **2-822**  
 show mac address-table learning command **2-244, 2-836**  
 show macro auto monitor device command **2-851, 2-853, 2-855**

show monitor capture command **2-862, 2-864**  
 show monitor capture file command **2-864**  
 show mvr command **2-868**  
 show mvr interface command **2-869**  
 show mvr members command **2-871**  
 show netflow-lite exporter command **2-873**  
 show netflow-lite monitor command **2-875**  
 show netflow-lite sampler command **2-877**  
 show nmsp command **2-878**  
 show pagp dual-active (virtual switch) command **2-883**  
 show switch virtual (virtual switch) command **2-946**  
 show vlan group command **2-965**  
 show vlan mapping command **2-967**  
 show vslp (virtual switch) command **2-975**  
 Simple Network Management Protocol  
   See SNMP  
 single-character patterns  
   special characters **1-7**  
 single-host, setting **2-30**  
 slaveslot0  
   displaying information on the standby supervisor **2-931**  
 slot0  
   displaying information about the system **2-933**  
 SNMP  
   debugging spanning tree activities **2-172**  
   ifIndex persistence  
     clearing SNMP ifIndex commands **2-981**  
     compress SNMP ifIndex table format **2-988**  
     disabling globally **2-987**  
     disabling on an interface **2-988**  
     enabling globally **2-987**  
     enabling on an interface **2-983**  
   informs  
     disabling **2-985**  
     enabling **2-985**  
   traps  
     configuring to send when storm occurs **2-1030**  
     disabling **2-985**  
   enabling **2-985**  
   mac-notification  
     adding **2-989**  
     removing **2-989**  
   source (netflow-lite exporter submode) command **2-990**  
   source ports, MVR **2-485**  
   SPAN commands  
     configuring a SPAN session to monitor **2-476**  
     displaying SPAN session information **2-952, 2-1032**  
   SPAN enhancements  
     displaying status **2-860**  
   Spanning Tree Protocol  
     See STP  
   SPAN session  
     displaying session information **2-860**  
     filter ACLs **2-476**  
     specify encapsulation type **2-476**  
     turn off host learning based on ingress packets **2-476**  
   special characters  
     anchoring, table **1-10**  
 SSO **2-460**  
 standard desktop  
   enabling Cisco-recommended features **2-420**  
 standard desktop and Cisco IP phone  
   enabling Cisco-recommended features **2-422**  
 sticky address, configuring **2-531**  
 sticky-ARP  
   disabling on PVLANS **2-345**  
   enabling on PVLANS **2-345**  
 sticky port  
   deleting **2-127**  
   enabling security **2-1064**  
 storm control  
   configuring for action when storm occurs **2-1030**  
   disabling suppression mode **2-691**  
   displaying settings **2-943**  
   enabling **2-1030**  
   enabling broadcast **2-1030, 2-1032**  
   enabling multicast **2-1030, 2-1032**

- enabling suppression mode **2-691**  
 enabling timer to recover from error disable **2-251**  
 enabling unicast **2-1030, 2-1032**  
 multicast, enabling **2-1032**  
 setting high and low levels **2-1030**  
 setting suppression level **2-691**
- STP**  
 configuring link type for a port **2-1002**  
 configuring tunneling encapsulation rate **2-391**  
 debugging all activities **2-172**  
 debugging spanning tree activities **2-172**  
 debugging spanning tree BackboneFast events **2-174**  
 debugging spanning tree UplinkFast **2-177**  
 detecting misconfiguration **2-999**  
 displaying active interfaces only **2-935**  
 displaying BackboneFast status **2-935**  
 displaying bridge status and configuration **2-935**  
 displaying spanning tree debug messages **2-172**  
 displaying summary of interface information **2-935**  
 enabling BPDU filtering by default on all PortFast ports **2-1018**  
 enabling BPDU filtering on an interface **2-995**  
 enabling BPDU guard by default on all PortFast ports **2-1020**  
 enabling BPDU guard on an interface **2-997**  
 enabling extended system ID **2-1000**  
 enabling loop guard as a default on all ports **2-1003**  
 enabling PortFast by default on all access ports **2-1021**  
 enabling PortFast mode **2-1016**  
 enabling protocol tunneling for **2-386**  
 enabling root guard **2-1001**  
 enabling spanning tree BackboneFast **2-994**  
 enabling spanning tree on a per VLAN basis **2-1025**  
 enabling spanning tree UplinkFast **2-1023**  
 setting an interface priority **2-1022**  
 setting drop threshold for **2-389**  
 setting pathcost **2-998**  
 setting the default pathcost calculation method **2-1015**  
 subinterface configuration mode, summary **1-6**
- SVI**  
 creating a Layer 3 interface on a VLAN **2-288**  
 switch (virtual switch) command **2-1046**  
 switch convert mode (virtual switch) command **2-1047**  
 switching characteristics  
     excluding from link-up calculation **2-1056**  
     modifying **2-1056**  
     returning to interfaces  
         capture function **2-1056**  
 switchport **2-1080**  
 switchport interfaces  
     displaying status of Layer 3 port **2-727**  
     displaying status of native VLAN tagging **2-727**  
 switchport vlan mapping command **2-1084**  
 switch shim  
     debugging **2-175**  
     disabling debugging **2-175**  
 switch to router connection  
     enabling Cisco-recommended features **2-424**  
 switch to switch connection  
     enabling Cisco-recommended features **2-426**  
 switch virtual domain (virtual switch) command **2-1049**  
 switch virtual interface  
     See SVI  
 switch virtual link (virtual switch) command **2-1051**  
 sw-vlan **2-178**  
 system prompts **1-5**
- 
- T**
- Tab key  
     command completion **1-1**
- tables  
     characters with special meaning **1-7**  
     mac access-list extended subcommands **2-406**  
     multipliers **1-9**  
     relationship between duplex and speed commands **2-1028**

- show cable-diagnostics tdr command output fields **2-659**
- show cdp neighbors detail field descriptions **2-667**
- show cdp neighbors field descriptions **2-666**
- show ip dhcp snooping command output **2-647, 2-822**
- show ip interface field descriptions **2-762**
- show policy-map control-plane field descriptions **2-888**
- show vlan command output fields **2-971**
- show vtp command output fields **2-979**
- special characters **1-9**
- special characters used for anchoring **1-10**
- speed command options **2-453, 2-1028**
- valid interface types **2-281, 2-283**
- TAC**  
displaying information useful to TAC **2-953**
- TCAM**  
debugging spanning tree activities **2-172**
- TDR**  
displaying cable diagnostic test results **2-658**  
test condition of copper cables **2-1090**
- temperature readings  
displaying information **2-688**
- template data timeout (netflow-lite exporter submode) command **2-1088**
- timer information **2-693**
- traffic monitor  
display status **2-822**
- traffic shaping  
enable on an interface **2-637**
- transport udp (netflow-lite exporter submode) command **2-1098**
- transport udp load-share (netflow-lite exporter submode) command **2-1100**
- traps, enabling **2-985**
- trunk encapsulation  
setting format **2-1080**
- trunk interfaces  
displaying trunk interfaces information **2-734**
- trunk port, configuring VLAN mapping **2-1084**
- trunk ports, display VLAN mapping information **2-967**
- trust configuration, setting on an interface **2-562, 2-563**
- trust state  
setting **2-296**
- ttl (netflow-lite exporter submode) command **2-1104**
- tunnel ports  
displaying information about Layer 2 protocol **2-810**
- TX queues**  
allocating bandwidth **2-1106**  
returning to default values **2-1106**  
setting priority to high **2-1106**  
specifying burst size **2-1106**  
specifying traffic rate **2-1106**
- 
- U**
- UDLD**  
displaying administrative and operational status **2-955**  
enabling by default on all fiber interfaces **2-1108**  
enabling on an individual interface **2-1110**  
preventing a fiber interface from being enabled **2-1110**  
resetting all shutdown ports **2-1112**  
setting the message timer **2-1108**
- Unidirectional Link Detection**  
See UDLD
- unidirection port control, changing from bidirectional **2-23**
- unknown multicast traffic, preventing **2-1058**
- unknown unicast traffic, preventing **2-1058**
- user EXEC mode, summary **1-5**
- username  
setting password and privilege level **2-1114**
- 
- V**
- VACLs**  
access-group mode **2-6**

- applying VLAN access maps [2-1129](#)
  - displaying VLAN access map information [2-962](#)
  - specifying an action in a VLAN access map [2-13](#)
  - specifying the match clause for a VLAN access-map sequence [2-448](#)
  - using a VLAN filter [2-1129](#)
- VLAN**
- applying an ARP ACL [2-290](#)
  - configuring [2-1118](#)
  - configuring service policies [2-1123](#)
  - converting to RSPAN VLAN [2-592](#)
  - displaying CEF information [2-741](#)
  - displaying CEF next-hop information [2-741](#)
  - displaying information on switch interfaces [2-752](#), [2-756](#)
  - displaying information on VLAN switch interfaces [2-759](#)
  - displaying information sorted by group IP address [2-752](#), [2-756](#)
  - displaying IP address and version information [2-752](#), [2-756](#)
  - displaying Layer 2 VLAN information [2-958](#)
  - displaying statistical information [2-858](#)
  - displaying VLAN information [2-960](#)
  - enabling dynamic ARP inspection [2-299](#)
  - enabling Explicit Host Tracking [2-330](#)
  - enabling guest per-port [2-219](#)
  - enabling guest VLAN supplicant [2-212](#), [2-220](#)
  - entering VLAN configuration mode [2-1123](#), [2-1125](#)
  - native frames
    - enabling tagging on all 802.1Q trunk ports [2-1127](#)
  - pruning the list for VTP [2-1080](#)
  - setting the list of allowed [2-1080](#)
- VLAN, create or modify a group** [2-1130](#)
- VLAN Access Control Lists**
- See VACLS
- VLAN access map**
- See VACLS
- VLAN database**
- resetting [2-609](#)
- VLAN debugging**
- limiting output [2-148](#)
- vlan group command** [2-1130](#)
- VLAN groups, display VLANs mapped** [2-965](#)
- VLAN link-up calculation**
- excluding a switch port [2-1056](#)
  - including a switch port [2-1056](#)
- VLAN manager**
- debugging [2-178](#)
  - disabling debugging [2-178](#)
  - IOS file system error tests
    - debugging [2-179](#)
    - disabling debugging [2-179](#)
- VLAN mapping**
- configuring [2-1084](#)
  - displaying [2-967](#)
- VLAN mapping, configure on trunk port** [2-1084](#)
- VLAN mapping on trunk ports, display information** [2-967](#)
- VLAN Query Protocol**
- See VQP
- VLAN query protocol (VQPC)**
- debugging [2-185](#)
- VLANs**
- clearing
    - counters [2-133](#)
  - clearing hardware logic [2-105](#)
  - configuring
    - internal allocation scheme [2-1132](#)
  - displaying
    - internal VLAN allocation information [2-966](#)
    - RSPAN VLANs [2-972](#)
    - entering VLAN configuration mode [2-1125](#)
- VMPS**
- configuring servers [2-1136](#)
  - reconfirming dynamic VLAN assignments [2-185](#), [2-1134](#)
- voice VLANs**
- enabling [2-1052](#)
- VoIP**

configuring auto-QoS [2-64](#)

VQP

per-server retry count [2-1135](#)

reconfirming dynamic VLAN assignments [2-185](#),  
[2-1134](#)

vrf (netflow-lite exporter submode) command [2-1138](#)

VTP

configuring the administrative domain name [2-1143](#)

configuring the device in VTP client mode [2-1142](#)

configuring the device in VTP server mode [2-1146](#)

configuring the device in VTP transparent mode [2-1147](#)

configuring tunnel encapsulation rate [2-391](#)

creating a VTP domain password [2-1144](#)

displaying domain information [2-978](#)

displaying statistics information [2-978](#)

enabling protocol tunneling for [2-386](#)

enabling pruning in the VLAN database [2-1145](#)

enabling VTP version 2 mode [2-1148](#)

modifying the VTP configuration storage file name [2-1141](#)

set drop threshold for [2-389](#)

VTP protocol code

activating debug messages [2-182](#)

deactivating debug messages [2-182](#)

---

**W**

Weauth fallback, enabling [2-29](#)