



# Installation and Configuration Note for the Cisco Catalyst 4500 E-Series Supervisor Engine 7L-E

Revised: September 14, 2011

Product Numbers: WS-X45-SUP7L-E=

This publication describes how to install the Catalyst 4500 E-series Supervisor Engine 7L-E. For configuration information for the supervisor engines and the switching modules, refer to the applicable software configuration guide.



Note

Catalyst 4500 E-series switching modules require an E-series supervisor engine running a software image compatible with that supervisor engine. Refer to your switch's release notes for compatibility information.

Table 1 provides a brief overview of the Supervisor Engine 7L-E features.

**Table 1**      **Supervisor Engine 7L-E Features**

Feature	Description
Chassis compatibility	The Supervisor Engine 7L-E is supported on the Catalyst 4503-E, Catalyst 4506-E, Catalyst 4507R-E, and the Catalyst 4507R+E switch chassis. The Supervisor Engine 7L-E is not supported on the Catalyst 4510R-E or the Catalyst 4510R+E switch chassis.
Software requirements (minimum)	Refer to your software release notes for the latest software release requirements.
Chassis slot restrictions	<ul style="list-style-type: none"><li>• Catalyst 4503-E: Slot 1 only</li><li>• Catalyst 4506-E: Slot 1 only</li><li>• Catalyst 4507R-E and Catalyst 4507R+E: Slot 3 and slot 4</li></ul>
Bandwidth per slot	48-Gbps



Americas Headquarters:  
Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

For additional specifications and features of the Supervisor Engine 7L-E, including physical and environmental specifications, refer to the Supervisor Engine 7L-E data sheet at the following URL:

[http://www.cisco.com/en/US/products/hw/switches/ps4324/products\\_data\\_sheets\\_list.html](http://www.cisco.com/en/US/products/hw/switches/ps4324/products_data_sheets_list.html)

## Contents

This document contains these sections:

- [Safety Overview, page 2](#)
- [Supervisor Engine 7L-E Overview, page 8](#)
- [Removing and Installing the Supervisor Engine 7L-E, page 13](#)
- [Attaching Interface Cables to the Supervisor Engine 7L-E, page 18](#)
- [Configuring Your Supervisor Engine 7L-E, page 20](#)
- [Obtaining Documentation and Submitting a Service Request, page 20](#)

## Safety Overview

Throughout this publication, safety warnings appear in procedures that can harm you if performed incorrectly. A warning symbol precedes each warning statement.

### Statement 1071—Warning Definition



Warning

#### IMPORTANT SAFETY INSTRUCTIONS

**This warning symbol means danger. You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents. Use the statement number provided at the end of each warning to locate its translation in the translated safety warnings that accompanied this device.** Statement 1071

#### SAVE THESE INSTRUCTIONS

Waarschuwing

#### BELANGRIJKE VEILIGHEIDSINSTRUCTIES

**Dit waarschuwingssymbool betekent gevaar. U verkeert in een situatie die lichamelijk letsel kan veroorzaken. Voordat u aan enige apparatuur gaat werken, dient u zich bewust te zijn van de bij elektrische schakelingen betrokken risico's en dient u op de hoogte te zijn van de standaard praktijken om ongelukken te voorkomen. Gebruik het nummer van de verklaring onderaan de waarschuwing als u een vertaling van de waarschuwing die bij het apparaat wordt geleverd, wilt raadplegen.**

#### BEWAAR DEZE INSTRUCTIES

<b>Varoitus</b>	<p><b>TÄRKEITÄ TURVALLISUUSOHJEITA</b></p> <p>Tämä varoitusmerkki merkitsee vaaraa. Tilanne voi aiheuttaa ruumiillisia vammoja. Ennen kuin käsittelet laitteistoa, huomioi sähköpiirien käsittelemiseen liittyvät riskit ja tutustu onnettomuuksien yleisiin ehkäisytapoihin. Turvallisuusvaroitusten käännökset löytyvät laitteen mukana toimitettujen käännettyjen turvallisuusvaroitusten joukosta varoitusten lopussa näkyvien lausuntonumeroiden avulla.</p> <p><b>SÄILYTÄ NÄMÄ OHJEET</b></p>
<b>Attention</b>	<p><b>IMPORTANTES INFORMATIONS DE SÉCURITÉ</b></p> <p>Ce symbole d'avertissement indique un danger. Vous vous trouvez dans une situation pouvant entraîner des blessures ou des dommages corporels. Avant de travailler sur un équipement, soyez conscient des dangers liés aux circuits électriques et familiarisez-vous avec les procédures couramment utilisées pour éviter les accidents. Pour prendre connaissance des traductions des avertissements figurant dans les consignes de sécurité traduites qui accompagnent cet appareil, référez-vous au numéro de l'instruction situé à la fin de chaque avertissement.</p> <p><b>CONSERVEZ CES INFORMATIONS</b></p>
<b>Warnung</b>	<p><b>WICHTIGE SICHERHEITSHINWEISE</b></p> <p>Dieses Warnsymbol bedeutet Gefahr. Sie befinden sich in einer Situation, die zu Verletzungen führen kann. Machen Sie sich vor der Arbeit mit Geräten mit den Gefahren elektrischer Schaltungen und den üblichen Verfahren zur Vorbeugung vor Unfällen vertraut. Suchen Sie mit der am Ende jeder Warnung angegebenen Anweisungsnummer nach der jeweiligen Übersetzung in den übersetzten Sicherheitshinweisen, die zusammen mit diesem Gerät ausgeliefert wurden.</p> <p><b>BEWAHREN SIE DIESE HINWEISE GUT AUF.</b></p>
<b>Avvertenza</b>	<p><b>IMPORTANTI ISTRUZIONI SULLA SICUREZZA</b></p> <p>Questo simbolo di avvertenza indica un pericolo. La situazione potrebbe causare infortuni alle persone. Prima di intervenire su qualsiasi apparecchiatura, occorre essere al corrente dei pericoli relativi ai circuiti elettrici e conoscere le procedure standard per la prevenzione di incidenti. Utilizzare il numero di istruzione presente alla fine di ciascuna avvertenza per individuare le traduzioni delle avvertenze riportate in questo documento.</p> <p><b>CONSERVARE QUESTE ISTRUZIONI</b></p>
<b>Advarsel</b>	<p><b>VIKTIGE SIKKERHETSINSTRUKSJONER</b></p> <p>Dette advarselssymbolet betyr fare. Du er i en situasjon som kan føre til skade på person. Før du begynner å arbeide med noe av utstyret, må du være oppmerksom på farene forbundet med elektriske kretser, og kjenne til standardprosedyrer for å forhindre ulykker. Bruk nummeret i slutten av hver advarsel for å finne oversettelsen i de oversatte sikkerhetsadvarslene som fulgte med denne enheten.</p> <p><b>TA VARE PÅ DISSE INSTRUKSJONENE</b></p>

**Aviso INSTRUÇÕES IMPORTANTES DE SEGURANÇA**

Este símbolo de aviso significa perigo. Você está em uma situação que poderá ser causadora de lesões corporais. Antes de iniciar a utilização de qualquer equipamento, tenha conhecimento dos perigos envolvidos no manuseio de circuitos elétricos e familiarize-se com as práticas habituais de prevenção de acidentes. Utilize o número da instrução fornecido ao final de cada aviso para localizar sua tradução nos avisos de segurança traduzidos que acompanham este dispositivo.

**GUARDE ESTAS INSTRUÇÕES****¡Advertencia! INSTRUCCIONES IMPORTANTES DE SEGURIDAD**

Este símbolo de aviso indica peligro. Existe riesgo para su integridad física. Antes de manipular cualquier equipo, considere los riesgos de la corriente eléctrica y familiarícese con los procedimientos estándar de prevención de accidentes. Al final de cada advertencia encontrará el número que le ayudará a encontrar el texto traducido en el apartado de traducciones que acompaña a este dispositivo.

**GUARDE ESTAS INSTRUCCIONES****Varning! VIKTIGA SÄKERHETSANVISNINGAR**

Denna varningssignal signalerar fara. Du befinner dig i en situation som kan leda till personskada. Innan du utför arbete på någon utrustning måste du vara medveten om farorna med elkretsar och känna till vanliga förfaranden för att förebygga olyckor. Använd det nummer som finns i slutet av varje varning för att hitta dess översättning i de översatta säkerhetsvarningar som medföljer denna anordning.

**SPARA DESSA ANVISNINGAR****Figyelem FONTOS BIZTONSÁGI ELOÍRÁSOK**

Ez a figyelmeztető jel veszélyre utal. Sérülésveszélyt rejte helyzetben van. Mielőtt bármely berendezésen munkát végezte, legyen figyelemmel az elektromos áramkörök okozta kockázatokra, és ismerkedjen meg a szokásos balesetvédelmi eljárásokkal. A kiadványban szereplő figyelmeztetések fordítása a készülékhez mellékelt biztonsági figyelmeztetések között található; a fordítás az egyes figyelmeztetések végén látható szám alapján kereshető meg.

**ORIZZE MEG EZEKET AZ UTASÍTÁSOKAT!****Предупреждение ВАЖНЫЕ ИНСТРУКЦИИ ПО СОБЛЮДЕНИЮ ТЕХНИКИ БЕЗОПАСНОСТИ**

Этот символ предупреждения обозначает опасность. То есть имеет место ситуация, в которой следует опасаться телесных повреждений. Перед эксплуатацией оборудования выясните, каким опасностям может подвергаться пользователь при использовании электрических цепей, и ознакомьтесь с правилами техники безопасности для предотвращения возможных несчастных случаев. Воспользуйтесь номером заявления, приведенным в конце каждого предупреждения, чтобы найти его переведенный вариант в переводе предупреждений по безопасности, прилагаемом к данному устройству.

**СОХРАНИТЕ ЭТИ ИНСТРУКЦИИ**

**警告** 重要的安全性说明

此警告符号代表危险。您正处于可能受到严重伤害的工作环境中。在您使用设备开始工作之前，必须充分意识到触电的危险，并熟练掌握防止事故发生的标准工作程序。请根据每项警告结尾提供的声明号码来找到此设备的安全性警告说明的翻译文本。

请保存这些安全性说明

**警告** 安全上の重要な注意事項

「危険」の意味です。人身事故を予防するための注意事項が記述されています。装置の取り扱い作業を行うときは、電気回路の危険性に注意し、一般的な事故防止策に留意してください。警告の各国語版は、各注意事項の番号を基に、装置に付属の「Translated Safety Warnings」を参照してください。

これらの注意事項を保管しておいてください。

**주의** 중요 안전 지침

이 경고 기호는 위험을 나타냅니다. 작업자가 신체 부상을 일으킬 수 있는 위험한 환경에 있습니다. 장비에 작업을 수행하기 전에 전기 회로와 관련된 위험을 숙지하고 표준 작업 관례를 숙지하여 사고를 방지하십시오. 각 경고의 마지막 부분에 있는 경고문 번호를 참조하여 이 장치와 함께 제공되는 번역된 안전 경고문에서 해당 번역문을 찾으십시오.

이 지시 사항을 보관하십시오.

**Aviso** **INSTRUÇÕES IMPORTANTES DE SEGURANÇA**

**Este símbolo de aviso significa perigo. Você se encontra em uma situação em que há risco de lesões corporais. Antes de trabalhar com qualquer equipamento, esteja ciente dos riscos que envolvem os circuitos elétricos e familiarize-se com as práticas padrão de prevenção de acidentes. Use o número da declaração fornecido ao final de cada aviso para localizar sua tradução nos avisos de segurança traduzidos que acompanham o dispositivo.**

**GUARDE ESTAS INSTRUÇÕES****Advarsel** **VIGTIGE SIKKERHEDSANVISNINGER**

**Dette advarselssymbol betyder fare. Du befinder dig i en situation med risiko for legemeskade. Før du begynder arbejde på udstyr, skal du være opmærksom på de involverede risici, der er ved elektriske kredsløb, og du skal sætte dig ind i standardprocedurer til undgåelse af ulykker. Brug erklæringsnummeret efter hver advarsel for at finde oversættelsen i de oversatte advarsler, der fulgte med denne enhed.**

**GEM DISSE ANVISNINGER****تحذير****إرشادات الأمان الهامة**

يوضح رمز التحذير هذا وجود خطر. وهذا يعني أنك متواجد في مكان قد ينتج عنه التعرض لإصابات. قبل بدء العمل، احذر مخاطر التعرض للصدمات الكهربائية وكن على علم بالإجراءات القياسية للحيلولة دون وقوع أي حوادث. استخدم رقم البيان الموجود في أحر كل تحذير لتحديد مكان ترجمته داخل تحذيرات الأمان المترجمة التي تأتي مع الجهاز. قم بحفظ هذه الإرشادات

**Upozorenje VAŽNE SIGURNOSNE NAPOMENE**

Ovaj simbol upozorenja predstavlja opasnost. Nalazite se u situaciji koja može prouzročiti tjelesne ozljede. Prije rada s bilo kojim uređajem, morate razumjeti opasnosti vezane uz električne sklopove, te biti upoznati sa standardnim načinima izbjegavanja nesreća. U prevedenim sigurnosnim upozorenjima, priloženima uz uređaj, možete prema broju koji se nalazi uz pojedino upozorenje pronaći i njegov prijevod.

**SAČUVAJTE OVE UPUTE****Upozornění DŮLEŽITÉ BEZPEČNOSTNÍ POKYNY**

Tento upozorňující symbol označuje nebezpečí. Jste v situaci, která by mohla způsobit nebezpečí úrazu. Před prací na jakémkoliv vybavení si uvědomte nebezpečí související s elektrickými obvody a seznamte se se standardními opatřeními pro předcházení úrazům. Podle čísla na konci každého upozornění vyhledejte jeho překlad v přeložených bezpečnostních upozorněních, která jsou přiložena k zařízení.

**USCHOVEJTE TYTO POKYNY****Προειδοποίηση ΣΗΜΑΝΤΙΚΕΣ ΟΔΗΓΙΕΣ ΑΣΦΑΛΕΙΑΣ**

Αυτό το προειδοποιητικό σύμβολο σημαίνει κίνδυνο. Βρίσκεστε σε κατάσταση που μπορεί να προκαλέσει τραυματισμό. Πριν εργαστείτε σε οποιοδήποτε εξοπλισμό, να έχετε υπόψη σας τους κινδύνους που σχετίζονται με τα ηλεκτρικά κυκλώματα και να έχετε εξοικειωθεί με τις συνήθειες πρακτικές για την αποφυγή ατυχημάτων. Χρησιμοποιήστε τον αριθμό δήλωσης που παρέχεται στο τέλος κάθε προειδοποίησης, για να εντοπίσετε τη μετάφρασή της στις μεταφρασμένες προειδοποιήσεις ασφαλείας που συνοδεύουν τη συσκευή.

**ΦΥΛΑΞΤΕ ΑΥΤΕΣ ΤΙΣ ΟΔΗΓΙΕΣ****אזהרה****הוראות בטיחות חשובות**

סימן אזהרה זה מסמל סכנה. אתה נמצא במצב העלול לגרום לפציעה. לפני שתעבוד עם ציוד כלשהו, עליך להיות מודע לסכנות הכרוכות במעגלים חשמליים ולהכיר את הנהלים המקובלים למניעת תאונות. השתמש במספר ההוראה המסופק בסופה של כל אזהרה כדי לאתר את התרגום באזהרות הבטיחות המתורגמות שמצורפות להתקן.

**שמור הוראות אלה****ВАЖНИ БЕЗБЕДНОСНИ НАПАТСТВИЈА**

Симболот за предупредување значи опасност. Се наоѓате во ситуација што може да предизвика телесни повреди. Пред да работите со опремата, бидете свесни за ризикот што постои кај електричните кола и треба да ги познавате стандардните постапки за спречување на несреќни случаи. Искористете го бројот на изјавата што се наоѓа на крајот на секое предупредување за да го најдете неговиот период во prevedените безбедносни предупредувања што се испорачани со уредот.

**ЧУВАЈТЕ ГИ ОБИЕ НАПАТСТВИЈА**

**Ostrzeżenie WAŻNE INSTRUKCJE DOTYCZĄCE BEZPIECZEŃSTWA**

Ten symbol ostrzeżenia oznacza niebezpieczeństwo. Zachodzi sytuacja, która może powodować obrażenia ciała. Przed przystąpieniem do prac przy urządzeniach należy zapoznać się z zagrożeniami związanymi z układami elektrycznymi oraz ze standardowymi środkami zapobiegania wypadkom. Na końcu każdego ostrzeżenia podano numer, na podstawie którego można odszukać tłumaczenie tego ostrzeżenia w dołączonym do urządzenia dokumencie z tłumaczeniami ostrzeżeń.

**NINIEJSZE INSTRUKCJE NALEŻY ZACHOWAĆ****Upozornenie DÔLEŽITÉ BEZPEČNOSTNÉ POKYNY**

Tento varovný symbol označuje nebezpečenstvo. Nachádzate sa v situácii s nebezpečenstvom úrazu. Pred prácou na akomkoľvek vybavení si uvedomte nebezpečenstvo súvisiace s elektrickými obvodmi a oboznámte sa so štandardnými opatreniami na predchádzanie úrazom. Podľa čísla na konci každého upozornenia vyhľadajte jeho preklad v preložených bezpečnostných upozorneniach, ktoré sú priložené k zariadeniu.

**USCHOVAJTE SI TENTO NÁVOD****Opozorilo POMEMBNI VARNOSTNI NAPOTKI**

Ta opozorilni simbol pomeni nevarnost. Nahajate se v situaciji, kjer lahko pride do telesnih poškodb. Preden pričnete z delom na napravi, se morate zavedati nevarnosti udara električnega toka, ter tudi poznati preventivne ukrepe za preprečevanje takšnih nevarnosti. Uporabite obrazložitevno številko na koncu posameznega opozorila, da najdete opis nevarnosti v priloženem varnostnem priročniku.


**SHRANITE TE NAPOTKE!****警告****重要安全性指示**

此警告符號代表危險，表示可能造成人身傷害。使用任何設備前，請留心電路相關危險，並熟悉避免意外的標準作法。您可以使用每項警告後的聲明編號，查詢本裝置隨附之安全性警告譯文中的翻譯。請妥善保留此指示

# Supervisor Engine 7L-E Overview

This section describes the Catalyst 4500 E-series Supervisor Engine 7L-E (WS-X45-SUP7L-E). [Figure 1](#) shows a view of the Supervisor Engine 7L-E front panel with the major features identified.

**Figure 1** Cisco Catalyst 4500 E-Series Supervisor Engine 7L-E Front Panel Features

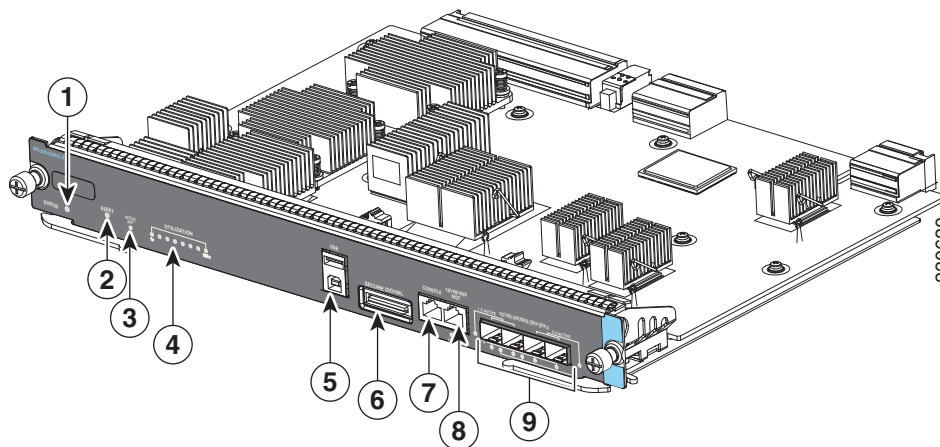

<b>1</b>	STATUS LED	<b>4</b>	UTILIZATION LEDs	<b>7</b>	CONSOLE port (RJ-45 connector)
<b>2</b>	RESET switch (recessed in panel)	<b>5</b>	USB port	<b>8</b>	10/100/1000 MGT port (management port, RJ-45 connector)
<b>3</b>	ACTIVE SUP LED (active supervisor engine)	<b>6</b>	SECURE DIGITAL slot	<b>9</b>	UPLINKS (SFP/SFP+) 1G/10G uplink ports and LEDs (port active and port status)

[Table 2](#) lists and describes the Supervisor Engine 7L-E front panel switches, connectors, and LEDs.



**Table 2 Supervisor Engine 7L-E Front Panel Features**

LED	Color and Meaning
STATUS LED	<p>The STATUS LED indicates the current health of the supervisor engine and the current software state.</p> <ul style="list-style-type: none"> <li>• Green—All diagnostic tests have passed.</li> <li>• Orange—System boot or a diagnostic test is in progress.</li> <li>• Red—A diagnostic test failed.</li> <li>• Off—The supervisor engine is disabled or is not powered up.</li> </ul>
RESET switch	<p>The RESET switch is used to reset and restart the switch.</p> <p><b>Note</b> Use a paper clip or other small, pointed object to press the RESET switch.</p>
ACTIVE SUP LED	<p>The ACTIVE SUP LED indicates whether the supervisor engine is active or in standby mode in redundant supervisor engine configurations.</p> <ul style="list-style-type: none"> <li>• Green—Supervisor engine is active (in redundant supervisor engine configurations).</li> <li>• Off—Supervisor engine is in standby mode (in redundant supervisor engine configurations).</li> </ul>
UTILIZATION LEDs	<p>When the switch is operational, the eight UTILIZATION LEDs indicate the current traffic load over the backplane as an approximate percentage value. Each LED represents approximately 12.5 percent of load.</p>
USB connectors	<p>Two USB 2.0 ports are provided:</p> <ul style="list-style-type: none"> <li>• Port 1 is not supported at this time.</li> <li>• Port 2 operates in host mode (downstream). It has a USB type A connector and a standard USB 2.0 device such as a flash memory device, can plug into this connector.</li> </ul>
SECURE DIGITAL slot	<p>A standard Secure Data (SD) memory card interface is provided on the front panel.</p>

**Table 2 Supervisor Engine 7L-E Front Panel Features (continued)**

<b>LED</b>	<b>Color and Meaning</b>
CONSOLE port	<p>A 10/100/1000 port that uses an RJ-45 connector. The console port allows you to access the switch either locally (with a console terminal) or through a modem (remote). The port has an RJ-45 connector. The console port allows you to perform the following functions:</p> <ul style="list-style-type: none"> <li>• Configure the switch from the CLI.</li> <li>• Monitor network statistics and errors.</li> <li>• Configure SNMP agent parameters.</li> </ul>
10/100/1000 MGT port	<p>The Ethernet management port is a Layer 3 host port to which you can connect a PC. You can use the Ethernet management port instead of the switch console port for network management. When managing a switch, connect the PC to the Ethernet management port on a Catalyst 4500 E-series switch.</p> <ul style="list-style-type: none"> <li>• Green—The link is operational.</li> <li>• Orange—The link is disabled by user.</li> <li>• Flashing orange—The power-on self-test indicates a faulty port.</li> <li>• Off—No signal is detected or there is a link configuration failure.</li> </ul> <p><b>Note</b> When connecting a PC to the Ethernet management port, you must assign an IP address.</p>
LINK LED	The 10/100/1000 MGT port has a LINK LED associated with it.
UPLINK (SFP/SFP+) ports	<p>The Supervisor Engine 7L-E has four uplink ports. Ports 1 and 2 support either 10GBASE SFP+ transceivers or 1000BASE SFP transceivers. Ports 3 and 4 support only 1000BASE SFP transceivers. There are restrictions on the use of the uplink ports in both single supervisor engine and redundant supervisor engine configurations and both 10-G and 1-G operation. Refer to <a href="#">Table 3</a> for a matrix of uplink port permissible transceiver configurations and transceiver restrictions.</p>

**Table 2 Supervisor Engine 7L-E Front Panel Features (continued)**

<b>LED</b>	<b>Color and Meaning</b>
<p>Uplink port LEDs</p> <p>Uplink port ACTIVE LEDs</p>	<p>There are two types of LEDs associated with the supervisor engine uplink ports.</p> <p>Uplink ports on the supervisor engine are active in pairs. Two LEDs on the front panel show this activity. One LED, labeled 1G/10G 1-2 ACTIVE, indicates ports 1 and 2 are active; the other is labeled 1G 3-4 ACTIVE and indicates ports 3 and 4 are active.</p> <p>In standalone supervisor engine configurations operating in 1-Gigabit mode, all four uplink ports are active; both the 1-2 ACTIVE LED and 3-4 ACTIVE LED are lit green.</p> <p>In redundant supervisor engine configurations, only the 1-2 ACTIVE LED is lit green. When one supervisor engine is removed, both the 1-2 ACTIVE LED and 3-4 ACTIVE LED are lit green on the remaining supervisor engine when it is in 1-Gigabit operation. In 10-Gigabit mode, only the 1-2 ACTIVE LED is lit.</p>
<p>Uplink port STATUS LEDs</p>	<p>Uplink ports 1 and 2 each have two uplink port STATUS LEDs. The 1G LED displays port status when a 1-GB SFP transceiver is installed in the port socket. The 10G LED displays port status when a 10-GB SFP+ transceiver is installed in the port socket. Port 3 and Port 4 support only 1-GB SFP transceivers and have only the 1G port status LED.</p> <ul style="list-style-type: none"> <li>• Green—The link is operational.</li> <li>• Orange—The link is disabled by user.</li> <li>• Flashing orange—The power-on self-test indicates a faulty port.</li> <li>• Off—No signal is detected or there is a link configuration failure.</li> </ul>

[Table 3](#) lists the supported SFP and SFP+ transceiver configurations for the Supervisor Engine 7L-E uplink ports in both single and redundant supervisor engine configurations and 1-GB and 10-GB operation.

**Table 3 Uplink Port SFP+ and SFP Transceiver Configurations**

Port 1	Port 2	Port 3	Port 4	Comments
<b>Single Supervisor Engine Configuration. 10-Gigabit Operation Selected Through CLI</b>				
SFP+	SFP+	Not usable	Not usable	Maximum bandwidth is 20 Gbps. SFP+ transceivers are installed in ports 1 and 2. Port 3 and port 4 are not usable.
SFP+	SFP	Not usable	Not usable	Maximum bandwidth is 11 Gbps. With SFP and SFP+ transceivers installed in ports 1 and 2, port 3 and port 4 are not usable. 10-Gigabit operation selected through CLI.
SFP	SFP+	Not usable	Not usable	Maximum bandwidth is 11 Gbps. With SFP and SFP+ transceivers installed in ports 1 and 2, port 3 and port 4 are not usable. 10-Gigabit operation selected through CLI.
SFP	SFP	Not usable	Not usable	Maximum bandwidth is 2 Gbps. With SFP transceivers installed in ports 1 and 2, port 3 and port 4 are not usable. 10-Gigabit operation selected through CLI.
<b>Single Supervisor Engine Configuration. 1-Gigabit Operation Selected Through CLI</b>				
SFP	SFP	SFP	SFP	Maximum bandwidth is 4 Gbps. Any combination of SFP transceiver type can be used. SFP+ transceivers can not be used in this configuration.
<b>Redundant Supervisor Engine Configurations. 10-Gigabit Operation Selected Through CLI</b>				
AS <sup>1</sup> —SFP+ SS <sup>2</sup> —SFP+	AS—Not usable SS—Not usable	AS—Not usable SS—Not usable	AS—Not usable SS—Not usable	Maximum bandwidth is 20 Gbps. If you plan to populate two uplink ports with SFP+ transceivers, you must install one SFP+ transceiver in the active supervisor engine (port 1) and one SFP+ transceiver in the standby supervisor engine (port 1).
AS—SFP+ SS—SFP	AS—Not usable SS—Not usable	AS—Not usable SS—Not usable	AS—Not usable SS—Not usable	Maximum bandwidth is 11 Gbps. If you plan to populate only two uplink ports with one SFP+ transceiver and one SFP transceiver, you can install one SFP+ transceiver in the active supervisor engine (port 1) and one SFP transceiver in the standby supervisor engine (port 1).

**Table 3** Uplink Port SFP+ and SFP Transceiver Configurations (continued)

Port 1	Port 2	Port 3	Port 4	Comments
AS—SFP SS—SFP+	AS—Not usable SS—Not usable	AS—Not usable SS—Not usable	AS—Not usable SS—Not usable	Maximum bandwidth is 11 Gbps. If you plan to populate only two uplink ports with one SFP+ transceiver and one SFP transceiver, you can install one SFP transceiver in the active supervisor engine (port 1) and one SFP+ transceiver in the standby supervisor engine (port 1).
AS—SFP SS—SFP	AS—Not usable SS—Not usable	AS—Not usable SS—Not usable	AS—Not usable SS—Not usable	Maximum bandwidth is 2 Gbps. If you plan to populate only two uplink ports with SFP transceivers, you must install an SFP transceiver in the active supervisor engine (port 1) and one SFP transceiver in the standby supervisor engine (port 1).
<b>Redundant Supervisor Engine Configuration. 1-Gigabit Operation Selected Through CLI</b>				
AS—SFP SS—SFP	AS—SFP SS—SFP	AS—Not usable SS—Not usable	AS—Not usable SS—Not usable	Maximum bandwidth is 4 Gbps. If you plan to populate uplink ports with SFP transceivers, you must install two SFP transceivers in the active supervisor engine (port 1 and port 2) and two SFP transceivers in the standby supervisor engine (port 1 and port 2). SFP+ transceivers can not be used in this configuration.

1. AS = Active supervisor engine.
2. SS = Standby supervisor engine.

## Removing and Installing the Supervisor Engine 7L-E

This section contains the following subsections:

- [Required Tools, page 14](#)
- [Installing the Supervisor Engine, page 15](#)
- [Removing the Supervisor Engine 7L-E, page 15](#)



**Warning**

**Only trained and qualified personnel should be allowed to install, replace, or service this equipment.**  
Statement 1030



**Warning**

**Ultimate disposal of this product should be handled according to all national laws and regulations.**  
Statement 1040

## Required Tools

You will need the following tools to remove or install a supervisor engine in a Catalyst 4500 E-series switch:

- Number 2 Phillips-head screwdrivers for the captive installation screws
- 3/16-in. flat-blade screwdriver for the captive installation screws on other modules
- Antistatic mat or antistatic bag
- ESD wrist strap or other grounding device

**Note**

---

Whenever you handle supervisor engines, use a wrist strap or other personal grounding device to prevent electrostatic discharge (ESD) damage.

---

## Preventing Electrostatic Discharge Damage

ESD damage, which can occur when electronic cards or components are improperly handled, results in complete or intermittent failures. Port adapters and processor modules consist of printed circuit boards that are fixed in metal carriers. Electromagnetic interference (EMI) shielding and connectors are integral components of the carrier. Although the metal carrier helps to protect the board from ESD, use a preventive antistatic strap during handling.

Following are guidelines for preventing ESD damage:

- Always use an ESD wrist or ankle strap and ensure that it makes good skin contact.
- Connect the equipment end of the strap to an unfinished chassis surface.
- When installing a component, use any available ejector levers or captive installation screws to properly seat the bus connectors in the backplane or midplane. These devices prevent accidental removal, provide proper grounding for the system, and help to ensure that bus connectors are properly seated.
- When removing a component, use any available ejector levers or captive installation screws to release the bus connectors from the backplane or midplane.
- Handle carriers by available handles or edges only; avoid touching the printed circuit boards or connectors.
- Place a removed component board-side-up on an antistatic surface or in a static-shielding container. If you plan to return the component to the factory, immediately place it in a static-shielding container.
- Avoid contact between the printed circuit boards and clothing. The wrist strap only protects components from ESD voltages on the body; ESD voltages on clothing can still cause damage.
- Never attempt to remove the printed circuit board from the metal carrier.

**Caution**

---

For safety, periodically check the resistance value of the antistatic strap. The measurement should be between 1 and 10 megohm (Mohm).

---

## Removing the Supervisor Engine 7L-E



**Warning**

**Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.** Statement 1051



**Warning**

**Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing.** Statement 1034



**Caution**

To prevent ESD damage, handle supervisor engines by the carrier edges only.

To remove a supervisor engine from a Catalyst 4500 E-series switch, follow these steps:

- Step 1** Disconnect any network interface cables attached to the ports on the supervisor engine that you intend to remove.
- Step 2** Loosen the two captive installation screws on either edge of the supervisor engine faceplate.
- Step 3** Grasp the left and right ejector levers at either end of the supervisor engine faceplate and simultaneously pivot the levers outward to disengage the supervisor engine from the chassis backplane connector.
- Step 4** Grasp the front panel of the supervisor engine with one hand and place your other hand under the supervisor engine carrier to support and guide it out of the slot. Do not touch the printed circuit boards or connector pins.
- Step 5** Carefully slide the supervisor engine straight out of the slot, keeping your other hand under the carrier to guide it.
- Step 6** Place the supervisor engine on an antistatic mat or in an antistatic bag, or immediately install the supervisor engine in another chassis slot.
- Step 7** In chassis configured with redundant supervisor engines, if the chassis slot is to remain empty, you must install a blank line card (C4K-SLOT-CVR-E) to cover the empty slot.



**Warning**

**Blank faceplates and cover panels serve three important functions: they prevent exposure to hazardous voltages and currents inside the chassis; they contain electromagnetic interference (EMI) that might disrupt other equipment; and they direct the flow of cooling air through the chassis. Do not operate the system unless all cards, faceplates, front covers, and rear covers are in place.**

Statement 1029

## Installing the Supervisor Engine

Catalyst 4500 E-series switches have horizontal chassis slots that are numbered from top to bottom. [Table 4](#) lists the Catalyst 4500 E-series chassis and which chassis slots support the Supervisor Engine 7L-E.

**Table 4 Supervisor Engine 7L-E Support**

Chassis	Chassis Slot Support
Catalyst 4503-E	Slot 1 only
Catalyst 4506-E	Slot 1 only
Catalyst 4507R-E and Catalyst 4507R+E	Slot 3 and slot 4 <b>Note</b> Redundant supervisor engine configurations are supported in both of these chassis.



**Note**

The supervisor engines in a redundant system must be of the same type.



**Warning**

**Hazardous voltage or energy is present on the backplane when the system is operating. Use caution when servicing.** Statement 1034



**Caution**


To prevent ESD damage, handle supervisor engines by the carrier edges only.

To install a supervisor engine in the chassis, follow these steps:

- Step 1** Take the necessary precautions to prevent ESD damage as described in the installation guide for your switch.
- Step 2** Ensure that you have enough clearance to accommodate any interface equipment that you will connect directly to the supervisor engine ports.
- Step 3** Loosen the two captive installation screws that secure the switching-module filler plate or the existing supervisor engine and remove it.
- Step 4** Remove the blank slot cover or the existing supervisor engine from the slot. If you are removing a blank slot cover, set it aside and save it for future use. If you are removing an existing supervisor engine, see the [“Removing the Supervisor Engine 7L-E” section on page 15](#).
- Step 5** Remove the new supervisor engine from the shipping packaging.
- Step 6** Hold the switching module front panel with one hand and place your other hand under the carrier to support the supervisor engine, as shown in [Figure 2](#). Do not touch the printed circuit boards or connector pins.
- Step 7** Align the edges of the supervisor engine carrier with the guides on the sides of the switch chassis slot, as shown in [Figure 2](#).



**Figure 2** Installing the Supervisor Engine in the Chassis (Catalyst 4507R-E Chassis Shown)

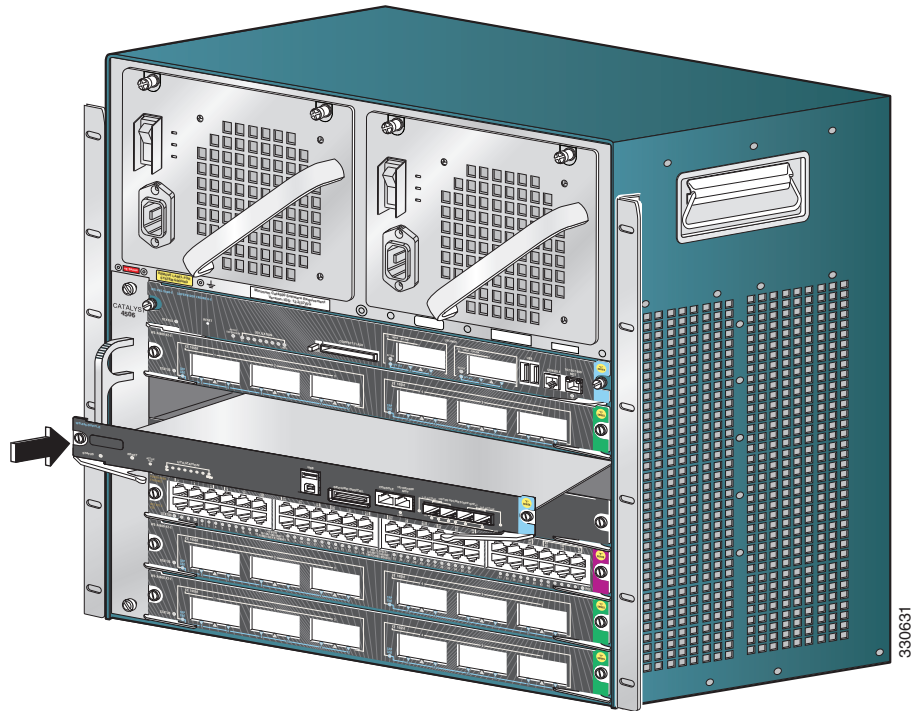

- Step 8** Pivot the two module ejector levers out and away from the faceplate.
- Step 9** Carefully slide the supervisor engine into the slot until the notches on both ejector levers engage the chassis sides.
- Step 10** Simultaneously pivot in both ejector levers so that they are parallel with the supervisor engine faceplate to fully seat the supervisor engine in the backplane connector.



**Caution**

Always use the ejector levers when installing or removing a supervisor engine. A supervisor engine that is partially seated in the backplane will not function correctly.

- Step 11** Use a screwdriver to tighten the two captive installation screws on the supervisor engine. Do not overtighten the captive installation screws.

To check the status of the module, follow these steps:

- 
- Step 1** Verify that the supervisor engine STATUS LED is lit.
- Step 2** Periodically check the STATUS LED.
- If the STATUS LED changes from orange to green, the supervisor engine has successfully completed the boot process and is now online.
  - If the STATUS LED remains orange or turns red, the supervisor engine has not successfully completed the boot process and may have encountered an error.
- Step 3** When the switch is online, enter the **show module** command. Verify that the system acknowledges the new supervisor engine and that the supervisor engine status is good.
- Step 4** If the supervisor engine is not operational, reseal it. If the supervisor engine is still not operational, contact your customer service representative.
- 

## Attaching Interface Cables to the Supervisor Engine 7L-E

The Supervisor Engine 7L-E has the following interface ports:

- USB ports
- Console port
- Management port
- Uplink Ports

### USB Port

The Supervisor Engine 7L-E has two USB ports:

- Port 1 is not supported at this time.
- Port 2 is set up in host mode (downstream). This port interfaces with a Type A USB connector. A standard USB 2.0 device such as a flash memory device can plug into this connector.

### Console Port

The console port allows you to access the switch either locally (through a console terminal) or remotely (through a modem). The console is an EIA/TIA-232 asynchronous, serial connection with hardware flow control and an RJ-45 connector.

### Management Port

The Ethernet management port can be used (in ROMMON mode only) to recover a switch software image that has been corrupted or destroyed due to a network catastrophe. When using Cisco IOS Release 12.2(50)SG or later, this port can also perform the same functions as the console port. For earlier Cisco IOS software releases, this port is not active while the switch is operating normally.

## Uplink Ports

The Supervisor Engine 7L-E has four Ethernet uplink ports available on the front panel. The ports can be used to provide additional port capacity for a fully configured switch or can eliminate the need to use a chassis slot for a module. The ports can be configured with either SFP transceivers for 1-GB operation or SFP+ transceivers for 10-GB operation. See [Table 3](#) for SFP+ and SFP transceiver options. For additional information on the SFP and the SFP+ transceivers, refer to the SFP and the SFP+ data sheets at the following URLs:

[http://www.cisco.com/en/US/prod/collateral/modules/ps5455/ps6577/product\\_data\\_sheet0900aecd8033f885.html](http://www.cisco.com/en/US/prod/collateral/modules/ps5455/ps6577/product_data_sheet0900aecd8033f885.html)

[http://www.cisco.com/en/US/prod/collateral/modules/ps5455/data\\_sheet\\_c78-455693.html](http://www.cisco.com/en/US/prod/collateral/modules/ps5455/data_sheet_c78-455693.html)



### Note

Always keep caps and plugs on the fiber-optic connectors on the cable and the switch when they are not in use.



### Warning

**Invisible laser radiation may be emitted from disconnected fibers or connectors. Do not stare into beams or view directly with optical instruments.** Statement 1051



### Note

Make sure that the optical connectors are clean before making the connections. Contaminated connectors can damage the fiber and cause data errors.



### Caution

Use extreme care when removing or installing connectors so that you do not damage the connector housing or scratch the end-face surface of the fiber. Always install protective covers on unused or disconnected components to prevent contamination. Always clean fiber connectors before installing them.

For SFP and SFP+ transceiver installation information, refer to the *Cisco SFP and SFP+ Transceiver Module Installation Notes* at the following URL:

[http://www.cisco.com/en/US/docs/interfaces\\_modules/transceiver\\_modules/installation/note/78\\_15160.html](http://www.cisco.com/en/US/docs/interfaces_modules/transceiver_modules/installation/note/78_15160.html)



### Note

Use only Cisco SFP and SFP+ transceivers on your Cisco device. Each SFP transceiver has an internal serial EEPROM that is encoded with security information. This encoding provides a way for Cisco to identify and validate that the SFP transceiver meets the requirements for the device.

Not all SFP+ or SFP transceivers may be supported by the Supervisor Engine 7L-E. For up-to-date information on which SFP+ and SFP transceivers are supported, refer to the *10-Gigabit Ethernet Transceiver Modules Compatibility Matrix* or the *Gigabit Ethernet Transceiver Modules Compatibility Matrix* at the following URL:

[http://www.cisco.com/en/US/products/hw/modules/ps5455/products\\_device\\_support\\_tables\\_list.html](http://www.cisco.com/en/US/products/hw/modules/ps5455/products_device_support_tables_list.html)

## Configuring Your Supervisor Engine 7L-E

For information and commands to configure your supervisor engine for the first time, refer to the software configuration guide for your switch. Software configuration guides are located at:

[http://www.cisco.com/en/US/products/hw/switches/ps4324/products\\_installation\\_and\\_configuration\\_guides\\_list.html](http://www.cisco.com/en/US/products/hw/switches/ps4324/products_installation_and_configuration_guides_list.html)

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.

---

This document is to be used in conjunction with the publications documents that support your specific Cisco device.

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Copyright © 2011, Cisco Systems, Inc. All rights reserved.