



# Web Server Commands

---

This chapter contains the following sections:

- [ip https certificate](#), on page 2
- [ip https logging](#), on page 3
- [ip http port](#), on page 4
- [ip http server](#), on page 5
- [ip http secure-server](#) , on page 6
- [ip http timeout-policy](#) , on page 7
- [show ip http](#), on page 8
- [show ip https](#), on page 9

# ip https certificate

To configure the active certificate for HTTPS, use the **ip https certificate** Global Configuration mode command. To restore the default configuration, use the **no** form of this command.

## Syntax

**ip https certificate** *number*

**no ip https certificate**

## Parameters

**number**—Specifies the certificate number. (Range: 1–2)

## Default Configuration

The default certificate number is 1.

## Command Mode

Global Configuration mode

## Example

The following example configures the active certificate for HTTPS.

```
switchxxxxxx(config)# ip https certificate 2
```

# ip https logging

To enable or disable the logging of HTTPS session setup and tear down, use the `ip https logging` command in Global Configuration mode. To restore the default setting, use the `no` form of this command.

## Syntax

`ip https logging {enable| disable}`

`no ip https logging`

## Parameters

- **enable** — Enables HTTPS logging on device
- **disable** — disables HTTPS logging on device

## Default Configuration

HTTPS session logging is disabled by default.

## Command Mode

Global Configuration mode.

## User Guidelines

This command enables HTTPS logging on the device. HTTPS logging is a mean to track the progress of HTTPS session setup and tear-down. HTTPS session setup and tear-down progress is tracked using SYSLOG message which are generated as part of the process. If HTTPS logging is disabled then SYSLOG messages will not be generated as part of the SSH setup or tear-down process.

## Example

The following example enables HTTPS logging on the device.

```
switchxxxxxx(config)# ip https logging enable
```

# ip http port

To specify the TCP port used by the web browser interface, use the **ip http port** Global Configuration mode command. To restore the default configuration, use the **no** form of this command.

## Syntax

**ip http port** *port-number*

**no ip http port**

## Parameters

**port** *port-number*—For use by the HTTP server. (Range: 1–59999)

## Default Configuration

The default port number is 80.

## Command Mode

Global Configuration mode

## Example

The following example configures the http port number as 100.

```
switchxxxxxx(config)# ip http port 100
```

# ip http server

To enable configuring and monitoring the device from a web browser, use the **ip http server** Global Configuration mode command. To disable this function, use the **no** form of this command.

## Syntax

**ip http server**

**no ip http server**

## Parameters

This command has no arguments or keywords.

## Default Configuration

HTTP server is enabled.

## Command Mode

Global Configuration mode

## Example

The following example enables configuring the device from a web browser.

```
switchxxxxxx(config)# ip http server
```

# ip http secure-server

To enable the device to be configured or monitored securely from a browser, use the **ip http secure-server** Global Configuration mode command. To disable this function, use the **no** form of this command.

## Syntax

**ip http secure-server**

**no ip http secure-server**

## Parameters

This command has no arguments or keywords.

## Default Configuration

Enabled

## Command Mode

Global Configuration mode

## Example

```
switchxxxxxx(config)# ip http secure-server
```

# ip http timeout-policy

To set the interval for the system to wait for user input in http/https sessions before automatic logoff, use the **ip http timeout-policy** Global Configuration mode command. To return to the default value, use the **no** form of this command.

## Syntax

**ip http timeout-policy** *idle-seconds* [{**http-only** | **https-only**}]

**no ip http timeout-policy**

## Parameters

- *idle-seconds*—Specifies the maximum number of seconds that a connection is kept open if no data is received or response data cannot be sent out. (Range: 0–86400)
- **http-only**—(Optional) The timeout is specified only for http
- **https-only**—(Optional) The timeout is specified only for https

## Default Configuration

600 seconds. setting is applied for both HTTP and HTTPS

## Command Mode

Global Configuration mode

## User Guidelines

To specify no timeout, enter the **ip http timeout-policy 0** command.

## Example

The following example configures the http timeout to be 1000 seconds.

```
switchxxxxxx(config)# ip http timeout-policy 1000
```

# show ip http

To display the HTTP server configuration, use the **show ip http** Privileged EXEC mode command.

## Syntax

**show ip http**

## Parameters

This command has no arguments or keywords.

## Command Mode

Privileged EXEC mode

## Example

The following example displays the HTTP server configuration.

```
switchxxxxxx# show ip http
HTTP server enabled
Port: 80
Interactive timeout: 10 minutes, 0 seconds
```



# show ip https

To display the HTTPS server configuration, use the **show ip https** Privileged EXEC mode command.

## Syntax

**show ip https**

## Parameters

This command has no arguments or keywords.

## Command Mode

Privileged EXEC mode

## Example

The following example displays the HTTPS server configuration.

```
switchxxxxxx# show ip https
HTTPS server enabled
Port: 443
Interactive timeout: Follows the HTTP interactive timeout (10 minutes, 0 seconds)
https session logging is disabled
Certificate 1 is active
Issued by: www.verisign.com
Valid from: 8/9/2003 to 8/9/2004
Subject: CN= router.gm.com, O= General Motors, C= US
Finger print: DC789788 DC88A988 127897BC BB789788
Certificate 2 is inactive
Issued by: self-signed
Valid from: 8/9/2003 to 8/9/2004
Subject: CN= router.gm.com, O= General Motors, C= US
Finger print: 1873B936 88DC3411 BC8932EF 782134BA
```

■ show ip https