



INDEX

B

- booting in vKVM [2-3](#)
- booting UCS-SCU [2-2](#)
- burning an .iso CD [2-2](#)

C

- configure a server [3-5](#)

E

- entering vKVM [2-3](#)
- exiting UCS-SCU [2-3](#)

G

- get system updates [3-3](#)

H

- hardware and software requirements [2-2](#)

I

- integrated features in UCS-SCU [1-1](#)

L

- license agreement [3-1](#)
- Linux OS installation [3-10](#)

M

- My Server Information Box [3-2](#)
- My Server Page [3-2](#)

O

- OS installation [3-8](#)

P

- primary function buttons [3-2](#)

R

- RAID configuration [3-5](#)
 - automatic setup without redundancy [3-6](#)
 - automatic setup with redundancy [3-6](#)
 - create custom or multiple RAID arrays [3-6](#)
- related documentation [1-3](#)

S

- save logs [3-12](#)
- setting BIOS boot order [3-5](#)
- supported operating systems [2-1](#)
- supported platforms [2-1](#)
- supported RAID devices [3-5](#)
- support for third party drivers [3-12](#)

U

- UCS documentation [1-3](#)

Send document comments to ucs-docfeedback@cisco.com

UCS-SCU interface [3-1](#)

UCS-SCU toolbar [3-2](#)

updating firmware [3-3, 3-4](#)

W

Windows OS installation [3-8](#)