



## show apimgr statistics ise-server

This chapter includes the **show apimgr statistics ise-server** command output table.

- [show apimgr statistics ise-server, on page 1](#)

## show apimgr statistics ise-server

*Table 1: show apimgr statistics ise-server Command Output Descriptions*

Field	Description
Ise-Server Connection Statistics	
Request sent	Specifies the number of requests sent to the ISE server.
Response Success	Specifies the number of successful responses received from the ISE server.
Response Fail	Specifies the number of failed responses from the ISE server.

