



## show upf

- [show upf-load-control-profile](#), on page 1
- [show upf-overload-control-profile](#), on page 1

## show upf-load-control-profile

The output of the **show upf-load-control-profile** [ *name name* | **all** ] command displays the following fields:

Field	Description
<b>UPF Load Control Profile:</b>	
UPF Load Control Profile Name	Displays the UPF's load control profile name.
Inclusion Frequency <ul style="list-style-type: none"><li>• Change Factor</li><li>• Advertisement Interval</li></ul>	Displays the inclusion frequency of the UPF load control profile along with the information about the change factor and advertisement interval.

## show upf-overload-control-profile

The output of the **show upf-overload-control-profile** [ *name name* | **all** ] command displays the following fields:

Field	Description
<b>UPF Overload Control Profiles:</b>	
UPF Overload Control Profile Name	Displays the UPF overload control profile name.
System Thresholds	
CPU Lower Limit	Displays the configured lower limit for CPU load.
CPU Upper Limit	Displays the configured upper limit for CPU load.
Memory Lower Limit	Displays the configured lower limit for Memory load.

Field	Description
Memory Upper Limit	Displays the configured upper limit for Memory load.
Session Count Lower Limit	Displays the configured lower limit for system session count.
Session Count Upper Limit	Displays the configured upper limit for system session count.
VPP Thresholds	
CPU Lower Limit	Displays the configured lower limit for VPP CPU load.
CPU Upper Limit	Displays the configured upper limit for VPP CPU load.
Inclusion Frequency	
Change Factor	Displays the configured change factor.
Advertisement Interval	Displays the configured advertisement interval.
Validity Period	Displays the configured validity period.