



## show x2gw-service

---

This chapter describes the output of the **show x2gw-service** command variants.

- [show x2gw](#), on page 1

## show x2gw

*Table 1: show x2gw Command Output Descriptions*

Field	Description
Context Name	The name of the system context in which the CGF is configured.
Primary Accounting server address	The IP address of the CGF.
port	The TCP port over which GTPP messaging is performed.
priority	The configured priority of the CGF.
State	The status of the CGF as Active or Inactive.
Group	The GTPP server group name in which this server is configured.

