

Client Limit

- Information About Client Limit, on page 1
- Configuring Client Limit Per WLAN (GUI), on page 1
- Configuring Client Limit Per WLAN (CLI), on page 2
- Configuring Client Limit Per AP (GUI), on page 3
- Configuring Client Limit Per AP (CLI), on page 3
- Configuring Client Limit Per Radio (GUI), on page 4
- Configuring Client Limit Per Radio (CLI), on page 4
- Verifying Client Limit, on page 5

Information About Client Limit

This feature enforces a limit on the number of clients that can to be associated with an AP. Further, you can configure the number of clients that can be associated with each AP radio.

From Cisco IOS XE Cupertino 17.8.x onwards, client limiting is supported per AP, per radio, and per radio per WLAN.

Limitations for Client Limit

- APs other than the Cisco Catalyst 9136 Series APs, support only 200 clients per radio. If you configure more than 200 clients for these APs, the number of clients that can be associated with the AP radios will still be limited to only 200 clients, as per the AP capability value.
- Client limiting is supported on the Cisco Catalyst 9136 Series APs in Flex mode.

Configuring Client Limit Per WLAN (GUI)

Procedure

Step 1	Choose Configuration > Tags & Profiles > '	WLANs.
--------	--	--------

Step 2 Click a WLAN from the list of WLANs.

I

Step 3	Click the Advanced tab.
Step 4	Under the Max Client Connections settings, enter the client limit for Per WLAN, Per AP Per WLAN, and Per AP Radio Per WLAN.
Step 5	Click Update & Apply to Device.

Configuring Client Limit Per WLAN (CLI)

Procedure

	Command or Action	Purpose
Step 1	enable Example: Device# enable	Enters privileged EXEC mode.
Step 2	<pre>configure terminal Example: Device# configure terminal</pre>	Enters global configuration mode.
Step 3	<pre>wlan wlan-name Example: Device(config)# wlan ramban</pre>	Specifies the WLAN name.
Step 4	<pre>client association limit maximum-clients-per-WLAN Example: Device(config-wlan)# client association limit 110</pre>	Configures the maximum number of clients that can be associated to the given WLAN.
Step 5	<pre>client association limit ap max-clients-per-AP-per-WLAN Example: Device(config-wlan)# client association limit ap 120</pre>	Configures the maximum number of clients that can be associated to an AP in the WLAN. The valid range is between 0 and 1200 clients. The default value is 0. Note A Cisco Catalyst 9136 Series AP can support a maximum of 1200 clients.
Step 6	<pre>client association limit radio maximum-clients-per-AP-radio-per-WLAN(0-400) Example: Device(config-wlan) # client association limit radio 100</pre>	 Configures the maximum limit of clients that can be associated to an AP radio in the WLAN. The valid range is between 0 to 400 clients. The default value is 200. Note A Cisco Catalyst 9136 Series AP radio can support a maximum of 400 clients.

	Command or Action	Purpose
Step 7 end Returns to p Example: Device (config) # end Alternativel global configuration for the second seco	end	Returns to privileged EXEC mode.
	Alternatively, you can also press Ctrl-Z to exit	
	Device(config)# end	grobal configuration mode.
Step 8	show wlan id wlan-id	Displays the current configuration of the WLAN
	Example:	and the corresponding client association limits.
	Device# show wlan id 2	

Configuring Client Limit Per AP (GUI)

Procedure

Step 1	Choose Configuration > Tags & Profiles > AP Join.	
Step 2	Click Add.	
Step 3	In the General tab, enter the name and description of the corresponding AP join profile.	
Step 4	Click the Client tab.	
Step 5	In the Maximum Client Limit field, enter the maximum client associations per AP. The valid values are between 0 and 1200. The default value is 0.	
Step 6	Click Apply to Device.	

Configuring Client Limit Per AP (CLI)

Procedure

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 2	ap profile ap-profile-name	Configures an AP profile and enters AP profile
	Example:	configuration mode.
	<pre>Device(config)# ap profile ap-profile-name</pre>	
Step 3	association-limit max-client-connections	 Configures the maximum client connections per AP. The default value is 0. Note A Cisco Catalyst 9136 Series AP can support a maximum of 1200 clients.
	Example:	
	Device(config-ap-profile)# association-limit 200	

I

	Command or Action	Purpose
Step 4	end	Returns to privileged EXEC mode.
	Example:	Alternatively, you can also press Ctrl-Z to exit global configuration mode.
	Device(config)# end	

Configuring Client Limit Per Radio (GUI)

Procedure

Step 1	Choose Configuration > Tags & Profiles > RF/Radio.	
Step 2	In the RF tab, click the required RF profile name from the displayed list of RF profiles.	
	The Edit RF Profile page is displayed.	
Step 3	Click the Advanced tab.	
Step 4	Under the High Density Parameters section, in the Max Clients field, enter the maximum number of client connections per AP radio. The valid range is between 0 and 400. The default value is 200 client connections.	
Step 5	Click Update & Apply to Device.	

Configuring Client Limit Per Radio (CLI)

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example: Device# configure terminal	
Step 2	ap dot11 {24ghz 5ghz 6ghz} rf-profile rf-profile-name	Configures an RF profile and enters RF profile configuration mode.
	<pre>Example: Device(config)# ap dot11 6ghz rf-profile rf-profile-name</pre>	
Step 3	<pre>high-density clients count maximum-client-connections <0-400> Example: Device(config-rf-profile)# high-density clients count 200</pre>	 Configures the maximum number of client connections per AP radio. The valid range is between 0 and 400. The default value is 200 client connections. Note A Cisco Catalyst 9136 Series AP radio can support a maximum of 400 clients.

Procedure

	Command or Action	Purpose
Step 4	end	Returns to privileged EXEC mode.
	Example:	Alternatively, you can also press Ctrl-Z to exit global configuration mode.
	Device(config)# end	ooo

Verifying Client Limit

To verify client limit in local mode, run the following command:

Device# show wireless stats client delete reasons | sec Max Maximum client limit reached on AP : 0 Maximum client limit reached on AP per wlan : 0 Maximum client limit reached on AP radio per wlan : 0 Maximum client limit reached on AP radio : 0

To verify client limit in the FlexConnect central authentication mode, run the following command:

Device# show wireless stats client delete reasons | sec max AP limiting maximum client per AP : 0 AP limiting maximum client per AP radio per wlan : 0 AP limiting maximum client per AP radio : 0 Verifying Client Limit

I