



## Set Up Sensors

---

- [Sensors, on page 1](#)
- [Claim Sensors, on page 1](#)

### Sensors

Use the **Setup** > **Sensors** option in the Cisco Spaces dashboard to claim the sensors into your wireless networks.


### Claim Sensors

Use the MAC addresses of the sensors to claim them into the wireless network.

#### Procedure

---

**Step 1** Log in to [Cisco Spaces](#).

**Step 2** In the Cisco Spaces dashboard, click the **Menu** icon () and choose **Setup** > **Sensors**.

**Step 3** Click **Claim Sensors**.

The **Claim Sensor(s)** slide-in pane is displayed.

**Step 4** In the **Enter a new tag** field, enter the MAC address of the sensor to claim.

**Step 5** Click **Enter**. Use comma (,) as a separator to add multiple MAC addresses and claim multiple sensors at the same time.

**Step 6** Click **Claim**.

The sensor details such as location, status, SSIDs and MAC address are displayed in the **Sensor Management** window.

To unclaim sensors, click the MAC address and click **Unclaim**.

---

