



CIMC Config Mode Command Reference

- [cimc](#), on page 1
- [cimc cluster](#), on page 1
- [cimc cluster default](#), on page 2
- [cimc cluster server](#), on page 2

cimc

Configures the CIMC Alerts Exporter configuration.

Command Modes Exec > Global Configuration

Syntax Description `cimc enabled { false | true }`

enabled { false | true }

Specify to enable or disable the CIMC Alerts Exporter.

Must be one of the following:

- **false**
- **true**

Default Value: false.

Usage Guidelines Use this command to configure the CIMC Alerts Exporter configuration.

cimc cluster

Configures the list of CIMC clusters to be monitored.

Command Modes Exec > Global Configuration

Syntax Description `cluster cluster_name`

cluster_name

Specify the cluster name, used for label.

Must be a string in the pattern [a-z0-9][a-z0-9\.\-]*[a-z0-9].

Usage Guidelines Use this command to configure the list of CIMC clusters to be monitored.

cimc cluster default

Configures the default values to be used on all CIMC connections.

Command Modes Exec > Global Configuration

Syntax Description **default** **username** *user_name* **password** *password*

password password

Specify the default password used to connect CIMC.

Must be a string.

username user_name

Specify the default user name used to connect CIMC.

Must be a string.

Usage Guidelines Use this command to configure the default values to be used on all CIMC connections.

cimc cluster server

Configures the CIMC server parameters.

Command Modes Exec > Global Configuration

Syntax Description **server** *cimc_server_name* **ip** *ip_address/host_name* **username** *user_name* **password** *password*

ip ip_address/host_name

Specify the CIMC server IP address or host name.

Must be a string.

password password

Specify the password to connect CIMC.

Must be a string.

username user_name

Specify the user name to connect CIMC.

Must be a string.

cimc_server_name

Specify the CIMC server name to use in alerts.

Must be a string.

Usage Guidelines

Use this command to configure the default values to be used on all CIMC connections.

