

# Valider le matériel de couche 2 sur les commutateurs de la gamme Catalyst 9000

## Contenu

[Introduction](#)

[Conditions préalables](#)

[Conditions requises](#)

[Components Used](#)

[Informations générales](#)

[Terminologie](#)

[Topologie](#)

[Programmation d'interface](#)

[Interface avec mappage d'instance UADP 2.0](#)

[Exemple de sortie](#)

[Programmation d'interface physique](#)

[Programmation Etherchannel](#)

[Configuration Etherchannel Globale](#)

[Programmation VLAN](#)

[Programmation Spanning Tree](#)

[Programmation de transfert de couche 2](#)

[Programmation logicielle](#)

[Programmation matérielle - Méthode 1](#)

[programmation macHandle](#)

[Programmation iHandle](#)

[Programmation de la commande diHandle](#)

[Programmation matérielle - Méthode 2](#)

[Utilisation de TCAM](#)

[Programmation matérielle réussie](#)

[Vérification de l'intégrité](#)

[Trafic et politique du plan de contrôle](#)

[Statistiques sur les événements de table MAC](#)

[Suppression des exceptions UADP 2.0](#)

[Statistiques du superviseur - Chemin des données du superviseur vers la carte de ligne](#)

[Statistiques de carte de ligne - Chemin de données du superviseur vers la carte de ligne](#)

## Introduction

Ce document décrit comment valider la programmation et le transfert matériels de couche 2 sur les commutateurs de la gamme Catalyst 9400.

## Conditions préalables

## Conditions requises

Aucune spécification déterminée n'est requise pour ce document.

## Components Used

Les informations de ce document sont basées sur le commutateur de la gamme Catalyst 9400 (UADP 2.0).

**Remarque :** La version logicielle utilisée dans ce document est 16.6.1, mais elle doit rester applicable aux versions ultérieures de Cisco IOS-XE.

**Remarque :** Vous pouvez utiliser ce document pour d'autres types de commutateurs Catalyst 9000, mais ignorer toute commande qui fait référence à une carte de ligne.

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. Si votre réseau est en ligne, assurez-vous de bien comprendre l'incidence possible des commandes.

## Informations générales

- Le Catalyst 9400 Supervisor1 (C9400-SUP-1) dispose de 3 ASIC de transfert UADP 2.0 (0, 1, 2).
- Chaque ASIC de transfert UADP 2.0 a : Un double cœur (0, 1), ce qui n'existe pas dans les générations précédentes d'ASICS UADP 2.0.SIF (Stack Interfaces) : utilisé pour se connecter aux 2 autres ASIC UADP 2.0 via un anneau de pile interne.FNI (Network Interfaces) : utilisé pour connecter une ou plusieurs cartes de ligne via le fond de panier.
- Toutes les décisions de transfert de paquets pour les cartes de ligne et les interfaces de liaison ascendante du superviseur sont prises par les 3 ASIC de transfert UADP 2.0 sur le superviseur actif.
- Les cartes de ligne utilisées dans cet exemple ont un ASIC à un seul cœur de ligne qui n'est pas impliqué dans les décisions de transfert de paquets.
- L'ASIC d'extrémité de carte de ligne de la carte de ligne se connecte à un ou plusieurs des 3 ASIC de transfert UADP 2.0 sur le superviseur via le fond de panier.
- Les 3 ASIC de transfert UADP 2.0 sur le superviseur prennent toutes les décisions de transfert de paquets.


## Terminologie

Acronyme	Définition
RP	Processeur de routage
FP	Processeur de transfert
FED	Pilote du moteur de transfert. Processus logiciel qui programme le Supervisor Forwarding Engine.
Gestionnaire d'objets	Entrées MAC du logiciel FP stockées en tant qu'objets asynchrones dans la base de données des objets.

LSMPI	Interface de pointeur de mémoire partagée Linux. Transport entre le plan de données (hardware-UADP 2.0) et le plan de contrôle (software-CPU).
IFM	Processus logiciel d'interface Manager.
ID_IF	ID d'interface identifier est une valeur unique qui représente une interface spécifique. Il est utilisé lors de la programmation interne dans le commutateur.
Incliner	Instance. Indique que l'interface Asic/Core UADP 2.0 est connectée à : 0=Asic0/Core0, 1=Asic0/Core1, 2=Asic1/Core0, 3=Asic1/Core1, 4=Asic2/Core0, 5=Asic2/Core1.
Asic	Spécifie à quelle interface UADP 2.0 est associée : 0=UADP 2.0 #0, 1=UADP 2.0 #1, 2=UADP 2.0 #2.
Coeur	Spécifie le cœur de l'interface UADP 2.0 associé à : 0=core0, 1=core1.
Port	Numéro d'instance ordinaire d'un port dans un logement. Dans le même logement, tous les numéros de port sont uniques.
Sous-port	Identifie un port d'un groupe de ports (Cntx) pour les ports de la façade qui sont subportés et SubPort identifient ensemble un port unique qui est sous-porté).
Mac	Identificateur d'interface utilisé lorsqu'une interface exécute MACsec (authentification et chiffrement de sécurité).
Cntx	Contexte. Numéro de groupe auquel appartient un port lorsqu'une interface de panneau avant est subportée (Cntx et SubPort identifient ensemble un port unique qui est sous-porté).
LPN	Numéro de port logique associé à une interface.
GPN	Numéro de port global associé à une interface.
Type NIF	Interface réseau ; NRU = Liaison ascendante redondante réseau
SI_IS	Identificateur d'interface. Il s'agit d'une valeur unique représentant une interface spécifique utilisée lors de différentes programmations internes dans le commutateur.
Port_LE	Entité logique de port. Il s'agit de la configuration de l'interface.
AOM	Gestionnaire d'objets asynchrones. Le FP programme les informations dans la base de données des objets en tant qu'objet.
Vice-président	Port virtuel
MATM	Gestionnaire de tables d'adresses MAC
RP	Processeur de routage
OM_PTR	Pointeur du Gestionnaire d'objets
ID_table	Identificateur de table = vlan
CMAN	Gestionnaire de châssis
FP	Processeur de transfert
fp_port	Ports du panneau avant.
Sif	Interface de pile (vers les 2 autres ASIC UADP 2.0 de transfert sur le superviseur).
Nif	Interface réseau (vers l'interface du panneau avant)
IGR/EGR	Entrée / Sortie
IQS	Planificateur de file d'attente en entrée
SQS	Planificateur de file d'attente de pile
PBC	Complexe de mémoire tampon de paquets
AQM	Gestion des files d'attente actives. Cela permet de contrôler la gestion de la congestion.
AQMRed	Gestion active des files d'attente Détection précoce aléatoire.
EQC	Contrôleur de file d'attente de sortie

ESM	Gestion du planificateur de sortie
RWE	Rewrite Engine (Moteur de réécriture) : Ajoute ou supprime des informations d'en-tête du paquet.
IOMD	Pilote du module de sortie d'entrée
fp_port	Port du panneau avant.
Nif	Interface réseau (vers l'interface du panneau avant)
SLI	Interface de liaison système (vers le superviseur)
IGR/EGR =	Entrée / Sortie
AQMRed	Gestion active des files d'attente Détection précoce aléatoire.
OCI	Interface de contrôle hors bande = canal de communication interne entre la carte de ligne et le superviseur actif
MATM	Gestionnaire de tables d'adresses MAC
Nombre de déplacements MAC	Il s'agit du nombre de déplacements (appris) d'une adresse MAC sur une nouvelle interface. Ce nombre de déplacements peut se produire lorsqu'un hôte final est physiquement déplacé d'une interface à une autre, qu'un hôte sans fil se déplace d'un point d'accès (AP) à un autre AP connecté sur une interface différente, ou que le chemin Spanning Tree change ou bouge.


## Line Card (LC) to UADP 2.0 Mapping

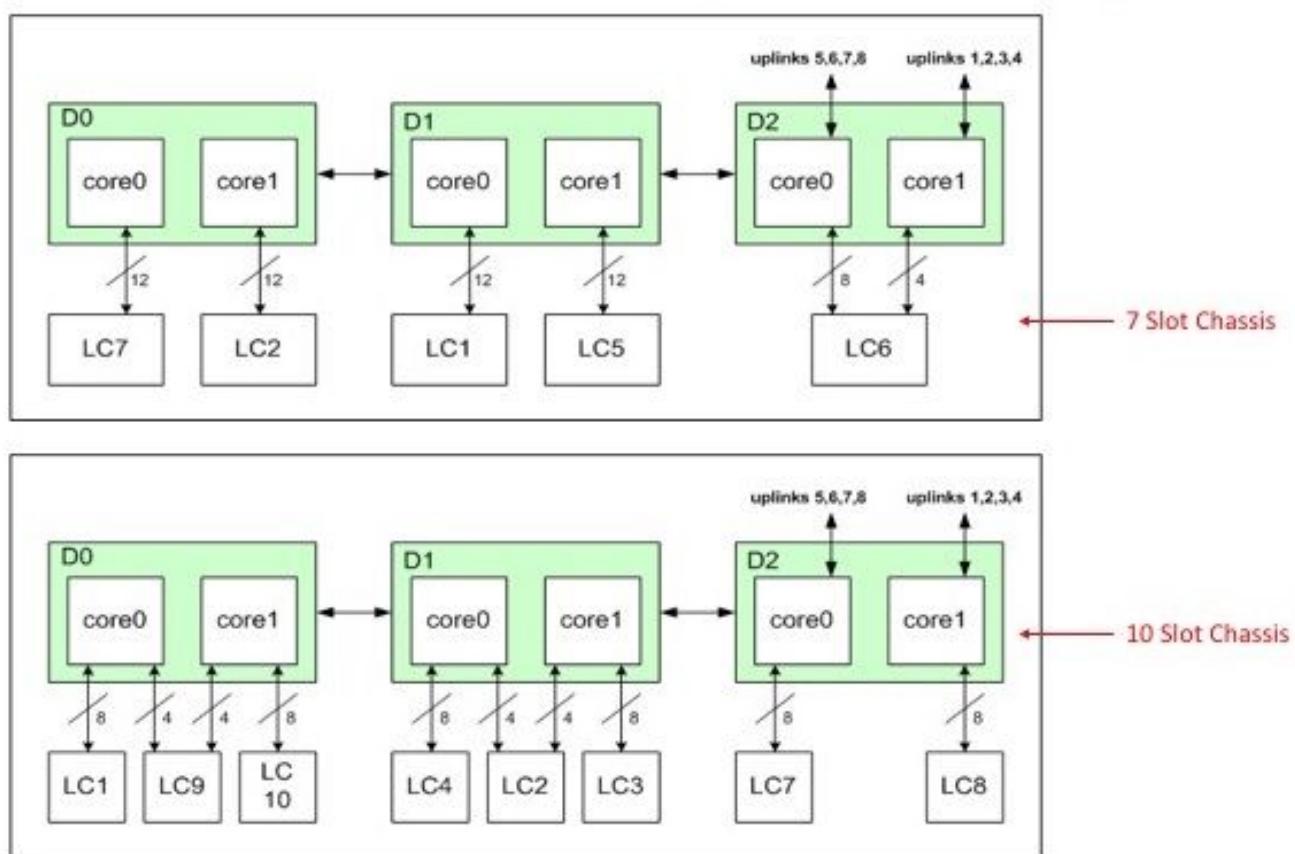

Carte de ligne UADP

## Topologie

**Catalyst 9400 - Macallan**  
SVI 100 IP: 100.100.100.1 / 24  
SVI 100 MAC: 2c5a.0f1c.28e1

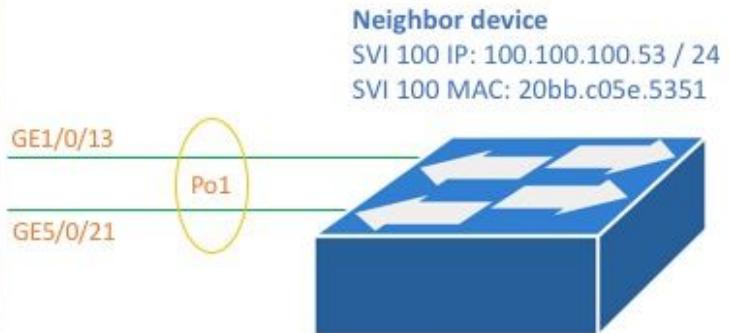

```
C9400#show version
Cisco IOS XE Software, Version 16.06.01
Cisco IOS Software [Everest], Catalyst L3 Switch Software (CAT9K_IOSXE), Version 16.6.1, RELEASE
SOFTWARE (fc2)
Technical Support: http://www.cisco.com/techsupport
Copyright (c) 1986-2017 by Cisco Systems, Inc.
Compiled Sat 22-Jul-17 05:51 by mcpred
--snip--
```

```
C9400#show module
Chassis Type: C9407R
```

Mod	Ports	Card	Type	Model	Serial No.
1	48	48-Port	10/100/1000 (RJ-45)	C9400-LC-48T	JAE211703RC
2	48	48-Port	UPOE 10/100/1000 (RJ-45)	C9400-LC-48U	JAE21150CGD
3	10	Supervisor 1	Module	C9400-SUP-1	JAE21240235
4	10	Supervisor 1	Module	C9400-SUP-1	JAE21240235
5	48	48-Port	UPOE 10/100/1000 (RJ-45)	C9400-LC-48U	JAE21150CG9

Mod	MAC addresses	Hw	Fw	Sw	Status
1	E4AA.5D54.C84C to E4AA.5D54.C87B	0.6	16.6.1r	[FC] 16.06.01	ok
2	E4AA.5D54.B430 to E4AA.5D54.B45F	0.6	16.6.1r	[FC] 16.06.01	ok
3	2C5A.0F1C.28EC to 2C5A.0F1C.28F5	0.6	16.6.1r	[FC] 16.06.01	ok
4	2C5A.0F1C.28F6 to 2C5A.0F1C.28FF	0.6	16.6.1r	[FC] 16.06.01	ok
5	E4AA.5D54.B658 to E4AA.5D54.B687	0.6	16.6.1r	[FC] 16.06.01	ok

Mod	Redundancy Role	Operating Redundancy Mode	Configured Redundancy Mode
3	Active	sso	sso
4	Standby	sso	sso

```
C9400#show running-config interface port-channel 1
interface Port-channel1
switchport trunk allowed vlan 100
switchport mode trunk
```

```
C9400#show running-config interface gigabitEthernet 1/0/13
interface GigabitEthernet1/0/13
switchport trunk allowed vlan 100
switchport mode trunk
channel-group 1 mode active
```

```
C9400#show running-config interface gigabitEthernet 5/0/21
interface GigabitEthernet5/0/21
switchport trunk allowed vlan 100
switchport mode trunk
channel-group 1 mode active
```

```
C9400#show etherchannel summary
--snip--
Group Port-channel Protocol Ports
-----+-----+-----+
1      Po1 (SU)       LACP        Gi1/0/13 (P) Gi5/0/21 (P)
```

**Note:** Les commandes show platform peuvent exiger que la commande de configuration globale service internal soit incluse dans l'instruction.

## Programmation d'interface

### Interface avec mappage d'instance UADP 2.0

La commande de programmation d'interface affiche le mappage d'interface de la façade pour toutes les cartes de ligne à l'un des 3 ASIC de transfert UADP 2.0 sur le superviseur actif.

#### Exemple de sortie

Cet exemple montre que :

- L'interface Gig1/0/3 est connectée à : Instance 2.0 UADP (UADP 2.0 Asic 1, Core 0) sur le superviseur.
- L'interface Gig5/0/21 est connectée à : instance 3 UADP 2.0 (UADP 2.0 Asic 1, Core 1) sur le superviseur.

```
C9400#show platform software fed active ifm mappings
Interface IF_ID Inst Asic Core Port SubPort Mac Cntx LPN GPN Type Active GigabitEthernet1/0/1
0x7 2 1 0 0 0 4 4 1 101 NIF Y GigabitEthernet1/0/2 0x8 2 1 0 1 1 4 4 2 102 NIF Y --snip--
GigabitEthernet1/0/13 0x13 2 1 0 12 4 0 0 13 1105 NIF Y --snip-- GigabitEthernet5/0/21 0x8f 3 1
1 20 4 5 5 21 1104 NIF Y --snip--
```

## Programmation d'interface physique

La commande show platform affiche les détails de configuration logicielle pour Gig1/0/3 en fonction de la valeur IF\_ID de l'exemple de commande précédent.

```
C9400#show platform software fed active ifm if-id 0x13
Interface IF_ID : 0x00000000000000013
Interface Name : GigabitEthernet1/0/13
Interface Block Pointer : 0x7fe5c5aab7b8
```

Interface State : READY  
Interface Status : ADD, UPD  
Interface Ref-Cnt : 7  
Interface Type : ETHER  
    Port Type : SWITCH PORT  
    Port Location : LOCAL  
    Slot : 1  
    Unit : 0  
    Slot Unit : 13  
    SNMP IF Index : 14  
    GPN : 1105  
    EC Channel : 1  
    EC Index : 1  
    Port Handle : 0x72000285  
    LISP v4 Mobility : false  
    LISP v6 Mobility : false  
    QoS Trust Type : 0

Port Information  
Handle ..... [0x72000285]  
Type ..... [Layer2]  
Identifier ..... [0x13]  
Slot ..... [1]  
Unit ..... [13]

Port Physical Subblock  
    Affinity ..... [local]  
    Asic Instance ..... [2 (A:1,C:0)]  
    AsicPort ..... [12]  
    AsicSubPort ..... [4]  
    MacNum ..... [0]  
    ContextId ..... [0]  
    LPN ..... [13]  
    GPN ..... [113]  
    Speed ..... [1GB]  
    type ..... [NIF]  
    PORT\_LE ..... [0x7fe5c5aabc28]  
    L3IF\_LE ..... [0x0]  
    EC GPN ..... [1105]  
    EC L3IF\_LE ..... [0x0]  
    EC Port Mask ..... [0aaaaaaaaaaaaaaaaaa]  
    DI ..... [0x7fe5c5ab5c48]

Port L2 Subblock  
    Enabled ..... [Yes]  
    **Allow dot1q ..... [Yes] ---> interface Gig1/0/13 is configured as a trunk**  
    Allow native ..... [Yes]  
    Default VLAN ..... [1]  
    Allow priority tag ... [Yes]  
    Allow unknown unicast [Yes]  
    Allow unknown multicast[Yes]  
    Allow unknown broadcast[Yes]  
    Allow unknown multicast[Enabled]  
    Allow unknown unicast [Enabled]  
    IPv4 ARP snoop ..... [No]  
    IPv6 ARP snoop ..... [No]  
    Jumbo MTU ..... [1500]  
    Learning Mode ..... [1]

Port QoS Subblock  
    Trust Type ..... [0x2]  
    Default Value ..... [0]  
    Ingress Table Map ..... [0x0]  
    Egress Table Map ..... [0x0]  
    Queue Map ..... [0x0]

Port Netflow Subblock  
Port Policy Subblock

```

List of Ingress Policies attached to an interface
List of Egress Policies attached to an interface
Ref Count : 7 (feature Ref Counts + 1)
IFM Feature Ref Counts
    FID : 100, Ref Count : 1
    FID : 57, Ref Count : 1
    FID : 115, Ref Count : 1
    FID : 17, Ref Count : 1
    FID : 78, Ref Count : 1
    FID : 30, Ref Count : 1
IFM Feature Sub block information
    FID : 57, Private Data : 0x7fe5c685e748
    FID : 17, Private Data : 0x7fe5c5e85f38
    FID : 30, Private Data : 0x7fe5c5e85aa8

```

Cette commande affiche les détails de configuration matérielle pour Gig1/0/3 en fonction de la valeur PORT\_LE de la commande précédente.

Valeur	Définition
Valeur 0	La valeur n'est pas définie.
Valeur 1	Valeur définie dans la plupart des cas.

```

C9400#show platform hardware fed active fwd-asic abstraction print-resource-handle
0x7fe5c5aabc28 1
Handle:0x7fe5c5aabc28 Res-Type:ASIC_RSC_PORT_LE Res-Switch-Num:0 Asic-Num:2 Feature-
ID:AL_FID_IFM Lkp-ftr-id:LKP_FEAT_INGRESS_PRECLASS1_IPV4 ref_count:1
priv_ri/priv_si Handle: (nil)Hardware Indices/Handles: index2:0xc mtu_index/13u_ri_index2:0x4 sm
handle [ASIC 2]: 0x7fe5c5abb588

Detailed Resource Information (ASIC#2)
-----
LEAD_PORT_ALLOW_BROADCAST value 1 Pass LEAD_PORT_ALLOW_CAPWAP value 0 Pass LEAD_PORT_ALLOW_CTS
value 0 Pass LEAD_PORT_ALLOW_DOT1Q_TAGGED value 1 Pass LEAD_PORT_ALLOW_MULTICAST value 1 Pass
LEAD_PORT_ALLOW_NATIVE value 1 Pass LEAD_PORT_ALLOW_NON_CTS value 0 Pass
LEAD_PORT_ALLOW_PRIORITY_TAGGED value 1 Pass LEAD_PORT_ALLOW_UNICAST value 1 Pass
LEAD_PORT_ALLOW_UNKNOWN_ETHER_TYPE value 0 Pass LEAD_PORT_ALLOW_UNKNOWN_UNICAST value 1 Pass
LEAD_PORT_ALLOW_VLAN_LOAD_BALANCE_GROUP value 15 Pass LEAD_PORT_ALLOW_VRF value 0 Pass
LEAD_PORT_ARP_OR_ND_SNOOPING_ENABLED_IPV4 value 0 Pass LEAD_PORT_ARP_OR_ND_SNOOPING_ENABLED_IPV6
value 0 Pass LEAD_PORT_AUTH_MODE value 0 Pass LEAD_PORT_CAPWAP_TUNNEL value 0 Pass
LEAD_PORT_CONTENT_MATCHING_ENABLED value 0 Pass LEAD_PORT_CTS_ENABLED value 0 Pass
LEAD_PORT_CUSTOMER_PORT value 0 Pass LEAD_PORT_DAI_OR_ND_TRUST_MODE_IPV4 value 0 Pass
LEAD_PORT_DAI_OR_ND_TRUST_MODE_IPV6 value 0 Pass LEAD_PORT_DATA_GLEAN_LEARN_IPV4 value 0 Pass --
snip--

```

## Programmation Etherchannel

Dans ces exemples de sorties de programmation Etherchannel, le RP programme le FP, le FP programme le FED, le FED programme le Supervisor Forwarding ASIC. Les entrées du logiciel RP sont stockées en tant qu'objets dans la base de données des objets et les entrées du logiciel FP sont stockées en tant qu'objets asynchrones dans la base de données des objets.

```

C9400#show etherchannel summary
--snip--
Group Port-channel Protocol Ports
-----+-----+-----+
1      Po1(SU)      LACP      Gi1/0/13(P) Gi5/0/21(P)

```

Le masque de groupe n'est pas zéro dans cette sortie. Il est utilisé dans le processus de hachage pour déterminer la liaison dans l'etherchannel où un flux de trafic sort.

```
C9400#show platform software interface rp active brief
```

Forwarding Manager Interfaces Information

Name	ID	QFP ID
Null0	1	0
GigabitEthernet1/0/1	7	0
GigabitEthernet1/0/2	8	0
GigabitEthernet1/0/3	9	0
-snip-		
GigabitEthernet1/0/13	19	0
-snip-		
GigabitEthernet5/0/21	143	0
-snip-		
Port-channel1	748	0
-snip-		

```
C9400#show platform software fed active etherchannel 1 group-mask
```

Group Mask Info

Aggport IIF Id: 00000000000002EC ---> hex 0x2EC = dec 748

Active Port: : 2 -----> 2 active interfaces in the etherchannel = the Member ports below

Member Ports

If Name	If Id	local	Group Mask
GigabitEthernet1/0/13	00000000000000013	true	5555555555555555 ---> hex 0x13 = dec 19
GigabitEthernet5/0/21	0000000000000008f	true	aaaaaaaaaaaaaaaaaa ---> hex 0x8f = dec 143

Cette commande affiche la configuration du Port-channel 1 :

```
C9400#show platform software fed active ifm if-id 0x000002ec
```

Interface IF\_ID : 0x0000000000000002ec

Interface Name : Port-channel1

Interface Block Pointer : 0x7fe5c685df98

Interface State : READY

Interface Status : ADD, UPD

Interface Ref-Cnt : 5

Interface Type : ETHERCHANNEL

Port Type : SWITCH PORT

Channel Number : 1

SNMP IF Index : 720

Port Handle : 0x50002f6

#Of Active Ports : 2

Base GPN : 1104

Index[2] : 0000000000000013 ---> Gig1/0/13 from previous command output

Index[3] : 0000000000000008f ---> Gig5/0/21 from previous command output

Port Information

Handle ..... [0x50002f6]

Type ..... [L2-Ethchannel]

Identifier ..... [0x2ec]

Unit ..... [1]

Port Logical Subblock

L3IF\_LE handle .... [0x0]

Num physical port . [2]

GPN Base ..... [1104]

Num physical port on asic [0] is [0]

DiBcam handle on asic [0].... [0x0]

Num physical port on asic [1] is [0]

DiBcam handle on asic [1].... [0x0]

Num physical port on asic [2] is [1] -----> Gig1/0/13 is on ASIC instance 2 (Supervisor

```

ASIC 1, core 0)
DiBcam handle on asic [2].... [0x7fe5c6ae3608]
Num physical port on asic [3] is [1] -----> Gig5/0/21 is on ASIC instance 3 (Supervisor
ASIC 1, core 1)
DiBcam handle on asic [3].... [0x7fe5c685d7e8]
Num physical port on asic [4] is [0]
DiBcam handle on asic [4].... [0x0]
Num physical port on asic [5] is [0]
DiBcam handle on asic [5].... [0x0]
Port L2 Subblock
Enabled ..... [No]
Allow dot1q ..... [No]
Allow native ..... [No]
Default VLAN ..... [0]
Allow priority tag ... [No]
Allow unknown unicast [No]
Allow unknown multicast[No]
Allow unknown broadcast[No]
Allow unknown multicast[Enabled]
Allow unknown unicast [Enabled]
IPv4 ARP snoop ..... [No]
IPv6 ARP snoop ..... [No]
Jumbo MTU ..... [0]
Learning Mode ..... [0]
Port QoS Subblock
Trust Type ..... [0x7]
Default Value ..... [0]
Ingress Table Map ..... [0x0]
Egress Table Map ..... [0x0]
Queue Map ..... [0x0]
Port Netflow Subblock
Port Policy Subblock
List of Ingress Policies attached to an interface
List of Egress Policies attached to an interface
Ref Count : 5 (feature Ref Counts + 1)
IFM Feature Ref Counts
FID : 115, Ref Count : 1
FID : 78, Ref Count : 1
No Sub Blocks Present

```

Cette commande affiche la configuration des interfaces de mappage.

<b>Acronyme/Instance</b>	<b>Définition</b>
IFM	Gestionnaire d'interface
Instance 0	Gig1/0/13 se trouve sur l'instance ASIC 2 (UADP 2.0 ASIC 1, noyau 0) avec l'ID d'interface 0x13
Instance 1	Gig5/0/21 se trouve sur l'instance ASIC 3 (UADP 2.0 ASIC 1, noyau 1) avec l'ID d'interface 0x8f

```

C9400#show platform software fed active ifm mappings
Interface IF_ID Inst Asic Core Port SubPort Mac Cntx LPN GPN Type Active GigabitEthernet1/0/1
0x7 2 1 0 0 0 4 4 1 101 NIF Y GigabitEthernet1/0/2 0x8 2 1 0 1 1 4 4 2 102 NIF Y --snip--
GigabitEthernet1/0/13 0x13 2 1 0 12 4 0 0 13 1105 NIF Y --snip-- GigabitEthernet5/0/21 0x8f 3 1
1 20 4 5 5 21 1104 NIF Y --snip--

```

## Configuration Etherchannel Globale

```

C9400#show platform software ether-channel rp active global-config
Forwarding Manager EtherChannel Global Configuration Information

```



```

LEAD_VLAN_ARP_OR_ND_SNOOPING_ENABLED_IPV4 value 0 Pass
LEAD_VLAN_ARP_OR_ND_SNOOPING_ENABLED_IPV6 value 0 Pass
LEAD_VLAN_BLOCK_L2_LEARN value 0 Pass
LEAD_VLAN_CONTENT_MATCHING_ENABLED value 0 Pass
LEAD_VLAN_DEST_MOD_INDEX_TVLAN_LE value 0 Pass
LEAD_VLAN_DHCP_SNOOPING_ENABLED_IPV4 value 0 Pass
LEAD_VLAN_DHCP_SNOOPING_ENABLED_IPV6 value 0 Pass
LEAD_VLAN_ENABLE_SECURE_VLAN_LEARNING_IPV4 value 0 Pass
LEAD_VLAN_ENABLE_SECURE_VLAN_LEARNING_IPV6 value 0 Pass
LEAD_VLAN_EPOCH value 0 Pass
LEAD_VLAN_L2_PROCESSING_STP_TCN value 0 Pass
LEAD_VLAN_L2FORWARD_IPV4_MULTICAST_PKT value 0 Pass
LEAD_VLAN_L2FORWARD_IPV6_MULTICAST_PKT value 0 Pass
LEAD_VLAN_L3_IF_LE_INDEX_PRIO value 1 Pass
LEAD_VLAN_L3IF_LE_INDEX value 111 Pass
LEAD_VLAN_LOOKUP_VLAN value 10 Pass -----> MVID 10 = vlan 100
LEAD_VLAN_MCAST_LOOKUP_VLAN value 10 Pass
LEAD_VLAN_RIET_OFFSET value 1 Pass
LEAD_VLAN_SNOOPING_FLOODING_ENABLED_IGMP_OR_MLD_IPV4 value 0 Pass
LEAD_VLAN_SNOOPING_FLOODING_ENABLED_IGMP_OR_MLD_IPV6 value 1 Pass
LEAD_VLAN_SNOOPING_PROCESSING_STP_TCN_IGMP_OR_MLD_IPV4 value 0 Pass
LEAD_VLAN_SNOOPING_PROCESSING_STP_TCN_IGMP_OR_MLD_IPV6 value 0 Pass
LEAD_VLAN_VLAN_CLIENT_LABEL value 0 Pass
LEAD_VLAN_VLAN_CONFIG value 0 Pass
LEAD_VLAN_VLAN_FLOOD_ENABLED value 0 Pass
LEAD_VLAN_VLAN_ID_VALID value 1 Pass
LEAD_VLAN_VLAN_LOAD_BALANCE_GROUP value 15 Pass
LEAD_VLAN_VLAN_ROLE value 0 Pass
LEAD_VLAN_VLAN_FLOOD_MODE_BITS value 3 Pass
LEAD_VLAN_LVX_VLAN value 0 Pass
LEAD_VLAN_EGRESS_DEJAVU_CANON value 0 Pass
LEAD_VLAN_EGRESS_INGRESS_VLAN_MODE value 0 Pass
LEAD_VLAN_EGRESS_LOOKUP_VLAN value 0 Pass
LEAD_VLAN_EGRESS_SGACL_DISABLED value 3 Pass
LEAD_VLAN_EGRESS_VLAN_CLIENT_LABEL value 0 Pass
LEAD_VLAN_EGRESS_VLAN_ID_VALID value 1 Pass
LEAD_VLAN_EGRESS_VLAN_LOAD_BALANCE_GROUP value 15 Pass
LEAD_VLAN_EGRESS_INTRA_POD_BCAST value 0 Pass
LEAD_VLAN_EGRESS_INTER_POD_BCAST value 0 Pass
LEAD_VLAN_MAX value 0 Pass

```

```

Detailed Resource Information (ASIC#3) ---> ASIC instance 3 = Supervisor ASIC 1, core 1
--snip--
Detailed Resource Information (ASIC#4) ---> ASIC instance 4 = Supervisor ASIC 2, core 0
--snip-
Detailed Resource Information (ASIC#5) ---> ASIC instance 5 = Supervisor ASIC 2, core 1
--snip--

```

## Programmation Spanning Tree

C9400#**show spanning-tree vlan 100**

```

VLAN0100
Spanning tree enabled protocol rstp Root ID Priority 32868 Address 20bb.c05e.5300 Cost 4 Port
2473 (Port-channel1) Hello Time 2 sec Max Age 20 sec Forward Delay 15 sec Bridge ID Priority
32868 (priority 32768 sys-id-ext 100) Address 2c5a.0f1c.28c0 Hello Time 2 sec Max Age 20 sec
Forward Delay 15 sec Aging Time 300 sec Interface Role Sts Cost Prio.Nbr Type -----
----- Gi1/0/1 Desg FWD 19 128.1 Shr
Gi2/0/11 Desg FWD 4 128.107 P2p Po1 Root FWD 3 128.2473 P2p Peer(STP)

```

C9400#**show etherchannel summary**

--snip--

Group	Port-channel	Protocol	Ports
1	Po1 (SU)	LACP	Gi1/0/13 (P) Gi5/0/21 (P)

Ces commandes affichent l'état de transmission du Spanning Tree pour Port-channel 1.

```
C9400#show platform software interface rp active brief
Forwarding Manager Interfaces Information
```

Name	ID	QFP ID
Null0	1	0
GigabitEthernet1/0/1	7	0
GigabitEthernet1/0/2	8	0
GigabitEthernet1/0/3	9	0
—snip—		
Port-channel1	748	0
—snip—		

```
C9400#show platform software fed active vp summary interface if_id 748
      if_id      vlan_id    pvlan_mode    pvlan_vlan    stp_state    vtp pruned
Untagged
-----
-
      748        100       trunk          1  forwarding      No
No
```

Les commandes suivantes affichent l'état de transfert matériel du Spanning Tree pour VLAN 100.

```
C9400#show platform software fed active vp summary vlan 100
      if_id      vlan_id    pvlan_mode    pvlan_vlan    stp_state    vtp pruned
Untagged
-----
-
--snip--
      748 100       trunk          1  forwarding      No
--snip--
```

```
C9400#show platform hardware fed active vlan 100 ingress
VLAN STP State in hardware

vlan id is:: 100
Interfaces in forwarding state: : Gi2/0/11(Tagged), Gi1/0/1(Tagged), Gi1/0/13(Tagged),
Gi5/0/21(Tagged)
flood list: : Gi2/0/11, Gi1/0/1, Gi1/0/13, Gi5/0/21
```

```
C9400#show platform hardware fed active vlan 100 egress
VLAN STP State in hardware

vlan id is:: 100
Interfaces in forwarding state: : Gi2/0/11(Tagged), Gi1/0/1(Tagged), Gi1/0/13(Tagged),
Gi5/0/21(Tagged)
```

Vérifiez la stabilité du Spanning Tree. Assurez-vous que les notifications de modification de topologie (TCN) sont peu fréquentes.

```
C9400#show spanning-tree vlan 100 detail

VLAN0100 is executing the rstp compatible Spanning Tree protocol
Bridge Identifier has priority 32768, sysid 10, address 2c5a.0f1c.28c0
Configured hello time 2, max age 20, forward delay 15, transmit hold-count 6
Current root has priority 32868, address 2c5a.0f1c.5300
Root port is 2473 (Port-channel1), cost of root path is 4
Topology change flag not set, detected flag not set
Number of topology changes 1 last change occurred 2w6d ago
    from Port-channel1
Times: hold 1, topology change 35, notification 2
        hello 2, max age 20, forward delay 15
Timers: hello 0, topology change 0, notification 0, aging 300

--snip--
```

## Programmation de transfert de couche 2

```
C9400#show etherchannel summary
--snip--
Group  Port-channel  Protocol      Ports
-----+-----+-----+
1       Po1(SU)      LACP          Gi1/0/13(P) Gi5/0/21(P)
```

```
C9400#ping 100.100.900.53
Type escape sequence to abort.
Sending 5, 100-byte ICMP Echos to 100.100.900.53, timeout is 2 seconds:
!!!!!
Success rate is 100 percent (5/5), round-trip min/avg/max = 3/4/5 ms
```

```
C9400#show mac address-table dynamic vlan 100
Mac Address Table
-----
Vlan Mac Address      Type      Ports
----  -----  -----  -----
100  0000.0200.0800  DYNAMIC   Gi1/0/1
100  20bb.c05e.5318  DYNAMIC   Po1
100  20bb.c05e.5351  DYNAMIC   Po1
Total Mac Addresses for this criterion: 3
```

## Programmation logicielle

Dans les exemples de sortie suivants, le RP programme le FP, le FP programme le FED, le FED enfin programme le Supervisor forwarding ASIC hardware. Les entrées MAC du logiciel RP sont stockées en tant qu'objets dans la base de données des objets et les entrées MAC du logiciel FP sont stockées en tant qu'objets asynchrones dans la base de données des objets.

```
C9400#show platform software matm rp active mac 20bb.c05e.5351 1 100 ---> 100 = vlan
Tbl_Type  Tbl_ID      MAC_Address  Type      Ports  AOM_ID/OM_PTR
MAT_VLAN      100 20bb.c05e.5351      1      1  OM: 0x3700860010
List of Ports: 748
```

```
C9400#show platform software interface rp active brief
```

## Forwarding Manager Interfaces Information

Name	ID	QFP ID
Null0	1	0
GigabitEthernet1/0/1	7	0
GigabitEthernet1/0/2	8	0
GigabitEthernet1/0/3	9	0
-snip-		
Port-channel1	748	0
-snip-		

```
C9400#show platform software matm fp active mac 20bb.c05e.5351
```

Tbl_Type	Tbl_ID	MAC_Address	Type	Ports	AOM_ID/OM_PTR
MAT_VLAN	100	20bb.c05e.5351	1	1	6567 created

List of Ports: 748

```
C9400#show platform software object-manager fp active object 6567
```

Object identifier: 6567  
Description: matm mac entry type VLAN, id 100, 20bb.c05e.5351  
Status: Done, Epoch: 0, Client data: 0x799633f8

## Programmation matérielle - Méthode 1

```
C9400#show platform software fed active matm macTable vlan 100
```

VLAN	MAC Type	Seq#	macHandle	siHandle	diHandle	*a_time	*e_time	ports
100	2c5a.0f1c.28e1	0X8002	0	0x7fe5c5eaf1c8	0x7fe5c5924f38	0x0		0 0

Vlan100

100	20bb.c05e.5351	<b>0x1</b>	589	0x7fe5c6b03d68	0x7fe5c6865f78	0x7fe51001b458	300	1
-----	----------------	------------	-----	----------------	----------------	----------------	-----	---

Port-channel1

100	0000.0200.0800	0X1	610	0x7fe5c6b07888	0x7fe5c6b076e8	0x7fe5c5972ce8	300	1
-----	----------------	-----	-----	----------------	----------------	----------------	-----	---

GigabitEthernet1/0/1

Total Mac number of addresses:: 3

\*a\_time=aging\_time(secs) \*e\_time=total\_elapsed\_time(secs)

**Type:**

MAT_DYNAMIC_ADDR	<b>0x1</b>	MAT_STATIC_ADDR	<b>0x2</b> ----> <b>Type = dynamically learned MAC</b>
------------------	------------	-----------------	--

**address entry**

MAT_CPU_ADDR	0x4	MAT_DISCARD_ADDR	0x8
--------------	-----	------------------	-----

MAT_ALL_VLANS	0x10	MAT_NO_FORWARD	0x20
---------------	------	----------------	------

MAT_IPMULT_ADDR	0x40	MAT_RESYNC	0x80
-----------------	------	------------	------

MAT_DO_NOT_AGE	0x100	MAT_SECURE_ADDR	0x200
----------------	-------	-----------------	-------

MAT_NO_PORT	0x400	MAT_DROP_ADDR	0x800
-------------	-------	---------------	-------

MAT_DUP_ADDR	0x1000	MAT_NULL_DESTINATION	0x2000
--------------	--------	----------------------	--------

MAT_DOT1X_ADDR	0x4000	MAT_ROUTER_ADDR	0x8000
----------------	--------	-----------------	--------

MAT_WIRELESS_ADDR	0x10000	MAT_SECURE_CFG_ADDR	0x20000
-------------------	---------	---------------------	---------

MAT_OPO_DATA_PRESENT	0x40000	MAT_WIRED_TUNNEL_ADDR	0x80000
----------------------	---------	-----------------------	---------

MAT_DLR_ADDR	0x100000	MAT_MRP_ADDR	0x200000
--------------	----------	--------------	----------

MAT_MSRP_ADDR	0x400000	MAT_LISP_LOCAL_ADDR	0x800000
---------------	----------	---------------------	----------

MAT_LISP_REMOTE_ADDR	0x1000000	MAT_VPLS_ADDR	0x2000000
----------------------	-----------	---------------	-----------

## programmation macHandle

**Acronyme /Term**

**Définition**

vlan:10 MVID 10. Le VLAN 100 utilise l'ID de VLAN mappé (MVID) 10 en interne dans le commutateur.

gpn : 1104 Numéro de port global de Port-channel 1.

mac : Adresse MAC 20bb.c05e.5351

0x20bbc05e5

351

Voici un exemple de sortie de programmation macHandle :

```
C9400#show platform hardware fed active fwd-asic abstraction print-resource-handle
0x7fe5c6b03d68 1
Handle:0x7fe5c6b03d68 Res-Type:ASIC_RSC_HASH_TCAM Res-Switch-Num:0 Asic-Num:255 Feature-
ID:AL_FID_L2 Lkp-ftr-id:LKP_FEAT_L2_SRC_MAC_VLAN ref_count:1
priv_ri/priv_si Handle: (nil) Hardware Indices/Handles: handle [ASIC: 0]: 0x7fe5c6aed898 handle
[ASIC: 1]: 0x7fe5c6b00fd8 handle [ASIC: 2]: 0x7fe5c6858208
Features sharing this resource:Cookie length: 12
5e c0 bb 20 51 53 0a 80 07 00 00 00 00

Detailed Resource Information (ASIC#0)
-----
Number of HTM Entries: 1
Entry 0: (handle 0x7fe5c6aed898) Abs_hash_index: 294 KEY - vlan:10 mac:0x20bbc05e5351 13_if:0
gpn:1104 epoch:0 static:0 flood_en: 0 vlan_lead_wless_flood_en: 0 client_home_asic: 0 MASK -
vlan:0 mac:0x0 13_if:0 gpn:0 epoch:0 static:0 flood_en:0 vlan_lead_wless_flood_en: 0
client_home_asic: 0 SRC_AD - need_to_learn:0 lrn_v:0 catchall:0 static_mac:0 chain_ptr_v:0
chain_ptr: 0 static_entry_v:0 auth_state:0 auth_mode:0 auth_behavior_tag:0 traf_m:0 is_src_ce:0
DST_AD - si:0xcd bridge:0 replicate:0 blk_fwd_o:0 v4_rmac:0 v6_rmac:0 catchall:0 ign_src_lrn:0
port_mask_o:0 afd_cli_f:0 afd_lbl1:0 prio:3 dest_mod_idx:0 destined_to_us:0 pv_trunk:1 smr:0
Detailed Resource Information (ASIC#1) --snip-- Detailed Resource Information (ASIC#2) --snip--
```

```
C9400#show platform software fed active vlan 100
```

VLAN Fed Information

Vlan Id	IF Id	LE Handle	STP Handle	L3 IF Handle	SVI IF ID
MVID					
-----	-----	-----	-----	-----	-----
100	0x0000000000420011	0x00007fe5c4616ef8	0x00007fe5c4617778	0x00007fe5c50dac28	
	0x000000000000002ea	10			

```
C9400#show platform software fed active ifm mappings etherchannel
```

Mappings Table

Chan	Interface	IF_ID
-----	-----	-----
1	Port-channel1	<b>0x000002ec</b>
--snip--		

```
C9400#show platform software fed active ifm if-id 0x000002ec -- IF_ID from previous output
```

Interface IF\_ID : 0x000000000000002ec  
Interface Name : Port-channel1  
Interface Block Pointer : 0x7fe5c685df98  
Interface State : READY  
Interface Status : ADD, UPD  
Interface Ref-Cnt : 5  
Interface Type : ETHERCHANNEL  
Port Type : SWITCH PORT  
Channel Number : 1  
SNMP IF Index : 720  
Port Handle : 0x50002f6  
#Of Active Ports : 2  
Base GPN : 1104  
Index[2] : 0000000000000013  
Index[3] : 0000000000000008f

```

Port Information
Handle ..... [0x50002f6]
Type ..... [L2-Ethchannel]
Identifier ..... [0x2ec]
Unit ..... [1]
Port Logical Subblock
L3IF_LE handle .... [0x0]
Num physical port . [2]
GPN Base ..... [1104]
--snip--

```

**Note:** l'interface sur laquelle mac a appris était une interface unique au lieu d'un port-channel, cette commande est utilisée pour déterminer le mappage GPN à l'interface

```
C9400#show platform software fed active ifm mappings gpn
Mappings Table
```

GPN	Interface	IF_ID
101	GigabitEthernet1/0/1	0x00000007
102	GigabitEthernet1/0/2	0x00000008
103	GigabitEthernet1/0/3	0x00000009

```
--snip--
```

## Programmation iHandle

Acronyme / Term	Définition
siHandle	Handle de l'index de station. Informations de réécriture de paquet (RI = Index de réécriture) et d'interface sortante (DI = Index de destination).

Bitmap de réPLICATION pour double cœur sur un seul Supervisor ASIC :

Acronyme/terme	Définition
ASIC local (LD = données locales)	Destination sur le même ASIC dans le même cœur que la source.
Copie principale (CD = Données de base)	Destination sur le même ASIC dans un autre cœur.
ASIC distant (RD = données distantes)	Destination sur un autre ASIC.

```
C9400#show platform hardware fed active fwd-asic abstraction print-resource-handle
0x7fe5c6865f78 1
Handle:0x7fe5c6865f78 Res-Type:ASIC_RSC_SI Res-Switch-Num:255 Asic-Num:255 Feature-ID:AL_FID_L3_UNICAST_IPV4 Lkp-ftr-id:LKP_FEAT_INVALID ref_count:2
priv_ri/priv_si Handle: 0x7fe5c6864938Hardware Indices/Handles: index0:0xcd
mtu_index/l3u_ri_index0:0x0 index1:0xcd mtu_index/l3u_ri_index1:0x0 index2:0xcd
mtu_index/l3u_ri_index2:0x0 index3:0xcd mtu_index/l3u_ri_index3:0x0 index4:0xcd
mtu_index/l3u_ri_index4:0x0 index5:0xcd mtu_index/l3u_ri_index5:0x0
Features sharing this resource:64 (1)
55 (1)
Cookie length: 56
00 00 00 00 00 00 00 00 64 00 00 00 00 00 00 00 00 00 00 00 00 07 00 20 bb c0 5e 53 51 00 00 00 00
00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
Detailed Resource Information (ASIC#0) ---> ASIC instance 0 = Supervisor ASIC 0, core 0
-----
```

```
Station Index (SI) [0xcd]
RI = 0x29 -----> Rewrite index (no MAC rewrite for L2 forwarding)
DI = 0x51c2 -----> Destination index = outgoing interface
stationTableGenericLabel = 0
stationFdConstructionLabel = 0
lookupSkipIdIndex = 0
rcpServiceId = 0
dejaVuPreCheckEn = 0x1
Replication Bitmap: LD RD CD
```

```
Detailed Resource Information (ASIC#1) ---> ASIC instance 1 = Supervisor ASIC 0, core 1
--snip--
Detailed Resource Information (ASIC#2) ---> ASIC instance 2 = Supervisor ASIC 1, core 0
--snip--
Detailed Resource Information (ASIC#3) ---> ASIC instance 3 = Supervisor ASIC 1, core 1
--snip--
Detailed Resource Information (ASIC#4) ---> ASIC instance 4 = Supervisor ASIC 2, core 0
--snip--
Detailed Resource Information (ASIC#5) ---> ASIC instance 5 = Supervisor ASIC 2, core 1
--snip--
```

```
C9400#show platform hardware fed active fwd-asic resource asic all destination-index range
0x51c2 0x51c2
```

```
ASIC#0:
--snip--
ASIC#1:
--snip--
```

```
ASIC#2: -----> ASIC Instance 2 = Supervisor ASIC 1, core 0
Destination Index (DI) [0x51c2]
portMap = 0x00000000 00001000 ---> binary 0001 0000 0000 0000 = Port 12 (see next command
output)
cmi1 = 0                                (read right to left, zero based)
rcpPortMap = 0
CPU Map Index (CMI) [0]
ctiLo0 = 0
ctiLo1 = 0
ctiLo2 = 0
cpuQNum0 = 0
cpuQNum1 = 0
cpuQNum2 = 0
npuIndex = 0
stripSeg = 0
copySeg = 0
```

```
ASIC#3: -----> ASIC instance 3 = Supervisor ASIC 1, core 1
Destination Index (DI) [0x51c2]
portMap = 0x00000000 00100000 ---> binary 0001 0000 0000 0000 0000 = Port 20 (see next
command output)
cmi1 = 0                                (read right to left, zero based)
rcpPortMap = 0
CPU Map Index (CMI) [0]
ctiLo0 = 0
ctiLo1 = 0
ctiLo2 = 0
cpuQNum0 = 0
cpuQNum1 = 0
cpuQNum2 = 0
npuIndex = 0
stripSeg = 0
copySeg = 0
```

ASIC#4:

--snip--

ASIC#5:

--snip--

C9400#**show platform software fed active ifm mappings**

Interface	IF_ID	Inst	Asic	Core	Port	SubPort	Mac	Cntx	LPN	GPN	Type	Active
GigabitEthernet1/0/1	0x7	2	1	0	0	0		4	4	1	101	NIF Y
GigabitEthernet1/0/2	0x8	2	1	0	1	1		4	4	2	102	NIF Y
--snip--												
GigabitEthernet1/0/13	0x13	2	1	0	12	4		0	0	13	1105	NIF Y
--snip--												
GigabitEthernet5/0/21	0x8f	3	1	1	20	4		5	5	21	1104	NIF Y
--snip--												

C9400#**show etherchannel summary**

--snip--

Group Port-channel Protocol Ports

Group	Port-channel	Protocol	Ports
1	Po1 (SU)	LACP	Gi1/0/13 (P) Gi5/0/21 (P)

Aucune information de réécriture MAC attendue n'est disponible, car il s'agit d'une entrée de transfert MAC de couche 2.

C9400#**show platform hardware fed active fwd-asic resource asic all rewrite-index range 0x29 0x29**  
**1**

ASIC#0:

Rewrite Data Table Entry,  
ASIC#:0, rewrite\_type:1, RI:41 ---> dec 41 = hex 0x29

MAC Addr:

MAC Addr: 20:bb:c0:5e:53:51,  
L3IF LE Index 111

ASIC#1:

Rewrite Data Table Entry,  
ASIC#:1, rewrite\_type:1, RI:41

MAC Addr:

MAC Addr: 20:bb:c0:5e:53:51,  
L3IF LE Index 111

ASIC#2:

--snip--

ASIC#3:

--snip--

ASIC#4:

--snip--

ASIC#5:

--snip--

C9400#**show mac address-table address 20bb.c05e.5351**

Mac Address Table

-----

Vlan	Mac Address	Type	Ports
100	20bb.c05e.5351	DYNAMIC	Po1
Total Mac Addresses for this criterion: 1			

## Programmation de la commande diHandle

Acronyme	Définition
digestion	Handle de l'index de destination. Il s'agit des informations d'interface sortante.
C9400#show platform hardware fed active fwd-asic abstraction print-resource-handle <b>0x7fe51001b458 1</b>	
Handle:0x7fe51001b458 Res-Type:ASIC_RSC_DI Res-Switch-Num:0 Asic-Num:255 Feature-ID:AL_FID_INVALID Lkp-ftr-id:LKP_FEAT_INVALID ref_count:21 priv_ri/priv_si Handle: (nil)Hardware Indices/Handles: index0:0x51c2 mtu_index/l3u_ri_index0:0x0 index1:0x51c2 mtu_index/l3u_ri_index1:0x0 index2:0x51c2 mtu_index/l3u_ri_index2:0x0 index3:0x51c2 mtu_index/l3u_ri_index3:0x0 index4:0x51c2 mtu_index/l3u_ri_index4:0x0 index5:0x51c2 mtu_index/l3u_ri_index5:0x0 Features sharing this resource:Cookie length: 8 01 00 00 00 c2 51 00 00	
Detailed Resource Information (ASIC#0) --snip--	
Detailed Resource Information (ASIC#1) --snip--	
Detailed Resource Information (ASIC#2) ---> <b>ASIC Instance 2 = Supervisor ASIC 1, core 0</b> ----- Destination Index (DI) [0x51c2] portMap = <b>0x00000000 00001000</b> -----> binary 0001 0000 0000 0000 = Port 12 (see next command output) cmi1 = 0 (read right to left, zero based) rcpPortMap = 0 CPU Map Index (CMI) [0] ctiLo0 = 0 ctiLo1 = 0 ctiLo2 = 0 cpuQNum0 = 0 cpuQNum1 = 0 cpuQNum2 = 0 npuIndex = 0 stripSeg = 0 copySeg = 0	
Detailed Resource Information (ASIC#3) ---> <b>ASIC Instance 3 = Supervisor ASIC 1, core 1</b> ----- Destination Index (DI) [0x51c2] portMap = <b>0x00000000 00100000</b> ---> binary 0001 0000 0000 0000 0000 = Port 20 (see next command output) cmi1 = 0 (read right to left, zero based) rcpPortMap = 0 CPU Map Index (CMI) [0] ctiLo0 = 0 ctiLo1 = 0 ctiLo2 = 0 cpuQNum0 = 0 cpuQNum1 = 0 cpuQNum2 = 0 npuIndex = 0 stripSeg = 0 copySeg = 0	
Detailed Resource Information (ASIC#4) --snip-- Detailed Resource Information (ASIC#5) --snip--	

```
C9400#show platform software fed active ifm mappings
Interface IF_ID Inst Asic Core Port SubPort Mac Cntx LPN GPN Type Active GigabitEthernet1/0/1
0x7 2 1 0 0 0 4 4 1 101 NIF Y GigabitEthernet1/0/2 0x8 2 1 0 1 1 4 4 2 102 NIF Y --snip--
GigabitEthernet1/0/13 0x13 2 1 0 12 4 0 0 13 1105 NIF Y --snip-- GigabitEthernet5/0/21 0x8f 3 1
1 20 4 5 5 21 1104 NIF Y --snip--
```

```
C9400#show etherchannel summary
--snip--
Group Port-channel Protocol Ports
-----+-----+-----+
1 Po1 (SU) LACP Gi1/0/13 (P) Gi5/0/21 (P)
```

## Programmation matérielle - Méthode 2

Acronyme /Term	Définition
vlan:10	MVID 10. Le VLAN 100 utilise l'ID de VLAN mappé (MVID) 10 en interne dans le commutateur.
gpn : 1104	Numéro de port global de Port-channel 1.
mac : 0x20bbc05e5351	Adresse MAC 20bb.c05e.5351

Méthode de programmation matérielle 2 exemple de sortie :

```
C9400#show platform hardware fed active matm macTable vlan 100
--snip--
HEAD: MAC address 20bb.c05e.5351 in VLAN 100
KEY: vlan 10, mac 0x20bbc05e5351, 13_if 0, gpn 1104, epoch 0, static 0, flood_en 0,
vlan_lead_wless_flood_en 0, client_home_asic 0
MASK: vlan 0, mac 0x0, 13_if 0, gpn 0, epoch 0, static 0, flood_en 0, vlan_lead_wless_flood_en
0, client_home_asic 0
SRC_AD: need_to_learn 0, lrn_v 0, catchall 0, static_mac 0, chain_ptr_v 0, chain_ptr 0,
static_entry_v 0, auth_state 0, auth_mode 0, traf_mode 0, is_src_ce 0
DST_AD: si 0xc7, bridge 0, replicate 0, blk_fwd_o 0, v4_mac 0, v6_mac 0, catchall 0, ign_src_lrn
0, port_mask_o 0, afd_cli_f 0, afd_lbl 0, priority 3, dest_mod_idx 0, destined_to_us 0, pv_trunk
1
--snip--
```

```
C9400#show platform software fed active vlan 100
VLAN Fed Information
```

Vlan Id	IF Id	LE Handle	STP Handle	L3 IF Handle	SVI IF ID
MVID					
100	0x0000000000420011	0x00007fe5c4616ef8	0x00007fe5c4617778	0x00007fe5c50dac28	0x00000000000002ea 10

```
C9400#show platform software fed active ifm mappings etherchannel
Mappings Table
```

Chan	Interface	IF_ID
1	Port-channel1	0x000002ec

```
C9400#show platform software fed active ifm if-id 0x000002ec
Interface IF_ID : 0x00000000000002ec
Interface Name : Port-channel1
```

```

Interface Block Pointer : 0x7fe5c685df98
Interface State : READY
Interface Status : ADD, UPD
Interface Ref-Cnt : 5
Interface Type : ETHERCHANNEL
Port Type : SWITCH PORT
Channel Number : 1
SNMP IF Index : 720
Port Handle : 0x50002f6
#Of Active Ports : 2
Base GPN : 1104
Index[2] : 00000000000000013
Index[3] : 0000000000000008f

```

```

Port Information
Handle ..... [0x50002f6]
Type ..... [L2-Ethchannel]
Identifier ..... [0x2ec]
Unit ..... [1]
Port Logical Subblock
L3IF_LE handle .... [0x0]
Num physical port . [2]
GPN Base ..... [1104]
--snip--

```

**Note:** Si l'interface sur laquelle le mac a appris était une interface unique au lieu d'un port-channel, la commande suivante est utilisée pour déterminer le mappage gpn-interface :

```
C9400#show platform software fed active ifm mappings gpn
Mappings Table
```

GPN	Interface	IF_ID
101	GigabitEthernet1/0/1	0x00000007
102	GigabitEthernet1/0/2	0x00000008
103	GigabitEthernet1/0/3	0x00000009

## Utilisation de TCAM

Vérifiez l'utilisation de TCAM pour les entrées d'adresse MAC sur chaque instance ASIC Supervisor pour vous assurer que le commutateur ne manque pas d'espace TCAM pour stocker les entrées dans le matériel.

```
C9400#show platform hardware fed active fwd-asic resource tcam utilization
CAM Utilization for ASIC Instance [0]
--snip--
CAM Utilization for ASIC Instance [1]
--snip--
CAM Utilization for ASIC Instance [2]
--snip--
CAM Utilization for ASIC Instance [3]---> ASIC instance 3 = Supervisor ASIC 1, Core 1
Table Max Values Used Values -----
----- Unicast MAC addresses 65536/1024 13/1 -----> prefix/mask
IGMP and Multicast groups 16384/1024 0/7
L2 Multicast groups 16384/1024 1/9
Directly or indirectly connected routes 49152/65536 0/0
NAT/PAT SA address and Port 0 0
```

QoS Access Control Entries	18432	34
Security Access Control Entries	18432	0
Ingress Netflow ACES	1024	0
Policy Based Routing ACES	2048	9
Egress Netflow ACES	2048	8
Input Microflow policer ACES	0	0
Output Microflow policer ACES	0	0
Flow SPAN ACES	1024	13
Control Plane Entries	1024	0
Tunnels	1024	0
Lisp Instance Mapping Entries	1024	0
Input Security Associations	512	3
Output Security Associations and Policies	512	0
SGT_DGT	8192/512	0/0
CLIENT_1E	4096/256	2/0
INPUT_GROUP_1E	1024	0
OUTPUT_GROUP_1E	1024	0
Macsec SPD	256	0
CAM Utilization for ASIC Instance [4]		
--snip--		
CAM Utilization for ASIC Instance [5]		
--snip--		

## Programmation matérielle réussie

Toutes les fonctionnalités (qu'il s'agisse d'une adresse MAC, d'une interface, d'un VLAN, etc.) sont stockées dans la base de données des objets et programmées dans le matériel en tant qu'objets.

Le RP programme le FP, le FP programme le FED, et le FED enfin programme le Supervisor forwarding ASIC hardware. Les entrées du logiciel RP sont stockées en tant qu'objets dans la base de données des objets et les entrées du logiciel FP sont stockées en tant qu'objets asynchrones dans la base de données des objets.

Lorsque le FP programme le FED (qui, à son tour, programme le superviseur de transfert ASIC), le FED renvoie un accusé de réception au FP. Le PC le transfère ensuite au RP pour indiquer que la programmation matérielle s'est terminée correctement. Si la programmation du matériel FED est manquante ou incorrecte, vous pouvez utiliser cette commande suivante pour vérifier les problèmes et/ou les accusés de réception.

```
C9400#show platform software object-manager fp active statistics
Forwarding Manager Asynchronous Object Manager Statistics

Object update: Pending-issue: 0, Pending-acknowledgement: 0
Batch begin: Pending-issue: 0, Pending-acknowledgement: 0
Batch end: Pending-issue: 0, Pending-acknowledgement: 0
Command: Pending-acknowledgement: 0
Total-objects: 3269
Stale-objects: 0
Resolve-objects: 0
Error-objects: 0
Paused-types: 0
```

Si la commande précédente affiche des objets non nuls dans l'état d'émission en attente, utilisez cette commande pour rechercher le numéro d'objet concerné :

```
C9400#show platform software object-manager fp active pending-issue-update
```

Utilisez ensuite cette commande pour déterminer le processus bloqué associé au numéro d'objet :

```
C9400#show platform software object-manager fp active object {object#}
```

Du côté RP, utilisez cette commande pour rechercher la suppression en attente (Suppr Pend) d'un objet que le FP n'a pas reconnu.

```
C9400#show platform software object-manager rp active object-type-info
```

Object type	Name	Count	Del	Pend	Layer
CC	cc	5	0	2	SPA
channel_dpidb		0	0	12	VIRTUAL_DPIDB
channel_dpidb		0	0	13	SW_DPIDB
channel_dpidb		0	0	17	VLAN
channel_dpidb		0	0	19	vlan

--snip--

## Vérification de l'intégrité

### Trafic et politique du plan de contrôle

Vérifiez que la CoPP (Control Plane Policy) tombe dans le matériel-UADP 2.0 pour le trafic transmis au processeur logiciel. Cela peut avoir un impact sur l'apprentissage MAC et la stabilité du Spanning Tree.

```
C9400#show policy-map control-plane
```

Control Plane

Service-policy input: system-cpp-policy

--snip--

Class-map: system-cpp-police-sw-forward (match-any)

0 packets, 0 bytes  
5 minute offered rate 0000 bps, drop rate 0000 bps  
Match: none  
police:  
    rate 1000 pps, burst 244 packets  
    conformed 1298 bytes; actions:  
        transmit  
    exceeded 0 bytes; actions:  
        drop

--snip--

Class-map: system-cpp-police-12-control (match-any)

0 packets, 0 bytes  
5 minute offered rate 0000 bps, drop rate 0000 bps  
Match: none  
police:  
    rate 500 pps, burst 122 packets  
    conformed 239197001 bytes; actions:  
        transmit  
    exceeded 0 bytes; actions:  
        drop

--snip--

Class-map: system-cpp-default (match-any)

```

0 packets, 0 bytes
5 minute offered rate 0000 bps, drop rate 0000 bps
Match: none
police:
    rate 1000 pps, burst 244 packets
    conformed 0 bytes; actions:
        transmit
    exceeded 0 bytes; actions:
        drop

Class-map: class-default (match-any)
0 packets, 0 bytes
5 minute offered rate 0000 bps, drop rate 0000 bps
Match: any

```

La même sortie CoPP que l'exemple précédent est présentée ici dans un format plus granulaire et plus simple à lire (compressé).

```
C9400#show platform hardware fed active qos queue stats internal cpu policer
```

CPU Queue Statistics							
QId	PlcIdx	Queue Name	Enabled	(default)	(set)	Queue	Queue
				Rate	Rate	Drop (Bytes)	Drop (Frames)
0	11	DOT1X Auth	Yes	1000	1000	0	0
1	1	L2 Control	Yes	2000	400	0	0
2	14	Forus traffic	Yes	1000	1000	0	0
3	0	ICMP GEN	Yes	600	600	0	0
4	2	Routing Control	Yes	5400	1800	0	0
5	14	Forus Address resolution	Yes	1000	1000	0	0
6	0	ICMP Redirect	Yes	600	600	0	0
7	16	Unused	Yes	1000	1000	0	0
8	4	L2 LVX Cont Pack	Yes	1000	1000	0	0
9	16	EWLC Control	Yes	1000	1000	0	0
10	16	EWLC Data	Yes	1000	1000	0	0
11	13	L2 LVX Data Pack	Yes	1000	1000	0	0
12	0	BROADCAST	Yes	600	600	0	0
13	10	Learning cache ovfl	Yes	100	200	0	0
14	13	Sw forwarding	Yes	1000	1000	0	0
15	8	Topology Control	Yes	13000	13000	0	0
16	12	Proto Snooping	Yes	2000	2000	0	0
17	16	DHCP Snooping	Yes	1000	1000	0	0
18	9	Transit Traffic	Yes	500	400	0	0
19	10	RPF Failed	Yes	100	200	0	0
20	15	MCAST END STATION	Yes	2000	2000	0	0
21	13	LOGGING	Yes	1000	1000	0	0
22	7	Punt Webauth	Yes	1000	1000	0	0
23	10	Crypto Control	Yes	100	200	0	0
24	10	Exception	Yes	100	200	0	0
25	3	General Punt	Yes	200	200	0	0
26	10	NFL SAMPLED DATA	Yes	100	200	0	0
27	2	Low Latency	Yes	5400	1800	0	0
28	10	EGR Exception	Yes	100	200	0	0
29	5	Stackwise Virtual Control	No	8000	8000	0	0
30	9	MCAST Data	Yes	500	400	0	0
31	10	Gold Pkt	Yes	100	200	0	0

\* NOTE: CPU queue policer rates are configured to the closest hardware supported value

CPU Queue Policer Statistics

Policer Index	Policer Accept Bytes	Policer Accept Frames	Policer Drop Bytes	Policer Drop Frames
<hr/>				
0	3132	36	0	0
1	239197001	721952	0	0
2	123004776	978818	0	0
3	0	0	0	0
4	0	0	0	0
5	0	0	0	0
6	0	0	0	0
7	0	0	0	0
8	1024	16	0	0
9	0	0	0	0
10	13600	200	0	0
11	0	0	0	0
12	0	0	0	0
13	1298	3	0	0
14	80520	9158	0	0
15	2189268	23733	0	0
16	0	0	0	0
17	0	0	0	0

CPP Classes to queue map

PlcIdx CPP Class	: Queues
<hr/>	
0 system-cpp-police-data	: ICMP GEN/BROADCAST/ICMP Redirect/
10 system-cpp-police-sys-data	: Learning cache ovfl/Crypto Control/Exception/EGR Exception/NFL SAMPLED DATA/Gold Pkt/RPF Failed/
13 system-cpp-police-sw-forward	: Sw forwarding/LOGGING/L2 LVX Data Pack/
9 system-cpp-police-multicast	: Transit Traffic/MCAST Data/
15 system-cpp-police-multicast-end-station	: MCAST END STATION /
7 system-cpp-police-punt-webauth	: Punt Webauth/
1 system-cpp-police-l2-control	: L2 Control/
5 system-cpp-police-stackwise-virt-control	: Stackwise Virtual Control/
2 system-cpp-police-routing-control	: Routing Control/Low Latency/
3 system-cpp-police-control-low-priority	: General Punt/
4 system-cpp-police-l2lvx-control	: L2 LVX Cont Pack/
8 system-cpp-police-topology-control	: Topology Control/
11 system-cpp-police-dot1x-auth	: DOT1X Auth/
12 system-cpp-police-protocol-snooping	: Proto Snooping/
14 system-cpp-police-forus	: Forus Address resolution/Forus traffic/
5 system-cpp-police-stackwise-virt-control	: Stackwise Virtual Control/
16 system-cpp-default	: DHCP Snooping/Unused/EWLC Control/EWLC Data/

Vérifiez les statistiques de chemin d'accès au processeur (hardware-UADP 2.0 vers software-CPU) du point de vue du logiciel (CPU).

```
C9400#show platform software infrastructure lsmpi
LSMPI interface internal stats:
enabled=0, disabled=0, throttled=0, unthrottled=0, state is ready
Input Buffers = 8801257
Output Buffers = 5506129
rxdone count = 8801257
txdone count = 5506128
Rx no particletype count = 0
Tx no particletype count = 0
Txbuf from shadow count = 0
No start of packet = 0
No end of packet = 0
Punt drop stats:
Bad version 0
Bad type 0
```

```

Had feature header 0
Had platform header 0
Feature header missing 0
Common header mismatch 0
Bad total length 0
Bad packet length 0
Bad network offset 0
Not punt header 0
Unknown link type 0
No swidb 0
Bad ESS feature header 0
No ESS feature 0
No SSLVPN feature 0
No PPP bridge feature 0
Punt For PPP bridge type packets 0
Punt For Us type unknown 0
EPC CP RX Pkt cleansed 0
Punt cause out of range 0
IOSXE-RP Punt packet causes:
    42879 Layer2 control and legacy packets
    3644168 ARP request or response packets
        7584 For-us data packets
        1794 Mcast Directly Connected Source packets
        1573 Mcast PIM signaling packets
        750076 For-us control packets
38058 Layer2 bridge domain data packet packets
    3823736 Layer2 control protocols packets

FOR_US Control IPv4 protcol stats:
    750076 [proto=0] packets
Packet histogram(500 bytes/bin), avg size in 125, out 126:
  Pak-Size      In-Count      Out-Count
    0+:          8228322       5207592
   500+:         41355          1717
  1000+:        4331           2402
  1500+:        35860          20017

Lsmp11/3 is up, line protocol is up <-- CPU interface
Hardware is LSMPI
MTU 1500 bytes, BW 1000000 Kbit/sec, DLY 10 usec,
    reliability 255/255, txload 1/255, rxload 1/255
Encapsulation ARPA, loopback not set
Keepalive not set
Unknown, Unknown, media type is unknown media type
output flow-control is unsupported, input flow-control is unsupported
ARP type: ARPA, ARP Timeout 04:00:00
Last input never, output never, output hang never
Last clearing of "show interface" counters never
Input queue: 0/1500/0/0 (size/max/drops/flushes); Total output drops: 0
Queueing strategy: fifo
Output queue: 0/40 (size/max)
5 minute input rate 0 bits/sec, 0 packets/sec
5 minute output rate 0 bits/sec, 0 packets/sec
    8309868 packets input, 0 bytes, 0 no buffer
    Received 0 broadcasts (0 IP multicasts)
    0 runts, 0 giants, 0 throttles
    0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
    0 watchdog, 0 multicast, 0 pause input
    5231728 packets output, 659535525 bytes, 0 underruns 0 output errors, 0 collisions, 0
interface resets 0 unknown protocol drops 0 output buffer failures, 0 output buffers swapped out

```

```
C9400#show platform software infrastructure lsmpi punt
```

```
LSMPI punt statistics
```

Total packets consumed:	876
Total packets forwarded:	8468766
First frag packets:	0
Total packets consumed & forwarded:	0

Cause	SKB	Total consumed	Total forwarded	Length error	Dot1q encap exceeded
linktype invalid					
MPLS ICMP Can't Fragment	0	0	0	0	0
IPv4 Options	0	0	0	0	0
Layer2 control and legacy	0	0	0	0	0
PPP Control	0	0	0	0	0
CLNS IS-IS Control	0	0	0	0	0
HDLC keepalives	0	0	0	0	0
--snip--					

Vérifiez les statistiques du chemin d'injection du processeur (logiciel-CPU vers matériel-Supervisor) du point de vue du logiciel (CPU).

```
C9400#show platform software infrastructure inject
```

```
Statistics for L3 injected packets:
```

5233473 total inject pak, 3 failed
0 sent, 859329 prerouted
0 non-CEF capable, 855296 non-unicast
859826 IP, 0 IPv6
0 MPLS, 0 Non-IP Tunnel
0 UDLR tunnel, 0 P2MP replicated mcast
0 Non-IP Fastswitched over Tunnel, 4373497 legacy pak path
0 Other packet
0 IP fragmented
644 normal, 391 nexthop
858788 adjacency, 150 feature
0 undefined
3 pak find no adj, 0 no adj-id
137322 sb alloc, 856085 sb local
0 p2mcast failed count 0 p2mcast enqueue fail
0 unicast dhc
0 mobile ip
0 IPv6 NA
0 IPv6 NS
0 Transport failed cases
0 Grow packet buffer
per feature packet inject statistics
150 Feature multicast
0 Feature Edge Switching Service
0 Feature Session Border Controller
0 Feature interrupt level
0 Feature use outbound interface
0 Feature interrupt level with OCE
0 Feature ICMPv6 error message
0 Feature Session Border Controller media packet injection
0 Feature Tunnel Ethernet over GRE
0 Feature Secure Socket Layer Virtual Private Network
0 Feature EPC Wireshark injecting packets

```
Statistics for L2 injected packets:
0 total L2 inject pak, 0 failed
0 total BD inject pak, 0 failed
0 total EFP inject pak, 0 failed
0 total VLAN inject pak, 0 failed
```

Vérifiez les statistiques de chemin d'injection/de pointeur du processeur du point de vue de FED (UADP 2.0).

```
C9400#show platform software fed active lsmpi stat
LSMPI Statistics

-----
Transmit: -----> FED transmit = FED (Supervisor) punt to CPU
    Packet Count      : 8469445
    Bytes Count       : 1055390613
    particle Count    : 8951009
    particle with App : 7258
    Ring Full Error  : 0
    No Buff Error    : 0
    TX Ring Free     : 2047
    TX Ring Busy     : 0
    TX Ring Size     : 2048
    TXDone Ring Free : 6816
    TXDone Ring Busy : 9567
    TXDone Ring Size : 16384

Receive: -----> FED receive = CPU inject to FED (Supervisor)
    Packet Count      : 5450099
    Bytes Count       : 675084903 Particle Count : 5695697 Particles with App : 4294966854 RX
Done Count : 5696139 No SOP : 0 No EOP : 0 Not Enough Buf : 0 Max Not Enough Buf : 0 RX Ring
Free : 4095 RX Ring Busy : 0 RX Ring Size : 4096 RXDone Ring Free : 8191 RXDone Ring Busy : 0
RXDone Ring Size : 8192 -----
```

Vérifiez les statistiques de chemin d'accès au processeur (matériel-superviseur vers logiciel-CPU) du point de vue du FED (superviseur).

```
C9400#show platform software fed active punt cause summary
Statistics for all causes
```

Cause	Cause Info	Rcvd	Dropped
7	ARP request or response	3644168	0
11	For-us data	1524	0
12	Mcast Directly Connected Source	1794	0
25	Mcast PIM signaling	1573	0
55	For-us control	750461	0
58	Layer2 bridge domain data packet	38058	0
96	Layer2 control protocols	3825228	0

Vérifiez l'état des 31 files d'attente de pointes de CPU individuelles du point de vue FED (Supervisor).

```
C9400#show platform software fed active cpu-interface
queue          retrieved   dropped    invalid    hol-block
-----
```

Routing Protocol	790844	0	0	0
L2 Protocol	2774488	0	0	0
sw forwarding	0	0	0	0
broadcast	0	0	0	0
icmp	0	0	0	0
icmp redirect	0	0	0	0
logging	0	0	0	0
rpf-fail	1573	0	0	0
DOT1X authentication	0	0	0	0
Forus Traffic	1524	0	0	0
Forus Resolution	3644192	0	0	0
Wireless q5	0	0	0	0
Wireless q1	0	0	0	0
Wireless q2	0	0	0	0
Wireless q3	0	0	0	0
Wireless q4	0	0	0	0
Learning cache	0	0	0	0
Topology control	1198807	0	0	0
Proto snooping	0	0	0	0
BFD Low latency	0	0	0	0
Transit Traffic	0	0	0	0
Multi End station	38058	0	0	0
Health Check	0	0	0	0
Health Check	0	0	0	0
Crypto control	0	0	0	0
Exception	0	0	0	0
General Punt	0	0	0	0
NFL sampled data	0	0	0	0
STG cache	0	0	0	0
EGR exception	0	0	0	0
FSS	0	0	0	0
Multicast data	1794	0	0	0

C9400#**show platform software fed active punt cpug all**

Punt CPU Q Statistics

=====

-snip-

CPU Q Id	:	1
CPU Q Name	:	CPU_Q_L2_CONTROL
<b>Packets received from ASIC</b>	:	<b>2669864 -----&gt; Packets received by the FED process from the Supervisor forwarding ASICs</b>
<b>Send to IOSd total attempts</b>	:	<b>2669864 -----&gt; Packets sent from the FED process to IOSd</b>
Send to IOSd failed count	:	0
RX suspend count	:	0
RX unsuspend count	:	0
RX unsuspend send count	:	0
RX unsuspend send failed count	:	0
RX consumed count	:	0
RX dropped count	:	0
RX non-active dropped count	:	0
RX conversion failure dropped	:	0
RX INTACK count	:	2243784
RX packets dq'd after intack	:	5074
Active RxQ event	:	2243785
RX spurious interrupt	:	322266
 CPU Q Id	:	2
CPU Q Name	:	CPU_Q_FORUS_TRAFFIC

```

Packets received from ASIC      : 1524
Send to IOSd total attempts    : 1524
Send to IOSd failed count      : 0
RX suspend count                : 0
RX unsuspend count              : 0
RX unsuspend send count        : 0
RX unsuspend send failed count : 0
RX consumed count              : 0
RX dropped count                : 0
RX non-active dropped count    : 0
RX conversion failure dropped : 0
RX INTACK count                 : 1347
RX packets dq'd after intack   : 8
Active RxQ event                : 1347
RX spurious interrupt           : 38

```

-snip-

Vérifiez le chemin d'injection du processeur (logiciel-CPU vers matériel-Supervisor) du point de vue de FED (Supervisor).

```
C9400#show platform software fed active inject cause summary
Statistics for all causes
```

Cause	Cause Info	Rcvd	Dropped
<hr/>			
1	L2 control/legacy	4331682	0
2	QFP destination lookup	290	0
3	QFP IPv4/v6 nexthop lookup	391	0
7	QFP adjacency-id lookup	859393	265
8	Mcast specific inject packet	150	0
12	ARP request or response	601	0
<hr/>			

Vérifiez l'état des 2 files d'attente d'injection de CPU individuelles du point de vue de FED (UADP 2.0).

```
C9400#show platform software fed active inject cpuq all
```

Inject CPU Q Statistics

=====

```

CPU Q Id                  : 0
CPU Q Name             : TX_CPUQ_PRIO_LOW ---> low priority CPU inject queue
Packets received from IOSd : 168342
Enq to pkt driver total attempts : 168277
Enq to pkt driver failed count : 0
Count of TX CMPL received    : 168277
TX suspend count              : 0
TX unsuspend count            : 0
TX dropped count              : 265
TX punted count               : 0
TX App enq failed             : 0

CPU Q Id                  : 7
CPU Q Name             : TX_CPUQ_PRIO_HI ---> high priority CPU inject queue
Packets received from IOSd : 5024664
Enq to pkt driver total attempts : 5024664
Enq to pkt driver failed count : 0
Count of TX CMPL received    : 5024664
TX suspend count              : 0
TX unsuspend count            : 0
TX dropped count              : 0

```

```

TX punted count : 0
TX App enq failed : 0

Stats for all txq:
-----
TX chunk malloc fail count : 0
-----

```

## Statistiques sur les événements de table MAC

```
C9400#show platform software fed active matm stats
MATM counters
```

```

Total non-cpu mac entries : 10
Mac Learn SPI Msg Count : 0
Mac Learn SPI Err Count : 0
Mac Delete SPI Msg Count : 0
Mac Delete SPI Err Count : 0
Mac Learn Count : 967
Mac Add Count : 989
Mac AL add Count : 971
Mac Del Count : 957
Mac AL Del Count : 961
Mac Move Count : 2 ---> MAC moves between interfaces (see details above)
Mac AL Move Count : 0
Mac Clear Count : 0
Mac Del all count : 6
Mac table create Count : 9
Mac VP event Count : 5
Mac Update info Count : 0
Mac Vlan age config Event Count : 0
Mac Vlan Link Event Count : 6
Mac SVI linkEvent Count : 3
Mac Bsync Event Count : 0
Mac Isync Event Count : 0
Mac Recon Start Count : 0
Mac Recon Event Count : 0
Mac IFM event Count : 75
Mac FEC Event Count : 0
Mac Aging Tick Count : 0
Mac Retry event Count : 0
Mac Hw Update Err Count : 0
Mac In retryQ Count : 0

```

```
C9400#configure terminal
```

```
C9400(config)#mac address-table notification ?
  change      Enable/Disable MAC Notification feature on the switch
  mac-move    Enable Mac Move Notification
  threshold   Configure L2 Table monitoring
```

```
C9400(config)#mac address-table notification mac-move ---> enabled by default, syslog generated
for any MAC move (show logging)
```

```
C9400(config)#mac address-table notification change ?
  history-size Number of MAC notifications to be stored
  interval     Interval between the MAC notifications
  <cr>          <cr>
```

```
C9400(config)#mac address-table notification change ---> disabled by default
```

```
C9400#show mac address-table notification mac-move
MAC Move Notification: enabled
```

```
C9400#show mac address-table notification change
MAC Notification Feature is Enabled on the switch Interval between Notification Traps : 1 secs
Number of MAC Addresses Added : 0 Number of MAC Addresses Removed : 0 Number of Notifications
sent to NMS : 0 Maximum Number of entries configured in History Table : 1 Current History Table
Length : 0 MAC Notification Traps are Disabled History Table contents -----
```

## Suppression des exceptions UADP 2.0

Cette commande détaille toutes les raisons pour lesquelles un ASIC de transfert UADP 2.0 abandonne un paquet :

```
C9400#show platform hardware fed active fwd-asic drops exceptions
*****EXCEPTION STATS ASIC INSTANCE 0 (asic/core 0/0)*****
=====
NAME | prev | current | delta
===== 0 0
NO_EXCEPTION 0 0 0 0 IPV4_CHECKSUM_ERROR 0 0 0 0 ROUTED_AND_IP_OPTIONS_EXCEPTION 0 0 0 0
CTS_FILTERED_EXCEPTION 0 0 0 0 SIA_TTL_ZERO 0 0 0 0 ALLOW_NATIVE_EXCEPTION_COUNT 0 0 0 0
ALLOW_DOT1Q_EXCEPTION_COUNT 0 0 0 0 ALLOW_PRIORITY_TAGGED_EXCEPTION_COUNT 0 0 0 0
ALLOW_UNKNOWN_ETHER_TYPE_EXCEPTION 0 0 0 0 IP_SOURCE_GUARD_VIOLATION 0 0 0 0
SECURE_L3IF_LEARNING_VIOLATION 0 0 0 0 AUTH_DRIVEN_DROP 0 0 0 0 VLAN_LOADBALANCE_GROUP_DENY
0 0 0 0 RPF_UNICAST_FAIL 0 0 0 0 RPF_UNICAST_FAIL_SUPPRESS 0 0 0 0
RPF_UNICAST_CHECK_INCOMPLETE 0 0 0 0 RPF_MULTICAST_FAIL 0 0 0 0 PKT_DROP_COUNT 0 0 0 0
SOURCE_ROUTE_EXCEPTION 0 0 0 0 IGR_MISC_FATAL_ERROR 0 0 0 0 BLOCK_FORWARD 0 0 0 0
POLICER_DROP 0 0 0 0 DENY_ROUTE 0 0 0 0 DENY_BRIDGE 0 0 0 0 STATIC_MAC_VIOLATION 0 0 0 0
STATIC_IP_VIOLATION 0 0 0 0 FPM_DROP_PACKET 0 0 0 0 IGR_EXCEPTION_L4_ERROR 0 0 0 0
IGR_EXCEPTION_L5_ERROR 0 0 0 0 IGR_EXCEPTION_HARDWARE_PARSE_EXCEPTION 0 0 0 0
IGR_EXCEPTION_INVALID_VLAN_DROP 0 0 0 0 IGR_EXCEPTION_31 0 0 0 0
FRAGMENTING_IPV4_WITH_OPTIONS 0 0 0 0 FRAGMENTING_IPV6_WITH_EXTENSIONS 0 0 0 0 ICMP_REDIRECT
0 0 0 0 MTU_FAIL_PUNT_TO_CPU_NO_IP_UNREACHABLE 0 0 0 0
LINK_LOCAL_CHECK_FAIL_NO_IP_UNREACHABLE 0 0 0 0 IP_UNICAST_TTL_REACHED_ZERO 0 0 0 0
MISC_FATAL_ERROR 0 0 0 0 STP_OR_FLEXLINK_DROP 0 0 0 0 PROTECTED_PORT_DROP 0 0 0 0
PVLAN_ISOLATED_CHECK_FAILED 0 0 0 0 PVLAN_COMMUNITY_CHECK_FAILED 0 0 0 0
DEJA_VU_CHECK_FAILED 0 0 0 0 NOT_VLAN_LOAD_BALANCE_GROUP_ALLOWED 0 0 0 0 RSPAN_DROP 0 0 0 0
0 SPLIT_HORIZON_DROP 0 0 0 0 SYSTEM_TTL_DROP 0 0 0 0 PRUNED 0 0 0 0 DENY_NO_IP_UNREACHABLE
0 0 0 0 IP_MULTICAST_TTL_REACHED_ZERO 0 0 0 0 MTU_FAIL_DROP_BRIDGED 0 0 0 0
MTU_FAIL_DROP_BRIDGED_IP_ROUTED 0 0 0 0 MTU_FAIL_ERSPAN 0 0 0 0
LINK_LOCAL_CHECK_FAIL_L3M_VALID 0 0 0 0 DENY_NOT_NO_IP_UNREACHABLE 0 0 0 0
MTU_FAIL_PUNT_TO_CPU_NOT_NO_IP_UNREACHABLE 0 0 0 0 LINK_LOCAL_CHECK_FAIL_NOT_NO_IP_UNREACHABLE
0 0 0 0 COPY_TO_CPU 0 0 0 0 EGR_L3_ERROR 0 0 0 0 EGR_L4_ERROR 0 0 0 0 EGR_L5_ERROR 0 0 0
0 0 EGR_HARDWARE_PARSE_EXCEPTION 0 0 0 0 EGR_SHOW_FORWARD_DROP 0 0 0 ****EXCEPTION STATS ASIC
INSTANCE 1 (asic/core 0/1)*****
=====
NAME | prev | current | delta
===== 0 1
NO_EXCEPTION 13168 16679 3511 0 1 IPV4_CHECKSUM_ERROR 0 0 0 1 ROUTED_AND_IP_OPTIONS_EXCEPTION
81 103 22
--snip--
```

## Statistiques du superviseur - Chemin des données du superviseur vers la carte de ligne

Vérifiez les statistiques ASIC de transfert UADP 2.0 du superviseur actif associées à une interface de panneau avant spécifique. Dans cet exemple, l'interface Gig1/0/13 est utilisée.

### Exemple de sortie :

- Vérifiez quelles interfaces de la carte de ligne font partie du même groupe de ports.
- Chaque groupe de ports a partagé 8 Gbits/s de bande passante à partir de l'ASIC de stub de carte de ligne vers l'ASIC de transfert du superviseur.
- Chaque groupe de ports est associé à l'une des interfaces SLI (System Link Interface) sur l'extrémité ASIC de la carte de ligne vers l'ASIC de transfert du superviseur.

```
C9400#show platform hardware cman fp active data-path 1 13 detail ---> Slot 1, interface 13
showing cman data-path for frontpanel 1/0/13 fp_portmap.xml: ---> Supervisor ASIC 1, core 0 is
associated with front panel (fp) interface Gig1/0/13
id 13 asic 1 core 0 port 12 mac 0 subport 4 contextid 0 maxspeed DEV_PORT_SPEED_1G gpn 113
active 1
```

data path:

```
slot 3
  +- ACTIVE_SUP --+
    | Sif 0
    | IQS      SQS   ---> Supervisor ASIC 1, core 0 on the slot 3 active Supervisor associated
with interface Gig1/0/13
    | PBC
    |     AQM
    |     EQC
    |     ESM
    |     RWE
    | ASIC 1
    | Core 0
    | Asic Port 12
    |
    | (Mac  0)
    | Nif_Rx  NifTx|
  +-----+
    ^          |
    |          |
    |          |
    |          V
```

```
=====
```

Nif MAC 0 Inforation:

```
NifRxByteGroupStats:
  rxBytes           4495494
NifRxByteDestinationGroupStats:
  rxUnicastBytes   1174628
  rxMulticastBytes 3320866
  rxBroadcastBytes 0
NifRxPortStatusGroupStats:
  rxUnicastFrames  18326
  rxMulticastFrames 21387
  rxBroadcastFrames 0
  rxPauseFrames     0
  rxCos0PauseFrames 0
  rxCos1PauseFrames 0
  rxCos2PauseFrames 0
  rxCos3PauseFrames 0
  rxCos4PauseFrames 0
  rxCos5PauseFrames 0
```

```
NifTxByteGroupStats:
  txBytes           6499427
NifTxByteDestinationGroupStats:
  txUnicastBytes   1175536
  txMulticastBytes 5298482
  txBroadcastBytes 25409
NifTxFrameDestinationGroupStats:
  txUnicastFrames  18330
  txMulticastFrames 24834
  txBroadcastFrames 51
  txPauseFrames     0
  txCos0PauseFrames 0
  txCos1PauseFrames 0
  txCos2PauseFrames 0
  txCos3PauseFrames 0
  txCos4PauseFrames 0
  txCos5PauseFrames 0
```

rxCos6PauseFrames	0	txCos6PauseFrames	0
rxCos7PauseFrames	0	txCos7PauseFrames	0
rxOamProcessedFrames	0	txOamFrames	0
NifRxPortStatusGroupStats:		NifTxPortStatusGroupStats:	
rxCollisionFragments	0	txLateCollisionFrames	0
rxFcsErrorFrames	0	txSystemFcsErrorFrames	0
rxInvalidOversizeFrames	0	txOversizeFrames	0
rxMacOverrunFrames	0	txMacUnderrunFrames	0
rxIpgViolationFrames	0	txDeferredFrames	0
rxOamDroppedFrames	0	txExcessiveDeferralFrames	0
rxSymbolErrorFrames	0	txOkMultipleCollisionFrames	0
rxValidOversizeFrames	0	txOkSingleCollisionFrames	0
rxValidUndersizeFrames	0	goldFramesTruncated	0
NifRxSizeGroupStats:		NifTxSizeGroupStats:	
rx32768toMtuFrames	0	tx32768toMtuFrames	0
rx16384to32767ByteFrames	0	tx16384to32767ByteFrames	0
rx8192to16383ByteFrames	0	tx8192to16383ByteFrames	0
rx4096to8191ByteFrames	0	tx4096to8191ByteFrames	0
rx2048to4095ByteFrames	0	tx2048to4095ByteFrames	0
rx1519to2047ByteFrames	51	tx1519to2047ByteFrames	0
rx1024to1518ByteFrames	15	tx1024to1518ByteFrames	0
rx512to1023ByteFrames	17	tx512to1023ByteFrames	187
rx256to511ByteFrames	3406	tx256to511ByteFrames	9407
rx128to255ByteFrames	6567	tx128to255ByteFrames	6580
rx65to127ByteFrames	11295	tx65to127ByteFrames	8583
rx64ByteFrames	18362	tx64ByteFrames	18458

---

#### ---> Input queue (Igr = Ingress)

##### IgrPacketCounters:

packetsIn	97777
packetsOut	97777
packetsDropped	3383
fpsSourcedPadErrorCount	0
igrSourcedPadErrorCount	0

---

##### For RWE for core 0:

##### EgrPacketCounters:

packetsIn	580324
packetsEnqueueFcd_val	0
packetsMarkedForDrop	278
padErrorPacketsIn	0
padErrorPacketsOut	0

##### For EQC for core 0:

##### RweTotalEnqStats:

packetCount	580324
RweTotalDeqStats:	
packetCount	580046
FragmentCount	580046

##### For aqmRedQueueStats for asic port 12:

#### ---> Output queue (Aqm = Active queue management)

##### EqcTotalEnqStats:

Count	580704
EqcTotalDeqStats:	
Count	580324

##### AqmRedQueueStats:

(sum of all queues)

acceptByteCnt0	0
acceptFrameCnt0	0
acceptByteCnt1	6407742
acceptFrameCnt1	43070
acceptByteCnt2	39609
acceptFrameCnt2	395
dropByteCnt0	0
dropFrameCnt0	0
dropByteCnt1	0
dropFrameCnt1	0
dropByteCnt2	0
dropFrameCnt2	0
outOfSoftBufDropByteCnt	0

```

=====
For PBC for core 0:
PbcIngressErrorDropCount:
  iCount          0
  iCount          0
PbcCreditCount:
  creditCount    64
  rwePbcStall    0
=====

For local/core 0 Switching:
SqsCumulativeStatistics
  totalEnqStat   1368200
  totalDeqStat   1368200
  totalDropStat  0
SqsCumulativeStatisticsB
  totalEnqStat   173449513
  totalDeqStat   173449513
  totalDropStat  0
=====

For local/core 1 Switching:
SqsCumulativeStatistics
  totalEnqStat   890114
  totalDeqStat   890114
  totalDropStat  0
SqsCumulativeStatisticsB
  totalEnqStat   105061923
  totalDeqStat   105061923
  totalDropStat  0
=====

For Sif 0 Switching:
SifSifPbcCnt0:
  Count          81302675
SifSifPbcCnt1:
  Count          58187651
SifRacCopiedCnt:
  SifRacCopiedCnt[0] 35850468
  SifRacCopiedCnt[1] 19265491
  SifRacCopiedCnt[2] 23814855
  SifRacCopiedCnt[3] 32727259
  SifRacCopiedCnt[4] 38376676
  SifRacCopiedCnt[5] 22176467
=====

For Sif 1 Switching:
SifSifPbcCnt0:
  Count          40956521
SifSifPbcCnt1:
  Count          40956521
SifRacCopiedCnt:
  SifRacCopiedCnt[0] 8615615
  SifRacCopiedCnt[1] 7489596
  SifRacCopiedCnt[2] 7608895
  SifRacCopiedCnt[3] 8717898
  SifRacCopiedCnt[4] 9685735
  SifRacCopiedCnt[5] 7866174
=====


```

Vérifiez l'état du contrôle de flux du point de vue du superviseur pour l'interface du panneau avant.  
Cela permet d'identifier si l'interface est encombrée.

```
C9400#show platform hardware cman fp active flowcontrol status
slot 1:Port 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 EsmF - - -
- - - - - - - - - - - - - - - - - IqscC - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - -
Port 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 EsmF - - - - -
- - - - - - - - - - - - - - - - - IqscC - - - - - - - - - - - - - - - - - - - - - - - - - - - - - slot 2:
Port 01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 EsmF - - - - -
- - - - - - - - - - - - - - - - - IqscC - - - - - - - - - - - - - - - - - - - - - - - - - - - - Port 25
26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 EsmF - - - - -
- - - - - - - - - - - - - - - - - IqscC - - - - - - - - - - - - - - - - - - - - - - - - - - - slot 3: Port 01
02 03 04 05 06 07 08 09 10 EsmF - - - - - - - - - - - - - - - - - - - - - - - - - - - - - slot 4: Port 01 02
03 04 05 06 07 08 09 10 EsmF - - - - - - - - - - - - - - - - - - - - - - - - - - - - - slot 5: Port 01 02 03
04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 EsmF - - - - -
- - - - - - - - - - - - - - - - - IqscC - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - 01 - - - Port 25 26 27 28 29 30
31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 EsmF - - - - -
- - - - - IqscC - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - - slot 6: Possibly linecard is not
inserted slot 7: Possibly linecard is not inserted
```

Vérifiez que le trafic de contrôle circule d'un point de vue ASIC de transfert de superviseur entre l'ASIC de transfert de superviseur sur le superviseur actif et l'ASIC de stub de carte de ligne sur la carte de ligne via les interfaces OCI.

```
C9400#show platform hardware cman fp active oci status
processing oci information:
chassis_type: 1
sup slot: 4
sup num oci ports: 8

slot_id 1 : oci_enable Enabled Link Status 0 (UP)
    asic_id 1 core_id 0 oci_port 3 mac_id 0
    NruRxByteGroupStats: rxBytes 417829462717812      NruTxByteGroupStats: txBytes
588911286106332

slot_id 2 : oci_enable Enabled Link Status 0 (UP)
    asic_id 0 core_id 0 oci_port 1 mac_id 1
    NruRxByteGroupStats: rxBytes 417938235716344      NruTxByteGroupStats: txBytes
588917607864892

slot_id 5 : oci_enable Enabled Link Status 0 (UP)
    asic_id 1 core_id 0 oci_port 4 mac_id 1
    NruRxByteGroupStats: rxBytes 53195855717244      NruTxByteGroupStats: txBytes
588915422236932

slot_id 6 : oci_enable Enabled Link Status 1 (DOWN)
    asic_id 2 core_id 0 oci_port 6 mac_id 0
    NruRxByteGroupStats: rxBytes 0      NruTxByteGroupStats: txBytes 0

slot_id 7 : oci_enable Enabled Link Status 1 (DOWN)
    asic_id 0 core_id 0 oci_port 2 mac_id 2
    NruRxByteGroupStats: rxBytes 0      NruTxByteGroupStats: txBytes 0
```

## Statistiques de carte de ligne - Chemin de données du superviseur vers la carte de ligne

Vérifiez les statistiques ASIC de l'extrémité de carte de ligne associées à une interface de panneau avant spécifique. Dans cet exemple, l'interface Gig1/0/13 est mise au point.

### Exemple de sortie :

- Paquets reçus de Gig 1/0/13, entrez le port de réception de l'interface réseau et passez par

IQS à l'interface de pile.

- À partir de là, un paquet sort de l'interface de pile vers un autre ASIC de superviseur , ou revient par le biais de SQS, AQM, EQC, ESM, RWE, puis sort de l'interface réseau de transmission de Gig 1/0/13.
- Les paquets envoyés à partir d'autres interfaces ASIC de superviseur qui sortent de Gig 1/0/13 entrent dans Sif, puis passent par SQS, AQM, EQC, ESM, RWE, puis sortent de NifTx de Gig 1/0/13.
- Pour AQM il y a 8 files d'attente Tx. Si vous voyez des pertes de ces files d'attente, vous pouvez utiliser cette commande pour déterminer laquelle des files d'attente subit des pertes : show platform hardware fed active go queue stats interface Gig 1/0/13

```
C9400#show platform hardware iomd 1/0 data-path 13 detail ----> slot 1, interface 13

lcportmap.xml: ---> Line Card (lc) ASIC instance 0 is associated with interface Gig1/0/13
id 13 asic 0 asicport 12 mac 23 contextid 12 intl_port_sup0 9 intl_port_sup1 1 maxspeed
DEV_PORT_SPEED_1G asic_subport 4

fp_portmap.xml: ---> Supervisor ASIC 1, core 0 is associated with front panel (fp) interface
Gig1/0/13
id 13 asic 1 core 0 port 12 mac 0 subport 4 contextid 0 maxspeed DEV_PORT_SPEED_1G gpn 113
active 1
data path:
slot 3 +-ACTIVE SUP--+
| | ---> Supervisor ASIC 1, core 0 on the slot 3 active Supervisor
associated with interface Gig1/0/13
+-----+
| ASIC 1 |
| Core 0 |
| Asic Port 12 |
| |
| (Mac 0) |
| Nif_Rx NifTx |
+-----+
| |
| |
| |
| |
SLI MAC 9 |
+-----+
| SLI_Tx SLI_Rx | ---> Line Card 1. The statistic output below is only for this Line
card ASIC
+-----+
| ASIC 0 |
| Asic Port 12 |
| |
| (Mac 23) |
| NIF_Rx NIF_Tx |
+-----+
Front Port 1/0/13
^ |
| |
| |
| V

=====
Nif MAC 23 Inforation:
NifRxByteGroupStats:
rxBytes 4457854
NifRxByteDestinationGroupStats:
rxUnicastBytes 1163684
rxMulticastBytes 3294170
rxBroadcastBytes 0
NifRxPortStatusGroupStats:

NifTxByteGroupStats:
txBytes 6440428
NifTxByteDestinationGroupStats:
txUnicastBytes 1164528
txMulticastBytes 5250491
txBroadcastBytes 25409
NifTxFrameDestinationGroupStats:
```

rxUnicastFrames	18155	txUnicastFrames	18158
rxMulticastFrames	21235	txMulticastFrames	24625
rxBroadcastFrames	0	txBroadcastFrames	51
rxPauseFrames	0	txPauseFrames	0
rxCos0PauseFrames	0	txCos0PauseFrames	0
rxCos1PauseFrames	0	txCos1PauseFrames	0
rxCos2PauseFrames	0	txCos2PauseFrames	0
rxCos3PauseFrames	0	txCos3PauseFrames	0
rxCos4PauseFrames	0	txCos4PauseFrames	0
rxCos5PauseFrames	0	txCos5PauseFrames	0
rxCos6PauseFrames	0	txCos6PauseFrames	0
rxCos7PauseFrames	0	txCos7PauseFrames	0
rxOamProcessedFrames	0	txOamFrames	0
NifRxPortStatusGroupStats:		NifTxPortStatusGroupStats:	
rxCollisionFragments	0	txLateCollisionFrames	0
rxFcsErrorFrames	0	txSystemFcsErrorFrames	0
rxInvalidOversizeFrames	0	txOversizeFrames	0
rxMacOverrunFrames	0	txMacUnderrunFrames	0
rxIpgViolationFrames	0	txDeferredFrames	0
rxOamDroppedFrames	0	txExcessiveDeferralFrames	0
rxSymbolErrorFrames	0	txOkMultipleCollisionFrames	0
rxValidOversizeFrames	0	txOkSingleCollisionFrames	0
rxValidUndersizeFrames	0	goldFramesTruncated	0
NifRxSizeGroupStats:		NifTxSizeGroupStats:	
rx32768toMtuFrames	0	tx32768toMtuFrames	0
rx16384to32767ByteFrames	0	tx16384to32767ByteFrames	0
rx8192to16383ByteFrames	0	tx8192to16383ByteFrames	0
rx4096to8191ByteFrames	0	tx4096to8191ByteFrames	0
rx2048to4095ByteFrames	0	tx2048to4095ByteFrames	0
rx1519to2047ByteFrames	51	tx1519to2047ByteFrames	0
rx1024to1518ByteFrames	15	tx1024to1518ByteFrames	0
rx512to1023ByteFrames	17	tx512to1023ByteFrames	186
rx256to511ByteFrames	3374	tx256to511ByteFrames	9318
rx128to255ByteFrames	6505	tx128to255ByteFrames	6518
rx65to127ByteFrames	11237	tx65to127ByteFrames	8526
rx64ByteFrames	18191	tx64ByteFrames	18286

---

#### ---> Input queue (Igr = Ingress)

##### IgrPacketCounters:

packetsIn	97078
packetsOut	97078
packetsDropped	0
fpsSourcedPadErrorCount	0
igrSourcedPadErrorCount	0

##### EgrPacketCounters:

packetsIn	576307
packetsEnqueueFcd_val	0
packetsMarkedForDrop	0
padErrorPacketsIn	0
padErrorPacketsOut	0

For aqmRedQueueStats for asic port 12:

#### ---> Output queue (Aqm = Active queue management)

##### AqmRedQueueStats: (sum of all queues)

acceptByteCnt0	0
acceptFrameCnt0	0
acceptByteCnt1	0
acceptFrameCnt1	0
acceptByteCnt2	6440428
acceptFrameCnt2	42834
dropByteCnt0	0
dropFrameCnt0	0
dropByteCnt1	0
dropFrameCnt1	0
dropByteCnt2	0
dropFrameCnt2	0
outOfSoftBufDropByteCnt	0
outOfSoftBufDropFrameCnt	0
maxQebDropByteCnt	0
maxQebDropFrameCnt	0

```

=====
SLI MAC 9 - SUP 0: ( an ACTIVE sup in slot 3 )
SliTxByteGroupStats:          SliRxByteGroupStats:
  txBytes                  4457854      rxBytes            6440428
SLI MAC 1 - SUP 1:
SliTxByteGroupStats:          SliRxByteGroupStats:
  txBytes                  0          rxBytes            0

```

Vérifiez l'état du contrôle de flux du point de vue de la carte de ligne pour l'interface du panneau avant. Cela permet d'identifier toute congestion sur l'interface.

- Les valeurs sont "-" lorsqu'il n'y a pas de contrôle de flux, sinon le numéro de file d'attente qui subit un contrôle de flux (encombrement) est indiqué.
- Le contrôle de flux reçu par l'interface est transmis de l'ASIC de la carte de ligne à l'ASIC du superviseur sur le Supervisor où AQM abandonne généralement sur l'ASIC du Supervisor. L'OCI (Out-of-band Control Interface) est le canal de communication interne entre la carte de ligne et le superviseur actif utilisé pour signaler le contrôle de flux de la carte de ligne au superviseur.

```
C9400#show platform hardware iomd 1/0 flowcontrol status ---> slot 1
```

```
Slot 1 - number of ports 48
```

slot 1:	Port	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
IsmF	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
IqmC	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
Port	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	
IsmF	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
IqmC	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	

Vérifiez que le trafic de contrôle circule d'un point de vue ASIC d'extrémité de carte de ligne entre l'ASIC d'extrémité de carte de ligne sur la carte de ligne et l'ASIC de transfert du superviseur sur les superviseurs actifs et en veille via les interfaces OCI.

- OCI = Interface de contrôle hors bande = canaux de communication internes entre la carte de ligne et les superviseurs actifs et en veille

```
C9400#show platform hardware iomd 1/0 oci status ---> slot 1
```

```
Asic 0, Mac 10, Tx OCI Config 0, OCI Merge FALSE, OCI Enabled, Link Status 0 (UP)
Network Port Range 0---47, Local Port Range 0---47
NifRxByteGroupStats: rxBytes 177402572782108      NifTxByteGroupStats: txBytes
141925777717156
```

```
Asic 0, Mac 11, Tx OCI Config 0, OCI Merge FALSE, OCI Enabled, Link Status 0 (UP)
Network Port Range 0---47, Local Port Range 0---47
NifRxByteGroupStats: rxBytes 963489284      NifTxByteGroupStats: txBytes 770809988
```

Vérifiez quelles interfaces de la carte de ligne font partie du même groupe de ports qui partage 8 Gbits/s de bande passante à partir de l'ASIC de stub de carte de ligne sur la carte de ligne vers

l'ASIC de transfert du superviseur sur le superviseur actif. Chaque groupe de ports est associé à l'une des interfaces SLI (System Link Interface) sur l'extrémité ASIC de la carte de ligne vers le superviseur.

```
C9400#show platform hardware iomd 1/0 portgroups ---> slot 1
```

```
Port Interface Status Interface Group Max <-- aggregate bandwidth for 8 ports
Group Bandwidth Bandwidth
```

1	TenGigabitEthernet1/0/1	up	1G
1	TenGigabitEthernet1/0/2	down	1G
1	TenGigabitEthernet1/0/3	adminDown	1G
1	TenGigabitEthernet1/0/4	down	1G
1	TenGigabitEthernet1/0/5	down	1G 8G
1	TenGigabitEthernet1/0/6	down	1G
1	TenGigabitEthernet1/0/7	down	1G
1	TenGigabitEthernet1/0/8	down	1G
2	TenGigabitEthernet1/0/9	down	1G
2	TenGigabitEthernet1/0/10	down	1G
2	TenGigabitEthernet1/0/11	down	1G
2	TenGigabitEthernet1/0/12	down	1G
2	TenGigabitEthernet1/0/13	up	1G 8G
2	TenGigabitEthernet1/0/14	down	1G
2	TenGigabitEthernet1/0/15	down	1G
2	TenGigabitEthernet1/0/16	down	1G
3	TenGigabitEthernet1/0/17	down	1G
3	TenGigabitEthernet1/0/18	down	1G
3	TenGigabitEthernet1/0/19	down	1G
3	TenGigabitEthernet1/0/20	down	1G
3	TenGigabitEthernet1/0/21	down	1G 8G
3	TenGigabitEthernet1/0/22	down	1G
3	TenGigabitEthernet1/0/23	down	1G
3	TenGigabitEthernet1/0/24	down	1G
4	TenGigabitEthernet1/0/25	down	1G
4	TenGigabitEthernet1/0/26	down	1G
4	TenGigabitEthernet1/0/27	down	1G
4	TenGigabitEthernet1/0/28	down	1G
4	TenGigabitEthernet1/0/29	down	1G 8G
4	TenGigabitEthernet1/0/30	down	1G
4	TenGigabitEthernet1/0/31	down	1G
4	TenGigabitEthernet1/0/32	down	1G
5	TenGigabitEthernet1/0/33	down	1G
5	TenGigabitEthernet1/0/34	down	1G
5	TenGigabitEthernet1/0/35	down	1G
5	TenGigabitEthernet1/0/36	down	1G
5	TenGigabitEthernet1/0/37	down	1G 8G
5	TenGigabitEthernet1/0/38	down	1G
5	TenGigabitEthernet1/0/39	down	1G
5	TenGigabitEthernet1/0/40	down	1G
6	TenGigabitEthernet1/0/41	down	1G
6	TenGigabitEthernet1/0/42	down	1G
6	TenGigabitEthernet1/0/43	down	1G
6	TenGigabitEthernet1/0/44	down	1G
6	TenGigabitEthernet1/0/45	down	1G 8G
6	TenGigabitEthernet1/0/46	down	1G
6	TenGigabitEthernet1/0/47	down	1G
6	TenGigabitEthernet1/0/48	up	1G

