BRI およびバックアップ インターフェイス コマ ンドを使用した DDR バックアップ

内容

概要 前提条件 要件 <u>使用するコンポーネント</u> 背景理論 表記法 設定 ネットワーク図 設定 確認 show ip route コマンドの出力例 show interface コマンドの出力例 トラブルシュート トラブルシューティングのためのコマンド デバッグの出力例 関連情報

<u>概要</u>

この設定は、専用回線接続をバックアップするための、Integrated Services Digital Network (ISDN; サービス総合デジタルネットワーク) Basic Rate Interface (BRI; 基本インター フェイス)回線の使用方法を示します。backup interface コマンドは、プライマリ インターフェ イスが停止するまで、指定したインターフェイスをスタンバイ モードにします。バックアップ イ ンターフェイスの機能の詳細については、「Evaluating Backup Interfaces, Floating Static Routes, and Dialer Watch for DDR Backup」を参照してください。

前提条件

<u>要件</u>

ダイヤラ プロファイルの詳細については、「Configuring ISDN DDR with Dialer Profiles」を参照 してください。

<u>使用するコンポーネント</u>

このシナリオでは、シリアル接続を介して Cisco 3640 ルータに接続された Cisco 1604 ルータを

使用します。どちらのルータにもバックアップ リンクに使用する BRI インターフェイスが装備さ れています。Cisco 1604 は Cisco IOS ® ソフトウェア リリース 12.1(5)T を実行し、Cisco 3640 は Cisco IOS 12.1(2) を使用します。

注:この設定の概念は、BRIおよびWANインターフェイスを備えた任意のルータで使用できます 。

このマニュアルの情報は、特定のラボ環境に置かれたデバイスに基づいて作成されました。この ドキュメントで使用するすべてのデバイスは、初期(デフォルト)設定の状態から起動していま す。実稼動中のネットワークで作業をしている場合、実際にコマンドを使用する前に、その潜在 的な影響について理解しておく必要があります。

<u>背景理論</u>

この例ではレガシー ダイヤル オン デマンド ルーティング(DDR)を使用しています。レガシー DDR では BRI 接続のために dialer map コマンドを使用します。レガシー DDR の代わりにダイ ヤラ プロファイルも使用できます。ダイヤラ プロファイルの詳細については、「ダイヤラ プロ ファイルを使用した ISDN DDR の設定」を参照してください。

DDR バックアップの設定では、2 つの異なる手順を行います。

- DDR を、レガシー DDR とダイヤラ プロファイルのどちらかを使用して設定します。DDR 接続が正常に機能することを確認してから、バックアップ設定を実装します。
- プライマリ リンクに障害が発生したときに DDR 接続を開始するよう、ルータを設定します 。この設定は、ダイヤルアウトをトリガーするためにバックアップ インターフェイスを使 用します。他のオプションの詳細については、『DDR バックアップのためのバックアップ インターフェイス、フローティング スタティック ルート、ダイヤラ ウォッチの評価』を参 照してください。

<u>表記法</u>

ドキュメント表記の詳細は、『<u>シスコ テクニカル ティップスの表記法</u>』を参照してください。

設定

このセクションでは、このドキュメントで説明する機能を設定するために必要な情報を提供して います。

注:このドキュメントで使用されているコマンドの詳細を調べるには、Command Lookupツール を使用してください

<u>ネットワーク図</u>

このドキュメントでは次の図に示すネットワーク構成を使用しています。



<u>設定</u>

このドキュメントでは、次に示す設定を使用しています。

- maui-soho-01 (1600)
- maui-nas-05 (3640)

この設定では BRI 回線を使用してシリアル リンクをバックアップしています。また、この設定で は 2 台のルータ間で Open Shortest Path First (OSPF) ルーティング プロトコルを使用していま す。バックアップ接続がアクティブになったら、新しいバックアップ経路を使用するようにルー ティング テーブルが更新されることを確かめる必要があります。

注: コマンドの表記法の詳細は、「<u>シスコ テクニカル ティップスの表記法</u>」を参照してくださ い。

maui-soho-01 (1600) maui-soho-01#show running-config Building configuration... Current configuration : 1720 bytes 1 version 12.1 service timestamps debug datetime msec service timestamps log datetime msec service password-encryption hostname maui-soho-01 ! aaa new-model aaa authentication login default local aaa authentication login NO_AUTHEN none aaa authentication ppp default if-needed local !--- This is basic aaa configuration for PPP calls. enable secret 5 <deleted> ! username admin password 7 <deleted> username maui-nas-05 password 7 <deleted> Username for remote router (maui-nas-05) and shared secret !--- (used for CHAP authentication). Shared secret must be the same on both sides. ip subnet-zero no ip finger ! isdn switch-type basic-ni ! interface Loopback0 ip address 172.17.1.1 255.255.255.0 ! interface Ethernet0 ip address 172.16.1.1 255.255.255.0 ! interface SerialO backup delay 10 30 !--- Backup link is activated 10 seconds after primary link goes down. !--- Backup link is deactivated 30 seconds after primary link is restored. backup interface BRI0 !--- BRI0 will ackup interface serial 0. ip address 192.168.10.2

```
255.255.255.252 encapsulation ppp no ip mroute-cache no
fair-queue ! interface BRI0 ip address 172.20.10.2
255.255.255.0 !--- IP address for the BRI interface
(backup link). encapsulation ppp dialer idle-timeout 900
!--- Idle timeout(in seconds) for this link. dialer map
ip 172.20.10.1 name maui-nas-05 broadcast 5551111 dialer
map ip 172.20.10.1 name maui-nas-05 broadcast 5551112 !-
-- Dialer maps for remote destination. !--- The 2
different phone numbers correspond to the b-channels of
the remote side. dialer load-threshold 1 outbound !---
Load level for traffic at which additional connections
!--- will be added to the MPPP bundle. !--- Load level
values range from 1 (unloaded) to 255 (fully loaded).
dialer-group 1 !--- Apply interesting traffic definition
from dialer-list 1. isdn switch-type basic-ni isdn spid1
51299699380101 9969938 isdn spid2 51299699460101 9969946
ppp authentication chap !--- Use CHAP authentication.
ppp multilink !--- Use multilink to bring up both BRI
channels. ! router ospf 5 !--- OSPF configuration. If
you use a different protocol !--- configure that here.
Make sure to include the BRI network in the RP. log-
adjacency-changes network 172.16.0.0 0.0.255.255 area 0
network 172.17.0.0 0.0.255.255 area 0 network
172.20.10.0 0.0.0.255 area 0 network 192.168.10.0
0.0.0.3 area 0 ! ip classless no ip http server !
access-list 101 remark Interesting traffic definition
for backup link access-list 101 permit ip any any !---
Interesting traffic definition. If you do not want OSPF
to bring up !--- the link, then mark it uninteresting.
dialer-list 1 protocol ip list 101 !--- Interesting
traffic is applied to BRIO using dialer-group 1. ! line
con 0 exec-timeout 0 0 login authentication NO_AUTHEN
transport input none line vty 0 4 ! end !
```

クライアント maui-soho-01(1600)の設定で次の点を確認します。

- ループバック アドレスが使用されていること。これは、OSPF のルータ ID が変更されない ようにし、バックアップ リンクがアクティブになったときにピアを確立できるように使用さ れます。
- dialer load threshold が小さく設定されていること。128k マルチリンク バックアップ接続を 必要としない場合は、この値を変更できます。
- どの IP トラフィックでも dial (dialer-list 1 と dialer-group 1 に基づく)をトリガーします。
 Since the backup link requires interesting traffic to dial the backup link, verify that you do have a traffic source generating interesting traffic. In this example, OSPF hello packets will trigger the dial.ルーティング プロトコルを使用していない場合は、ICMP ping を使用してバックアップ リンクにダイヤルできます。Adjust the interesting traffic depending on your needs.
- OSPF が使用されます。希望するルーティング プロトコルを使用することもできます。プラ イマリおよびバックアップ インターフェイス ネットワークがルーティング プロトコルに含 まれていることを確認します。ルーティング プロトコルの代わりにスタティック ルートを使 用するには、リモート BRI インターフェイスのネクスト ホップでスタティック ルートを作 成します。(シナリオに応じて、それをフローティング スタティック ルートにする必要があ ります)。

maui-nas-05 (3640)

maui-nas-05#show running-config
Building configuration...

```
Current configuration:
version 12.1
service timestamps debug datetime msec
service timestamps log datetime msec
service password-encryption
!
hostname maui-nas-05
!
aaa new-model
aaa authentication login default local
aaa authentication login NO_AUTHEN none
aaa authentication ppp default if-needed local
!--- Basic AAA configuration for PPP calls. enable
secret 5 <deleted> ! username admin password 7 <deleted>
username maui-soho-01 password 7 <deleted> !--- Username
for remote router (maui-soho-01) and shared secret !---
(used for CHAP authentication). The shared secret must
be the same on both sides. ! ip subnet-zero ! isdn
switch-type basic-ni ! interface Loopback0 ip address
172.22.1.1 255.255.255.0 ! interface Ethernet0/0 no ip
address shutdown ! interface Ethernet0/1 no ip address
shutdown ! interface BRI1/0 ip address 172.20.10.1
255.255.255.0 !--- IP address for the BRI interface
(backup link). encapsulation ppp dialer idle-timeout 900
dialer map ip 172.20.10.2 name maui-soho-01 broadcast !-
-- Dialer map for remote destination. !--- The name
should match the authentication username provided by the
remote side. !--- Even though this router is not dialing
out, the dialer map statement !--- should be used.
dialer-group 1 !--- Apply interesting traffic defined in
dialer-list 1. isdn switch-type basic-ni isdn spid1
51255511110101 5551111 isdn spid2 51255511120101 5551112
ppp authentication chap ppp multilink !--- Use multilink
to bring up both B-channels. ! !--- Output removed. !
interface Serial2/0 ip address 192.168.10.1
255.255.255.252 encapsulation ppp no fair-queue
clockrate 64000 ! !--- Output removed. ! router ospf 5
network 172.20.10.0 0.0.0.255 area 0 network 172.22.1.0
0.0.0.255 area 0 network 192.168.10.0 0.0.0.3 area 0 !
ip classless no ip http server ! dialer-list 1 protocol
ip any !--- This defines all IP traffic as interesting.
! Line con 0 login authentication NO_AUTHEN transport
input none line 97 102 line AUX 0 line vty 0 4 ! end
```

すべての IP トラフィックが対象として指定されました。

- リモート サイトへの dialer map が設定されていること。誤った dialer map を使用すると、 接続されたバックアップ リンクでルーティングの問題が発生する可能性があります。
- すべての IP トラフィックが interesting traffic として定義されていること。これによりアイド ル タイムアウトがリセットされ、プライマリが復帰するまで接続したままになります。バッ クアップ リンクを接続したままにする必要がない場合は、これを変更できます。

確認

ここでは、設定が正しく機能していることを確認するために使用する情報を示します。

特定の show コマンドは、アウトプット インタープリタでサポートされています。このツールを

使用すると、show コマンド出力を分析できます。

- show interface bri0 BRI インターフェイスが動作しているかどうかを示す。プライマリ リン クが動作している場合、BRI インターフェイスはスタンバイになります。プライマリ リンク が停止している場合のみ、BRI インターフェイスが動作します。
- show isdn status ルータが ISDN スイッチと正しく通信していることを確認する為に使う。
 出力で、Layer 1 Status が ACTIVE で、Layer 2 Status state =
 MULTIPLE_FRAME_ESTABLISHED と表示されていることを確認します。このコマンドは、
 通信中のコールの数も表示します。

<u>show ip route コマンドの出力例</u>

プライマリ リンク機能を備えたクライアント、maui-soho-01(1600)のルーティング テーブル を次に示します。

maui-soho-01#show ip route Codes: C - connected, S - static, I - IGRP, R - RIP, M - mobile, B - BGP D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2 E1 - OSPF external type 1, E2 - OSPF external type 2, E - EGP i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area * - candidate default, U - per-user static route, o - ODR P - periodic downloaded static route

Gateway of last resort is not set

192.168.10.0/24 is variably subnetted, 2 subnets, 2 masks С 192.168.10.0/30 is directly connected, Serial0 192.168.10.1/32 is directly connected, SerialO С 172.17.0.0/24 is subnetted, 1 subnets С 172.17.1.0 is directly connected, Loopback0 172.16.0.0/24 is subnetted, 1 subnets С 172.16.1.0 is directly connected, Ethernet0 172.20.0.0/24 is subnetted, 1 subnets ο 172.20.10.0 [110/1626] via 192.168.10.1, 00:00:22, Serial0 172.22.0.0/32 is subnetted, 1 subnets 0 172.22.1.1 [110/65] via 192.168.10.1, 00:00:23, Serial0

上記に示す show ip route の出力は、プライマリ リンク(シリアル 0)を使用してピアから学習 した OSPF ルートを表示します。 ここでプライマリ リンクをダウンさせ、バックアップ リンク を有効化します。

注:プライマリインターフェイスでshutdownコマンドを発行しても、バックアップBRIがダイヤ ルすることはありません。shutdown コマンドを発行してプライマリ接続を停止した場合、Cisco IOS ソフトウェアは、バックアップ接続を自動的に開始しません。バックアップ インターフェイ スを開始するには、ケーブルを取り外すか、または同等の方法でプライマリ接続を物理的に切断 する必要があります。

バックアップ リンクが有効化された後、OSPF テーブルが交換され、バックアップ リンクを使用 した新しいルートがインストールされます。これでトラフィックはバックアップ リンクを流れる ようになります。次に例を示します。

Codes:	C - connected, S - static, I - IGRP, R - RIP, M - mobile, B - BGP
	D - EIGRP, EX - EIGRP external, O - OSPF, IA - OSPF inter area
	N1 - OSPF NSSA external type 1, N2 - OSPF NSSA external type 2
	E1 - OSPF external type 1, E2 - OSPF external type 2, E - EGP
	i - IS-IS, L1 - IS-IS level-1, L2 - IS-IS level-2, ia - IS-IS inter area
	* – candidate default, U – per-user static route, o – ODR
	P - periodic downloaded static route

Gateway of last resort is not set

0	172.22.1.1 [110/1563] via 172.20.10.1, 00:00:22, BRIO
	172.22.0.0/32 is subnetted, 1 subnets
С	172.20.10.1/32 is directly connected, BRI0
С	172.20.10.0/24 is directly connected, BRI0
	172.20.0.0/16 is variably subnetted, 2 subnets, 2 masks
С	172.16.1.0 is directly connected, Ethernet0
	172.16.0.0/24 is subnetted, 1 subnets
С	172.17.1.0 is directly connected, Loopback0
	172.17.0.0/24 is subnetted, 1 subnets

show interface コマンドの出力例

show interface コマンドで、LCP、ICP および PPP のマルチリンク フェーズが正常に通過したか を確認することができます。

maui-soho-01#show interface BRI 0
BRI0 is up, line protocol is up
Hardware is BRI with U interface and external S bus interface
Internet address is 172.20.10.2, subnet mask is 255.255.255.0
MTU 1500 bytes, BW 256 Kbit, DLY 100000 usec,
reliability 255/255, txload 1/255, rxload 1/255
Encapsulation PPP, loopback not set
DTR is pulsed for 5 seconds on reset
LCP Open, multilink Open
Open: IPCP

<u>トラブルシュート</u>

ここでは、設定のトラブルシューティングに使用できる情報を示します。

<u>トラブルシューティングのためのコマンド</u>

特定の show コマンドは、アウトプット インタープリタでサポートされています。このツールを 使用すると、show コマンド出力を分析できます。

注:debug コマンドを使用する前に、「debug コマンドに関する重要な情報」を参照してくださ い。

- ・debug dialer ダイヤルオンデマンド ルーティング情報を表示する。
- debug isdn events: ISDN インターフェイスのユーザ側で発生している ISDN アクティビティを表示するために使用する。
- ・debug isdn q931 ISDN ネットワーク接続(レイヤ 3)の call setup と tear down を表示する
 - 。問題を切り分けるためにも使用されます。

- debug ppp negotiation Link Control Protocol (LCP; リンク制御プロトコル)、認証、および Network Control Protocol (NCP)を含む PPP コンポーネントをネゴシエートしているとき のPPP トラフィックに関する情報を表示する。PPP ネゴシエーションが成功すると、最初に LCP 状態がオープンし、次に認証が実行され、最後に NCP がネゴシエートされます。
- debug ppp authentication Challenge Authentication Protocol (CHAP)パケット交換や
 Password Authentication Protocol (PAP; パスワード認証プロトコル)交換を含む、認証プロトコルメッセージを表示する。
 失敗が観測された場合は、CHAP ユーザ名とパスワードが正しく設定されているか検証します。
- ・debug ppp error PPP 接続のネゴシエーションと接続操作に関するプロトコル エラーとエラ 一統計情報を表示します。

<u>デバッグの出力例</u>

DDR バックアップの詳細情報については、『DDR バックアップの設定とトラブルシューティン グ』を参照してください。

前に説明したデバッグを使用して、次のデバッグ出力が生成されました。出力は、プライマリ リ ンクの停止とバックアップ リンクの起動を示しています。

*Mar 1 03:37:42.350: %LINK-3-UPDOWN: Interface Serial0, changed state to down

!--- Primary Link is unplugged. *Mar 1 03:37:42.358: Se0 IPCP: State is Closed *Mar 1
03:37:42.362: Se0 CDPCP: State is Closed *Mar 1 03:37:42.366: Se0 PPP: Phase is TERMINATING [0
sess, 1 load] *Mar 1 03:37:42.370: Se0 LCP: State is Closed *Mar 1 03:37:42.370: Se0 PPP: Phase
is DOWN [0 sess, 1 load] *Mar 1 03:37:42.386: Se0 IPCP: Remove route to 192.168.10.1 *Mar 1
03:37:42.394: %OSPF-5-ADJCHG: Process 5, Nbr 172.22.1.1 on Serial0 from FULL to DOWN, Neighbor
Down: Interface down or detached *Mar 1 03:37:43.358: %LINEPROTO-5-UPDOWN: Line protocol on
Interface Serial0, changed state to down *Mar 1 03:37:52.302: %LINK-3-UPDOWN: Interface BRI0:1,
changed state to down

!--- The backup interface is changed to from "standby" to "down". !--- The backup interface was
activated 10 seconds after the primary link !--- went down. !--- This interval was defined with
the backup delay command in maui-soho-01 !--- (the 1600). *Mar 1 03:37:52.306: BR0:1 LCP: State
is Closed *Mar 1 03:37:52.310: BR0:1 DDR: disconnecting call *Mar 1 03:37:52.314: %LINK-3UPDOWN: Interface BRI0:2, changed state to down *Mar 1 03:37:52.318: BR0:2 LCP: State is Closed
*Mar 1 03:37:52.322: BR0:2 DDR: disconnecting call *Mar 1 03:37:52.417: %LINK-3-UPDOWN:
Interface BRI0, changed state to up *Mar 1 03:37:52.477: ISDN BR0: Event: Syncing Discards: L2
Discards 4, L2D_Task Counter 2 *Mar 1 03:37:52.489: BR0 DDR: Dialing cause ip (s=172.20.10.2,
d=224.0.0.5)

```
!--- OSPF hellos cause the router to dial. *Mar 1 03:37:52.493: BR0 DDR: Attempting to dial
5551111 !--- This is the phone number of the remote router that is dialed. *Mar 1 03:37:54.477:
ISDN BR0: Event: Syncing Discards: L2 Discards 4, L2D_Task Counter 3 *Mar 1 03:37:56.528: %ISDN-
6-LAYER2UP: Layer 2 for Interface BR0, TEI 112 changed to up *Mar 1 03:37:56.556: ISDN BR0: TX -
> INFORMATION pd = 8 callref = (null) SPID Information i = '51299699380101' *Mar 1 03:37:56.627:
ISDN BR0: TX -> SETUP pd = 8 callref = 0x1F *Mar 1 03:37:56.635: Bearer Capability i = 0x8890
*Mar 1 03:37:56.643: Channel ID i = 0x83 *Mar 1 03:37:56.651: Keypad Facility i = '5551111' *Mar
1 03:37:56.667: ISDN BR0: RX <- INFORMATION pd = 8 callref = (null) ENDPOINT IDent i = 0x8081
*Mar 1 03:37:56.703: ISDN BR0: Received EndPoint ID *Mar 1 03:37:56.738: ISDN BR0: RX <-
INFORMATION pd = 8 callref = (null) Locking Shift to Codeset 5 *Mar 1 03:37:56.750: Codeset 5 IE
0x2A i = 0x808001, 'P' *Mar 1 03:37:56.857: %ISDN-6-LAYER2UP: Layer 2 for Interface BR0, TEI 65
changed to up *Mar 1 03:37:56.881: ISDN BR0: TX -> INFORMATION pd = 8 callref = (null) SPID
Information i = '51299699460101' *Mar 1 03:37:56.917: ISDN BR0: RX <- CALL_PROC pd = 8 callref =
0x9F *Mar 1 03:37:56.925: Channel ID i = 0x89 *Mar 1 03:37:56.949: ISDN BR0: RX <- INFORMATION
pd = 8 callref = (null) ENDPOINT IDent i = 0x8181 *Mar 1 03:37:56.984: ISDN BR0: Received
Endpoint ID *Mar 1 03:37:57.175: ISDN BR0: RX <- CONNECT pd = 8 callref = 0x9F
!--- The call is connected. *Mar 1 03:37:57.199: %LINK-3-UPDOWN: Interface BRI0:1, changed state
to up *Mar 1 03:37:57.218: BR0:1 PPP: Treating connection as a callout !--- PPP negotiation
begins. *Mar 1 03:37:57.222: BR0:1 PPP: Phase is ESTABLISHING, Active Open
```

```
*Mar 1 03:37:57.230: BR0:1 LCP: O CONFREQ [Closed] id 18 len 34
*Mar 1 03:37:57.234: BR0:1 LCP: AuthProto CHAP (0x0305C22305)
*Mar 1 03:37:57.242: BR0:1 LCP: MagicNumber 0x1144F392 (0x05061144F392)
*Mar 1 03:37:57.246: BR0:1 LCP: MRRU 1524 (0x110405F4)
*Mar 1 03:37:57.250: BR0:1 LCP:
                                 EndpointDisc 1 Local
   (0x130F016D6175692D736F686F2D3031)
*Mar 1 03:37:57.262: ISDN BR0: TX -> CONNECT_ACK pd = 8 callref = 0x1F
     1 03:37:57.282: BR0:1 LCP: I CONFREQ [REQsent] id 43 Len 33
*Mar
*Mar 1 03:37:57.286: BR0:1 LCP:
                                  AuthProto CHAP (0x0305C22305)
*Mar 1 03:37:57.294: BR0:1 LCP:
                                 MagicNumber 0x363030C5 (0x0506363030C5)
*Mar 1 03:37:57.298: BR0:1 LCP: MRRU 1524 (0x110405F4)
*Mar 1 03:37:57.302: BR0:1 LCP:
                                  EndpointDisc 1 Local
  (0x130E016D6175692D6E61732D3035)
*Mar 1 03:37:57.310: BR0:1 LCP: O CONFACK [REQsent] id 43 Len 33
*Mar
     1 03:37:57.314: BR0:1 LCP: AuthProto CHAP (0x0305C22305)
*Mar 1 03:37:57.318: BR0:1 LCP: MagicNumber 0x363030C5 (0x0506363030C5)
*Mar 1 03:37:57.326: BR0:1 LCP: MRRU 1524 (0x110405F4)
*Mar 1 03:37:57.330: BR0:1 LCP:
                                 EndpointDisc 1 Local
  (0x130E016D6175692D6E61732D3035)
*Mar 1 03:37:57.341: BR0:1 LCP: I CONFACK [ACKsent] id 18 Len 34
*Mar 1 03:37:57.345: BR0:1 LCP:
                                  AuthProto CHAP (0x0305C22305)
                                 MagicNumber 0x1144F392 (0x05061144F392)
     1 03:37:57.349: BR0:1 LCP:
*Mar
                                 MRRU 1524 (0x110405F4)
     1 03:37:57.353: BR0:1 LCP:
*Mar
                                 EndpointDisc 1 Local
*Mar 1 03:37:57.361: BR0:1 LCP:
  (0x130F016D6175692D736F686F2D3031)
*Mar 1 03:37:57.365: BR0:1 LCP: State is Open
*Mar 1 03:37:57.369: BR0:1 PPP: Phase is AUTHENTICATING, by both
  [0 sess, 1 load]
```

!--- PPP authentication begins. *Mar 1 03:37:57.373: BR0:1 CHAP: O CHALLENGE id 17 Len 33 from
"maui-soho-01"

!--- The username for CHAP is challenge. The remote router must have this !--- username configured along with it's shared secret password. *Mar 1 03:37:57.381: BR0:1 CHAP: I CHALLENGE id 30 Len 32 from "maui-nas-05" !--- The incoming username for CHAP is challenge. !--- This username must be locally configured. *Mar 1 03:37:57.397: BR0:1 CHAP: O RESPONSE id 30 Len 33 from "maui-soho-01" *Mar 1 03:37:57.425: BR0:1 CHAP: I SUCCESS id 30 Len 4 *Mar 1 03:37:57.433: BR0:1 CHAP: I RESPONSE id 17 Len 32 from "maui-nas-05" *Mar 1 03:37:57.445: BR0:1 CHAP: O SUCCESS id 17 Len 4 !--- CHAP authentication is successful. *Mar 1 03:37:57.453: BR0:1 PPP: Phase is VIRTUALIZED [0 sess, 1 load] *Mar 1 03:37:57.460: Vi1 PPP: Phase is DOWN, Setup [0 sess, 1 load] *Mar 1 03:37:57.480: BR0:1 IPCP: Packet buffered while building MLP bundle interface *Mar 1 03:37:57.484: BR0:1 CDPCP: Packet buffered while building MLP bundle interface *Mar 1 03:37:57.488: %LINK-3-UPDOWN: Interface Virtual-Access1,

changed state to up

!--- Virtual Access Interface is created for the multilink !--- (2 b-channel) connection. *Mar 1 03:37:57.496: Vi1 DDR: Dialer statechange to up *Mar 1 03:37:57.500: Vi1 DDR: Dialer call has been placed *Mar 1 03:37:57.504: Vi1 PPP: Treating connection as a callout *Mar 1 03:37:57.508: Vi1 PPP: Phase is ESTABLISHING, Active Open [0 sess, 1 load] *Mar 1 03:37:57.516: Vi1 LCP: 0 CONFREQ [Closed] id 1 Len 34 *Mar 1 03:37:57.520: Vi1 LCP: AuthProto CHAP (0x0305C22305) *Mar 1 03:37:57.524: Vi1 LCP: MagicNumber 0x1144F4B0 (0x05061144F4B0) *Mar 1 03:37:57.528: Vi1 LCP: MRRU 1524 (0x110405F4) *Mar 1 03:37:57.536: Vi1 LCP: EndpointDisc 1 Local (0x130F016D6175692D736F686F2D3031) *Mar 1 03:37:57.548: Vi1 PPP: Phase is UP [0 sess, 1 load] *Mar 1 03:37:57.556: Vi1 IPCP: O CONFREQ [Closed] id 1 Len 10 *Mar 1 03:37:57.560: Vi1 IPCP: Address 172.20.10.2 (0x0306AC140A02) *Mar 1 03:37:57.572: Vi1 CDPCP: O CONFREQ [Closed] id 1 Len 4 *Mar 1 03:37:57.576: BR0:1 MLP: maui-nas-05, multilink up, first link *Mar 1 03:37:57.580: Vi1 PPP: Pending ncpQ size is 2 *Mar 1 03:37:57.583: BR0:1 IPCP: Redirect packet to Vi1 *Mar 1 03:37:57.587: Vi1 IPCP: I CONFREQ [REQsent] id 1 Len 10 *Mar 1 03:37:57.591: Vi1 IPCP: Address 172.20.10.1 (0x0306AC140A01) *Mar 1 03:37:57.599: Vil IPCP: O CONFACK [REQsent] id 1 Len 10 *Mar 1 03:37:57.603: Vi1 IPCP: Address 172.20.10.1 (0x0306AC140A01) *Mar 1 03:37:57.607: BR0:1 CDPCP: Redirect packet to Vi1 *Mar 1 03:37:57.611: Vi1 CDPCP: I CONFREQ [REQsent] id 1 Len 4 *Mar 1 03:37:57.615: Vi1 CDPCP: O CONFACK [REQsent] id 1 Len 4 *Mar 1 03:37:57.623: Vi1 IPCP: I CONFACK [ACKsent] id 1 Len 10 *Mar 1 03:37:57.631: Vil IPCP: Address 172.20.10.2 (0x0306AC140A02) *Mar 1 03:37:57.635: Vil IPCP: State is Open

!--- IPCP state is open and route will be installed. *Mar 1 03:37:57.643: Vi1 CDPCP: I CONFACK
[ACKsent] id 1 Len 4 *Mar 1 03:37:57.643: Vi1 CDPCP: State is Open *Mar 1 03:37:57.651: Vi1 DDR:
dialer protocol up *Mar 1 03:37:57.663: BR0 IPCP: Install route to 172.20.10.1 *Mar 1

03:37:58.072: BR0 DDR: Attempting to dial 5551111

!--- Router is dialing. *Mar 1 03:37:58.199: ISDN BR0: TX -> SETUP pd = 8 callref = 0x20 *Mar 1 03:37:58.206: Bearer Capability i = 0x8890 *Mar 1 03:37:58.218: Channel ID i = 0x83 *Mar 1 03:37:58.226: Keypad Facility i = '5551111' *Mar 1 03:37:58.445: %LINEPROTO-5-UPDOWN: Line protocol on Interface BRI0:1, changed state to up *Mar 1 03:37:58.512: ISDN BR0: RX <- CALL_PROC pd = 8 callref = 0xA0 *Mar 1 03:37:58.524: Channel ID i = 0x8A *Mar 1 03:37:58.548: %LINEPROTO-5-UPDOWN: Line protocol on Interface Virtual-Access1, changed state to up *Mar 1 03:37:58.599: BR0:1 LCP: I ECHOREQ [Open] id 1 Len 12 magic 0x363030C5 *Mar 1 03:37:58.603: BR0:1 LCP: 0 ECHOREP [Open] id 1 Len 12 magic 0x1144F392 *Mar 1 03:37:58.746: ISDN BR0: RX <- CONNECT pd = 8 callref = 0xA0 *Mar 1 03:37:58.774: %LINK-3-UPDOWN: Interface BRI0:2, changed state to up *Mar 1 03:37:58.786: %ISDN-6-CONNECT: Interface BRI0:1 is now connected to 5551111 maui-nas-05 *Mar 1 03:37:58.794: BR0:2 PPP: Treating connection as a callout *Mar 1 03:37:58.798: BR0:2 PPP: Phase is ESTABLISHING, Active Open [0 sess, 0 load] *Mar 1 03:37:58.810: BR0:2 LCP: 0 CONFREQ [Closed] id 16 Len 34 *Mar 1 03:37:58.814: BR0:2 LCP: AuthProto CHAP (0x0305C22305) *Mar 1 03:37:58.818: BR0:2 LCP: MagicNumber 0x1144F9C9 (0x05061144F9C9) *Mar 1 03:37:58.821: BR0:2 LCP: MRRU 1524 (0x110405F4) *Mar 1 03:37:58.825: BR0:2 LCP: EndpointDisc 1 Local (0x130F016D6175692D736F686F2D3031) *Mar 1 03:37:58.837: ISDN BR0: TX -> CONNECT_ACK pd = 8 callref = 0x20 *Mar 1 03:37:58.861: BR0:2 LCP: I CONFREQ [REQsent] id 33 Len 33 *Mar 1 03:37:58.865: BR0:2 LCP: AuthProto CHAP (0x0305C22305) *Mar 1 03:37:58.869: BR0:2 LCP: MagicNumber 0x363036F1 (0x0506363036F1) *Mar 1 03:37:58.873: BR0:2 LCP: MRRU 1524 (0x110405F4) *Mar 1 03:37:58.877: BR0:2 LCP: EndpointDisc 1 Local (0x130E016D6175692D6E61732D3035) *Mar 1 03:37:58.889: BR0:2 LCP: O CONFACK [REQsent] id 33 Len 33 *Mar 1 03:37:58.893: BR0:2 LCP: AuthProto CHAP (0x0305C22305) *Mar 1 03:37:58.897: BR0:2 LCP: MagicNumber 0x363036F1 (0x0506363036F1) *Mar 1 03:37:58.901: BR0:2 LCP: MRRU 1524 (0x110405F4) *Mar 1 03:37:58.905: BR0:2 LCP: EndpointDisc 1 Local (0x130E016D6175692D6E61732D3035) *Mar 1 03:37:58.917: BR0:2 LCP: I CONFACK [ACKsent] id 16 Len 34 *Mar 1 03:37:58.921: BR0:2 LCP: AuthProto CHAP (0x0305C22305) *Mar 1 03:37:58.929: BR0:2 LCP: MagicNumber 0x1144F9C9 (0x05061144F9C9) *Mar 1 03:37:58.933: BR0:2 LCP: MRRU 1524 (0x110405F4) *Mar 1 03:37:58.937: BR0:2 LCP: EndpointDisc 1 Local (0x130F016D6175692D736F686F2D3031) *Mar 1 03:37:58.941: BR0:2 LCP: State is Open *Mar 1 03:37:58.945: BR0:2 PPP: Phase is AUTHENTICATING, by both [0 sess, 0 load] *Mar 1 03:37:58.952: BR0:2 CHAP: O CHALLENGE id 15 Len 33 from "maui-soho-01" *Mar 1 03:37:58.956: BR0:2 CHAP: I CHALLENGE id 22 Len 32 from "maui-nas-05" *Mar 1 03:37:58.976: BR0:2 CHAP: O RESPONSE id 22 Len 33 from "maui-soho-01" *Mar 1 03:37:59.008: BR0:2 CHAP: I SUCCESS id 22 Len 4 *Mar 1 03:37:59.012: BR0:2 CHAP: I RESPONSE id 15 Len 32 from "maui-nas-05"

*Mar 1 03:37:59.028: BR0:2 CHAP: O SUCCESS id 15 Len 4

!--- Authentication (for the 2nd call) is successful. *Mar 1 03:37:59.036: BR0:2 PPP: Phase is VIRTUALIZED [0 sess, 0 load] *Mar 1 03:37:59.044: BR0:2 MLP: maui-nas-05, multilink up *Mar 1 03:38:00.036: %LINEPROTO-5-UPDOWN: Line protocol on Interface BRI0:2, changed state to up *Mar 1 03:38:02.555: %OSPF-5-ADJCHG: Process 5, Nbr 172.22.1.1 on BRI0 from LOADING to FULL, Loading Done *Mar 1 03:38:04.742: %ISDN-6-CONNECT: Interface BRI0:2 is now connected to

5551111 maui-nas-05

!--- Second B-channel (BRI0:2) is connected. *Mar 1 03:38:08.599: BR0:1 LCP: I ECHOREQ [Open] id
2 Len 12 magic 0x363030C5 *Mar 1 03:38:08.603: BR0:1 LCP: O ECHOREP [Open] id 2 Len 12 magic
0x1144F392 maui-soho-01#



- DDR バックアップの設定とトラブルシューティング
- DDR バックアップのためのバックアップ インターフェイス、フローティング スタティック ルートおよびダイヤラ ウォッチの評価。
- BRI トラブルシューティングでの show isdn status コマンドの使用
- ・<u>テクニカルサポート Cisco Systems</u>