Catalyst 4908G-L3 の VLAN ルーティングとブリ ッジングの設定例

内容

概要 前提条件 要件 <u>使用するコンポーネント</u> 表記法 設定 Catalyst 4908G-L3 の VLAN ルーティングとブリッジングの例 ネットワーク図 設定 全般設定タスク 管理用スイッチの設定 VLAN の設定 EtherChannel の設定 ブリッジングおよびルーティングの設定 スイッチ間の ISL トランクの設定 端末ポートの設定 スイッチ設定の保存 完全なデバイス設定の変更 確認 トラブルシュート 関連情報

<u>概要</u>

この文書では、Catalyst 4908G-L3 スイッチで、複数のレイヤ 2(L2)スイッチ間の VLAN 間ル ーティングとブリッジングをサポートするための設定例を紹介します。

<u>前提条件</u>

<u>要件</u>

このドキュメントの読者は、Catalyst 4908G-L3スイッチに関する知識が必要です。

 コンフィギュレーションの見地からすると、Catalyst 4908G-L3 はルータです。Cisco IOS[®]設定インターフェイスを使用し、デフォルトでは、すべてのインターフェイスがルーテ ッドインターフェイスです。

- Catalyst 4908G-L3は、他のCatalystスイッチにあるVLAN Trunking Protocol(VTP)、Dynamic Trunking Protocol(DTP)、Port Aggregation Protocol(PAgP)など、レイヤ2指向のプロトコルをサポートしていません。
- リリース12.0(7)WX5(15d)では、Catalyst 4908G-L3は次をサポートしていません。データプレーン(セキュリティ)アクセスコントロールリスト(ACL):つまり、ユーザデータトラフィックをルータインターフェイスの入力または出力アクセスリストで制限することはできません。データプレーンACLは、リリース12.0(10)W5(18e)でサポートされるようになりました。802.1qサブインターフェイスでのブリッジング。つまり、encapsulation dot1qコマンドとbridge-group nコマンドの両方が適用されたサブインタフェースです。InterSwitch Link(ISL)サブインターフェイスでのブリッジングがサポートされています。802.1qサブインターフェイスでのブリッジングがサポートされています。102.1qサブインターフェイスでのブリッジングがサポートされています。102.1qサブインターフェイスでのブリッジングがサポートされるようになりました。シーフェイスでのブリッジングは、リリース12.0(10)W5(18e)でサポートされるようになりました。AppleTalk ルーティングポートスヌーピング(SPAN、ポートミラーリング、無差別モードとも呼ばれる)

<u>使用するコンポーネント</u>

このドキュメントの情報は、次のソフトウェアとハードウェアのバージョンに基づいています。

- Cisco IOS 12.0(7)W5(15d)が稼働するCatalyst 4908G-L3スイッチルータ
- Cisco IOS 12.0(5.2)XUが稼働する3台のCatalyst 3512XLスイッチ

このドキュメントの情報は、特定のラボ環境にあるデバイスに基づいて作成されました。このド キュメントで使用するすべてのデバイスは、初期(デフォルト)設定の状態から起動しています 。対象のネットワークが実稼働中である場合には、どのようなコマンドについても、その潜在的 な影響について確実に理解しておく必要があります。

<u>表記法</u>

ドキュメント表記の詳細については、『<u>シスコ テクニカル ティップスの表記法</u>』を参照してくだ さい。

<u>設定</u>

<u>Catalyst 4908G-L3 の VLAN ルーティングとブリッジングの例</u>

このセクションでは、このドキュメントで説明する機能を設定するために必要な情報を提供して います。

注:このセクションで使用されているコマンドの詳細を調べるには、Command Lookup Tool(登録ユーザ専用)を参照してください。一部ツールについては、ゲスト登録のお客様にはアクセスできない場合がありますことをご了承ください。

この設定の例では、Catalyst 4908G-L3 スイッチは 2 つの目的のために配備されます。

- ・複数のレイヤ2スイッチに5つのVLAN(VLAN 1、10、20、30、および40)を拡張します。この場合、3つのCatalyst 3512XL
- IPおよびInternetwork Packet Exchange(IPX)のVLAN間ルーティングを実行して、異なる VLAN内のデバイス間の通信を可能にする

スイッチ全体にVLANを拡張するために、3512XLは、トランクリンクと、あるVLANに到着した

1台の3512XLスイッチからのトラフィックを介して4908G-L3に接続します。これは、通常のブリ ッジング設定です。3512XL スイッチのうち 2 台は、ギガビット イーサチャネルを使用して 4908G-L3 スイッチに接続します。もう片方の 3512XL スイッチは、単一のギガビット イーサネ ット リンクを使用します。

VLAN間ルーティング、Integrated Routing and Bridging(IRB)およびBridge Virtual Interfaces(BVI)をサポートするために、異なるVLAN間でIPおよびIPXをルーティングするように 設定されています。

端末とサーバが、Catalyst 3512XL スイッチに取り付けられます。あるVLAN内のデバイスが別の VLAN内のデバイスに接続する必要がある場合、トラフィックはCatalyst 4908G-L3に送信され、 BVIインターフェイスでトラフィックがルーティングされます。

導入が大規模なネットワークの一部である場合、コアを宛先とするトラフィックは、コアスイッ チまたはルータへの接続を通じて追加のサブネットにルーティングされます(この設定は考慮さ れません)。

この構成は次のスイッチに適用されます。

- •基本的な初期設定が適用されます。
- IP アドレスとデフォルト ゲートウェイは、管理用スイッチに割り当てられます。
- VTPモードは透過に設定され、VLANはCatalyst 3512XLスイッチで設定されます。
- Gigabit EtherChannelリンクは、Catalyst 4908G-L3と3512xl-01および3512xl-02スイッチの間 で設定されます。
- ブリッジング、BVIインターフェイス、IPおよびIPXルーティングは、Catalyst 4908G-L3で設 定されます。
- ISLトランクは、Catalyst 4908G-L3と3台のCatalyst 3512XLスイッチの間で設定され、ブリ ッジングはトランクサブインターフェイスで設定されます。
- IPおよびIPXネットワークとVLANのマッピングを次に示します。
- アクセスVLANが割り当てられ、Catalyst 3512XLスイッチのすべてのファストイーサネット インターフェイスでスパニングツリーPortFastが有効になります。

<u>ネットワーク図</u>

このドキュメントでは、次のネットワーク セットアップを使用します。



設定

このドキュメントでは、次の構成を使用します。

- <u>全般設定タスク</u>
- 管理用スイッチの設定
- <u>VLAN の設定</u>
- ・<u>EtherChannel の設定</u>
- ブリッジングおよびルーティングの設定
- <u>スイッチ間の ISL トランクの設定</u>
- 端末ポートの設定
- スイッチ設定の保存
- 完全なデバイス設定の変更

<u>全般設定タスク</u>

Catalyst 4908G-L3およびCatalyst 3512XLスイッチなどのCisco IOSベースのスイッチでは、次の 基本設定を各スイッチに適用する必要があります。

!-- The calendar set command does not apply to the Catalyst 3500XL switches.

```
Router#calendar set 18:00:00 Jan 8 2003

Router#clock set 18:00:00 Jan 8 2003

Router#configure terminal

Enter configuration commands, one per line. End with CNTL/Z.

Router(config)#hostname 4908G-L3

4908G-L3(config)#clock timezone PST -8

4908G-L3(config)#clock calendar-valid

4908G-L3(config)#service timestamps log datetime localtime msec

4908G-L3(config)#service timestamps debug datetime localtime msec

4908G-L3(config)#enable password verysecret

4908G-L3(config)#line vty 0 4

4908G-L3(config-line)#password secret

4908G-L3(config-line)#password secret

4908G-L3(config-line)#exit

4908G-L3(config-line)#exit
```

- calendar setコマンドは、スイッチの内部カレンダーチップに日付と時刻を設定します。この コマンドは、Catalyst 3512XLスイッチには適用されません。
- clock setコマンドは、スイッチのクロックの日時を設定します。
- hostname コマンドは、スイッチのホスト名を設定します。
- clock calendar-validコマンドは、スイッチに対して、次回のリロード時にカレンダーチップ に保存されている日付と時刻でクロックの日付と時刻を設定するように指示します。このコ マンドは、Catalyst 3548XLスイッチには適用されません。
- service timestamps log datetime localtime msec および service timestamps debug datetime localtime msec コマンドは、現在の日付と時間で(ミリ秒まで)syslog とデバッグ出力をタ イムスタンプすることによって、管理とトラブルシューティングを補助します。
- enable passwordコマンドは、スイッチで特権モードに入るパスワードを定義します。
- line vty 0 4コマンドはラインコンフィギュレーションモードに入るため、仮想端末(vty)回線 で着信Telnetセッションのパスワードを定義できます。Catalyst 3512XLスイッチでは、line vty 0 15を使用します。
- passwordコマンドは、vty回線上のTelnetセッションを介してスイッチで通常モードに入るためのパスワードを定義します。
- no logging consoleコマンドを使用すると、端末コンソールにsyslogメッセージが表示されま せん。次の例では、スクリーンキャプチャを簡素化するためにコマンドを使用しています。

管理用スイッチの設定

Catalyst 3512XL スイッチでは、IP アドレスとデフォルト ゲートウェイはスイッチを管理するために VLAN 1 で設定されます。デフォルトゲートウェイは、Catalyst 4908G-L3のBVI 1インターフェイスのIPアドレスです。BVIインターフェイスは後で設定します。

注:IPアドレスがインターフェイスに割り当てられるまで、Catalyst 4908G-L3にTelnet接続できません。

Catalyst 3512XL-01:

3512XL-01#configure terminal Enter configuration commands, one per line. End with CNTL/Z. 3512XL-01(config)#interface vlan 1 3512XL-01(config-if)#ip address 10.10.1.10 255.255.255.0 3512XL-01(config-if)#management 3512XL-01(config-if)#exit 3512XL-01(config)#ip default-gateway 10.10.1.1 3512XL-01(config)#ip default-gateway 10.10.1.1 3512XL-01(config)#*Z 3512XL-01# 注:

- ip default-gateway コマンドは、スイッチの IP 管理プロトコル スタックのためのデフォルト ゲートウェイ IP アドレスを定義します。これは、スイッチがIPルーティングに参加しておら ず、ネットワークのレイヤ3(L3)トポロジを認識していないためです。
- ・デフォルトゲートウェイに使用されるIPアドレスは10.10.1.1で、Catalyst 4908G-L3スイッチのBVI 1インターフェイス(この例の後半で設定)のIPアドレスです。

Catalyst 3512XL-02:

```
3512XL-02#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
3512XL-02(config)#interface vlan 1
3512XL-02(config-if)#ip address 10.10.1.20 255.255.255.0
3512XL-02(config-if)#management
3512XL-02(config-if)#exit
3512XL-02(config)#ip default-gateway 10.10.1.1
3512XL-02(config)#ip default-gateway 10.10.1.1
3512XL-02(config)#*Z
3512XL-02#
Catalyst 3512XL-03:
```

```
3512XL-03#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
3512XL-03(config)#interface vlan 1
3512XL-03(config-if)#ip address 10.10.1.30 255.255.255.0
3512XL-03(config-if)#management
3512XL-03(config-if)#exit
3512XL-03(config)#ip default-gateway 10.10.1.1
3512XL-03(config)#ip default-gateway 10.10.1.1
3512XL-03(config)#^Z
3512XL-03#
```

<u>VLAN の設定</u>

本章の例では、Catalyst 3512XL スイッチは、VTP トランスペアレントモードで設定されます。 この例では、Catalyst 3512XLスイッチはVTPトランスペアレントモードで設定されています。こ れは、VTPドメインをCatalyst 4908G-L3で拡張できないためです。

設定は、Catalyst 3512XL-01、3512XL-02、および3512XL-03 では同じです。

```
3512XL-01#vlan database
3512XL-01(vlan)#vtp transparent
Setting device to VTP TRANSPARENT mode.
3512XL-01(vlan)#vlan 10 name Vlan10
VLAN 10 added:
   Name: Vlan10
3512XL-01(vlan)#vlan 20 name vlan20
VLAN 20 added:
   Name: Vlan20
3512XL-01(vlan)#vlan 30 name Vlan30
VLAN 30 added:
    Name: Vlan30
3512XL-01(vlan)#vlan 40 name Vlan40
VLAN 40 added:
   Name: Vlan40
3512XL-01(vlan)#exit
APPLY completed.
Exiting....
3512XL-01#
```

show vtp statusコマンドとshow vlanコマンドを使用して、VLAN設定を確認できます。

VTP Version	:	2						
Configuration Revision	:	0						
Maximum VLANs supported locally	:	254						
Number of existing VLANs	:	9						
VTP Operating Mode	:	Transpar	rent					
VTP Domain Name	:							
VTP Pruning Mode	:	Disable	f					
VTP V2 Mode	Mode : Disabled							
VTP Traps Generation	Traps Generation : Disabled							
MD5 digest	:	0xF0 0xH	EA 0x28 0:	x34 0	xAl 0xC6 ()x2A 0x1	DE	
Configuration last modified by	10.	10.1.10	at 9-18-0	00 18	:04:06			
3512XL-01# show vlan								
VLAN Name	Status Ports							
1 default		active Fa0/1, Fa0/2, Fa0/3, Fa)/3, Fa)/4,	
			Fa	0/5,	Fa0/6, Fa)/7, Fa)/8,	
			Fa	0/9,	Fa0/10, Fa	a0/11, 1	Fa0/12,	
			Gi	0/1,	Gi0/2			
10 Vlan10		act	Lve					
20 Vlan20	Vlan20 active							
30 Vlan30	Vlan30 active							
40 Vlan40	Vlan40 active							
1002 fddi-default	2 fddi-default active							
1003 token-ring-default	token-ring-default active							
1004 iddinet-default		active						
UUS trnet-default active								
VLAN Type SAID MTU Par	ent	RingNo	BridgeNo	Stp	BrdgMode	Transl	Trans2	
1 enet 100001 1500 -		-	-	-	-	1002	1003	
10 enet 100010 1500 -		-	-	-	-	0	0	
20 enet 100020 1500 -		-	-	-	-	0	0	
30 enet 100030 1500 -		-	-	-	-	0	0	
40 enet 100040 1500 -		-	-	-	-	U 1	U 1002	
1002 Fadi 101002 1500 -	-	-	-	-	-	1	1003	
1003 Tr 101003 1500 100	5	U	-	-	srb	T	T002	
1004 TONET 101004 1500 -				- le		∩	∩	
100E typet 10100E 1500		-	1	ibm TDM	-	0	0	

<u>EtherChannelの設定</u>

この出力は、Catalyst 4908G-L3とCatalyst 3512XL-01および3512XL-02スイッチ間の EtherChannelリンクの設定方法を示しています。3512XL-01のインターフェイスgig0/1および gig0/2は、Catalyst 4908G-L3のインターフェイスgig1およびgig2に接続します。3512XL-02のイ ンターフェイスgig0/1およびgig0/2は、Catalyst 4545000に0に00に0接続0接続0000002で 000 L3

Catalyst 4908G-L3でEtherChannelを設定するには、**channel-groupコマンドを使用して、物理インターフェイスを論理(ポートチャネル)インターフェイスに割り当てる必要があ**ります。 Catalyst 3512XLスイッチでは、物理インターフェイスはポートグループに割り当てられます。 Catalyst 3512XLには論理ポートチャネルインターフェイスはありません。

Catalyst 4908G-L3:

```
4908G-L3(config-if)#exit
4908G-L3(config)#interface gig1
4908G-L3(config-if)#no shutdown
4908G-L3(config-if)#channel-group 1
GigabitEthernet1 added as member-1 to port-channel1
4908G-L3(config-if)#exit
4908G-L3(config)#interface gig2
4908G-L3(config-if)#no shutdown
4908G-L3(config-if)#channel-group 1
GigabitEthernet2 added as member-2 to port-channel1
4908G-L3(config-if)#exit
4908G-L3(config)#interface port-channel 2
4908G-L3(config-if)#exit
4908G-L3(config)#interface gig3
4908G-L3(config-if)#no shutdown
4908G-L3(config-if)#channel-group 2
GigabitEthernet3 added as member-1 to port-channel2
4908G-L3(config-if)#exit
4908G-L3(config)#interface gig4
4908G-L3(config-if)#no shutdown
4908G-L3(config-if)#channel-group 2
GigabitEthernet4 added as member-2 to port-channel2
4908G-L3(config-if)#^Z
```

```
4908G-L3#
```

注:

- interface port-channelコマンドは論理インターフェイスを作成します。この例では、2つの論 理ポートチャネルインターフェイスが作成されます。
- channel-groupコマンドは、物理インターフェイスを論理ポートチャネルインターフェイスに 追加します。channel-group番号は、ポートチャネルインターフェイス番号に対応します。
 EtherChannelの設定を確認するには、show interface port-channelコマンドを使用します。

```
4908G-L3#show interface port-channel 1
Port-channel1 is up, line protocol is up
 Hardware is GEChannel, address is 0030.78fe.a007 (bia 0000.0000.0000)
 MTU 1500 bytes, BW 2000000 Kbit, DLY 10 usec, rely 255/255, load 1/255
 Encapsulation ARPA, loopback not set, keepalive set (10 sec)
 Half-duplex, Unknown Speed, Media type unknown, Force link-up
 ARP type: ARPA, ARP Timeout 04:00:00
   No. of active members in this channel: 2
       Member 0 : GigabitEthernet1
       Member 1 : GigabitEthernet2
 Last input 00:00:25, output never, output hang never
 Last clearing of "show interface" counters never
 Queueing strategy: fifo
 Output queue 0/40, 0 drops; input queue 0/300, 0 drops
 5 minute input rate 0 bits/sec, 1 packets/sec
  5 minute output rate 0 bits/sec, 0 packets/sec
     489 packets input, 41461 bytes, 0 no buffer
    Received 0 broadcasts, 0 runts, 0 giants, 0 throttles
     0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort
     0 watchdog, 0 multicast
     0 input packets with dribble condition detected
     19 packets output, 8668 bytes, 0 underruns(0/0/0)
     0 output errors, 0 collisions, 0 interface resets
```

0 babbles, 0 late collision, 0 deferred 0 lost carrier, 0 no carrier 0 output buffer failures, 0 output buffers swapped out 4908G-L3#

注:

show interface port-channelコマンドは、EtherChannelに属するアクティブなメンバの数と特定のインターフェイスを表示することに注意してください。

Catalyst 3512XL-01:

3512XL-01#configure terminal Enter configuration commands, one per line. End with CNTL/Z. 3512XL-01(config)#interface gig0/1 3512XL-01(config-if)#port group 1 3512XL-01(config)#interface gig0/2 3512XL-01(config-if)#port group 1 3512XL-01(config-if)#^Z 3512XL-01# 注:

• port groupコマンドは、物理ポートを論理ポートグループ(EtherChannel)に追加します。 EtherChannelの設定を確認するには、**show port groupコマンドを使用**します。

3512XL-01#**show port group** Group Interface Transmit Distribution 1 GigabitEthernet0/1 source address 1 GigabitEthernet0/2 source address 3512XL-01#

Catalyst 3512XL-02:

3512XL-02#configure terminal Enter configuration commands, one per line. End with CNTL/Z. 3512XL-02(config)#interface gig0/1 3512XL-02(config-if)#port group 1 3512XL-02(config)#interface gig0/2 3512XL-02(config-if)#port group 1 3512XL-02(config-if)#^Z 3512XL-02# EtherChannelの設定を確認するには、show port groupコマンドを使用します。

<u>ブリッジングおよびルーティングの設定</u>

この出力は、ブリッジングとルーティング用にCatalyst 4908G-L3を設定する方法を示しています 。VLANごとに個別のブリッジプロセスが定義されます。この例の後半の「スイッチ間のISLトラ ンク<u>ルの設定」セクションで</u>は、ブリッジグループにインターフェイスが割り当てられます。 VLAN間ルーティングが必要なため、bridge irbコマンドでIntegrated Routing and Bridging(IRB)を 有効にする必要**があ**ります。

さらに、異なったブリッジ グループ間で IP と IPX トラフィックをルートするには、ブリッジ仮

想インターフェイス (BVI) が作成されなければなりません。

「スイッチ間のISLトランクの設定」の項で、ISLトランク上のVLANサブインターフェイスは適切なブリッジグループに結合され、各VLANのレイヤ2ドメインが1つ作成されます。対応する BVIはそのVLANのルータインターフェイスとして機能します。

Catalyst 4908G-L3:

4908G-L3#configure terminal Enter configuration commands, one per line. End with CNTL/Z. 4908G-L3(config)#ipx routing 4908G-L3(config)#bridge irb 4908G-L3(config)#bridge 1 protocol ieee 4908G-L3(config)#bridge 1 route ip 4908G-L3(config)#bridge 10 protocol IEEE 4908G-L3(config)#bridge 10 route ip 4908G-L3(config)#bridge 10 route ipx 4908G-L3(config)#bridge 20 protocol IEEE 4908G-L3(config)#bridge 20 route ip 4908G-L3(config)#bridge 20 route ipx 4908G-L3(config)#bridge 30 protocol IEEE 4908G-L3(config)#bridge 30 route ip 4908G-L3(config)#bridge 30 route ipx 4908G-L3(config)#bridge 40 protocol IEEE 4908G-L3(config)#bridge 40 route ip 4908G-L3(config)#bridge 40 route ipx 4908G-L3(config)#interface bvi 1 4908G-L3(config-if)#ip address 10.10.1.1 255.255.255.0 4908G-L3(config-if)#exit 4908G-L3(config)#interface bvi 10 4908G-L3(config-if)#ip address 10.10.10.1 255.255.255.0 4908G-L3(config-if)#ipx network 1000 4908G-L3(config-if)#exit 4908G-L3(config)#interface bvi 20 4908G-L3(config-if)#ip address 10.10.20.1 255.255.255.0 4908G-L3(config-if)#ipx network 2000 4908G-L3(config-if)#exit 4908G-L3(config)#interface bvi 30 4908G-L3(config-if)#ip address 10.10.30.1 255.255.255.0 4908G-L3(config-if)#ipx network 3000 4908G-L3(config-if)#exit 4908G-L3(config)#interface bvi 40 4908G-L3(config-if)#ip address 10.10.40.1 255.255.255.0 4908G-L3(config-if)#ipx network 4000 4908G-L3(config-if)#**^Z** 4908G-L3#

注:

- ipx routingコマンドは、Catalyst 4908G-L3でIPXルーティングを有効にします。
- bridge irbコマンドはルータ上でIntegrated Routing and Bridging(IRB)を有効にします。これに より、ブリッジグループ内でトラフィックをルーティングできます。
- bridge number protocol /EEEコマンドは、IEEEスパニングツリーを実行するブリッジプロセ スを作成します。
- bridge number route ipコマンドを使用すると、BVI番号インターフェイスとルータ上の他の IPインターフェイスの間でIPトラフィックをルーティングできます。
- bridge *number* route ipx**コマンドを使用す**ると、IPXトラフィックをルータのBVI番号インタ

ーフェイスと他のIPXインターフェイスの間でルーティングできます。ブリッジプロセス

1(管理VLAN)では、このコマンドが省略されていることに注意してください。

- interface bvi numberコマンドは、number bridge-groupでL3インターフェイスとして機能する
 Bridge Virtual Interface(BVI)インターフェイスを作成します。
- ip addressコマンドは、BVIインターフェイスにIPアドレスを割り当てます。
- ipx networkコマンドは、IPXネットワーク番号をBVIインターフェイスに割り当てます。管理 VLAN [BVI 1]のBVIにIPXネットワーク番号が割り当てられていないことを確認します。

ISLトランクリンクを設定し、トランクサブインターフェイスを適切なブリッジグループに追加した後、この例の後半でブリッジング設定を確認できます。

<u>スイッチ間の ISL トランクの設定</u>

この出力は、Catalyst 4908G-L3とCatalyst 3512XLスイッチ間のトランクリンクの設定方法を示しています。

Catalyst 4908G-L3でトランキングを設定するには、メインインターフェイスの下にサブインター フェイスを追加し、トランク上で送信される各VLANにサブインターフェイスを1つずつ追加する 必要があります。本章の例では、2 個のトランクが論理ポート チャネル インターフェイスに設定 され、同時に 3 番目のトランクは物理インターフェイスに設定されます。

さらに、サブインターフェイスでbridge-groupコマンドを設定して、各VLANサブインターフェイ スを適切なブリッジグループに結合します。これにより、この例で前述した「ブリッジングとル ーティングの設定」セクションで開始したブリッジングとルーティング設定が完了します。

Catalyst 4908G-L3:

```
4908G-L3#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
4908G-L3(config)#interface port-channel 1.1
4908G-L3(config-subif)#encapsulation isl 1
4908G-L3(config-subif)#bridge-group 1
4908G-L3(config-subif)#exit
4908G-L3(config)#interface port-channel 1.10
4908G-L3(config-subif)#encapsulation isl 10
4908G-L3(config-subif)#bridge-group 10
4908G-L3(config-subif)#exit
4908G-L3(config)#interface port-channel 1.20
4908G-L3(config-subif)#encapsulation isl 20
4908G-L3(config-subif)#bridge-group 20
4908G-L3(config-subif)#exit
4908G-L3(config)#interface port-channel 1.30
4908G-L3(config-subif)#encapsulation isl 30
4908G-L3(config-subif)#bridge-group 30
4908G-L3(config-subif)#exit
4908G-L3(config)#interface port-channel 1.40
4908G-L3(config-subif)#encapsulation isl 40
4908G-L3(config-subif)#bridge-group 40
4908G-L3(config-subif)#exit
4908G-L3(config)#interface port-channel 2.1
4908G-L3(config-subif)#encapsulation isl 1
4908G-L3(config-subif)#bridge-group 1
4908G-L3(config-subif)#exit
4908G-L3(config)#interface port-channel 2.10
4908G-L3(config-subif)#encapsulation isl 10
4908G-L3(config-subif)#bridge-group 10
```

```
4908G-L3(config-subif)#exit
4908G-L3(config)#interface port-channel 2.20
4908G-L3(config-subif)#encapsulation isl 20
4908G-L3(config-subif)#bridge-group 20
4908G-L3(config-subif)#exit
4908G-L3(config)#interface port-channel 2.30
4908G-L3(config-subif)#encapsulation isl 30
4908G-L3(config-subif)#bridge-group 30
4908G-L3(config-subif)#exit
4908G-L3(config)#interface port-channel 2.40
4908G-L3(config-subif)#encapsulation isl 40
4908G-L3(config-subif) #bridge-group 40
4908G-L3(config-subif)#exit
4908G-L3(config)#interface gig 5
4908G-L3(config-if)#no shutdown
4908G-L3(config-if)#exit
4908G-L3(config)#interface gig 5.1
4908G-L3(config-subif)#encapsulation isl 1
4908G-L3(config-subif) #bridge-group 1
4908G-L3(config-subif)#exit
4908G-L3(config)#interface gig 5.10
4908G-L3(config-subif)#encapsulation isl 10
4908G-L3(config-subif)#bridge-group 10
4908G-L3(config-subif)#exit
4908G-L3(config)#interface gig 5.20
4908G-L3(config-subif)#encapsulation isl 20
4908G-L3(config-subif) #bridge-group 20
4908G-L3(config-subif)#exit
4908G-L3(config)#interface gig 5.30
4908G-L3(config-subif)#encapsulation isl 30
4908G-L3(config-subif)#bridge-group 30
4908G-L3(config-subif)#exit
4908G-L3(config)#interface gig 5.40
4908G-L3(config-subif)#encapsulation isl 40
4908G-L3(config-subif)#bridge-group 40
4908G-L3(config-subif)#^Z
4908G-L3#
```

注:

- メインインターフェイスに論理サブインターフェイスを作成するには、メインインターフェ イス(interface port-channel 1、ピリオド(.)とサブインターフェイス番号、たとえばinterface port-channel 1.10)を指定します。サブインターフェイス番号/VLAN番号/ブリッジグループ番 号は同じである必要はありませんが、管理が容易になります。
- encapsulation isl vlan コマンドは、カプセル化タイプ(ISL)と、サブインターフェイス上で
 受信する VLAN を指定します。
- VLANサブインターフェイスにはIPアドレスまたはIPXネットワーク番号が割り当てられず、 bridge-group numberコマンドを使用してブリッジグループに追加されます。各VLANがレイ ヤ2のすべてのスイッチにまたがることが可能です。

show interface、show ip interface、およびshow ipx interfaceコマンドを使用して、設定</mark>を確認で きます。たとえば、次のコマンドを使用して、Catalyst 3512XL-01へのEtherChannelリンクのポ ートチャネル1.10(VLAN 10)サブインターフェイスと、VLAN 10の対応するBVI(BVI 10)の設定を 確認します。

MTU 1500 bytes, BW 2000000 Kbit, DLY 10 usec, rely 255/255, load 1/255 Encapsulation ISL Virtual LAN, Color 10. ARP type: ARPA, ARP Timeout 04:00:00 4908G-L3#show ip interface bvi 10 BVI10 is up, line protocol is up Internet address is 10.10.10.1/24 Broadcast address is 255.255.255.255 Address determined by setup command MTU is 1500 bytes Helper address is not set Directed broadcast forwarding is disabled Outgoing access list is not set Inbound access list is not set Proxy ARP is enabled Security level is default Split horizon is enabled ICMP redirects are always sent ICMP unreachables are always sent ICMP mask replies are never sent IP fast switching is enabled IP fast switching on the same interface is disabled IP Null turbo vector IP multicast fast switching is enabled IP multicast distributed fast switching is disabled Router Discovery is disabled IP output packet accounting is disabled IP access violation accounting is disabled TCP/IP header compression is disabled RTP/IP header compression is disabled Probe proxy name replies are disabled Policy routing is disabled Network address translation is disabled Web Cache Redirect is disabled BGP Policy Mapping is disabled 4908G-L3#show ipx interface bvi 10 BVI10 is up, line protocol is up IPX address is 1000.0030.78fe.a00b, NOVELL-ETHER [up] Delay of this IPX network, in ticks is 2 throughput 0 link delay 0 IPXWAN processing not enabled on this interface. IPX SAP update interval is 60 seconds IPX type 20 propagation packet forwarding is disabled Incoming access list is not set Outgoing access list is not set IPX helper access list is not set SAP GNS processing enabled, delay 0 ms, output filter list is not set SAP Input filter list is not set SAP Output filter list is not set SAP Router filter list is not set Input filter list is not set Output filter list is not set Router filter list is not set Netbios Input host access list is not set Netbios Input bytes access list is not set Netbios Output host access list is not set Netbios Output bytes access list is not set Updates each 60 seconds aging multiples RIP: 3 SAP: 3 SAP interpacket delay is 55 ms, maximum size is 480 bytes RIP interpacket delay is 55 ms, maximum size is 432 bytes RIP response delay is not set IPX accounting is disabled IPX fast switching is configured (disabled) RIP packets received 0, RIP packets sent 19, 0 Throttled RIP specific requests received 0, RIP specific replies sent 0 RIP general requests received 0, 0 ignored, RIP general replies sent 0 SAP packets received 0, SAP packets sent 5, 0 Throttled SAP GNS packets received 0, SAP GNS replies sent 0 SAP GGS packets received 0, 0 ignored, SAP GGS replies sent 0 4908G-L3#

ブリッジングの設定は、**show bridge groupコマンドと**show spanning-tree numberコマンド**で確** 認で*きま*す。さらに、 show bridge コマンドを使用して、ブリッジ フォワーディング テーブルを 一覧表示できます。

Catalyst 3512XLスイッチの設定は、Catalyst 3512XL-01、3512XL-02、および3512XL-03で同じです。トランクリンクは、適切なギガビットイーサネットインターフェイスで設定されます。In the case of the EtherChannel links, the trunking configuration only has to be applied to one interface in the port group.トランクは、同じグループ内の他のインターフェイスに自動的に適用され、設定に表示されます。

3512XL-01#configure terminal Enter configuration commands, one per line. End with CNTL/Z. 3512XL-01(config)#interface gig 0/1 3512XL-01(config-if)#switchport mode trunk 3512XL-01(config-if)#^Z 3512XL-01#

注:

- 3512XL-01および3512XL-02の場合、チャネルグループ内の1つのインターフェイスに設定が 適用されると、グループ内の他のインターフェイスにも同じ設定が自動的に適用され、各イ ンターフェイスの設定に表示されます。
- switchport mode trunk コマンドは、インターフェイスをトランク ポートとして設定します。
- 3500XLスイッチでは、トランキングを有効にする際にデフォルトでISLカプセル化が使用されるため、この場合はカプセル化を指定する必要はありません。

how interface switchport コマンドを使用して、次の設定を確認できます。

3512XL-01#show interface gig0/1 switchport Name: Gi0/1 Switchport: Enabled Administrative mode: trunk Operational Mode: trunk Administrative Trunking Encapsulation: isl Operational Trunking Encapsulation: isl Negotiation of Trunking: Disabled Access Mode VLAN: 0 ((Inactive)) Trunking Native Mode VLAN: 1 (default) Trunking VLANs Enabled: ALL Trunking VLANs Active: 1,10,20,30,40 Pruning VLANs Enabled: 2-1001

Priority for untagged frames: 0 Override vlan tag priority: FALSE Voice VLAN: none Appliance trust: none 3512XL-01#

<u>端末ポートの設定</u>

Catalyst 3512XL スイッチ上のポートは VLAN に割当てられ、スパニング ツリー ポート ファス

トが有効になります。3512XL スイッチ上のポートはすべて設定された VLAN のどれかに割り当 てることができます。

特定のVLANのエンドステーションには、そのVLANに関連付けられた範囲内のIPアドレスを割り 当て、そのVLANのCatalyst 4908G-L3のBVIのIPアドレスをデフォルトゲートウェイとして使用す る必要があります。

次の出力は、インターフェイスfast0/1とfast 0/2をVLAN 10に設定し、インターフェイスで portfastを有効にする方法を示しています。

3512XL-01#configure terminal Enter configuration commands, one per line. End with CNTL/Z. 3512XL-01(config)#interface fast0/1 3512XL-01(config-if)#switchport access vlan 10 3512XL-01(config-if)#spanning-tree portfast 3512XL-01(config)#interface fast0/2 3512XL-01(config-if)#switchport access vlan 10 3512XL-01(config-if)#switchport access vlan 10 3512XL-01(config-if)#spanning-tree portfast 3512XL-01(config-if)#spanning-tree portfast 3512XL-01(config-if)#*Z

show interface switchportコマンドとshow spanning-tree interfaceコマンドを使用して、設定を確 認することができます。

3512XL-01#show interface fast0/1 switchport Name: Fa0/1 Switchport: Enabled Administrative mode: static access Operational Mode: static access Administrative Trunking Encapsulation: isl Operational Trunking Encapsulation: isl Negotiation of Trunking: Disabled Access Mode VLAN: 10 (Vlan10) Trunking Native Mode VLAN: 1 (default) Trunking VLANs Enabled: NONE Pruning VLANs Enabled: NONE Priority for untagged frames: 0 Override vlan tag priority: FALSE Voice VLAN: none Appliance trust: none 3512XL-01#show spanning-tree interface fast 0/1 Interface Fa0/1 (port 13) in Spanning tree 10 is FORWARDING Port path cost 19, Port priority 128 Designated root has priority 16384, address 0090.ab28.d000 Designated bridge has priority 16384, address 0090.ab28.d000 Designated port is 193, path cost 0 Timers: message age 2, forward delay 0, hold 0 BPDU: sent 1, received 73 The port is in the portfast mode 3512XL-01# 注:

show interface switchportコマンドは、インターフェイスの動作モード(スタティックアクセス)とアクセスモードVLAN(10)を表示します。 **show spanning-tree interfaceコマンド**は、ポートのスパニングツリー状態を表示し、「ポートが PortFastモードであることを示します。

<u>スイッチ設定の保存</u>

設定がリロードで保持されるようにすべてのスイッチ上で NVRAM(スタートアップ コンフィギ ュレーション)に実行コンフィギュレーションを確実に保存します。

Catalyst 4908G-L3:

4908G-L3#copy running-config startup-config Destination filename [startup-config]? Building configuration... [OK] 4908G-L3# Catalyst 3512XLスイッチ:

3512XL-01#copy running-config startup-config Destination filename [startup-config]? Building configuration...

^{3512xL-01#} 完全なデバイス設定の変更

この例で使用するデバイスの完全な設定を次に示します。

- Catalyst 4908G-L3
- Catalyst 3512XL-01
- Catalyst 3512XL-02
- <u>Catalyst 3512XL-03</u>

Catalyst 4908G-L3

```
4908G-L3#show running-config
Building configuration ...
Current configuration:
!
! Last configuration change at 14:09:14 PST Tue Sep 19
2000
! NVRAM config last updated at 14:09:15 PST Tue Sep 19
2000
!
version 12.0
no service pad
service timestamps debug datetime msec localtime
service timestamps log datetime msec localtime
no service password-encryption
1
hostname 4908G-L3
!
no logging console
enable password verysecret
!
```

```
clock timezone PST -8
clock calendar-valid
ip subnet-zero
ipx routing 0030.78fe.a000
!-- Enables IRB to route between bridge groups. bridge
irb
!
!-- Creates a logical interface (1) to group physical
interfaces into a channel. interface Port-channel1
no ip address
no ip directed-broadcast
hold-queue 300 in
!-- A subinterface is added to allow VLAN 1 traffic to
be transmitted on the trunk. interface Port-channel1.1
 !-- Specifies ISL encapsulation for VLAN 1.
encapsulation isl 1
no ip redirects
no ip directed-broadcast
!-- Assign the subinterface to the appropriate bridge-
group
  for bridging and routing.
bridge-group 1
1
!-- A subinterface is added to allow VLAN 10 traffic to
be transmitted on the trunk. interface Port-channel1.10
  !-- Specifies ISL encapsulation for VLAN 10.
encapsulation isl 10
no ip redirects
no ip directed-broadcast
!-- Assign the subinterface to the appropriate bridge-
group for bridging and routing. bridge-group 10
1
!-- VLAN 20 configuration. interface Port-channel1.20
encapsulation isl 20
no ip redirects
no ip directed-broadcast
bridge-group 20
1
!-- VLAN 30 configuration. interface Port-channel1.30
encapsulation isl 30
no ip redirects
no ip directed-broadcast
bridge-group 30
!-- VLAN 40 configuration. interface Port-channel1.40
encapsulation isl 40
no ip redirects
no ip directed-broadcast
bridge-group 40
!-- Creates a logical interface (2) to group physical
interfaces into a channel. interface Port-channel2
No ip address
no ip directed-broadcast
hold-queue 300 in
1
!-- VLAN 1 configuration. interface Port-channel2.1
 encapsulation isl 1
no ip redirects
no ip directed-broadcast
bridge-group 1
```

! VLAN 10 configuration. interface Port-channel2.10						
encapsulation isl 10						
no ip redirects						
ho ip directed-broadcast						
! VLAN 20 configuration. interface Port-channel2.20						
encapsulation isl 20						
no ip redirects						
no ip directed-broadcast						
bridge-group 20						
!						
! VLAN 30 configuration. interface Port-channel2.30						
encapsulation isl 30						
no ip redirects						
no ip directed-broadcast						
bridge-group 30						
1						
<pre>! VLAN 40 configuration. interface Port-channel2.40</pre>						
encapsulation isl 40						
no 1p redirects						
no 1p directed-broadcast						
bridge-group 40						
: interface GigabitEthernet1						
no in address						
no ip directed-broadcast						
Logically groups the physical interface to interface						
port-channel 1 channel-group 1						
!						
interface GigabitEthernet2						
no ip address						
no ip directed-broadcast						
! Logically groups the physical interface to interface						
port-channel 1. channel-group 1						
!						
interface GigabitEthernet3						
no ip address						
no ip directed-broadcast						
<i>! Logically groups the physical interface to interface</i>						
port-channel 2. channel-group 2						
!						
interface GigabitEthernet4						
no ip directed-broadcast						
Lee Logically groups the physical interface to interface						
port-channel 2. channel-group 2						
I Chamier 2. Chamier-group 2						
interface GigabitEthernet5						
no ip address						
no ip directed-broadcast						
1						
! A subinterface is added to allow VLAN 1 traffic to						
be transmitted on the trunk. interface						
GigabitEthernet5.1						
! Specifies ISL encapsulation for VLAN 1.						
encapsulation isl 1						
no ip redirects						
no ip directed-broadcast						
! Assign the subinterface to the appropriate bridge-						
group for bridging and routing. bridge-group 1						
!						
. VIAN IN CONTIGUIACION. INCELLACE GIGADICECHEINEC5.10						

```
encapsulation isl 10
no ip redirects
no ip directed-broadcast
bridge-group 10
!-- VLAN 20 configuration. interface GigabitEthernet5.20
encapsulation isl 20
no ip redirects
no ip directed-broadcast
bridge-group 20
!-- VLAN 30 configuration. interface GigabitEthernet5.30
encapsulation isl 30
no ip redirects
no ip directed-broadcast
bridge-group 30
!-- VLAN 30 configuration. interface GigabitEthernet5.40
encapsulation isl 40
no ip redirects
no ip directed-broadcast
bridge-group 40
interface GigabitEthernet6
no ip address
no ip directed-broadcast
shutdown
!
interface GigabitEthernet7
no ip address
no ip directed-broadcast
shutdown
!
interface GigabitEthernet8
no ip address
no ip directed-broadcast
shutdown
!-- BVI 1 is an L3 interface for bridge-group 1 (VLAN
1). interface BVI1
!-- The IP address assigned to bridge-group 1. ip
address 10.10.1.1 255.255.255.0
no ip directed-broadcast
no ip route-cache cef
!-- BVI 10 is an L3 interface for bridge-group 10 (VLAN
10). interface BVI10
!-- The IP address assigned to bridge-group 10. ip
address 10.10.10.1 255.255.255.0 no ip directed-
broadcast no ip route-cache cef !-- Assigns IPX network
1000 to BVI 10. ipx network 1000 ! !-- BVI 20 is a Layer
3 interface for bridge-group 20 (VLAN 20).
Interface BVI20
!-- IP address assigned to bridge-group 20. ip address
10.10.20.1 255.255.255.0
  no ip directed-broadcast
no ip route-cache cef
!-- Assigns IPX network 1000 to BVI 20. ipx network
2000!
!-- BVI 30 configuration.interface BVI30 ip address
10.10.30.1 255.255.255.0
no ip directed-broadcast
no ip route-cache cef
ipx network 3000
```

```
-- BVI 40 configuration. interface BVI40
ip address 10.10.40.1 255.255.255.0
no ip directed-broadcast
no ip route-cache cef
ipx network 4000
!
ip classless
!
!
1
!-- Applies IEEE Ethernet Spanning-Tree Protocol (STP)
to bridge-group 1. bridge 1 protocol ieee
!-- Allows IP traffic to be routed between the BVI 1 and
other IP interfaces. bridge 1 route ip
bridge 10 protocol ieee
bridge 10 route ip
!-- Allows IPX traffic to be routed between the BVI 10
and other IP interfaces. bridge 10 route ipx
bridge 20 protocol ieee
bridge 20 route ip
bridge 20 route ipx
bridge 30 protocol ieee
bridge 30 route ip
bridge 30 route ipx
bridge 40 protocol ieee
bridge 40 route ip
bridge 40 route ipx
1
line con 0
transport input none
line aux 0
line vty 0 4
password secret
login
!
end
4908G-L3#
Catalyst 3512XL-01
3512XL-01#show running-config
Building configuration...
Current configuration:
!
! Last configuration change at 08:24:03 PST Tue Sep 19
2000
! NVRAM config last updated at 08:24:03 PST Tue Sep 19
2000
1
version 12.0
no service pad
service timestamps debug datetime msec localtime
service timestamps log datetime msec localtime
no service password-encryption
hostname 3512XL-01
!
no logging console
enable password verysecret
```

```
clock timezone PST -8
!
ip subnet-zero
!
!
interface FastEthernet0/1
!-- The switchport access command configures the port to
be an L2 2 port. !-- Assigns the port to be a member of
VLAN 10. switchport access vlan 10
!-- Enables spanning-tree portfast. spanning-tree
portfast
interface FastEthernet0/2
switchport access vlan 10
spanning-tree portfast
1
interface FastEthernet0/3
switchport access vlan 10
spanning-tree portfast
!
interface FastEthernet0/4
!-- Assigns the port to be a member of VLAN 20.
switchport access vlan 20
spanning-tree portfast
interface FastEthernet0/5
switchport access vlan 20
spanning-tree portfast
interface FastEthernet0/6
switchport access vlan 20 spanning-tree portfast !
interface FastEthernet0/7 !-- Assigns the port to be a
member of VLAN 30. switchport access vlan 30
spanning-tree portfast
1
interface FastEthernet0/8
switchport access vlan 30
spanning-tree portfast
interface FastEthernet0/9
switchport access vlan 30
spanning-tree portfast
1
interface FastEthernet0/10
!-- Assigns the port to be a member of VLAN 40.
switchport access vlan 40
spanning-tree portfast
interface FastEthernet0/11
switchport access vlan 40
spanning-tree portfast
!
interface FastEthernet0/12
switchport access vlan 40
spanning-tree portfast
interface GigabitEthernet0/1
!-- Assigns the port to logical port-group 1 to create
```

```
the EtherChannel. port group 1
!-- Configures the port to be an ISL trunk. switchport
mode trunk ! Interface GigabitEthernet0/2 !-- Assigns
the port to logical port-group 1 to create the
EtherChannel. port group 1
!-- Configures the port to be an ISL trunk. switchport
mode trunk ! Interface VLAN1 !-- The IP address of the
management interface. ip address 10.10.1.10
255.255.255.0
no ip directed-broadcast
no ip route-cache
!-- The default gateway is set to the BVI 1 interface on
the 4908G-L3. ip default-gateway 10.10.1.1
!
line con 0
 transport input none
 stopbits 1
line vty 0 4
password secret
login
line vty 5 15
password secret
login
!
end
3512XL-01#
Catalyst 3512XL-02
3512XL-02#show running-config
Building configuration...
Current configuration:
! Last configuration change at 08:25:22 PST Tue Sep 19
2000
! NVRAM config last updated at 08:25:22 PST Tue Sep 19
2000
!
version 12.0
no service pad
service timestamps debug datetime msec localtime
service timestamps log datetime msec localtime
no service password-encryption
!
hostname 3512XL-02
!
no logging console
enable password verysecret
!
clock timezone PST -8
ip subnet-zero
!
1
1
interface FastEthernet0/1
```

```
!-- The switchport access command configures the port to
be an L2 port. !-- Assigns the port to be a member of
VLAN 10. switchport access vlan 10
!-- Enables spanning-tree portfast. spanning-tree
portfast
Interface FastEthernet0/2
switchport access vlan 10
spanning-tree portfast
interface FastEthernet0/3
!-- Assigns the port to be a member of VLAN 20.
switchport access vlan 20
spanning-tree portfast
1
interface FastEthernet0/4
switchport access vlan 20
spanning-tree portfast
interface FastEthernet0/5
switchport access vlan 20
spanning-tree portfast
interface FastEthernet0/6
switchport access vlan 20
spanning-tree portfast
interface FastEthernet0/7
switchport access vlan 20
spanning-tree portfast
interface FastEthernet0/8
switchport access vlan 20
spanning-tree portfast
interface FastEthernet0/9
!-- Assigns the port to be a member of VLAN 30.
switchport access vlan 30
spanning-tree portfast
interface FastEthernet0/10
switchport access vlan 30
spanning-tree portfast
interface FastEthernet0/11
!-- Assigns the port to be a member of VLAN 40.
switchport access vlan 40
spanning-tree portfast
1
interface FastEthernet0/12
switchport access vlan 40
spanning-tree portfast
interface GigabitEthernet0/1
!-- Assigns the port to logical port-group 1 to create
the EtherChannel. port group 1
!-- Configures the port to be an ISL trunk. switchport
mode trunk
Interface GigabitEthernet0/2
!-- Assigns the port to logical port-group 1 to create
the EtherChannel. port group 1
!-- Configures the port to be an ISL trunk. switchport
mode trunk
```

```
Interface VLAN1
!-- The IP address of the management interface. ip
address 10.10.1.20 255.255.255.0
No ip directed-broadcast
no ip route-cache
!
!-- The default gateway is set to the BVI 1 interface on
the 4908G-L. ip default-gateway 10.10.1.1
!
line con 0
transport input none
stopbits 1
line vty 0 4
password secret
login
line vty 5 15
password secret
login
1
end
3512XL-02#
Catalyst 3512XL-03
3512x1-03#show running-config
Building configuration...
Current configuration:
!
! Last configuration change at 12:13:33 PST Tue Sep 19
2000
! NVRAM config last updated at 12:13:34 PST Tue Sep 19
2000
!
version 12.0
no service pad
service timestamps debug datetime msec localtime
service timestamps log datetime msec localtime
no service password-encryption
hostname 3512x1-03
no logging console
enable password verysecret
!
!
1
1
clock timezone PST -8
ip subnet-zero
!
!
interface FastEthernet0/1
!-- The switchport access command configures the port to
be an L2 port. !-- Assigns the port to be a member of
VLAN 10. switchport access vlan 10
!-- Enables spanning-tree portfast. spanning-tree
portfast
```

```
interface FastEthernet0/2
switchport access vlan 10
spanning-tree portfast
interface FastEthernet0/3
switchport access vlan 10
spanning-tree portfast
interface FastEthernet0/4
switchport access vlan 10
spanning-tree portfast
interface FastEthernet0/5
switchport access vlan 10
spanning-tree portfast
interface FastEthernet0/6
switchport access vlan 10
spanning-tree portfast
interface FastEthernet0/7
!-- Assigns the port to be a member of VLAN 20.
switchport access vlan 20
spanning-tree portfast
1
interface FastEthernet0/8
switchport access vlan 20
spanning-tree portfast
interface FastEthernet0/9
!-- Assigns the port to be a member of VLAN 30.
switchport access vlan 30
spanning-tree portfast
interface FastEthernet0/10
switchport access vlan 30
spanning-tree portfast
1
interface FastEthernet0/11
!-- Assigns the port to be a member of VLAN 40.
switchport access vlan 40
spanning-tree portfast
1
interface FastEthernet0/12
switchport access vlan 40
spanning-tree portfast
1
interface GigabitEthernet0/1
!-- Configures the port to be an ISL trunk. switchport
mode trunk
1
Interface GigabitEthernet0/2
interface VLAN1
!-- The IP address of the management interface. ip
address 10.10.1.30 255.255.255.0
no ip directed-broadcast
no ip route-cache
1
!-- The default gateway is set to the BVI 1 interface on
the 4908G-L3. ip default-gateway 10.10.1.1
1
Line con 0
```

transport input none
stopbits 1
line vty 0 4
password secret
login
line vty 5 15
password secret
login
!
end
3512x1-03#

<u>確認</u>

現在、この設定に使用できる確認手順はありません。

<u>トラブルシュート</u>

現在、この設定に関する特定のトラブルシューティング情報はありません。

<u>関連情報</u>

- Catalyst 4908G-L3 スイッチのイーサチャネル設定
- <u>Catalyst 3500XL スイッチのイーサチャネル設定</u>
- <u>Catalyst 4908G-L3 スイッチのブリッジング設定</u>
- <u>Catalyst 4908G-L3 スイッチの VLAN トランクの設定</u>
- Catalyst 2900XL および 3500XL スイッチでの VTP、VLAN、および VLAN トランクの設定
- <u>テクニカル サポートとドキュメント Cisco Systems</u>