



モード別 CLI コマンド一覧

EXEC モード コマンド

authentication strict-password-policy 3-269
cd 3-3
cifs 3-4
clear 3-5
clear users 3-8
clock 3-9
cms 3-10
cms secure-store 3-13
configure 3-15
copy cdrom 3-16
copy compactflash 3-17
copy disk 3-18
copy ftp 3-19
copy http 3-23
copy running-config 3-27
copy startup-config 3-28
copy sysreport 3-29
copy system-status 3-31
copy tech-support 3-32
copy tftp 3-33
cpfile 3-34
debug 3-35
delfile 3-41
deltree 3-42
dir 3-43
disable 3-45
disk 3-46
dnslookup 3-51
enable 3-52
exit 3-53
find-pattern 3-54
help 3-56
install 3-57
less 3-58
lls 3-59
ls 3-60
mkdir 3-61
mkfile 3-62

ntpdate 3-63
ping 3-64
pwd 3-65
reload 3-66
rename 3-67
restore 3-68
rmdir 3-72
scp 3-73
script 3-75
setup 3-76
show aaa accounting 3-77
show adapter 3-79
show alarms 3-80
show arp 3-83
show authentication 3-84
show auto-register 3-86
show banner 3-87
show bypass 3-88
show cdp 3-89
show cifs 3-95
show clock 3-96
show cms 3-98
show cms secure-store 3-101
show debugging 3-102
show device-mode 3-103
show disks 3-105
show egress-methods 3-112
show flash 3-113
show hardware 3-114
show hosts 3-117
show inetd 3-118
show interface 3-119
show inventory 3-124
show ip access-list 3-125
show ip routes 3-127
show kerberos 3-128
show key-manager 3-129
show logging 3-130
show memory 3-131

show ntp 3-132
 show policy-engine application 3-134
 show policy-engine status 3-138
 show print-services 3-139
 show processes 3-141
 show radius-server 3-143
 show running-config 3-144
 show services 3-145
 show smb-conf 3-146
 show snmp 3-148
 show ssh 3-153
 show standby 3-154
 show startup-config 3-155
 show statistics authentication 3-156
 show statistics cifs 3-157
 show statistics content-distribution-network 3-158
 show statistics dre 3-159
 show statistics dre connection 3-161
 show statistics dre peer 3-163
 show statistics epm 3-165
 show statistics flow 3-166
 show statistics icmp 3-169
 show statistics ip 3-171
 show statistics key-manager 3-173
 show statistics netstat 3-174
 show statistics radius 3-175
 show statistics services 3-176
 show statistics snmp 3-177
 show statistics tacacs 3-179
 show statistics tcp 3-180
 show statistics tfo 3-184
 show statistics udp 3-186
 show statistics wccp 3-187
 show statistics windows-domain 3-192
 show sysfs 3-193
 show tacacs 3-194
 show tcp 3-195
 show tech-support 3-197
 show telnet 3-200
 show tfo accelerators 3-201
 show tfo auto-discovery 3-202
 show tfo bufpool 3-204
 show tfo connection 3-205
 show tfo egress connection 3-206
 show tfo filtering 3-210
 show tfo status 3-212

show tfo synq 3-213
 show transaction-logging 3-214
 show user 3-215
 show users administrative 3-216
 show version 3-218
 show wccp 3-219
 show windows-domain 3-225
 shutdown 3-226
 snmp trigger 3-229
 ssh 3-232
 tcpdump 3-233
 telnet 3-234
 terminal 3-235
 tethereal 3-236
 traceroute 3-238
 transaction-log 3-239
 type 3-240
 type-tail 3-241
 undebug 3-243
 wafs 3-248
 whoami 3-250
 windows-domain 3-251
 write 3-254

インターフェイス コンフィギュレーション モード コマンド

(config-if) autosense 3-427
 (config-if) bandwidth 3-428
 (config-if) cdp 3-430
 (config-if) exit 3-431
 (config-if) failover timeout 3-432
 (config-if) full-duplex 3-433
 (config-if) half-duplex 3-434
 (config-if) inline 3-435
 (config-if) ip 3-437
 (config-if) ip access-group 3-439
 (config-if) mtu 3-440
 (config-if) no 3-441
 (config-if) shutdown 3-443
 (config-if) standby 3-444

拡張 ACL コンフィギュレーション モード コマンド

(config-ext-nacl) delete 3-464
 (config-ext-nacl) deny 3-465
 (config-ext-nacl) exit 3-470
 (config-ext-nacl) list 3-471
 (config-ext-nacl) move 3-472
 (config-ext-nacl) permit 3-473

コンフィギュレーション モード コマンド

(config) aaa accounting 3-256
 (config) adapter 3-260
 (config) alarm overload-detect 3-261
 (config) asset 3-263
 (config) authentication 3-264
 (config) auto-register 3-271
 (config) banner 3-273
 (config) bypass 3-276
 (config) cdp 3-278
 (config) central-manager 3-279
 (config) clock 3-283
 (config) cms 3-287
 (config) device mode 3-289
 (config) disk disk-name 3-291
 (config) disk encrypt 3-293
 (config) disk error-handling 3-295
 (config) disk logical shutdown 3-297
 (config) egress-method 3-298
 (config) end 3-300
 (config) exec-timeout 3-301
 (config) exit 3-302
 (config) external-ip 3-303
 (config) flow monitor 3-305
 (config) help 3-306
 (config) hostname 3-307
 (config) inetd 3-308
 (config) interface 3-309
 (config) ip 3-316
 (config) ip access-list 3-319
 (config) kerberos 3-322
 (config) kernel 3-324
 (config) line 3-325
 (config) logging 3-326
 (config) no 3-330
 (config) ntp 3-332

(config) policy-engine application classifier 3-334
 (config) policy-engine application map adaptor EPM 3-336
 (config) policy-engine application map adaptor WAFS transport 3-338
 (config) policy-engine application map basic delete 3-340
 (config) policy-engine application map basic disable 3-341
 (config) policy-engine application map basic insert 3-342
 (config) policy-engine application map basic list 3-343
 (config) policy-engine application map basic move 3-344
 (config) policy-engine application map basic name 3-345
 (config) policy-engine application map other optimize DRE 3-347
 (config) policy-engine application map other optimize full 3-348
 (config) policy-engine application map other pass-through 3-349
 (config) policy-engine application name 3-350
 (config) policy-engine config 3-351
 (config) port-channel 3-352
 (config) primary-interface 3-353
 (config) print-services 3-355
 (config) radius-server 3-358
 (config) smb-conf 3-360
 (config) snmp-server access-list 3-364
 (config) snmp-server community 3-365
 (config) snmp-server contact 3-367
 (config) snmp-server enable traps 3-368
 (config) snmp-server group 3-371
 (config) snmp-server host 3-373
 (config) snmp-server location 3-375
 (config) snmp-server mib 3-376
 (config) snmp-server notify inform 3-378
 (config) snmp-server user 3-381
 (config) snmp-server view 3-383
 (config) sshd 3-384
 (config) ssh-key-generate 3-387
 (config) tacacs 3-388
 (config) tcp 3-391
 (config) telnet enable 3-394
 (config) tfo auto-discovery 3-395
 (config) tfo optimize 3-396

(config) tfo tcp keepalive 3-397
(config) tfo tcp optimized-mss 3-398
(config) tfo tcp optimized-receive-buffer 3-399
(config) tfo tcp optimized-send-buffer 3-400
(config) tfo tcp original-mss 3-401
(config) tfo tcp original-receive-buffer 3-402
(config) tfo tcp original-send-buffer 3-403
(config) transaction-logs 3-404
(config) username 3-411
(config) wccp access-list 3-414
(config) wccp flow-redirect 3-417
(config) wccp router-list 3-418
(config) wccp shutdown 3-419
(config) wccp tcp-promiscuous 3-421
(config) wccp version 3-423
(config) windows-domain 3-424

**標準 ACL コンフィギュレーション モード
コマンド**

(config) ip access-list standard 3-450
(config-std-nacl) delete 3-453
(config-std-nacl) deny 3-454
(config-std-nacl) exit 3-456
(config-std-nacl) list 3-457
(config-std-nacl) move 3-458
(config-std-nacl) permit 3-459