

# WPS-instellingen configureren op RV110W

## Doel

Wi-Fi Protected Setup (WPS) is een snelle manier om een beveiligd draadloos netwerk op te zetten. Het doel van dit artikel is uit te leggen hoe u WPS-instellingen op de RV110W kunt configureren.

## Toepasselijke apparaten

- RV110W

## Stappen van orde

Stap 1. Gebruik het configuratiehulpprogramma van de router om **draadloos > WPS** te kiezen.

**WPS**

Wi-Fi Protected Setup™

SSID: ciscosb1

WPS:  Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.

OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here  and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

---

Wi-Fi Protected Setup Status:	Unconfigured
Network Name (SSID):	ciscosb1
Security:	Disabled
Session Status:	N/A

Stap 2. Kies in het vervolgkeuzemenu *SSID* een draadloos netwerk om WPS op toe te passen.

## WPS

### Wi-Fi Protected Setup™

SSID:

WPS:  Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here  and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status:	Unconfigured
Network Name (SSID):	ciscosb1
Security:	Disabled
Session Status:	N/A

Stap 3. Rechts van WPS controleert u het selectieteken **Inschakelen** om de WPS-instellingen in te schakelen.

Stap 4. Voer een van de drie opties uit om een clientapparaat aan het netwerk toe te voegen.

## WPS



Configuration settings have been saved successfully

### Wi-Fi Protected Setup™

SSID:

WPS:  Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here  and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

- Optie 1. Als de client een WPS-knop heeft, drukt u op de knop. Klik op het pictogram WPS.

## WPS



Configuration settings have been saved successfully

### Wi-Fi Protected Setup™

SSID:

WPS:  Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here  and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

- Optie 2. Als het clientapparaat een WPS PIN-nummer heeft, voert u in het veld optie 2 het PIN-nummer in. Klik op **Registreren**.
- Optie 3. De klant vraagt om het nummer van de PIN van de router. De client voert het nummer 61443143 in op het clientapparaat.