

Problemen oplossen bij MRA-telefonie en B2B-bellen door Sectigo CA-certificaatverloop op 30 mei

Inhoud

[Inleiding](#)

[Voorwaarden](#)

[Vereisten](#)

[Gebruikte componenten](#)

[Probleem](#)

[Symptomen](#)

[Referentieloggen-nippels](#)

[Oplossing](#)

[Gerelateerde informatie](#)

[Problemen oplossen Video over afwerking snelheidscertificaat](#)

Inleiding

In dit document worden de oplossingen beschreven voor MRA (Mobile Remote Access)-telefonie en B2B (Business-to-Business)-telefonie vanwege het af te sluiten Sectigo CA-certificaat op 30 mei.

Voorwaarden

Vereisten

Er zijn geen specifieke vereisten van toepassing op dit document.

Gebruikte componenten

De informatie in dit document is gebaseerd op de apparaten in een specifieke laboratoriumomgeving. Alle apparaten die in dit document worden beschreven, hadden een opgeschoonde (standaard)configuratie. Als uw netwerk live is, moet u de potentiële impact van elke opdracht begrijpen.

Probleem

Op 30 mei liep het certificatenpakket van Sectigo af, wat leidde tot stroomonderbrekingen bij de plaatsing van Expressway/VCS. U kunt een MRA-aanmelding en een B2B-bellen ervaren als gevolg van een defect aan de certificaat/TLS-onderhandeling. De meeste van deze problemen zijn veroorzaakt door het verstrijken van het Sectigo-certificaat. Hetzelfde is vastgelegd op het advies dat is uitgebracht door de Sectigo-link

https://support.sectigo.com/Com_KnowledgeDetailPage?Id=kA01N000000rgSZ

Symptomen

De vervaldatum van het certificaat zal leiden tot de volgende symptomen

- MRA Login, B2B-oproepen die niet werken
- Clustervorming
- Traversal Zone (met storingen in het TLS)

- Sectie CA gebruikt voor het ondertekenen van VCS/snelwegcertificaat

Referentieloggen-nippels

```
2020-05-31T00:02:55.897-04:00 expe tvcs: Event="Inbound TLS Negotiation Error" Service="SIP"
Src-ip="10.106.102.215" Src-port="11239" Dst-ip="10.106.102.222" Dst-port="5061" Detail="No SSL
error available, probably remote disconnect" Protocol="TLS" Level="1" UTCTime="2020-05-31
04:02:55,897"
```

```
2020-05-31T00:02:55.897-04:00 expe tvcs: UTCTime="2020-05-31 04:02:55,896"
Module="developer.ssl" Level="ERROR" CodeLocation="ppcmains/ssl/ttssl/ttssl_openssl.cpp(68)"
Method="::TTSSLErrorOutput" Thread="0x7f8dafa0700": TTSSL_continueHandshake: Failed to
establish SSL connection iResult="0" error="5" bServer="true"
localAddress="[ 'IPv4' 'TCP' '10.106.102.222:5061' ]"
remoteAddress="[ 'IPv4' 'TCP' '10.106.102.215:11239' ]"
```

```
2020-05-31T00:02:55.897-04:00 expe tvcs: UTCTime="2020-05-31 04:02:55,897" Module="network.tcp"
Level="DEBUG": Src-ip="10.106.102.215" Src-port="11239" Dst-ip="10.106.102.222" Dst-port="5061"
Detail="TCP Connection Closed" Reason="Got EOF on socket"
```

Oplossing

Stap 1. U moet het certificaat uit de volgende koppelingen downloaden en vervangen door de verlopen certificaten van het Vertrouwen op alle knooppunten.

<https://censys.io/certificates/52f0e1c4e58ec629291b60317f074671b85d7ea80d5b07273463534b32b40234/pem>

<https://censys.io/certificates/e793c9b02fd8aa13e21c31228accb08119643b749c898964b1746d46c3d4cbd2/pem>

Opmerking: Wanneer het document hierboven wordt geschreven, wordt de herleiding per sectoradvies gekoppeld.

Stap 2. Upload het gedownload certificaat op expressweg door te navigeren naar **Onderhoud > Beveiliging > Vertrouwd CA-certificaat**

Status System Configuration Users Maintenance

Overview

System mode

Mobile and Remote Access Select

Selected modes Return

System information

[System name](#)

Up time 12 day

[Software version](#) X12.5.0

[IPv4 address](#) 10.106.0.1

[Options](#) 1 Rich

Resource usage (last updated: 16:31:54 IST)

[Registered calls](#)

Current video 0

Current audio (SIP) 0

Peak video 0

Peak audio (SIP) 0

Upgrade

Logging

Option keys

Tools

Security

Backup and restore

Diagnostics

Maintenance mode

Language

Serviceability

Restart options

Trusted CA certificate

Server certificate

CRL management

Client certificate testing

Certificate-based authentication configuration

Secure traversal test

Ciphers

SSH configuration

Trusted CA certificate You are here: Maintenance > Security > Trusted CA certificate

Type	Issuer	Subject	Expiration date	Validity	View
<input type="checkbox"/> Certificate	O=Temporary CA 51fea799-1577-49f7-8cc4-c0a76a0b83d8, OU=Temporary CA 51fea799-1577-49f7-8cc4-c0a76a0b83d8, CN=Temporary CA 51fea799-1577-49f7-8cc4-c0a76a0b83d8	Matches Issuer	May 17 2025	Valid	View (decoded)
<input type="checkbox"/> Certificate	CN=TP-WINTP-CA	Matches Issuer	Feb 02 2024	Valid	View (decoded)
<input type="checkbox"/> Certificate	O=The USERTRUST Network, CN=USERTrust RSA Certification Authority	O=Internet2, CN=InCommon RSA Server CA	Oct 06 2024	Valid	View (decoded)
<input type="checkbox"/> Certificate	O=The USERTRUST Network, CN=USERTrust RSA Certification Authority	Matches Issuer	Jan 19 2038	Valid	View (decoded)

Show all (decoded) Show all (PEM file) Delete Select all Unselect all

Upload

Select the file containing trusted CA certificates rootaddrsa.cer

Status System Configuration Users **Maintenance** ? Help Logout

Trusted CA certificate You are here: Maintenance > Security > Trusted CA certificate

Type	Issuer	Subject	Expiration date	Validity	View
<input type="checkbox"/> Certificate	O=Temporary CA 51fea799-1577-49f7-8cc4-c0a76a0b83d8, OU=Temporary CA 51fea799-1577-49f7-8cc4-c0a76a0b83d8, CN=Temporary CA 51fea799-1577-49f7-8cc4-c0a76a0b83d8	Matches Issuer	May 17 2025	Valid	View (decoded)
<input type="checkbox"/> Certificate	CN=TP-WINTP-CA	Matches Issuer	Feb 02 2024	Valid	View (decoded)
<input type="checkbox"/> Certificate	O=The USERTRUST Network, CN=USERTrust RSA Certification Authority	O=Internet2, CN=InCommon RSA Server CA	Oct 06 2024	Valid	View (decoded)
<input type="checkbox"/> Certificate	O=The USERTRUST Network, CN=USERTrust RSA Certification Authority	Matches Issuer	Jan 19 2038	Valid	View (decoded)

Show all (decoded) Show all (PEM file) Delete Select all Unselect all

Stap 3. Verwijdert het verlopen Security/AddTrust CA-certificaat op Expressways certificaat trust Store door te navigeren naar **Onderhoud > Security > Trusted CA-certificaat**.

<input checked="" type="checkbox"/>	Certificate	O=AddTrust AB, OU=AddTrust External TTP Network, CN=AddTrust External CA Root	Matches Issuer	May 30 2020	Expired
<input checked="" type="checkbox"/>	Certificate	O=AddTrust AB, OU=AddTrust External TTP Network, CN=AddTrust External CA Root	O=The USERTRUST Network, CN=USERTrust RSA Certification Authority	May 30 2020	Expired

Select the file containing trusted CA certificates No file selected.

Step 4. Start vanaf expressie start door naar **Onderhoud** te navigeren > **Herstart opties** > **Herstart**

Status	System	Configuration	Users	Maintenance
Trusted CA certificate				<ul style="list-style-type: none"> Upgrade Logging Option keys Tools Security Backup and restore Diagnostics Maintenance mode Language Serviceability Restart options
<input type="checkbox"/>	Type	Issuer		
<input type="checkbox"/>	Certificate	O=Temporary CA 51fea799-f577-49f7-8c		
<input type="checkbox"/>	Certificate	CN=TP-WINTP-CA		
<input type="checkbox"/>	Certificate	O=The USERTRUST Network, CN=USE		
<input type="checkbox"/>	Certificate	O=The USERTRUST Network, CN=USE		
<input type="button" value="Show all (decoded)"/> <input type="button" value="Show all (PEM file)"/> <input type="button" value="Delete"/> <input type="button" value="Select all"/>				
<input type="button" value="Upload"/>				
Select the file containing trusted CA certificates				

Restart options

System status

Cluster status	This system is not part of a cluster.
Call status	There are 0 calls active
Registration status	There are 0 registrations active
Provisioned session status	There are 0 provisioned sessions active

Information

A restart is typically required in order for some configuration changes to take effect, or when the system is being added to, or removed from, a cluster.

A reboot is typically required when you want to apply new versions of software, or when you are trying to resolve unexpected system errors.

Note that a restart shuts down and restarts only the application software, whereas a reboot shuts down and restarts the application software, operating system and hardware.

A shutdown is typically required if you want to unplug your unit, prior to maintenance or relocation for example.

Restart

Reboot

Shutdown

Gerelateerde informatie

[Problemen oplossen Video over afwerking snelheidscertificaat](#)