

Defina as configurações WPS no RV110W

Objetivo


O Wi-Fi Protected Setup (WPS) é uma forma rápida de estabelecer uma rede sem fio segura. O objetivo deste artigo é explicar como configurar as configurações WPS no RV110W.

Dispositivos aplicáveis

RV110W

Etapas do procedimento

Etapa 1. Use o utilitário de configuração do Roteador para escolher **Wireless > WPS**.

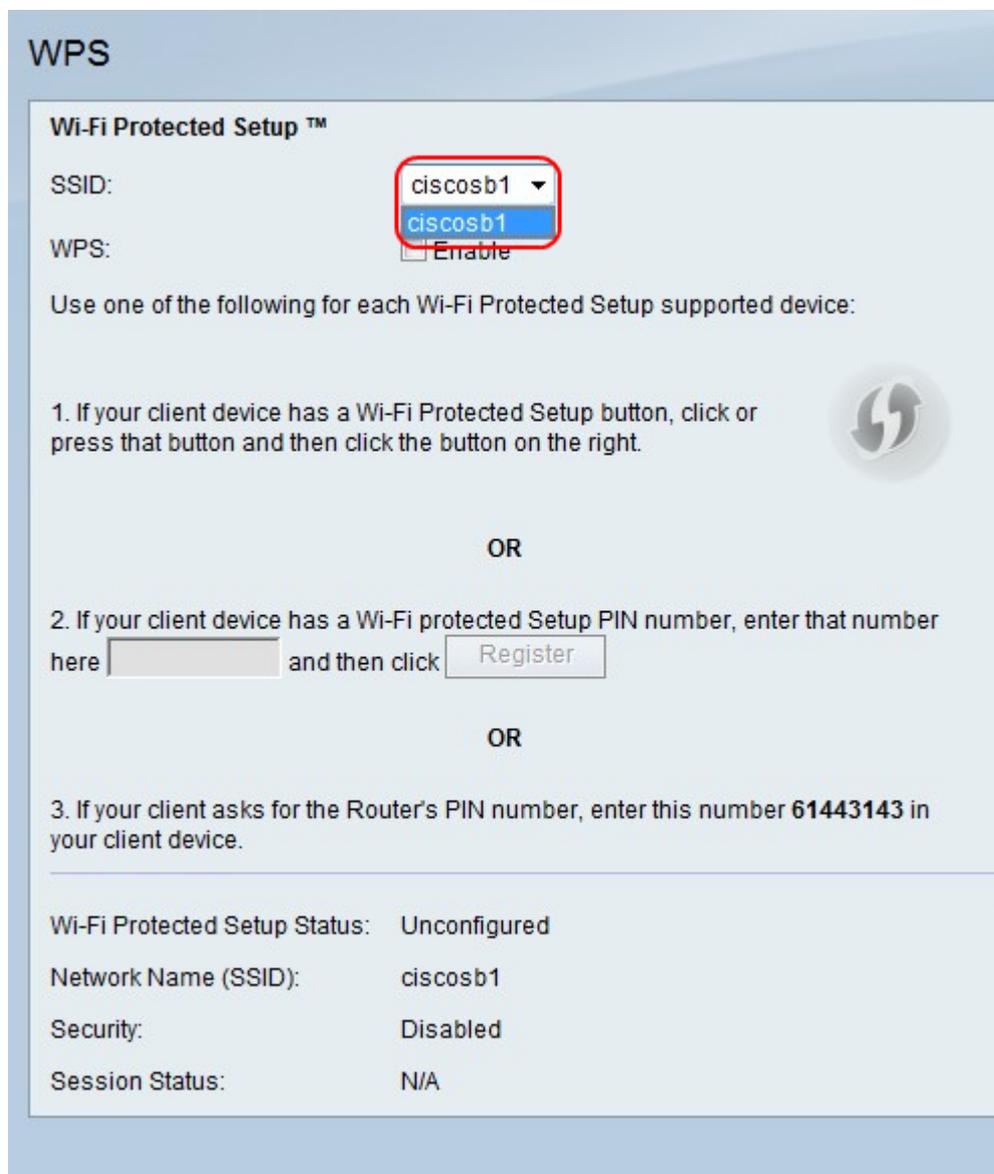

The screenshot shows the WPS configuration page. At the top, it says "WPS" and "Wi-Fi Protected Setup™". There are two fields: "SSID:" with a dropdown menu showing "ciscosb1" and "WPS:" with an "Enable" checkbox. A red box highlights the SSID dropdown. Below these fields, there is a section titled "Use one of the following for each Wi-Fi Protected Setup supported device:". It lists three options: 1. Pressing a button on the client device and clicking a button on the right (with a circular arrow icon). 2. Entering a PIN number in a text box and clicking a "Register" button. 3. Entering the router's PIN number "61443143" in the client device. At the bottom, there is a summary table:

Wi-Fi Protected Setup Status:	Unconfigured
Network Name (SSID):	ciscosb1
Security:	Disabled
Session Status:	N/A

Etapa 2. No menu suspenso *SSID*, escolha uma rede sem fio à qual aplicar o WPS.

WPS

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

Etapa 3. À direita de WPS, marque a caixa de seleção **Enable (Habilitar)** para habilitar as configurações de WPS.

Etapa 4. Execute uma das três opções para adicionar um dispositivo cliente à rede.

WPS



Configuration settings have been saved successfully

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

- Opção 1. Se o cliente tiver um botão WPS, pressione o botão. Clique no ícone WPS.

WPS



Configuration settings have been saved successfully

Wi-Fi Protected Setup™

SSID:

WPS: Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

•Opção 2. Se o dispositivo cliente tiver um número PIN WPS, insira o número PIN no campo da opção 2. Clique em **Registrar**.

•Opção 3. O cliente solicita o número PIN do Roteador. O cliente insere o número 61443143 no dispositivo do cliente.