Configurar o recurso de autoprovisionamento no CUCM (baseado em URL)

Contents

Introduction Prerequisites Requirements Componentes Utilizados O que é o provisionamento automático? Configurar Serviços associados ao provisionamento automático Experiência do usuário final no telefone Troubleshoot Logs a serem coletados Erros comuns observados nos registros UDS e suas soluções: Defeitos conhecidos Informações Relacionadas

Introduction

Este documento descreve como configurar o recurso de autoprovisionamento no Cisco Unified Communications Manager (CUCM) (baseado em URL).

Prerequisites

Requirements

A Cisco recomenda que você tenha conhecimento destes tópicos:

- Cisco Unified Communication Manager.
- Voice over Internet Protocol (VoIP)
- Processo de registro de telefone.

Componentes Utilizados

As informações neste documento são baseadas no Cisco Unified Communications Manager 10.5

The information in this document was created from the devices in a specific lab environment. All of the devices used in this document started with a cleared (default) configuration. If your network is live, make sure that you understand the potential impact of any command.

O que é o provisionamento automático?

O provisionamento automático é um recurso introduzido na versão 10.x do Cisco Unified Communications Manager (CUCM). Ele fornece um tipo de funcionalidade **plug and play** que simplifica o processo de implantação do telefone. Usando o **registro automático**, algumas configurações de modelo e perfil, juntamente com um serviço IVR, os administradores do CUCM têm a capacidade de implantar telefones com configuração inicial mínima.

Note: O provisionamento automático funciona apenas para os telefones registrados automaticamente.

Configurar

1. Criar um modelo de dispositivo universal (UDT)

Etapa 1. Navegue até Gerenciamento de usuários > Usuário do telefone adicionar > Modelo de dispositivo universal e Adicionar novo modelo.



cisco	Cisco Unified CM Administration For Cisco Unified Communications Solutions							
Add Nam 👻	Call Routing - M	/ledia Resources 🔻	Advanced Features -	Device 🔻	Application -	User Management 🔻	Bulk Administration 👻	Help 🔻
Find and List Universal Device Templates								
🕂 Add N	ew Select All	Clear All	Delete Selected					

Etapa 2. Aplique a configuração que você espera que os telefones usem após o registro automático, ao novo UDT (Device pool/Sip Profile/Device security profile/Phone Button Template)

System - Call Routing - I	Media Resources 👻 Advanced Features 👻 Device 👻 Application 👻 User Management 👻 Bulk Administration 👻 Help 💌	,						
Universal Device Template Configuration								
🔚 Save 💢 Delete Expa	🔚 Save 🗙 Delete Expand All 🕂 Add New							
 Template Information 								
Name * Auto-registration Template								
 Required and Frequently Ent 	ered Settings							
Device Description	#FirstName# #LastName# (#Pro							
Device Pool *	Default view Details							
Device Security Profile *	Universal Device Template - Moc +							
SIP Profile *	Standard SIP Profile 👻							
Phone Button Template *	Universal Device Template Butto -							

Etapa 3. Adicione a URL de autoprovisionamento ao CUCM, como mostrado na imagem.

System Call Routing Me	dia Resources	✓ Advanced Features ✓	Device - App	lication - User	Management 👻	Bulk Administration 👻	Help 👻	
Universal Device Template	Universal Device Template Configuration							
🔚 Save 🗙 Delete Expand	🚽 Save 💥 Delete Expand All 🕂 Add New							
 Device Settings 								
Device Routing								
Phone Settings								
 Protocol Settings 								
Phone Buttons Configuration								
► IP Phone Services Subscription								
 Security Settings 								
 Service Configuration Settings 								
Information D	Default 🔻							
Directory D	Default 🔻							
Messages D	Default 🔻							
Services D	Default 🔻							
Authentication Server D	Default 🔻							
Proxy Server D	Default 🔻				_			
Idle O	Override 🔻	https://10.106.114.151/cu	cm-uds/private/se	elt				
Idle Timer (seconds)	Override 🔻	1			-			
Secure Authentication URL	Default 🔻							
Secure Directory URL	Default 🔻							
Secure Idle URL	Default 🔻							
Secure Information URL	Default 🔻							
Secure Messages URL	Default 🔻							
Secure Services URL	Default 🔻							
Services Provisioning *	[Default		*				

Note: O formato de URL de autoprovisionamento é https://<callManager>/cucm-uds/private/selfProvision

2. Criar Modelo de Linha Universal (ULT)

Etapa 1. Navegue até Gerenciamento de usuário >> Adicionar usuário/telefone >> Modelo de linha de usuário.

cisco	Cisco UI For Cisco Un	ified CM Ad	ministration							
System Call Routing Media Resources Advanced Features Device Application User Management Bulk Administration Help				Help 👻						
							Application User			
							End User			
Cisco Unified CM Administration					User/Phone Add	•		Page Layout Preference		
							SIP Realm			Universal Device Template
System version: 10.5.2.13901-2			User Settings		•		Universal Line Template			
VMware	e Installation:	2 vCPU Intel(R)	Xeon(R) Platinum	8176 CPU	@ 2.10GHz,		Self-Provisioning			Feature Group Template

Etapa 2. Adicione a partição de rota e o CSS esperados no telefone após o registro automático.

System - Call Routing - Media Resour	ces - Advanced Features -	Device - Applicati	n 👻 User Management 👻	Bulk Administration 👻	Help 👻		
Universal Line Template Configura	tion						
🔚 Save 🗙 Delete Expand A	II 🕂 Add New						
 Template Information 							
Name * Sample Line Template with TF Urgent Priority							
 Required and Frequentl 	y Entered Settings						
Line Description:	#FirstName# #LastNam	ne# (# 🥖					
Route Partition:	PT-Intra	-					
Voice Mail Profile:		-					
Calling Search Space:	CSS-Inter	-					
Alerting Name:	#FirstName# #LastNam	ne# 🦯					
External Call Control Profile:		-					

Etapa 3. Este modelo de dispositivo universal e o modelo de linha universal devem estar vinculados ao registro automático para que os telefones possam usar a configuração quando forem registrados automaticamente.

3. Adicione os Modelos ao nó CUCM para Autorregistration Configuration e navegue para System
 > Cisco Unified CM, como mostrado na imagem.

Cisco Unified CM Adm For Cisco Unified Communications	linistration Solutions
System - Call Routing - Media Resources - A	dvanced Features Device Application User Management Bulk Administration Help
Server	
Cisco Unified CM	
Cisco Unified CM Group	nistration
System Call Routing Media Resources	Advanced Features Device Application User Management Bulk Administration Help
Cisco Unified CM Configuration	
📄 Save 🎦 Reset 🥖 Apply Config	
r Status	
i Status: Ready	
┌ Cisco Unified Communications Manage	r Information
Cisco Unified Communications Manager: C	M_UCM-PUB10 (used by 74 devices)
- Server Information	
	1
Cisco Unified Communications Manager Se	rver* 10.106.114.151
Cisco Unified Communications Manager Na	Ime* CM UCM-PUB10
Description	10 105 114 151
Location Bandwidth Manager Group	
-Auto-registration Information	
Universal Device Template* Auto-registr	ation Template
Universal Line Template* Sample Line	Template with TAG usage examples 📀
Starting Directory Number* 1000	

4. Adicione um novo perfil de usuário para autoprovisionamento.

Etapa 1. Navegue até User Management > User Settings > User Profile, conforme mostrado na imagem.

diala cisco	Cisco Unified CM Administration For Cisco Unified Communications Solutions					
System 👻	Call Routing Media Resources Advanced Features Device Application	Use	er Management 👻 Bulk Administr	ation 🖣	• Help •	
			Application User			
			End User	- E		
Cisc	o Unified CM Administration		User/Phone Add			
CISC			SIP Realm			
System	version: 10.5.2.13901-2		User Settings	•	Credential Policy Default	
VMware	e Installation: 2 vCPU Intel(R) Xeon(R) Platinum 8176 CPU @ 2.10GHz,		Self-Provisioning		Credential Policy	
WARNI	NG: DNS unreachable		Assign Presence Users		Role	
Last Su	ccessful Backup: 514 day(s) ago				Access Control Group	
					Application User CAPF Profile	
lser adminis	strator last logged in to this cluster on Friday, February 15, 2019 8:57:30 PM CST, to	nod	e 10.106.114.151, from 10.142	.18	End User CAPF Profile	
apyright © 1999 - 2015 Cisco Systems, Inc.					UC Service	
Il rights reserved.					Service Profile	
his product contains cryptographic features and is subject to United States and local country laws governing import, export, transfer and use. isers are responsible for compliance with U.S. and local country laws. By using this product you agree to comply with applicable laws and regul					User Profile	oes not imply third-party authority .S. and local laws, return this prod

Etapa 2. Adicione o **Modelo de dispositivo do usuário**, **Modelo de linha do usuário** e marque a **caixa de seleção Permitir que o usuário final provisione seu próprio telefone**.

System Call Routing Media Resources Advanced Features Device Application User Management Bulk Administration Help
User Profile Configuration
🔚 Save 🗶 Delete 🕂 Add New
┌ Status ────
(i) Status: Ready
User Profile
Name* selfpro
Description
Make this the default User Profile for the system
- Universal Device Template
Desk Phones Auto-registration Template 🗘 View Details
Mobile and Desktop Devices Auto-registration Template
Remote Destination/Device Profiles Auto-registration Template
-Universal Line Template
Universal Line Template Sample Line Template with TAG usage examples 📀 <u>View Details</u>
- Self-Provisioning
Allow End Lines to Broulding their own phonon
Allow End User to Provision their own phones
Linit Provisioning once and oser has this many phones 10

Note: Essas configurações são aplicadas quando os usuários tentam provisionar automaticamente os dispositivos com seus próprios ramais.

Note: Você também pode definir um limite máximo para usuários para o número de dispositivos após os quais o provisionamento automático não funcionará para usuários. Por exemplo: se o usuário tiver 9 dispositivos atribuídos já Como o limite máximo na captura de tela Acima está definido como 10, o usuário poderá autoprovisionar apenas um dispositivo.

Note: Se a caixa de seleção **Permitir que o usuário final provisione seu próprio telefone** estiver desmarcada. O provisionamento automático não funcionaria para os usuários.

5. Crie um Modelo de Grupo de Recursos e Atribua o Perfil de Usuário. Navegue até User Management > User/Phone Add > Feature Group Template e clique em Add New.

CISCO For Cisco Unified	d CM Administration					
System 👻 Call Routing 👻 Media	a Resources - Advanced Features - Device	✓ Application ✓ U	ser Management 👻	Bulk Administration	✓ Help ✓	
			Application User			
			End User			_
Cisco Unified C	M Administration		User/Phone Add	•	Page Layout Preference	
System version: 10.5.2.13	901-2		SIP Realm		Universal Line Template	
VMware Installation: 2 vC	PU Intel(R) Xeon(R) Platinum 8176 Cl	PU @ 2.10GHz,	Self-Provisioning		Feature Group Template	
WARNING: DNS unreacha			Assign Presence	Users	Quick User/Phone Add	-
Last Successful Backup: 5	14 day(s) ago	_	-		_	_
System - Call	Routing Media Resour	ces 👻 Adv	vanced Fea	tures ▼ I	Device - Applicatio	on 🔻
Feature Group	Template Configurat	lion				
🔲 Save 🗶 🛛	Delete ᆛ Add New					
	U					
Feature Group	Template					
Name * se	lf_fg					
_						
Description						
Features						
Mome Cluster	r					
Enable User f	for Unified CM IM and Pre	sence (Confi	igure IM ar	nd Presence	e in the associated U	C Servi
Include meet	ing information in Presence	ce(Requires	Exchange	Presence G	ateway to be configu	ired on
	J		5		,	
Services Profile	Use System Default	*	View Deta	ile		
			VIEW Deta	115		
User Profile	selfpro	*	View Deta	ils		
Allow Control	of Device from CTI					
Enable Exten	sion Mobility Cross Cluster	-				
	ty					
Enable Mobile	e Voice Access					
					7	
Maximum Wait T	ime for Desk Pickup *	0000				

6. Crie um usuário a partir da página **de adição rápida de usuário/telefone** e Adicione o **Modelo de grupo de recursos**.

Etapa 1. Navegue até Gerenciamento de usuários > Adicionar telefone do usuário > Usuário rápido/Adicionar telefone, como mostrado na imagem.



Etapa 2. Adicione os Usuários finais CCM padrão na associação ao Grupo de controle de acesso.

System - Call Routing	r Media Resources 👻 Advanced Features 👻 Device 👻 Application 👻 User Management 👻 Bulk Administration 👻 Help 👻
Quick User/Phone Ad	d
🔚 Save	
User Information	
First Name	akash
Middle Name	
Last Name *	sethi
User ID *	aksethi
Feature Group Template	self_fg View Details
Access Control Group	Membership
User is a member of:	÷ +
Access Control (Group Membership
User is a member	of: Standard CCM End Users 🔽 🕂 🗕
L	

Etapa 3. Adicione um ramal no campo do ramal ao Usuário, clique em + Ícone em Ação para ativar o Campo.

Access Control Group Membe	rship			
User is a member of:	CCM End Users	▼ ╬ -		
Credentials				
Use default credential				
Password				
Confirm Password				
PIN				
Confirm PIN				
				,
Extensions				
Order Extension		Line Primary URI/Partition		Acti
	т New		/	+

Etapa 3. Se um novo ramal for criado, clique em **Novo** e adicione um novo DN. (Como mostrado na opção de imagem 1). Se o ramal já existir no CUCM e for atribuído ao usuário, escolha no menu suspenso mostrado na opção 2 da imagem aqui.

Access Control Group Mem	bership		
User is a member of: Stand	lard CCM End Users	▼ ‡ -	
Credentials			
✓ Use default credential			
Password			
Confirm Password			
PIN			
Confirm PIN			
Extensions			
Order Extension 2	1	Line Primary URI/Partition	Action
	▼ New		-

Note: Quando o usuário é criado, ele assume a linha principal como ID de usuário de autoatendimento por padrão.

7. Verifique se o usuário final recebeu o **ramal principal**, a **ID de usuário self-service, o perfil do usuário** e a **função de usuário final CCM padrão**. Navegue até **User Management > End User** e Access the recém-criado User, como mostrado na imagem.

CISCO Unified CM Admin For Cisco Unified Communications Sol	utions
System - Call Routing - Media Resources - Adva	nced Features • Device • Application • User Management • Bulk Administration • Help •
	Application User
Cieco Unified CM Admini	
System Call Routing Addia Resources Addia	dvanced Features Device Application User Management Bulk Administration Help
End User Configuration	
Save 🗙 Delete 🕂 Add New	
-User Information	
User Status	Enabled Local User
User ID*	aksethi
Password	Edit Credential
Confirm Password	
Self-Service User ID	1004
PIN	Edit Credential
Confirm PIN	••••••
Last name*	sethi
Middle name	
First name	akash
Title	
System Call Routing Media Resources A	dvanced Features Device Application User Management Bulk Administration Help
End User Configuration	
🔚 Save 🗙 Delete 🕂 Add New	
User Locale	< None >
Associated PC	
Digest Credentials	
Confirm Digest Credentials	
User Profile	selfpro View Details
Name Dialing	sethiakash
Number of Digits needed for the Unique AA Name	e 2

System Call Routing Media Resources Advanced Features Device Application User Management Bulk Administration Help
End User Configuration
Save 🗶 Delete 🕂 Add New
Enable Extension Mobility Cross Cluster
□ Directory Number Associations
IPCC Extension < None >

Note: O usuário deve ter um ramal principal e uma ID de usuário de autoatendimento, a função **Usuários finais padrão do CCM**, para que o provisionamento automático funcione.

8. O serviço de autoprovisionamento pode ser configurado no nível do sistema para usar o modo seguro e uma senha pode ser definida.

Este recurso está definido como **Non Authentication Required** Mode, que **não** exige nenhum PIN para usar o Self Provisioning. Navegue até **User Management > Self-Provisioning**

Self-Provisioning
Save
_ Status-
Status: Ready
CAuthentication Mode
 Require Authentication In this mode, users may use their password or PIN to authenticate and provision devices based on the permissions in their User Profile. Additionally, administrators may authenticate on behal Allow authentication for users only(via Password/PIN) Allow authentication for users(via Password/PIN) and Administrators(via Authentication Code)
Authentication Code
No Authentication Required
In this mode, authentication is disabled during device self-provisioning. The administrator or end user can enter a user ID or self-provisioning ID into an endpoint and the endpoint will associ

Note: Mesmo que a Etapa 8 não esteja configurada, o autoprovisionamento ainda funcionaria, pois escolhe o valor padrão em Sem necessidade de autenticação.

Serviços associados ao provisionamento automático

Cisco Call Manager

Este serviço está associado ao registro do telefone e deve ser ativado no nó para o qual o registro é tentado.

• Serviços de dados de usuário da Cisco

Este Serviço está ativado por Predefinição e não pode ser desativado.

Este Serviço pode ser encontrado em **serviços CM** na página **Serviços de Rede** no **Cisco Unified Serviceability.**

Experiência do usuário final no telefone

1. Após um tempo limite de 1 segundo, o telefone acessaria a URL IDLE, que solicitaria a janela Login.



2. O usuário digita a ID de usuário e o PIN (não a senha).



3. O usuário é mostrado na tela Login Success (Êxito de login) e o número que seria provisionado, que seria a linha principal adicionada ao usuário.



Depois de clicar em Continuar, o dispositivo deve ir para uma Reinicialização e Avançar com as Configurações especificadas no Modelo e com a linha principal associada ao Usuário.

Troubleshoot

Aqui estão algumas das mensagens de erro comuns retornadas pelo cliente do telefone:

Código de erro SELFPROV_NOT_ALLOWED SELFPROV_DEVICE_LIMIT INVALID_DEVICE_MODEL

Solução/Causa

Verifique se a caixa de seleção Provisionamento automátic está marcada no Perfil de usuário do usuário. O dispositivo de propriedade do usuário já atingiu o limite. O modelo de dispositivo fornecido não é válido. MODEL_PHONETEMPELATE_NOT_FOUND O UDT necessário não está configurado.

Logs a serem coletados

Para solucionar ainda mais problemas do UDS (User Data Service, Serviço de dados do usuário), coleta o log "Cisco User Data Services" da RTMT.

Os nomes dos arquivos são do formato cucm-uds####.log. (# representa o número.)

Por padrão, os rastreamentos são definidos como Nível de informações.

O tamanho máximo do arquivo é 1 MB por padrão. O número máximo de arquivos armazenados padrão é 250.

Note: Quando você altera o Número Máximo de Arquivos ou as configurações do Tamanho

Máximo de Arquivo na janela Configuração de Rastreamento, o sistema exclui todos os arquivos de log de serviço, exceto o arquivo atual, ou seja, se o serviço for executado. Se o serviço não tiver sido ativado, o sistema excluirá os arquivos imediatamente após a ativação do serviço.

Erros comuns observados nos registros UDS e suas soluções:

2013-07-23 23:47:43,016 ERROR [http-bio-443-exec-177] handlers.SelfProvisionHandler - Model phone template is not available.

Solution: Ensure the User Profile has a UDT assigned (the default sample is fine)

2013-07-23 23:48:25,852 ERROR [http-bio-443-exec-181] handlers.SelfProvisionHandler - Device Self-Provision is not allowed.

Solution: Ensure the User Profile has "Allow End User to Provision their own phones" checked.

2013-07-23 23:54:06,039 ERROR [http-bio-443-exec-220] handlers.SelfProvisionHandler - Device Self-Provision has reached its device limit.

Solution: Ensure the Usure Profile has a non-zero value in "Limit Provisioning once End User has this many phones" field.

Defeitos conhecidos

- <u>CSCuq00358</u>
- <u>CSCve52657</u>
- <u>CSCun77515</u>
- <u>CSCun13382</u>

Informações Relacionadas

Suporte Técnico e Documentação - Cisco Systems