

# 恢复881系列路由器的口令

## 目录

[简介](#)

[先决条件](#)

[要求](#)

[使用的组件](#)

[规则](#)

[背景信息](#)

[分步过程](#)

[密码恢复程序示例](#)

[相关信息](#)

## 简介

本文档介绍了如何恢复 enable password 和 enable secret 口令。

## 先决条件

### 要求

本文档没有任何特定的要求。

### 使用的组件

本文档中的信息基于Cisco 881系列路由器。

本文档中的信息都是基于特定实验室环境中的设备编写的。本文档中使用的所有设备最初均采用原始（默认）配置。如果您的网络处于活动状态，请确保您了解所有命令的潜在影响。

### 相关产品

有关如何恢复相关产品口令的信息，请参阅口令恢复过程。

### 规则

有关文档规则的信息，请参阅 Cisco 技术提示规则。

## 背景信息

这些口令可对特权执行和配置模式的访问权限进行保护。enable password 可以恢复，但是 enable secret 口令经过了加密，必须使用新口令将其替换。请使用本文档介绍的过程替换 enable secret 口令。

# 分步过程

请使用以下步骤恢复您的密码：

1. 将终端或带终端仿真功能的 PC 连接到路由器的控制台端口。使用以下终端设置：9600 波特率无奇偶校验8 个数据位1 个停止位无流控制有关如何使用电缆将终端连接到控制台端口或 AUX 端口的信息，请参阅以下文档：[控制台和 AUX 端口布线指南](#)[将终端连接到 Catalyst 交换机的控制台端口](#)[将终端连接到 Catalyst 2948G-L3、4908G-L3 和 4840G 系列交换机](#)
2. 如果可以访问路由器，请在提示符处键入 **show version**，并且记录配置寄存器设置。请参阅[口令恢复过程示例，查看 show version 命令的输出](#)。注：配置寄存器通常设置为0x2102或0x102。如果无法再访问路由器（由于登录或TACACS密码丢失），您可以放心地假设您的配置寄存器设置为0x2102。
3. 使用电源开关关闭路由器，然后重新打开。
4. 在启动后的 60 秒内按下终端键盘上的 **Break 键**，使路由器进入 ROMMON 模式。[如果中断顺序不起作用，请参阅口令恢复过程中的标准break键序列组合，获取其他键组合。](#)
5. 在`rommon 1>`提示符处键入`confreg 0x2142`，以便从闪存启动。此步骤将会跳过存储口令的启动配置。
6. 在`rommon 2>`提示符处键入 **reset**。路由器将会重新启动，但是会忽略保存的配置。
7. 在每个设置问题后键入 **no** 或按 **Ctrl-C**，跳过初始设置过程。
8. 在`Router>`提示符处键入 **enable**。您处于启用模式，必须看到`Router#`提示符。
9. 键入 **configure memory** 或 **copy startup-config running-config**，将非易失性 RAM (NVRAM) 复制到内存中。注意：不要键入**copy running-config startup-config** 或 **write**。这些命令将会擦除您的启动配置。
10. 键入 **show running-config**。**show running-config** 命令将会显示路由器的配置。在此配置中，在所有接口下将会出现 **shutdown** 命令，显示当前关闭的所有接口。此外，口令（启用口令、启用加密、vty、控制台口令）可能是加密格式，也可能是未加密格式。您可重复使用未加密的口令，您必须将加密的口令更改为新口令。
11. 键入 **configure terminal**。此时将会显示`hostname(config)#`
12. 键入 **enable secret <password>**，以更改 **enable secret** 口令。例如：  
`hostname(config)#enable secret cisco`
13. 在所用的每个接口上发出 **no shutdown** 命令。如果发出**show ip interface brief**命令，则要使用的每个接口都必须显示`up up`。
14. 类型 `config-register`。其中 `configuration_register_setting` 是您在步骤2中记录的值或0x2102。例如：  
`hostname(config)#config-register 0x2102`
15. 按 **Ctrl-z** 或 **end**，离开配置模式。此时将会显示`hostname#`
16. 键入 **write memory** 或 **copy running-config startup-config**，以提交更改。

## 密码恢复程序示例

本部分提供了一个口令恢复过程的示例。此示例是使用 Cisco 2600 系列路由器创建的。即使您不使用Cisco 2600系列路由器，此输出也为您提供了产品体验的示例。

```
Router>enable
Password:
Password:
Password:
```

% Bad secrets

Router>**show version**

Cisco Internetwork Operating System Software  
IOS (tm) C2600 Software (C2600-IS-M), Version 12.0(7)T, RELEASE SOFTWARE (fc2)  
Copyright (c) 1986-1999 by cisco Systems, Inc.  
Compiled Tue 07-Dec-99 02:21 by phanguye  
Image text-base: 0x80008088, data-base: 0x80C524F8

ROM: System Bootstrap, Version 11.3(2)XA4, RELEASE SOFTWARE (fc1)

```
Router uptime is 3 minutes
System returned to ROM by abort at PC 0x802D0B60
System image file is "flash:c2600-is-mz.120-7.T"
```

```
cisco 2611 (MPC860) processor (revision 0x202) with 26624K/6144K bytes of memory.  
Processor board ID JAB031202NK (3878188963)  
M860 processor: part number 0, mask 49  
Bridging software.  
X.25 software, Version 3.0.0.  
Basic Rate ISDN software, Version 1.1.  
2 Ethernet/IEEE 802.3 interface(s)  
2 Serial(sync/async) network interface(s)  
1 ISDN Basic Rate interface(s)  
32K bytes of non-volatile configuration memory.  
8192K bytes of processor board System flash partition 1 (Read/Write)  
8192K bytes of processor board System flash partition 2 (Read/Write)
```

Configuration register is 0x2102

Router>

```
!--- The router was just powercycled, and during bootup a  
!--- break sequence was sent to the router. ! *** System received an abort due to Break Key ***  
signal= 0x3, code= 0x500, context= 0x813ac158 PC = 0x802d0b60, Vector = 0x500, SP = 0x80006030  
rommon 1 > confreg 0x2142
```

You must reset or power cycle for new config to take effect

```
rommon 2 > reset
```

System Bootstrap, Version 11.3(2)XA4, RELEASE SOFTWARE (fc1)  
Copyright (c) 1999 by cisco Systems, Inc.  
TAC:Home:SW:IOS:Specials for info  
C2600 platform with 32768 Kbytes of main memory

program load complete, entry point: 0x800008000, size: 0x6fdb4c

```
Self decompressing the image : ##### [OK]
```

### Restricted Rights Legend

Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c) of the Commercial Computer Software - Restricted Rights clause at FAR sec. 52.227-19 and subparagraph

(c) (1) (ii) of the Rights in Technical Data and Computer Software clause at DFARS sec. 252.227-7013.

cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, California 95134-1706

Cisco Internetwork Operating System Software  
IOS (tm) C2600 Software (C2600-IS-M), Version 12.0(7)T, RELEASE SOFTWARE (fc2)  
Copyright (c) 1986-1999 by cisco Systems, Inc.  
Compiled Tue 07-Dec-99 02:21 by phanguye  
Image text-base: 0x80008088, data-base: 0x80C524F8

cisco 2611 (MPC860) processor (revision 0x202) with 26624K/6144K bytes of memory.  
Processor board ID JAB031202NK (3878188963)  
M860 processor: part number 0, mask 49  
Bridging software.  
X.25 software, Version 3.0.0.  
Basic Rate ISDN software, Version 1.1.  
2 Ethernet/IEEE 802.3 interface(s)  
2 Serial(sync/async) network interface(s)  
1 ISDN Basic Rate interface(s)  
32K bytes of non-volatile configuration memory.  
8192K bytes of processor board System flash partition 1 (Read/Write)  
8192K bytes of processor board System flash partition 2 (Read/Write)

--- System Configuration Dialog ---

Would you like to enter the initial configuration dialog? [yes/no]: n

Press RETURN to get started!

00:00:19: %LINK-3-UPDOWN: Interface BRI0/0, changed state to up  
00:00:19: %LINK-3-UPDOWN: Interface Ethernet0/0, changed state to up  
00:00:19: %LINK-3-UPDOWN: Interface Ethernet0/1, changed state to up  
00:00:19: %LINK-3-UPDOWN: Interface Serial0/0, changed state to down  
00:00:19: %LINK-3-UPDOWN: Interface Serial0/1, changed state to down  
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface BRI0/0,  
changed state to down  
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/0,  
changed state to up  
Router>  
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/1,  
changed state to up  
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface Serial0/0,  
changed state to down  
00:00:20: %LINEPROTO-5-UPDOWN: Line protocol on Interface Serial0/1,  
changed state to down  
00:00:50: %SYS-5-RESTART: System restarted --  
Cisco Internetwork Operating System Software  
IOS (tm) C2600 Software (C2600-IS-M), Version 12.0(7)T, RELEASE SOFTWARE (fc2)  
Copyright (c) 1986-1999 by cisco Systems, Inc.  
Compiled Tue 07-Dec-99 02:21 by phanguye  
00:00:50: %LINK-5-CHANGED: Interface BRI0/0,  
changed state to administratively down  
00:00:52: %LINK-5-CHANGED: Interface Ethernet0/0,  
changed state to administratively down  
00:00:52: %LINK-5-CHANGED: Interface Serial0/0,  
changed state to administratively down  
00:00:52: %LINK-5-CHANGED: Interface Ethernet0/1,  
changed state to administratively down  
00:00:52: %LINK-5-CHANGED: Interface Serial0/1,  
changed state to administratively down

```

00:00:53: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/0,
changed state to down
00:00:53: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/1,
changed state to down
Router>
Router>enable
Router#copy startup-config running-config
Destination filename [running-config]?
1324 bytes copied in 2.35 secs (662 bytes/sec)
Router#
00:01:24: %LINEPROTO-5-UPDOWN: Line protocol on Interface BRI0/0:1,
changed state to down
00:01:24: %LINEPROTO-5-UPDOWN: Line protocol on Interface BRI0/0:2,
changed state to down
Router#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#enable secret < password >
Router(config)#^Z
00:01:54: %SYS-5-CONFIG_I: Configured from console by console
Router#show ip interface brief

Interface    IP-Address      OK?    Method      Status          Protocol
Ethernet0/0  10.200.40.37   YES    TFTP        administratively down    down
Serial0/0    unassigned     YES    TFTP        administratively down    down
BRI0/0      192.168.121.157 YES    unset       administratively down    down
BRI0/0:1    unassigned     YES    unset       administratively down    down
BRI0/0:2    unassigned     YES    unset       administratively down    down
Ethernet0/1  unassigned     YES    TFTP        administratively down    down
Serial0/1    unassigned     YES    TFTP        administratively down    down
Loopback0    192.168.121.157 YES    TFTP        up               up

Router#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#interface Ethernet0/0
Router(config-if)#no shutdown
Router(config-if)#
00:02:14: %LINK-3-UPDOWN: Interface Ethernet0/0, changed state to up
00:02:15: %LINEPROTO-5-UPDOWN: Line protocol on Interface Ethernet0/0,
changed state to up
Router(config-if)#interface BRI0/0
Router(config-if)#no shutdown
Router(config-if)#
00:02:26: %LINK-3-UPDOWN: Interface BRI0/0:1, changed state to down
00:02:26: %LINK-3-UPDOWN: Interface BRI0/0:2, changed state to down
00:02:26: %LINK-3-UPDOWN: Interface BRI0/0, changed state to up
00:02:115964116991: %ISDN-6-LAYER2UP: Layer 2 for Interface BR0/0,
TEI 68 changed to up
Router(config-if)#^Z
Router#
00:02:35: %SYS-5-CONFIG_I: Configured from console by console
Router#copy running-config startup-config
Destination filename [startup-config]?
Building configuration...
[OK]
Router#show version
Cisco Internetwork Operating System Software
IOS (tm) C2600 Software (C2600-IS-M), Version 12.0(7)T, RELEASE SOFTWARE (fc2)
Copyright (c) 1986-1999 by cisco Systems, Inc.
Compiled Tue 07-Dec-99 02:21 by phanguye
Image text-base: 0x80008088, data-base: 0x80C524F8

ROM: System Bootstrap, Version 11.3(2)XA4, RELEASE SOFTWARE (fc1)

Router uptime is 3 minutes
System returned to ROM by abort at PC 0x802D0B60

```

```
System image file is "flash:c2600-is-mz.120-7.T"

cisco 2611 (MPC860) processor (revision 0x202)
with 26624K/6144K bytes of memory.
Processor board ID JAB031202NK (3878188963)
M860 processor: part number 0, mask 49
Bridging software.
X.25 software, Version 3.0.0.
Basic Rate ISDN software, Version 1.1.
2 Ethernet/IEEE 802.3 interface(s)
2 Serial(sync/async) network interface(s)
1 ISDN Basic Rate interface(s)
32K bytes of non-volatile configuration memory.
8192K bytes of processor board System flash partition 1 (Read/Write)
8192K bytes of processor board System flash partition 2 (Read/Write)
```

Configuration register is 0x2142

```
Router#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)#config-register 0x2102
Router(config)#^Z
00:03:20: %SYS-5-CONFIG_I: Configured from console by console
```

```
Router#show version
Cisco Internetwork Operating System Software
IOS (tm) C2600 Software (C2600-IS-M), Version 12.0(7)T, RELEASE SOFTWARE (fc2)
Copyright (c) 1986-1999 by cisco Systems, Inc.
Compiled Tue 07-Dec-99 02:21 by phanguye
Image text-base: 0x80008088, data-base: 0x80C524F8
```

ROM: System Bootstrap, Version 11.3(2)XA4, RELEASE SOFTWARE (fc1)

```
Router uptime is 3 minutes
System returned to ROM by abort at PC 0x802D0B60
System image file is "flash:c2600-is-mz.120-7.T"
```

```
cisco 2611 (MPC860) processor (revision 0x202)
with 26624K/6144K bytes of memory.
Processor board ID JAB031202NK (3878188963)
M860 processor: part number 0, mask 49
Bridging software.
X.25 software, Version 3.0.0.
Basic Rate ISDN software, Version 1.1.

2 Ethernet/IEEE 802.3 interface(s)
2 Serial(sync/async) network interface(s)
1 ISDN Basic Rate interface(s)
32K bytes of non-volatile configuration memory.
8192K bytes of processor board System flash partition 1 (Read/Write)
8192K bytes of processor board System flash partition 2 (Read/Write)
```

Configuration register is 0x2142 (will be **0x2102** at next reload)

Router#

## 相关信息

- [控制台和 AUX 端口布线指南](#)
- [所有产品支持和下载](#)
- [将终端连接到 Catalyst 交换机的控制台端口](#)
- [了解Catalyst交换机上控制台端口的终端连接](#)

- [口令恢复过程中的标准中断键顺序组合](#)
- [思科技术支持和下载](#)

## 关于此翻译

思科采用人工翻译与机器翻译相结合的方式将此文档翻译成不同语言，希望全球的用户都能通过各自的语言得到支持性的内容。

请注意：即使是最好的机器翻译，其准确度也不及专业翻译人员的水平。

Cisco Systems, Inc. 对于翻译的准确性不承担任何责任，并建议您总是参考英文原始文档（已提供链接）。