在RV110W上配置时间设置

目标

时间设置允许用户自动或手动更改路由器上的时间并帐户夏时制(DTS)。本文的目的是说明如何在RV110W上配置时间设置。

适用设备

·RV110W

步骤

1

步骤1.使用Web配置实用程序选择Administration > Time Settings。此时将打开"时间设置"页

Time Settings		
Current Time:	01/01/10 12:02 AM	
Time Zone	(GMT-08:00) Pacific Time (USA & Canada)	
Adjust for Daylight Savings Time:		
Daylight Saving Mode:	By date Recurring Recurring Additional Action Addition Additional Actional Action Addition Addi	
From:	Month: 01 - Day: 01 - Time: 12 - : 00 - : AM -	
To:	Month: 01 - Day: 01 - Time: 12 - : 00 - : AM -	
From:	Month: 01 - Week: 1st - Day: Sunday - Time: 12 - : 00 - : AM -	
To:	Month: 01 - Week: 1st - Day: Sunday - Time: 12 - : 00 - : AM -	
Daylight Saving Offset:	+60 - Minutes	
Set Date and Time:	Auto Manual	
NTP Server:	Ose Default	
	O User defined NTP Server	
	1. (Hint: 1.2.3.4 or abc.com)	
	2.	
Enter Date and Time:	Year: 2011 - Month: 01 - Day: 01 -	
	Time: 12 - : 00 - : AM -	
Save Cancel		

步骤2.从"时区"字段的下拉列表中选择一个时区。

Time Settings			
Current Time:	01/01/10 12:02 AM		
Time Zone	(GMT-08:00) Pacific Time (USA & Canada)		
Adjust for Daylight Savings Time:			
Daylight Saving Mode:	Isy date Recurring		
From:	Month: 01 - Day: 01 - Time: 12 - : 00 - : AM -		
То:	Month: 01 - Day: 01 - Time: 12 - : 00 - : AM -		
From:	Month: 01 - Week: 1st - Day: Sunday - Time: 12 - : 00 - : AM -		
То:	Month: 01 - Week: 1st - Day: Sunday - Time: 12 - : 00 - : AM -		
Daylight Saving Offset:	+60 - Minutes		
Set Date and Time:	Auto C Manual		
NTP Server:	Our See Default		
	O User defined NTP Server		
	1. (Hint: 1.2.3.4 or abc.com)		
	2.		
Enter Date and Time:	Year: 2011 - Month: 01 - Day: 01 -		
	Time: 12 - : 00 - : AM -		
Save Cancel			

自动设置时间

此功能允许用户使用夏时制选项自动调整时间。

步骤1.单击"设置日**期和**时间"字段*中的"自动"单*选按钮。

Current Time:	01/01/10 12:04 AM
Time Zone	(GMT-06:00) Central Time (USA & Canada)
Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date
From:	Month: 01 - Day: 01 - Time: 12 -
To:	Month: 01 - Day: 01 - Time: 12 -
From:	Month: 01 - Week: 1st - Day: Sund
To:	Month: 01 - Week: 1st - Day: Sund
Daylight Saving Offset:	+60 - Minutes
Set Date and Time:	Auto Manual
NTP Server:	Ose Default
	O User defined NTP Server
	1. (Hint: 1.2.3.4
	2.
Enter Date and Time:	Year: 2011 - Month: 01 - Day: 01
	Time: 12 - : 00 - : AM -
Save Cancel	

步骤2.选中复选框以启用夏时制调整字段中的DTS。

Time Settings	
Current Time:	01/01/10 12:04 AM
Time Zone	(GMT-06:00) Central Time (USA & Canada)
Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date Recurring
From:	Month: 01 - Day: 01 - Time: 12 - : 00 -
To:	Month: 01 - Day: 01 - Time: 12 - : 00 -
From:	Month: 01 - Week: 1st - Day: Sunday -
To:	Month: 01 - Week: 1st - Day: Sunday -
Daylight Saving Offset:	+60 - Minutes
Set Date and Time:	Auto O Manual
NTP Server:	Use Default
	O User defined NTP Server
	1. (Hint: 1.2.3.4 or abc.com
	2.
Enter Date and Time:	Year: 2011 - Month: 01 - Day: 01 -
	Time: 12 - : 00 - : AM -

步骤3.点击所需DTS选项的单选按钮。选项如下:

• 按日期 — 将DTS设置为在两个特定日期之间发生。

•循环 — 将DTS设置为在两个不同月(即3月的第一个星期日)的两天之间发生。

Time Settings	
---------------	--

Current Time:	01/01/10 12:04 AM
Time Zone	(GMT-06:00) Central Time (USA & Canada) -
Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date Recurring
From:	Month: 01 Day: 01 Time: 12 : 00 : 4
То:	Month: 01 ▼ Day: 01 ▼ Time: 12 ▼ : 00 ▼ : #
From:	Month: 01 - Week: 1st - Day: Sunday - T
To:	Month: 01 - Week: 1st - Day: Sunday - T
Daylight Saving Offset:	+60 👻 Minutes
Set Date and Time:	🖲 Auto 🔘 Manual
NTP Server:	Ose Default
	O User defined NTP Server
	1. (Hint: 1.2.3.4 or abc.com)
	2.
Enter Date and Time:	Year: 2011 - Month: 01 - Day: 01 -
	Time: 12 - : 00 - : AM -

注意:如果选择"循环**"单**选按钮,请跳至步骤5。

步骤4.如果选择"**按日**期"单选按钮,请在"自"行的"月"、"日"和*"时间"*字段中设置所需的开始日 期和时间。然后在"至"行的"*月"、"*日"*和"*时间"字*段中设*置结束日期。

By d	ate 🔘 F	Recurring			
Month:	01 👻	Day: 01 - T	ime: 12 🔻 : 00	▼ : AM ▼	
Month:	01 🔻	Day: 01 - T	ime: 12 🔻 : 00	▼ : AM ▼	
Month:	01 👻	Week: 1st 👻	Day: Sunday	Time: 12	→: 00 →: AM →
Month:	01 -	Week: 1st 👻	Day: Sunday	Time: 12	▼:00 ▼:AM ▼

步骤5.如果选择**Recurring**单选按钮,请在*From*行的Month、Week、Day和*Time*字段中设置所 需的开始日和时间。然后在"至"行的"*月"、"周"、"*日"*和"*时间"字*段中设*置结束日。

🔘 By date 🍳 F	Recurring
Month: 01 👻	Day: 01 - Time: 12 - : 00 - : AM -
Month: 01 👻	Day: 01 - Time: 12 - : 00 - : AM -
Month: 01 🗸	Week: 1st 👻 Day: Sunday 👻 Time: 12 👻 : 00 👻 : AM 👻
Month: 01 👻	Week: 1st - Day: Sunday - Time: 12 - : 00 - : AM -

步骤6.从"夏时制偏移量"字段的下拉列表中选择DTS应偏移当前时间的分钟数。

Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date C Recurring
From:	Month: 03 ▼ Day: 11 ▼ Time: 02 ▼ : 00 ▼ :
To:	Month: 11 ▼ Day: 04 ▼ Time: 02 ▼ : 00 ▼ :
From:	Month: 01 - Week: 1st - Day: Sunday -
To:	Month: 01 - Week: 1st - Day: Sunday -
Daylight Saving Offset:	+60 Vinutes
Set Date and Time: NTP Server:	+60 +45 D Manual +30 -30 Default -45 -60 Defined NTP Server
	1. (Hint: 1.2.3.4 or abc.com
	2.
Enter Date and Time:	Year: 2011 - Month: 01 - Day: 01 -
	Time: 12 - : 00 - : AM -
Save Cancel	

步骤7.在NTP Server字段中单击所需选项的单选按钮。选项如下:

- 使用默认值 使用默认网络时间协议服务器设置时钟。
- •用户定义的NTP服务器 手动输入网络时间协议服务器。

Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date Recurring
From:	Month: 03 - Day: 11 - Time: 02 - : 00 - :
To:	Month: 11 - Day: 04 - Time: 02 - : 00 - :
From:	Month: 01 - Week: 1st - Day: Sunday -
To:	Month: 01 - Week: 1st - Day: Sunday -
Daylight Saving Offset:	+60 👻 Minutes
Set Date and Time:	🖲 Auto 🔘 Manual
NTP Server:	Ose Default
	O User defined NTP Server
	1. (Hint: 1.2.3.4 or abc.con
	2.
Enter Date and Time:	Year: 2011 - Month: 01 - Day: 01 -
	Time: 12 - : 00 - : AM -
Save Cancel	

注意:如果单击"**用户定义的NTP服务器**"单选按钮,请在1和2字段中输入一个或两个IP地址 或网站名称,以便服务器设置时钟。

步骤8.单击"保**存"**保存更改,或单击**"取**消"放弃更改。

手动设置时间

此功能允许用户手动设置时间。

步骤1.单击"设置日**期和**时间"字段中的"手动"单选按钮。

Time Settings	
Current Time:	01/01/10 12:52 AM
Time Zone	(GMT-08:00) Pacific Time (USA & Canada) 🔹
Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date Recurring Recurring Recurring Additional Action Additino Additino Additino Additino Addition Addi
From:	Month: 01 - Day: 01 - Time: 12 - : 00 - :
To:	Month: 01 - Day: 01 - Time: 12 - : 00 - :
From:	Month: 01 - Week: 1st - Day: Sunday -
To:	Month: 01 - Week: 1st - Day: Sunday -
Daylight Saving Offset:	+60 👻 Minutes
Set Date and Time:	🛇 Aute 🖲 Manual
NTP Server:	Ose Default
	O User defined NTP Server
	1. (Hint: 1.2.3.4 or abc.con
	2.
Enter Date and Time:	Year: 2011 - Month: 01 - Day: 01 -
	Time: 12 ▼ : 00 ▼ : AM ▼

步骤2.在"输入日期和时间"行的"年"、"月"、"日"和"时间"字段中选择所需的日期和时间。

Time Settings	
Current Time:	01/01/10 12:52 AM
Time Zone	(GMT-08:00) Pacific Time (USA & Canada) 🔹
Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date
From:	Month: 01 - Day: 01 - Time: 12 - : 00 - :
То:	Month: 01 - Day: 01 - Time: 12 - : 00 - :
From:	Month: 01 - Week: 1st - Day: Sunday -
To:	Month: 01 - Week: 1st - Day: Sunday -
Daylight Saving Offset:	+60 - Minutes
Set Date and Time:	🛇 Auto 🖲 Manual
NTP Server:	Ose Default
	O User defined NTP Server
	1. (Hint: 1.2.3.4 or abc.con
	2.
Enter Date and Time:	Year: 2011 ▼ Month: 01 ▼ Day: 01 ▼
	Time: 12 - : 00 - : AM -

步骤3.单击"保**存"**保存更改,或单击**"取**消"放弃更改。